

CNC

**MELDAS 60/60S Series
MELDAS/MAGIC64**

**PROGRAMMING MANUAL
(MACHINING CENTER TYPE)**



Introduction

This manual is a guide for using the MELDAS 60/60S Series, MELDASMAGIC64. Programming is described in this manual, so read this manual thoroughly before starting programming. Thoroughly study the "Precautions for Safety" on the following page to ensure safe use of this NC unit.

*The "MELDAS60 Series" includes the M64A/M64/M65/M66/M65V.

*The "MELDAS60S Series" includes the M64AS/M64S/M65S/M66S.

Details described in this manual

CAUTION

-  For items described in "Restrictions" or "Usable State", the instruction manual issued by the machine maker takes precedence over this manual.
-  An effort has been made to note as many special handling methods in this user's manual. Items not described in this manual must be interpreted as "not possible".
-  This manual has been written on the assumption that all option functions are added. Refer to the specifications issued by the machine maker before starting use.
-  Refer to the Instruction Manual issued by each machine maker for details on each machine tool.
-  Some screens and functions may differ depending on the NC system or its version, and some functions may not be possible. Please confirm the specifications before use.

General precautions

- (1) Refer to the following documents for details on handling
MELDAS 60/60S Series Operation Manual BNP-B2180

Precautions for Safety

Always read the specifications issued by the machine maker, this manual, related manuals and attached documents before installation, operation, programming, maintenance or inspection to ensure correct use.

Understand this numerical controller, safety items and cautions before using the unit.

This manual ranks the safety precautions into "DANGER", "WARNING" and "CAUTION".



DANGER

When the user may be subject to imminent fatalities or major injuries if handling is mistaken.



WARNING

When the user may be subject to fatalities or major injuries if handling is mistaken.



CAUTION

When the user may be subject to injuries or when physical damage may occur if handling is mistaken.

Note that even items ranked as "  **CAUTION**", may lead to major results depending on the situation. In any case, important information that must always be observed is described.



DANGER

Not applicable in this manual.



WARNING

1. Items related to operation

 If the operation start position is set in a block which is in the middle of the program and the program is started, the program before the set block is not executed. Please confirm that G and F modal and coordinate values are appropriate. If there are coordinate system shift commands or M, S, T and B commands before the block set as the start position, carry out the required commands using the MDI, etc. If the program is run from the set block without carrying out these operations, there is a danger of interference with the machine or of machine operation at an unexpected speed, which may result in breakage of tools or machine tool or may cause damage to the operators.

 Under the constant surface speed control (during G96 modal), if the axis targeted for the constant surface speed control moves toward the spindle center, the spindle rotation speed will increase and may exceed the allowable speed of the workpiece or chuck, etc. In this case, the workpiece, etc. may jump out during machining, which may result in breakage of tools or machine tool or may cause damage to the operators.

CAUTION

1. Items related to product and manual

-  For items described as "Restrictions" or "Usable State" in this manual, the instruction manual issued by the machine maker takes precedence over this manual.
-  An effort has been made to describe special handling of this machine, but items that are not described must be interpreted as "not possible".
-  This manual is written on the assumption that all option functions are added. Refer to the specifications issued by the machine maker before starting use.
-  Refer to the Instruction Manual issued by each machine maker for details on each machine tool.
-  Some screens and functions may differ depending on the NC system or its version, and some functions may not be possible. Please confirm the specifications before use.

2. Items related to operation

-  Before starting actual machining, always carry out dry operation to confirm the machining program, tool offset amount and workpiece offset amount, etc.
If the workpiece coordinate system offset amount is changed during single block stop, the new setting will be valid from the next block.

-  Turn the mirror image ON and OFF at the mirror image center.
-  If the tool offset amount is changed during automatic operation (including during single block stop), it will be validated from the next block or blocks onwards.

3. Items related to programming

-  The commands without Nos. following "G" become a "G00" operation during running.
-  " ; " "EOB" and " %" "EOR" are explanatory notations. The actual codes are "Line feed" and "%" for ISO, and "End of block" and "End of Record" for EIA.
-  When creating the machining program, select the appropriate machining conditions, and make sure that the performance, capacity and limits of the machine and NC are not exceeded. The examples do not consider the machining conditions.
-  Do not change fixed cycle programs without the prior approval of the machine maker.
-  When programming the multi-system, take special care to the movements of the programs for other systems.

Disposal



(Note) This symbol mark is for EU countries only.
This symbol mark is according to the directive 2006/66/EC Article 20 Information for end-users and Annex II.

Your MITSUBISHI ELECTRIC product is designed and manufactured with high quality materials and components which can be recycled and/or reused.

This symbol means that batteries and accumulators, at their end-of-life, should be disposed of separately from your household waste.

If a chemical symbol is printed beneath the symbol shown above, this chemical symbol means that the battery or accumulator contains a heavy metal at a certain concentration. This will be indicated as follows:

Hg: mercury (0,0005%), Cd: cadmium (0,002%), Pb: lead (0,004%)

In the European Union there are separate collection systems for used batteries and accumulators. Please, dispose of batteries and accumulators correctly at your local community waste collection/recycling centre.

Please, help us to conserve the environment we live in!

Contents

Page

1. Control Axes	1
1.1 Coordinate word and control axis.....	1
1.2 Coordinate systems and coordinate zero point symbols	2
2. Input Command Units	3
2.1 Input command units	3
2.2 Input setting units.....	3
3. Data Formats.....	4
3.1 Tape codes	4
3.2 Program formats.....	7
3.3 Program address check function.....	9
3.4 Tape memory format	10
3.5 Optional block skip; /.....	10
3.6 Program/sequence/block numbers; O, N.....	11
3.7 Parity H/V.....	12
3.8 G code lists	13
3.9 Precautions before starting machining.....	16
4. Buffer Register.....	17
4.1 Input buffer.....	17
4.2 Pre-read buffers.....	18
5. Position Commands.....	19
5.1 Position command methods; G90, G91	19
5.2 Inch/metric command change; G20, G21	21
5.3 Decimal point input	25
6. Interpolation Functions	29
6.1 Positioning (Rapid traverse); G00	29
6.2 Linear interpolation; G01	36
6.3 Plane selection; G17, G18, G19.....	38
6.4 Circular interpolation; G02, G03.....	40
6.5 R-specified circular interpolation; G02, G03	44
6.6 Helical interpolation ; G17 to G19, G02, G03.....	46
6.7 Thread cutting.....	50
6.7.1 Constant lead thread cutting ; G33	50
6.7.2 Inch thread cutting; G33	53
6.8 Uni-directional positioning; G60	54
6.9 Circular interpolation; G07.1.....	56
6.10 Pole coordinate interpolation; G12.1	64
6.11 Exponential function interpolation; G02.3, G03.3	71
6.12 Polar coordinate command; G16	77
6.13 Spiral Interpolation; G02.1/G03.1	83

7. Feed Functions	85
7.1 Rapid traverse rate	85
7.2 Cutting feed rate	85
7.3 F1-digit feed	86
7.4 Synchronous feed; G94, G95	88
7.5 Feedrate designation and effects on control axes	90
7.6 Exact stop check; G09	93
7.7 Exact stop check mode ; G61	96
7.8 Deceleration check	96
7.8.1 G1 -> G0 deceleration check	98
7.8.2 G1 -> G1 deceleration check	99
7.9 Automatic corner override ; G62	100
7.10 Tapping mode ; G63	105
7.11 Cutting mode ; G64	105
8. Dwell	106
8.1 Per-second dwell ; G04	106
9. Miscellaneous Functions	108
9.1 Miscellaneous functions (M8-digits BCD)	108
9.2 Secondary miscellaneous functions (B8-digits, A8 or C8-digits)	110
9.3 Index table indexing	111
10. Spindle Functions	113
10.1 Spindle functions (S2-digits BCD) During standard PLC specifications	113
10.2 Spindle functions (S6-digits Analog)	113
10.3 Spindle functions (S8-digits)	113
10.4 Constant surface speed control; G96, G97	114
10.4.1 Constant surface speed control	114
10.5 Spindle clamp speed setting; G92	116
10.6 Spindle/C axis control	118
10.7 Spindle synchronization control II	121
10.8 Multiple spindle control	128
10.8.1 Multiple spindle control I (multiple spindle command)	129
10.8.2 Multiple spindle control I (spindle selection command)	130
10.8.3 Multiple spindle control II	133
11. Tool Functions	136
11.1 Tool functions (T8-digit BCD)	136
12. Tool Offset Functions	137
12.1 Tool offset	137
12.2 Tool length offset/cancel; G43, G44/G49	141
12.3 Tool radius compensation	144
12.3.1 Tool radius compensation operation	145
12.3.2 Other operations during tool radius compensation	155
12.3.3 G41/G42 commands and I, J, K designation	163
12.3.4 Interrupts during tool radius compensation	169
12.3.5 General precautions for tool radius compensation	171
12.3.6 Changing of offset No. during compensation mode	172
12.3.7 Start of tool radius compensation and Z axis cut in operation	174
12.3.8 Interference check	176

12.4 Programmed offset input; G10	183
12.5 Tool position offset; G45 to G48.....	188
12.6 Inputting the tool life management data	195
13. Program Support Functions	198
13.1 Canned cycles	198
13.1.1 Standard canned cycles; G80 to G89, G73, G74, G76	198
13.1.2 Initial point and R point level return; G98, G99	222
13.1.3 Setting of workpiece coordinates in canned cycle mode.....	223
13.2 Special canned cycle; G34, G35, G36, G37.1	224
13.3 Subprogram control; M98, M99, M198.....	229
13.3.1 Calling subprogram with M98 and M99 commands	229
13.3.2 Calling subprogram with M198 commands.....	234
13.4 Variable commands.....	235
13.5 User macro specifications	238
13.5.1 User macro commands; G65, G66, G66.1, G67	238
13.5.2 Macro call instruction.....	239
13.5.3 Variables.....	246
13.5.4 Types of variables	248
13.5.5 Arithmetic commands.....	284
13.5.6 Control commands	289
13.5.7 External output commands	292
13.5.8 Precautions.....	294
13.5.9 Actual examples of using user macros	296
13.6 G command mirror image; G50.1, G51.1	300
13.7 Corner chamfering, corner rounding	303
13.7.1 Corner chamfering " ,C_ "	303
13.7.2 Corner rounding " ,R_ "	305
13.8 Linear angle command.....	306
13.9 Circle cutting; G12, G13	308
13.10 Program parameter input; G10, G11.....	310
13.11 Macro interrupt; M96, M97	311
13.12 Tool change position return; G30.1 to G30.6.....	320
13.13 Normal line control; G40.1/G41.1/G42.1	323
13.14 High-accuracy control; G61.1	334
13.15 High-speed high-accuracy control.....	347
13.15.1 High-speed high-accuracy control I, II	347
13.15.2 SSS Control.....	351
13.16 Spline	357
13.17 Scaling; G50/G51	364
13.18 Program coordinate rotation; G68/G69	368

14. Coordinates System Setting Functions	372
14.1 Coordinate words and control axes.....	372
14.2 Basic machine, work and local coordinate systems	373
14.3 Machine zero point and 2nd, 3rd, 4th reference points (Zero point).....	374
14.4 Basic machine coordinate system selection; G53	375
14.5 Coordinate system setting ;G92	376
14.6 Automatic coordinate system setting	377
14.7 Reference (zero) point return; G28, G29	378
14.8 2nd, 3rd and 4th reference (zero) point return; G30	382
14.9 Simple zero point return	385
14.10 Reference point check; G27	390
14.11 Work coordinate system setting and offset ; G54 to G59 (G54.1).....	391
14.12 Local coordinate system setting; G52	402
14.13 Workpiece coordinate system preset; G92.1	406
15. Measurement Support Functions	411
15.1 Automatic tool length measurement; G37.....	411
15.2 Skip function; G31	415
15.3 Multi-stage skip function; G31.n, G04	420
15.4 Multi-skip function 2	422
15.5 Speed change skip	425
15.6 Programmable current limitation	428
16. Machining mode	429
16.1 High-speed machining mode.....	429
Appendix 1. Program Parameter Input N No. Correspondence Table	432
Appendix 2. Program Error	435
Appendix 3. Order of G Function Command Priority (Command in a separate block when possible)	452

1. Control Axes



1.1 Coordinate word and control axis



Function and purpose

In the standard specifications, there are 3 control axes, but, by adding an additional axis, up to 4 axes can be controlled.

The designation of the processing direction responds to those axes and uses a coordinate word made up of alphabet characters that have been decided beforehand.

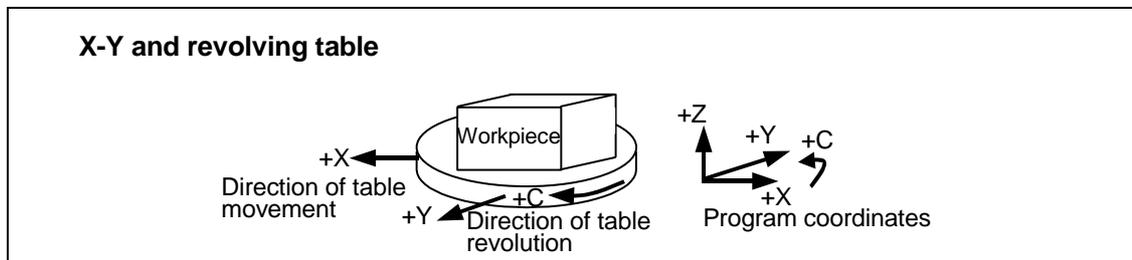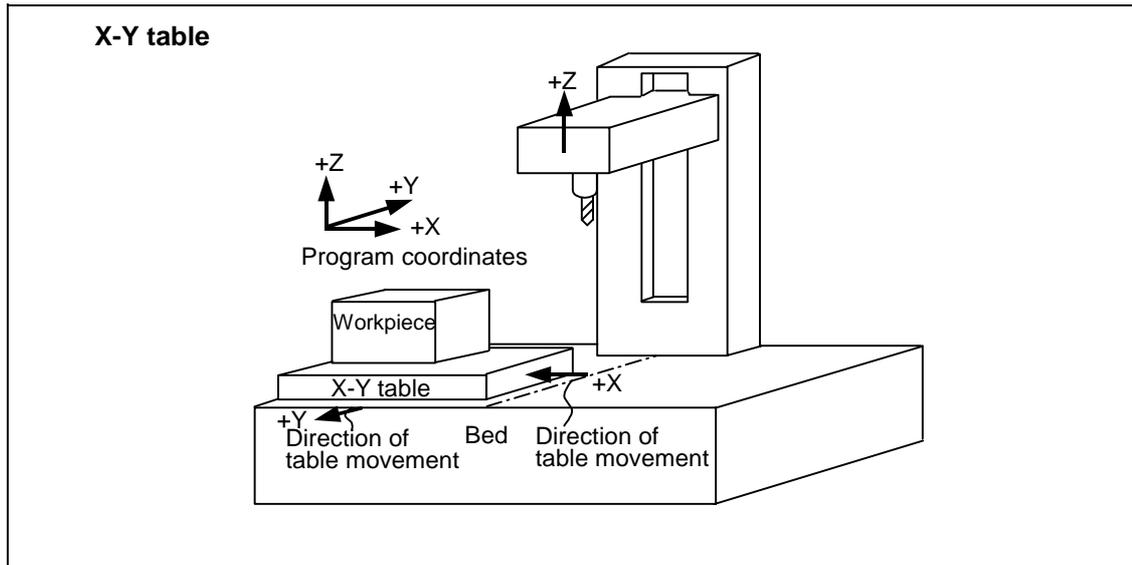



1. Control Axes

1.2 Coordinate systems and coordinate zero point symbols

1.2 Coordinate systems and coordinate zero point symbols



Function and purpose

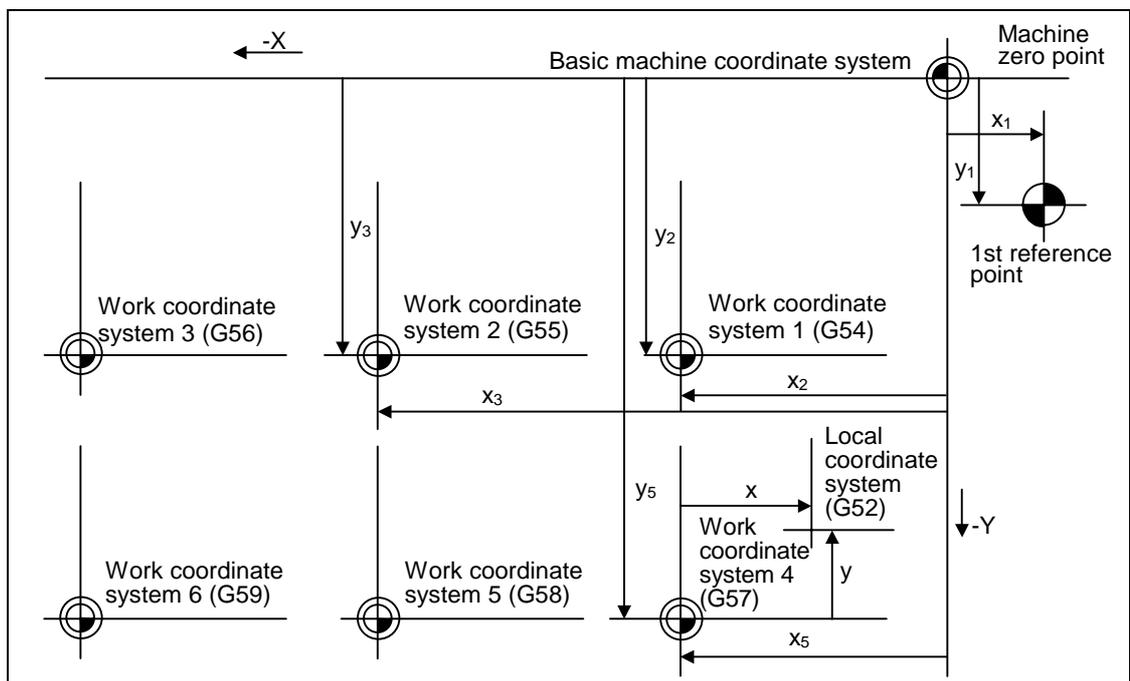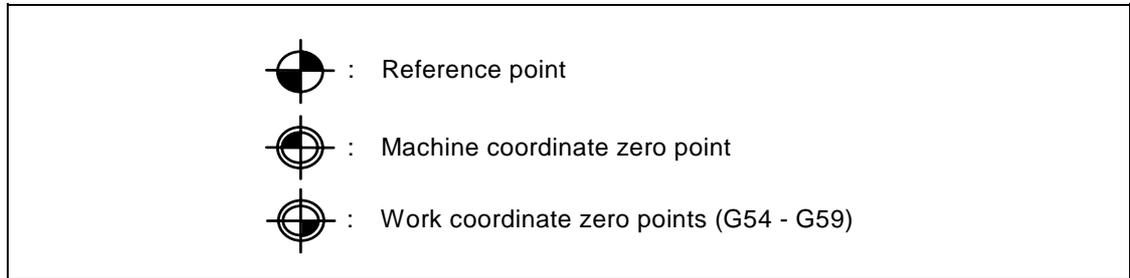


2. Input Command Units

2.1 Input command units

2. Input Command Units

2.1 Input command units

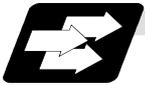

Function and purpose

These are the units used for the movement amounts in the program as commanded by the MDI input and command tape. They are expressed in millimeters, inches or degrees (°).

2.2 Input setting units



Function and purpose

These are the units of setting data which are used, as with the compensation amounts, in common for all axes.

The input setting units and input command units can be selected from the following types for each axis with the parameters. (For further details on settings, refer to the Operation Manual.)

	Input unit parameters	Linear axis		Rotary axis (°)
		Millimeter	Inch	
Input command unit	#1015 cunit = 10000	1.0	0.1	1.0
	= 1000	0.1	0.01	0.1
	= 100	0.01	0.001	0.01
	= 10	0.001	0.0001	0.001
Input setting unit	#1003 iunit = B	0.001	0.0001	0.001
	= C	0.0001	0.00001	0.0001

(Note 1) Inch/metric conversion is performed in either of 2 ways: conversion from the parameter screen ("#1041 I_inch: valid only when the power is switched on) and conversion using the G command (G20 or G21).

However, when a G command is used for the conversion, the conversion applies only to the input command units and not to the input setting units.

Consequently, the tool offset amounts and other compensation amounts as well as the variable data should be preset to correspond to inches or millimeters.

(Note 2) The millimeter and inch systems cannot be used together.

(Note 3) During circular interpolation on an axis where the input command units are different, the center command (I, J, K) and the radius command (R) can be designated by the input setting units. (Use a decimal point to avoid confusion.)

3. Data Formats

3.1 Tape codes



Function and purpose

The tape command codes used for this controller are combinations of alphabet letters (A, B, C, ... Z), numbers (0, 1, 2 ... 9) and signs (+, -, / ...). These alphabet letters, numbers and signs are referred to as characters. Each character is represented by a combination of 8 holes which may, or may not, be present.

These combinations make up what is called codes.

This controller uses, the ISO code (R-840).

(Note 1) If a code not given in the tape code table in Fig. 1 is assigned during operation, program error (P32) will result.

(Note 2) For the sake of convenience, a semicolon ";" has been used in the CNC display to indicate the end of a block (EOB/IF) which separates one block from another. Do not use the semicolon key, however, in actual programming but use the keys in the following table instead.

CAUTION

 ";" "EOB" and "% "EOR" are explanatory notations. The actual codes are "Line feed" and "% " for ISO, and "End of block" and "End of Record" for EIA.



Detailed description

EOB/EOR keys and displays

Key used	Code used	ISO	Screen display
End of block		LF or NL	;
End of record		%	%


(1) Significant data section (label skip function)

All data up to the first EOB (;), after the power has been turned on or after operation has been reset, are ignored during automatic operation based on tape, memory loading operation or during a search operation. In other words, the significant data section of a tape extends from the character or number code after the initial EOB (;) code after resetting to the point where the reset command is issued.

(2) Control out, control in

When the ISO code is used, all data between control out "(" and control in ")" or ";" are ignored, although these data appear on the setting and display unit. Consequently, the command tape name, number and other such data not directly related to control can be inserted in this section.

This information (except (B) in the tape codes) will also be loaded, however, during tape loading. The system is set to the "control in" mode when the power is switched on.

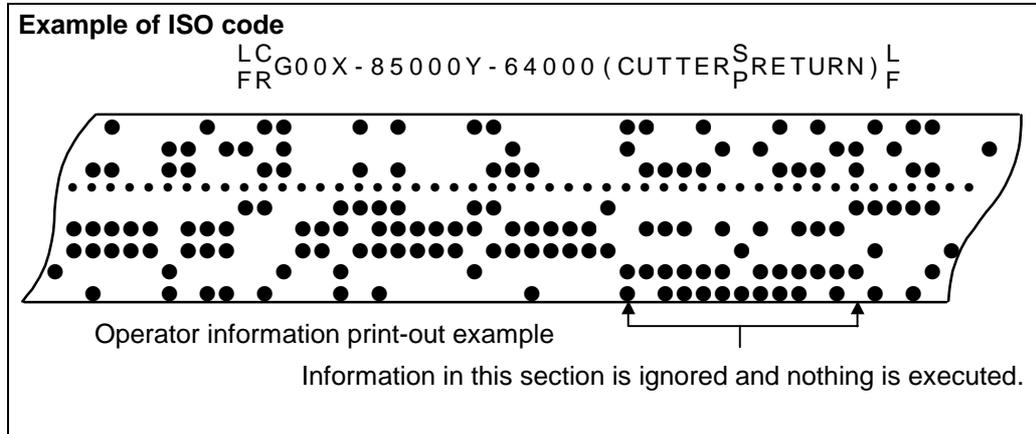


(3) EOR (%) code


Generally, the end-of-record code is punched at both ends of the tape. It has the following functions:

- (a) Rewind stop when rewinding tape (with tape handler)
- (b) Rewind start during tape search (with tape handler)
- (c) Completion of loading during tape loading into memory

(4) Tape preparation for tape operation (with tape handler)

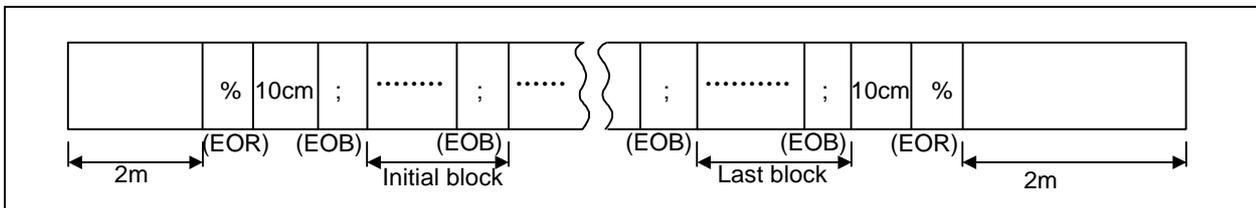

If a tape handler is not used, there is no need for the 2-meter dummy at both ends of the tape and for the head EOR (%) code.

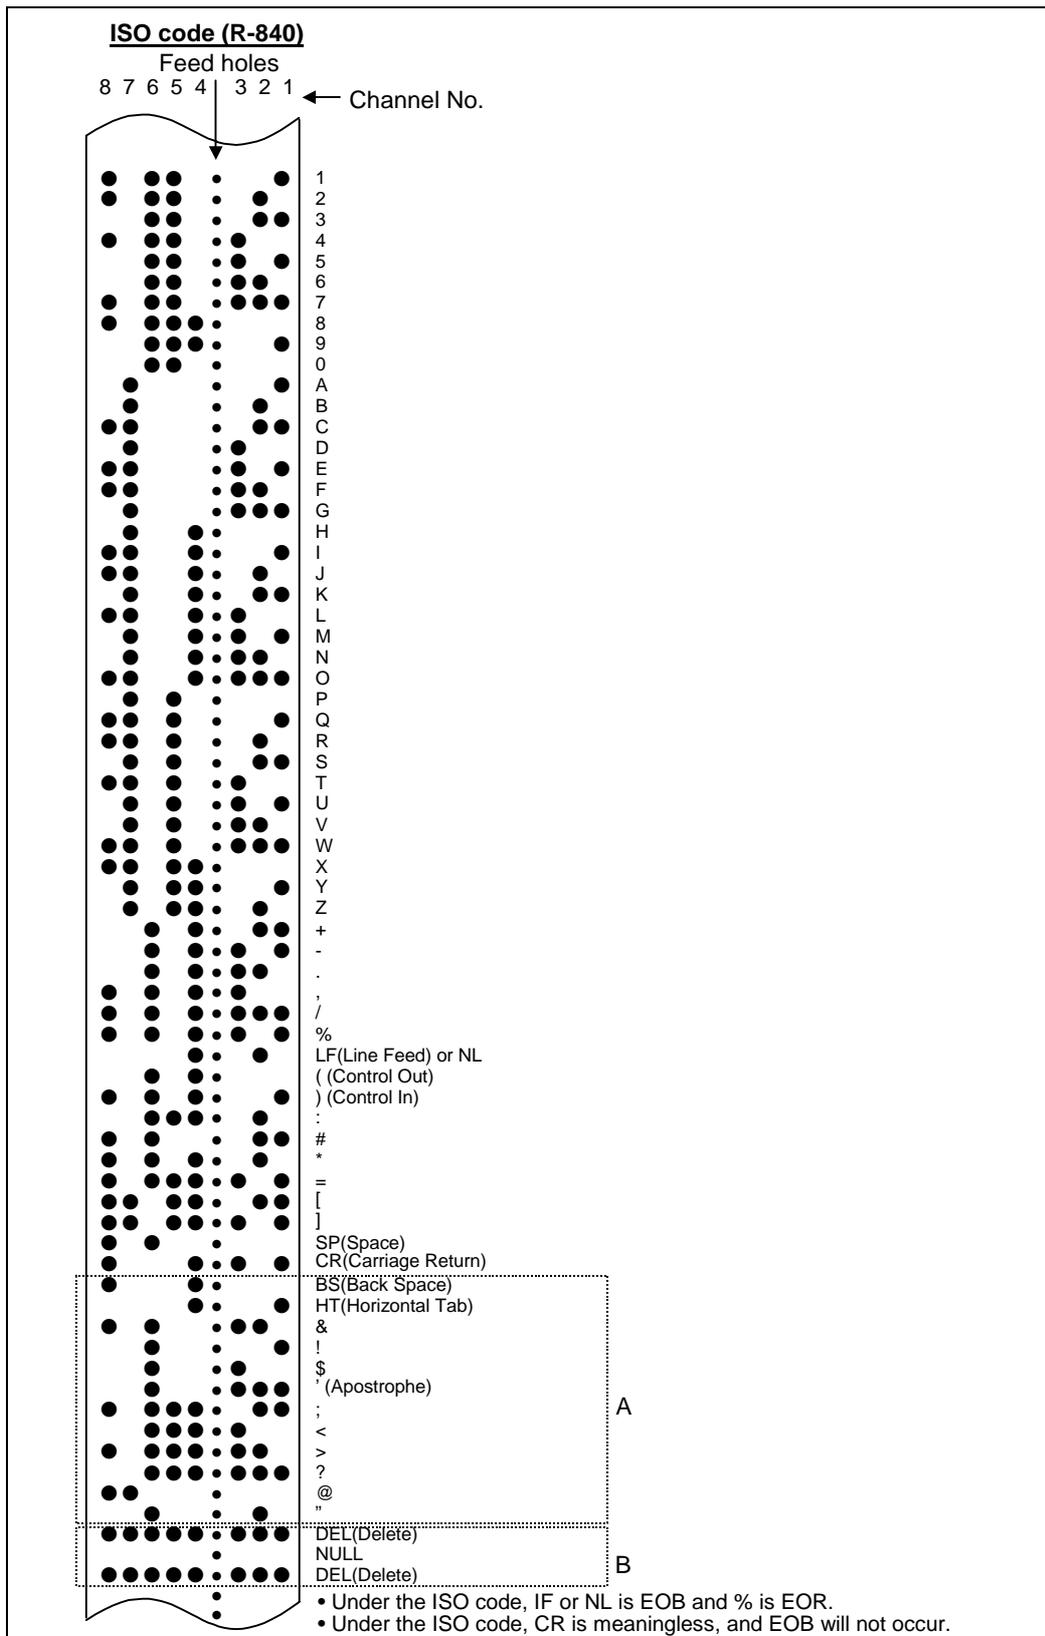


Code A are stored on tape but an error results (except when they are used in the comment section) during operation.

The B codes are non-working codes and are always ignored. Parity V check is not executed.

Table of tape codes

3.2 Program formats

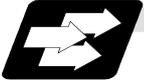

Function and purpose


The prescribed arrangement used when assigning control information to the controller is known as the program format, and the format used with this controller is called the "word address format".



Detailed description

(1) Word and address

A word is a collection of characters arranged in a specific sequence. This entity is used as the unit for processing data and for causing the machine to execute specific operations. Each word used for this controller consists of an alphabet letter and a number of several digits (sometimes with a "-" sign placed at the head of the number.).

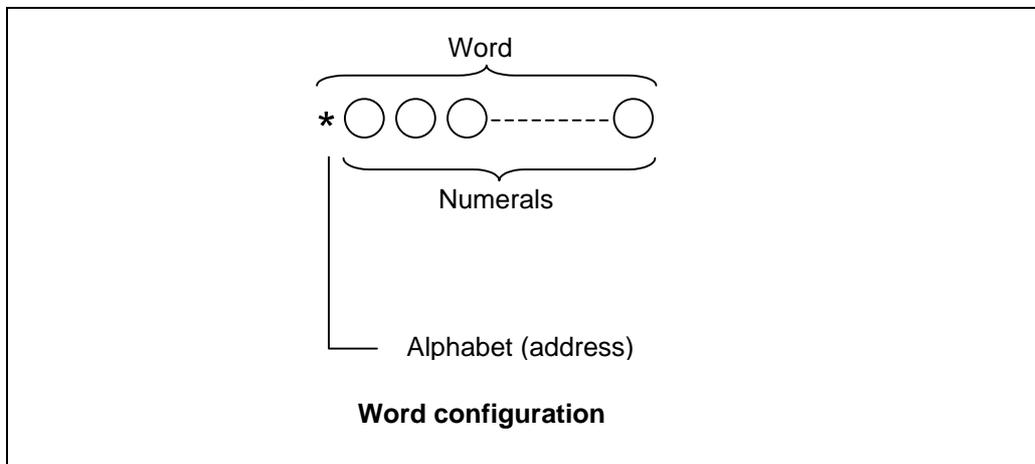

The alphabet letter at the head of the word is the address. It defines the meaning of the numerical information which follows it.

For details of the types of words and the number of significant digits of words used for this controller, refer to the "format details".

(2) Blocks

A block is a collection of words. It includes the information which is required for the machine to execute specific operations. One block unit constitutes a complete command. The end of each block is marked with an EOB (end-of-block) code.

(Example 1:)

```
G0X - 1000 ;
G1X - 2000F500 ;
```

} 2 blocks

(Example 2:)

```
(G0X - 1000 ; )
G1X - 2000F500 ;
```

} Since the semicolon in the parentheses will not result in an EOB, it is 1 block.

(3) Programs

A program is a collection of several blocks.

3. Data Formats

3.2 Program formats

<Brief summary of format details>

	Metric command	Inch command	Rotary axis (Metric command)	Rotary axis (Inch command)
Program number	08	←	←	←
Sequence number	N5	←	←	←
Preparatory function	G3/G21	←	←	←
Movement axis	0.001(°) mm/ 0.0001 inch	X+53 Y+53 Z+53 α+53	X+44 Y+44 Z+44 α+44	X+53 Y+53 Z+53 α+53
	0.0001(°) mm/ 0.00001 inch	X+44 Y+44 Z+44 α+44	X+35 Y+35 Z+35 α+35	X+44 Y+44 Z+44 α+44
Arc and cutter radius	0.001(°) mm/ 0.0001 inch	I+53 J+53 K+53 R+53	I+44 J+44 K+44 R+44	I+53 J+53 K+53 R+53 (Note 5)
	0.0001(°) mm/ 0.00001 inch	I+44 J+44 K+44 R+44	I+35 J+35 K+35 R+35	I+44 J+44 K+44 R+44 (Note 5)
Dwell	0.001(°) mm/ 0.0001 inch	X+53/P+8	←	←
	0.0001(°) mm/ 0.00001 inch	X+53/P+8	←	←
Feed function	0.001(°) mm/ 0.0001 inch	F63(Feed per minute) F43(Feed per revolution)	F44(Feed per minute) F34(Feed per revolution)	F63(Feed per minute) F43(Feed per revolution) (Note 6)
	0.0001(°) mm/ 0.00001 inch	F54(Feed per minute) F34(Feed per revolution)	F35(Feed per minute) F25(Feed per revolution)	F54(Feed per minute) F34(Feed per revolution) F35(Feed per minute) F25(Feed per revolution) (Note 6)
Tool offset	H3 D3	←	←	←
Miscellaneous function (M)	M8	←	←	←
Spindle function (S)	S8	←	←	←
Tool function (T)	T8	←	←	←
2nd miscellaneous function	A8/B8/C8	←	←	←
Subprogram	P8 H5 L4	←	←	←
Fixed cycle	0.001(°) mm/ 0.0001 inch	R+53 Q53 P8 L4	←	←
	0.0001(°) mm/ 0.00001 inch	R+44 Q44 P8 L4	←	←

(Note 1) α indicates the additional axis address, such as A, B or C.

(Note 2) The No. of digits check for a word is carried out with the maximum number of digits of that address.

(Note 3) Numerals can be used without the leading zeros.

(Note 4) The meanings of the details are as follows:


Example 1 : 08 :8-digit program number

Example 2 : G21 :Dimension G is 2 digits to the left of the decimal point, and 1 digit to the right.

Example 3 : X+53 :Dimension X uses + or - sign and represents 5 digits to the left of the decimal point and 3 digits to the right.

For example, the case for when the X axis is positioned (G00) to the 45.123 mm position in the absolute value (G90) mode is as follows:

G00 X45.123 ;

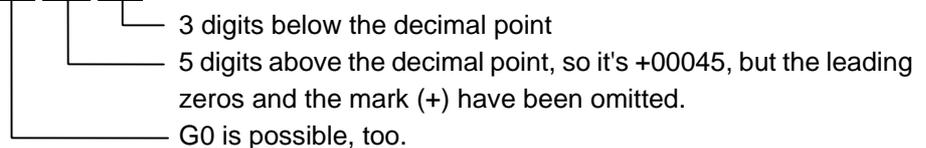

(Note 5) If an arc is commanded using a rotary axis and linear axis while inch commands are being used, the degrees will be converted into 0.1 inches for interpolation.

(Note 6) While inch commands are being used, the rotary axis speed will be in increments of 10 degrees.


Example: With the F1. (per-minute-feed) command, this will become the 10 degrees/minute command.

(Note 7) The decimal places below the decimal point are ignored when a command, such as an S command, with an invalid decimal point has been assigned with a decimal point.

(Note 8) This format is the same for the value input from the memory, MDI or setting and display unit.

(Note 9) Command the program No. in an independent block. Command the program No. in the head block of the program.

3.3 Program address check function

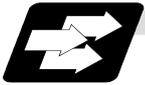

Function and purpose

The program can be checked in word units when operating machining programs.



Detailed description

(1) Address check

This function enables simple checking of program addresses in word units. If the alphabetic characters are continuous, the program error (P32) will occur. Availability of this function is selected by the parameter "#1227 aux11/bit4".

Note that an error will not occur for the following:

- Reserved words
- Comment statements

(2) Word range check

When the operation expression is used for the word data, check whether one word data is enclosed in brackets "[]" or not.

If it is not enclosed, the program error (P33) will occur.

Availability of this function is selected by the parameter "#1274 ext10/bit7".



Example of program

(1) Example of program for address check

(Example 1) When there are no numbers following an alphabetic character.
G28 X ; → An error will occur. Change to "G28 X0;", etc.


(Example 2) When a character string is illegal.
TEST ; → An error will occur. Change to "(TEST);", etc.

(2) Example of program for word range check

X-100.-#24	→ An error will occur. Change as shown below.
Z+#500*TAN[#1]	X-[100.+#24]
Y-SIN[60.]	Z+[#500*TAN[#1]]
	Y-SIN[60.]

The numbers of brackets that can be used for one word data are maximum five. If six brackets or more are commanded, the program error (P280) will occur.

3.4 Tape memory format

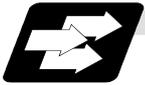

Function and purpose

(1) Storage tape and significant sections

The others are about from the current tape position to the EOB. Accordingly, under normal conditions, operate the tape memory after resetting.

The significant codes listed in "Table of tape codes" in "3.1 Tape Codes" in the above significant section are actually stored into the memory. All other codes are ignored and are not stored.

The data between control out "(" and control in ")" are stored into the memory.

3.5 Optional block skip ; /



Function and purpose

This function selectively ignores specific blocks in a machining program which starts with the "/" (slash) code.



Detailed description

- (1) Provided that the optional block skip switch is ON, blocks starting with the "/" code are ignored. They are executed if the switch is OFF. Parity check is valid regardless of whether the optional block skip switch is ON or OFF. When, for instance, all blocks are to be executed for one workpiece but specific block are not to be executed for another workpiece, the same command tape can be used to machine different parts by inserting the "/" code at the head of those specific blocks.




Precautions for using optional block skip

- (1) Put the "/" code for optional block skip at the beginning of a block. If it is placed inside the block, it is assumed as a user macro, a division instruction.

Example : N20 G1 X25./Y25. ;..... NG (User macro, a division instruction; a program error results.)
/N20 G1 X25. Y25. ; OK

- (2) Parity checks (H and V) are conducted regardless of the optional block skip switch position.
- (3) The optional block skip is processed immediately before the pre-read buffer. Consequently, it is not possible to skip up to the block which has been read into the pre-read buffer.
- (4) This function is valid even during a sequence number search.
- (5) All blocks with the "/" code are also input and output during tape storing and tape output, regardless of the position of the optional block skip switch.

3.6 Program/sequence/block numbers ; O, N

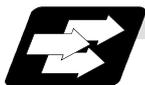

Function and purpose

These numbers are used for monitoring the execution of the machining programs and for calling both machining programs and specific stages in machining programs.

- (1) Program numbers are classified by workpiece correspondence or by subprogram units, and they are designated by the address "O" followed by a number with up to 8 digits.
- (2) Sequence numbers are attached where appropriate to command blocks which configure machining programs, and they are designated by the address "N" followed by a number with up to 5 digits.
- (3) Block numbers are automatically provided internally. They are preset to zero every time a program number or sequence number is read, and they are counted up one at a time unless program numbers or sequence numbers are commanded in blocks which are subsequently read.

Consequently, all the blocks of the machining programs given in the table below can be determined without further consideration by combinations of program numbers, sequence numbers and block numbers.

Machining program	Monitor display		
	Program No.	Sequence No.	Block No.
O12345678 (DEMO, PROG) ;	12345678	0	0
G92 X0 Y0 ;	12345678	0	1
G90 G51 X-150. P0.75 ;	12345678	0	2
N100 G00 X-50. Y-25. ;	12345678	100	0
N110 G01 X250. F300 ;	12345678	110	0
Y-225. ;	12345678	110	1
X-50. ;	12345678	110	2
Y-25. ;	12345678	110	3
N120 G51 Y-125. P0.5 ;	12345678	120	0
N130 G00 X-100. Y-75. ;	12345678	130	0
N140 G01 X-200. ;	12345678	140	0
Y-175. ;	12345678	140	1
X-100. ;	12345678	140	2
Y-75. ;	12345678	140	3
N150 G00 G50 X0 Y0 ;	12345678	150	0
N160 M02 ;	12345678	160	0
%			

3.7 Parity H/V



Function and purpose

Parity check provides a mean of checking whether the tape has been correctly perforated or not. This involves checking for perforated code errors or, in other words, for perforation errors. There are two types of parity check: Parity H and Parity V.

(1) Parity H


Parity H checks the number of holes configuring a character and it is done during tape operation, tape input and sequence number search.

A parity H error is caused in the following cases.

(a) ISO code

When a code with an odd number of holes in a significant data section has been detected.

Parity H error example

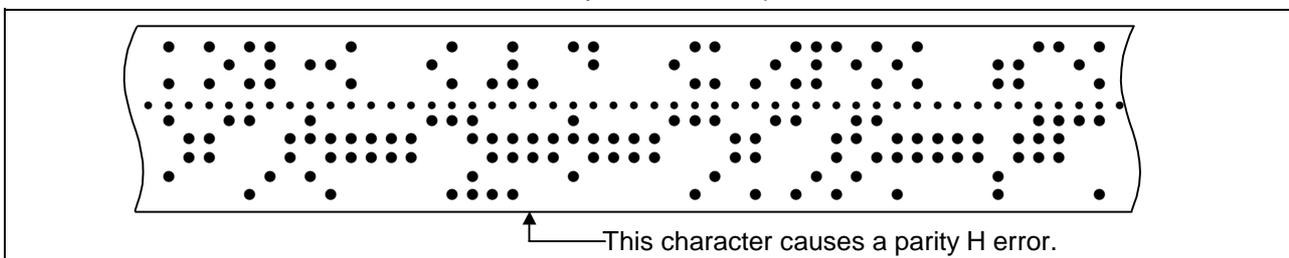

When a parity H error occurs, the tape stops following the alarm code.

(2) Parity V

A parity V check is done during tape operation, tape input and sequence number search when the I/O PARA #9n15 (n is the unit No.1 to 5) parity V check function is set to "1". It is not done during memory operation.


A parity V error occurs in the following case: when the number of codes from the first significant code to the EOB (;) in the significant data section in the vertical direction of the tape is an odd number, that is, when the number of characters in one block is odd.

When a parity V error is detected, the tape stops at the code following the EOB (;).

(Note 1) Among the tape codes, there are codes which are counted as characters for parity and codes which are not counted as such. For details, refer to the "Table of tape codes" in "3.1 Tape Codes".

(Note 2) Any space codes which may appear within the section from the initial EOB code to the address code or "/" code are counted for parity V check.

3.8 G code lists

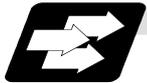

Function and purpose

G code	Group	Function
Δ 00	01	Positioning
Δ 01	01	Linear interpolation
02	01	Circular interpolation CW (clockwise)
03	01	Circular interpolation CCW (counterclockwise)
02.3	01	Exponential function interpolation positive rotation
03.3	01	Exponential function interpolation negative rotation
04	00	Dwell
05	00	High-speed high-accuracy control II
05.1	00	High-speed high-accuracy control I
07		
07.1 107	21	Cylindrical interpolation
08		
09	00	Exact stop check
10	00	Program parameter input/compensation input
11	00	Program parameter input cancel
12	00	Circular cut CW (clockwise)
13	00	Circular cut CCW (counterclockwise)
12.1 112	21	Polar coordinate interpolation ON
* 13.1 113	21	Polar coordinate interpolation cancel
14		
* 15	18	Polar coordinate command OFF
16	18	Polar coordinate command ON
Δ 17	02	Plane selection X-Y
Δ 18	02	Plane selection Z-X
Δ 19	02	Plane selection Y-Z
Δ 20	06	Inch command
Δ 21	06	Metric command
22		
23		
24		
25		
26		
27	00	Reference point check
28	00	Reference point return
29	00	Start point return
30	00	2nd to 4th reference point return
30.1	00	Tool change position return 1
30.2	00	Tool change position return 2
30.3	00	Tool change position return 3
30.4	00	Tool change position return 4
30.5	00	Tool change position return 5
30.6	00	Tool change position return 6
31	00	Skip

G code	Group	Function
31.1	00	Multi-skip function 1
31.2	00	Multi-skip function 2
31.3	00	Multi-skip function 3
32		
33	01	Thread cutting
34	00	Special fixed cycle (bolt hole circle)
35	00	Special fixed cycle (line at angle)
36	00	Special fixed cycle (arc)
37	00	Automatic tool length measurement
37.1	00	Special fixed cycle (grid)
38	00	Tool radius compensation vector designation
39	00	Tool radius compensation corner arc
* 40	07	Tool radius compensation cancel
41	07	Tool radius compensation left
42	07	Tool radius compensation right
* 40.1	15	Normal line control cancel
41.1	15	Normal line control left ON
42.1	15	Normal line control right ON
43	08	Tool length offset (+)
44	08	Tool length offset (-)
43.1	20	1st spindle control ON
44.1	20	2nd spindle control ON
45	00	Tool position offset (expansion)
46	00	Tool position offset (reduction)
47	00	Tool position offset (doubled)
48	00	Tool position offset (halved)
47.1	20	Two-spindles simultaneous control ON
* 49	08	Tool length offset cancel
* 50	11	Scaling cancel
51	11	Scaling ON
* 50.1	19	G command mirror image cancel
51.1	19	G command mirror image ON
52	00	Local coordinate system setting
53	00	Machine coordinate system selection
* 54	12	Work coordinate system 1 selection
55	12	Work coordinate system 2 selection
56	12	Work coordinate system 3 selection
57	12	Work coordinate system 4 selection
58	12	Work coordinate system 5 selection
59	12	Work coordinate system 6 selection
54.1	12	Work coordinate system selection 48 sets expanded
60	00	Uni-directional positioning
61	13	Exact stop check mode
61.1	13	High-accuracy control
62	13	Automatic corner override
63	13	Tapping mode
63.1	13	Synchronous tapping mode (normal tapping)
63.2	13	Synchronous tapping mode (reverse tapping)
* 64	13	Cutting mode
65	00	User macro call
66	14	User macro modal call A
66.1	14	User macro modal call B

G code	Group	Function
* 67	14	User macro modal call cancel
68	16	Coordinate conversion mode ON
* 69	16	Coordinate conversion mode OFF
70	09	User fixed cycle
71	09	User fixed cycle
72	09	User fixed cycle
73	09	Fixed cycle (step)
74	09	Fixed cycle (reverse tap)
75	09	User fixed cycle
76	09	Fixed cycle (fine boring)
77	09	User fixed cycle
78	09	User fixed cycle
79	09	User fixed cycle
* 80	09	Fixed cycle cancel
81	09	Fixed cycle (drill/spot drill)
82	09	Fixed cycle (drill/counter boring)
83	09	Fixed cycle (deep drilling)
84	09	Fixed cycle (tapping)
85	09	Fixed cycle (boring)
86	09	Fixed cycle (boring)
87	09	Fixed cycle (back boring)
88	09	Fixed cycle (boring)
89	09	Fixed cycle (boring)
Δ 90	03	Absolute value command
Δ 91	03	Incremental command value
92	00	Machine coordinate system setting
93		
Δ 94	05	Asynchronous feed (per-minute feed)
Δ 95	05	Synchronous feed (per-revolution feed)
Δ 96	17	Constant surface speed control ON
Δ 97	17	Constant surface speed control OFF
* 98	10	Fixed cycle Initial level return
99	10	Fixed cycle R point level return
100 to 255	00	User macro (G code call) Max. 10

- (Note 1) Codes marked with * are codes that must be or are selected in the initial state. The codes marked with Δ are codes that should be or are selected in the initial state by the parameters.
- (Note 2) If two or more G codes from the same code are commanded, the latter G code will be valid.
- (Note 3) This G code list is a list of conventional G codes. Depending on the machine, movements that differ from the conventional G commands may be included when called by the G code macro. Refer to the Instruction Manual issued by the machine maker.
- (Note 4) Whether the modal is initialized or not depends on each reset input.
- (1) "Reset 1"
The modal is initialized when the reset initial parameter "#1151 rstinit" turns ON.
 - (2) "Reset 2" and "Reset & rewind"
The modal is initialized when the signal is input.
 - (3) Resetting when emergency stop is canceled
Follows "Reset 1".
 - (4) When modal is automatically reset at the start of individual functions such as reference point return.
Follows "Reset & rewind".

CAUTION

 The commands with "no value after G" will be handled as "G00".

3.9 Precautions before starting machining



Precautions before starting machining

CAUTION

-  When creating the machining program, select the appropriate machining conditions so that the machine, NC performance, capacity and limits are not exceeded. The examples do not allow for the machining conditions.
-  Carry out dry operation before actually machining, and confirm the machining program, tool offset and workpiece offset amount.

4. Buffer Register

4.1 Input buffer




Function and purpose

When the pre-read buffer is empty during a tape operation or RS232C operation, the contents of the input buffer are immediately transferred to the pre-read buffers and, provided that the data stored in the input buffer do not exceed 250×4 characters, the following data (Max. 250 characters) are read and loaded into the input buffer.

This buffer is designed to eliminate the operational delay originating in the readout time of the tape reader and to smooth out the block joints.

The pre-reading effects are lost, however, when the block execution time is shorter than the tape readout time of the following block.

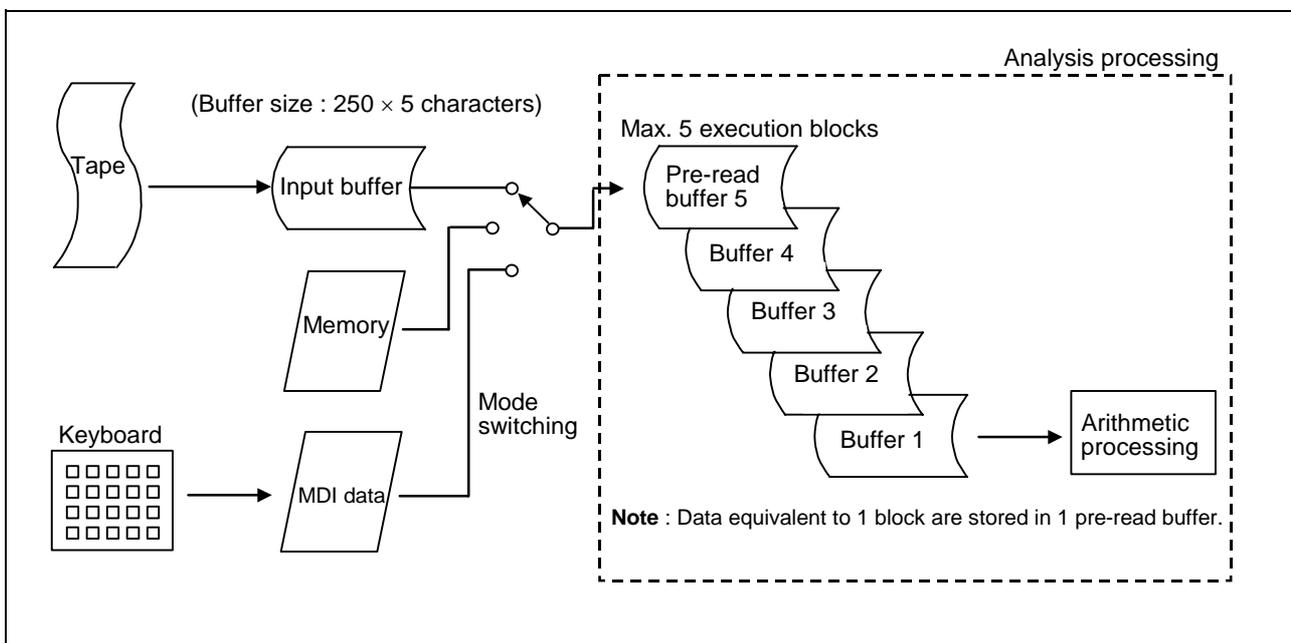

The input buffer has a memory capacity of 250×5 characters (including the EOB code).

- (1) The contents of the input buffer register are updated in 250-character units.
- (2) Only the significant codes in the significant data section are read into the input buffer.
- (3) When codes (including "(" and ")") are sandwiched in the control in or control out mode and the optional block skip function is ON, the data extending from the "/" (slash) code up to the EOB code are read into the input buffer.
- (4) The input buffer contents are cleared with resetting.

(Note 1) The input buffer size (250 characters) differs according to the model.

4.2 Pre-read buffers



Function and purpose

During automatic processing, the contents of 1 block are normally pre-read so that program analysis processing is conducted smoothly. However, during tool radius compensation, a maximum of 5 blocks are pre-read for the intersection point calculation including interference check.

The specifications of the data in 1 block are as follows:

- (1) The data of 1 block are stored in this buffer.
- (2) Only the significant codes in the significant data section are read into the pre-read buffer.
- (3) When codes are sandwiched in the control in and control out, and the optional block skip function is ON, the data extending from the "/" (slash) code up to the EOB code are not read into the pre-read buffer.
- (4) The pre-read buffer contents are cleared with resetting.
- (5) When the single block function is ON during continuous operation, the pre-read buffer stores the following block data and then stops operation.



Other precautions

- (1) Depending on whether the program is executed continuously or by single blocks, the timing of the valid/invalid for the external control signals for the block skip and others will differ.
- (2) If the external control signal such as optional block skip is turned ON/OFF with the M command, the external control operation will not be effective on the program pre-read with the buffer register.
- (3) According to the M command that operates the external controls, it prohibits pre-reading, and the recalculation is as follows:
The M command that commands the external controls is distinguished at the PLC, and the "recalculation request" for PLC -> NC interface table is turned ON.
(When the "recalculation request" is ON, the program that has been pre-read is reprocessed.)

5. Position Commands

5.1 Position command methods ; G90, G91



Function and purpose

By using the G90 and G91 commands, it is possible to execute the next coordinate commands using absolute values or incremental values.
The R-designated circle radius and the center of the circle determined by I, J, K are always incremental value commands.



Command format

G9D Xx1 Yy1 Zz1 αα1

G90 :Absolute value command

G91 :Incremental command

α :Additional axis



Detailed description

- (1) Regardless of the current position, in the absolute value mode, it is possible to move to the position of the workpiece coordinate system that was designated in the program.


```
N 1 G90 G00 X0 Y0 ;
```

In the incremental value mode, the current position is the start point (0), and the movement is made only the value determined by the program, and is expressed as an incremental value.

```
N 2 G90 G01 X200. Y50. F100;
```

```
N 2 G91 G01 X200. Y50. F100;
```

Using the command from the 0 point in the workpiece coordinate system, it becomes the same coordinate command value in either the absolute value mode or the incremental value mode.

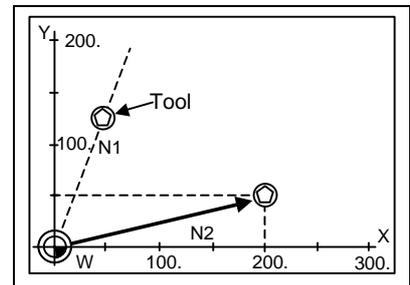

- (2) For the next block, the last G90/G91 command that was given becomes the modal.

(G90)


```
N 3 X100. Y100.;
```

The axis moves to the workpiece coordinate system X = 100mm and Y = 100mm position.

(G91)

```
N 3 X-100. Y50.;
```

The X axis moves to -100.mm and the Y axis to +50.0mm as an incremental value, and as a result X moves to 100.mm and Y to 100.mm.

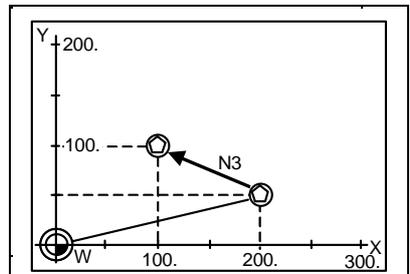


5. Position Commands

5.1 Position command methods

- (3) Since multiple commands can be issued in the same block, it is possible to command specific addresses as either absolute values or incremental values.


```
N 4 G90 X300. G91 Y100.;
```

The X axis is treated in the absolute value mode, and with G90 is moved to the workpiece coordinate system 300.mm position. The Y axis is moved +100.mm with G91. As a result, Y moves to the 200.mm position. In terms of the next block, G91 remains as the modal and becomes the incremental value mode.

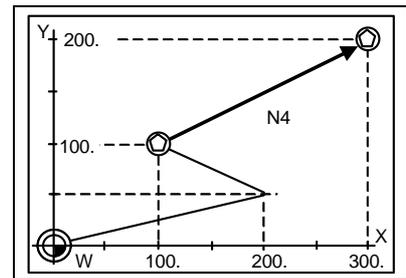

- (4) When the power is turned ON, it is possible to select whether you want absolute value commands or incremental value commands with the #1073 I_Absm parameter.
- (5) Even when commanding with the manual data input (MDI), it will be treated as a modal from that block.

5.2 Inch/metric command change; G20, G21

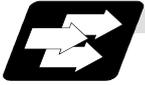

Function and purpose

These G commands are used to change between the inch and millimeter (metric) systems.



Command format

G20/G21;

G20 : Inch command

G21 : Metric command



Detailed description

G20 and G21 selection is meaningful only for linear axes and it is meaningless for rotary axes. The input unit for G20 and G21 will not change just by changing the command unit. In other words, if the machining program command unit changes to an inch unit at G20 when the initial inch is OFF, the setting unit of the tool offset amount will remain metric. Thus, take note to the setting value.

(Example 1) Relationship between input command units and G20/G21 commands
(with decimal point input type 1)

Axis	Input command unit type (cunit)	Command example	Metric output (#1016 iout=0)		Inch output (#1016 iout=1)	
			G21	G20	G21	G20
X	10	X100;	0.100mm	0.254mm	0.0039inch	0.0100inch
Y	10	Y100;	0.100mm	0.254mm	0.0039inch	0.0100inch
Z	100	Z100;	1.00mm	2.54mm	0.039inch	0.100inch
B	1000	B100;	10.0°	10.0°	10.0°	10.0°

(Note 1) When changing between G20 and G21 with program commands, it is necessary in advance, to convert the parameters, variables, and the offsets for the tool diameter, tool position, tool length, to the units in the input settings of the input setting unit system (for each axis) that have inch or metric commands, and make the settings using the parameter tape.

(Example 2) Input setting unit #1015 cunit=10, #1041 I_inch=0

Position command unit 0.001mm

Compensation amount setting unit

..... When the compensation amount is 0.05mm for
0.001mm

In the above example, when changing from G21 to G20, the compensation amount must be set to 0.002 ($0.05 \div 25.4 \approx 0.002$).

(Note 2) Since the data before the change will be executed at the command unit after the change, command the F speed command for the change so that it is the correct speed command for the command unit system applied after the change.

5. Position Commands

5.2 Inch/metric command change



Output unit, command unit and setting unit

Select whether to issue the counter or parameter setting and display unit as a command unit determined by the G20/G21 command modal, or as the internal unit determined by parameter "#1041 I_inch". If the command unit setting display is selected when initial metric (internal unit metric) is set with the base specification parameter "#1226 aux10/bit6", the counter and parameters will be displayed as metric units during the G21 command mode. The internal unit metric data will be converted into an inch unit and displayed during the G20 command mode. The command unit for when the power is turned ON and reset can be selected regardless of the internal unit by setting the base specification parameter "#1152 I_G20".

NC axis

Item	Initial inch OFF (metric internal unit) #1041 I_inch=0				Initial inch ON (inch internal unit) #1041 I_inch=1			
	#1226 aux10/bit6=0 Follows internal unit		#1226 aux10/bit6=1 Follows command unit		#1226 aux10/bit6=0 Follows internal unit		#1226 aux10/bit6=1 Follows internal unit	
	G21	G20	G21	G20	G21	G20	G21	G20
Movement/ speed command	Metric	Inch	Metric	Inch	Metric	Inch	The "#1226 aux10/bit6" parameter is invalid when initial inch is ON. Even if 1 is set, the setting and display will follow the internal unit in the same manner as when 0 is set.	
Counter display	Metric	Metric	Metric	Inch	Inch	Inch		
Speed display	Metric	Metric	Metric	Inch	Inch	Inch		
User parameter setting/display	Metric	Metric	Metric	Inch	Inch	Inch		
Workpiece/ tool offset setting/display	Metric	Metric	Metric	Inch	Inch	Inch		
Handle feed command	Metric	Metric	Metric	Inch	Inch	Inch		
Setup parameter setting/display	Follows "#1040 M_inch"							

PLC axis

Item	#1042 pcinch=0 (metric)	#1042 pcinch=1 (inch)
Movement/ speed command	Metric	Inch
Counter display	Metric	Inch
User parameter setting/display	Metric	Inch
Setup parameter setting/display	Follows "#1040 M_inch"	

When using both the NC axis and PLC axis as rotation axes, three digits below the decimal point will be displayed for the coordinate data, etc., even for the inch command.

5. Position Commands

5.2 Inch/metric command change



Usage examples

The screen display will change in the following manner according to the parameter settings.

<p>Parameter setting</p> <p>Program command/ screen operation</p>	<p>#1041 I_inch 0 #1152 I_G20 0</p> <p>#1226 aux10/bit6 0</p>	<p>Initial metric G21 (metric) mode at reset Setting and display unit is internal unit</p>	<p>#1041 I_inch 0 #1152 I_G20 0</p> <p>#1226 aux10/bit6 1</p>	<p>Initial metric G21 (metric) mode at reset Setting and display unit is command unit</p>
	<div data-bbox="512 577 756 734" style="border: 1px solid black; padding: 5px;"> <p>[POSITION] X 0.000 Y 0.000 Z 0.000 mm.</p> </div> <div data-bbox="512 763 756 920" style="border: 1px solid black; padding: 5px;"> <p>[TOOL OFFSET] # 1 0.100 11 0.000 2 0.200 12 0.000 3 0.300 13 0.000 mm.</p> </div>		<div data-bbox="979 577 1224 734" style="border: 1px solid black; padding: 5px;"> <p>[POSITION] X 0.000 Y 0.000 Z 0.000 mm.</p> </div> <div data-bbox="979 763 1224 920" style="border: 1px solid black; padding: 5px;"> <p>[TOOL OFFSET] # 1 0.100 11 0.000 2 0.200 12 0.000 3 0.300 13 0.000 mm.</p> </div>	
<p>Inch command G20 G0 X1. Y2. Z3. ;</p>	<div data-bbox="512 1016 756 1173" style="border: 1px solid black; padding: 5px;"> <p>[POSITION] X 25.400 Y 50.800 Z 76.200 in.</p> </div> <div data-bbox="512 1227 756 1384" style="border: 1px solid black; padding: 5px;"> <p>[TOOL OFFSET] # 1 0.100 11 0.000 2 0.200 12 0.000 3 0.300 13 0.000 in.</p> </div>	<p>Internal data 25.4(mm) 50.8(mm) 76.2(mm)</p>	<p>Display unit is also inch following the command unit</p> <div data-bbox="979 1016 1224 1173" style="border: 1px solid black; padding: 5px;"> <p>[POSITION] X 1.0000 Y 2.0000 Z 3.0000 in.</p> </div> <div data-bbox="979 1227 1224 1384" style="border: 1px solid black; padding: 5px;"> <p>[TOOL OFFSET] # 1 0.0039 11 0.0000 2 0.0078 12 0.0000 3 0.0118 13 0.0000 in.</p> </div>	<p>Internal data 25.4(mm) 50.8(mm) 76.2(mm)</p> <p>Internal data #10.1(mm)</p>
<p>#(1)(1) Input</p>	<div data-bbox="512 1491 756 1648" style="border: 1px solid black; padding: 5px;"> <p>[TOOL OFFSET] # 1 1.000 11 0.000 : : in.</p> </div>	<p>Internal data 1.0(mm)</p>	<p>Set with inch unit</p> <div data-bbox="979 1491 1224 1648" style="border: 1px solid black; padding: 5px;"> <p>[TOOL OFFSET] # 1 1.0000 11 0.0000 : : in.</p> </div>	<p>Internal data 25.4(mm)</p>

5. Position Commands

5.2 Inch/metric command change

Parameter setting	#1041 I_inch 0 #1152 I_G20 0	Initial metric G21 (metric) mode at reset	#1041 I_inch 0 #1152 I_G20 0	Initial metric G21 (metric) mode at reset
Program command/ screen operation	#1226 aux10/bit6 0	Setting and display unit is internal unit	#1226 aux10/bit6 1	Setting and display unit is command unit
Reset	<div style="border: 1px solid black; padding: 5px; width: fit-content;"> <pre>[POSITION] X 25.400 Y 50.800 Z 76.200 mm.</pre> </div> <div style="border: 1px solid black; padding: 5px; width: fit-content; margin-top: 10px;"> <pre>[TOOL OFFSET] # 1 1.000 11 0.000 2 0.200 12 0.000 3 0.300 13 0.000 mm.</pre> </div>		<p>Display unit is also metric following the command unit</p> <div style="border: 1px solid black; padding: 5px; width: fit-content;"> <pre>[POSITION] X 25.400 Y 50.800 Z 76.200 mm.</pre> </div> <div style="border: 1px solid black; padding: 5px; width: fit-content; margin-top: 10px;"> <pre>[TOOL OFFSET] # 1 25.400 11 0.000 2 0.200 12 0.000 3 0.300 13 0.000 mm.</pre> </div>	



Precautions

- (1) If the tool and workpiece offset data are added with an inch command unit and metric internal unit, an error may occur.
- (2) The internal unit is a unit that follows #1041 I_inch.
Internal unit when #1041 I_inch=0 : mm
Internal unit when #1041 I_inch=1 : inch
- (3) The parameters are input and output with an internal unit.
- (4) If the tool data input/output unit selection (#1220 aux04/bit4:1) is valid, the tool data will be input and output with the "#1152 I_G20" setting unit. However, in all other cases, the data will be input/output with the internal unit.

5. Position Commands

5.3 Decimal point input

5.3 Decimal point input



Function and purpose

This function enables the decimal point command to be input. It assigns the decimal point in millimeter or inch units for the machining program input information that defines the tool paths, distances and speeds. A parameter "#1078 Decpt2" selects whether type I (minimum input command unit) or type II (zero point) is to apply for the least significant digit of data without a decimal point.



Command format

○ ○ ○ ○ ○ . ○ ○ ○ ○	: Metric command
○ ○ ○ ○ ○ . ○ ○ ○ ○ ○	: Inch command



Detailed description

- (1) The decimal point command is valid for the distances, angles, times, speeds and scaling rate, in machining programs. (Note, only after G51)
- (2) In decimal point input type 1 and type 2, the values of the data commands without the decimal points are shown in the table below.

Command	Command unit system	Type 1	Type 2
X1 ;	cunit = 10000	1000 (μm , 10^{-4} inch, 10^{-3} °)	1 (mm, inch, °)
	cunit = 1000	100	1
	cunit = 100	10	1
	cunit = 10	1	1

- (3) The valid addresses for the decimal points are X, Y, Z, U, V, W, A, B, C, I, J, K, E, F, P, Q, and R. However, P is valid only during scaling. For details, refer to the list.
- (4) See below for the number of significant digits in decimal point commands. (Input command unit cunit = 10)

	Movement command (linear)		Movement command (rotary)		Feed rate		Dwell	
	Integer	Decimal part	Integer	Decimal part	Integer	Decimal part	Integer	Decimal part
MM (milli-meter)	0. to 99999.	.000 to .999	0. to 99999.	.000 to .999	0. to 60000.	.00 to .99	0. to 99999.	.000 to .999
INCH (inch)	0. to 9999.	.0000 to .9999	99999. (359.)	.0 to .999	0. to 2362.	.000 to .999	.0 to .99	.000 to .999

- (5) The decimal point command is valid even for commands defining the variable data used in subprograms.
- (6) While the smallest decimal point command is validated, the smallest unit for a command without a decimal point designation is the smallest command input unit set in the specifications ($1\mu\text{m}$, $10\mu\text{m}$, etc.) or mm can be selected. This selection can be made with parameter "#1078 Decpt2".
- (7) Decimal point commands for decimal point invalid addresses are processed as integer data only and everything below the decimal point is ignored. Addresses which are invalid for the decimal point are D, H, L, M, N, O, S and T. All variable commands, however, are treated as data with decimal points.



Example of program

(1) Example of program for decimal point valid address

Specification division Program example	Decimal point command 1		Decimal point command 2 1 = 1mm
	When 1 = 1 μ m	When 1 = 10 μ m	
G0X123.45 (decimal points are all mm points)	X123.450mm	X123.450mm	X123.450mm
G0X12345	X12.345mm (last digit is 1 μ m unit)	X123.450mm	X12345.000mm
#111 = 123, #112 = 5.55 X#111 Y#112	X123.000mm, Y5,5550mm	X123.000mm, Y5.550mm	X123.000mm, Y5.550mm
#113 = #111+#112 (addition)	#113 = 128.550	#113 = 128.550	#113 = 128.550
#114 = #111-#112 (subtraction)	#114 = 117.450	#114 = 117.450	#114 = 117.450
#115 = #111*#112 (multiplication)	#115 = 682.650	#115 = 682.650	#115 = 682.650
#116 = #111/#112 #117 = #112/#111 (division)	#116 = 22.162 #117 = 0.045	#116 = 22.162 #117 = 0.045	#116 = 22.162 #117 = 0.045



Decimal point input I/II and decimal point command valid/invalid

If a command does not use a decimal point at an address where a decimal point command is valid in the table on the following page, it is handled differently between decimal point input I and II modes as explained below.

A command using a decimal point is handled the same way in either the decimal point input I or II mode.

(1) Decimal point input I

The least significant digit place of command data corresponds to the command unit.

(Example) Command "X1" in the 1 μ m system is equivalent to command "X0.001".

(2) Decimal point input II

The least significant digit place of command data corresponds to the decimal point.

(Example) Command "X1" in the 1 μ m system is equivalent to command "X1.".

(Note) When a four rules operator is contained, the data will be handled as that with a decimal point.

(Example) When the min. input command unit is 1 μ m :

G0 x 123 + 0 ; ... X axis 123mm command. It will not be 123 μ m.

5. Position Commands

5.3 Decimal point input

Addresses used and valid/invalid decimal point commands

Address	Decimal point command	Application	Remarks
A	Valid	Coordinate position data	
	Invalid	Revolving table, miscellaneous function code	
	Valid	Angle data	
	Invalid	Data settings, axis numbers (G10)	
B	Valid	Coordinate position data	
	Invalid	Revolving table, miscellaneous function code	
C	Valid	Coordinate position data	
	Invalid	Revolving table, miscellaneous function code	
	Valid	Corner chamfering amount	,C
D	Invalid	Offset numbers (tool position, tool radius)	
	Valid	Automatic tool length measurement, deceleration range d	
	Invalid	Data settings byte type data	
E	Valid	Inch thread, number of ridges Precision thread lead	
F	Valid	Feed rate	
	Valid	Thread lead	
G	Valid	Preparatory function code	
H	Invalid	Tool length offset number	
	Invalid	Sequence numbers in subprograms	
	Invalid	Program parameter input, bit type data	
	Invalid	Linear-arc intersection selection (Geometric)	
I	Valid	Arc center coordinates	
	Valid	Tool radius compensation vector components	
	Valid	Hole pitch in the special fixed cycle	
	Valid	Circle radius of cut circle (increase amount)	
J	Valid	Arc center coordinates	
	Valid	Tool radius compensation vector components	
	Valid	Special fixed cycle's hole pitch or angle	
K	Valid	Arc center coordinates	
	Valid	Tool radius compensation vector components	
	Invalid	Number of holes of the special fixed cycle	
L	Invalid	Number of fixed cycle and subprogram repetitions	
	Invalid	Program tool compensation input type selection	L2, L12, L10, L13, L11
	Invalid	Program parameter input selection	L50
	Invalid	Program parameter input, 2-word type data	4 bytes
M	Invalid	Miscellaneous function codes	

(Note 1) All decimal points are valid for the user macro arguments.

5. Position Commands

5.3 Decimal point input

Address	Decimal point command	Application	Remarks
N	Invalid	Sequence numbers	
	Invalid	Program parameter input, data numbers	
O	Invalid	Program numbers	
P	Invalid/Valid	Dwell time	Parameter
	Invalid	Subprogram program call No.	
	Invalid/Valid	Dwell at tap cycle hole base	Parameter
	Invalid	Number of holes of the special fixed cycle	
	Invalid	Amount of helical pitch	
	Invalid	Offset number (G10)	
	Invalid	Constant surface speed control axis number	
	Invalid	Program parameter input, broad classification number	
	Invalid	Multi-skip function 2 signal command	
	Invalid	Subprogram return destination sequence No.	
	Invalid	2nd, 3rd, 4th reference point return number	
Q	Valid	Cut amount of deep hole drill cycle	
	Valid	Shift amount of back boring	
	Valid	Shift amount of fine boring	
	Invalid	Minimum spindle clamp speed	
	Valid	Starting shift angle for screw cutting	
R	Valid	R-point in the fixed cycle	
	Valid	R-specified arc radius	
	Valid	Corner rounding arc radius	,R
	Valid	Offset amount (G10)	
	Invalid	Synchronous tap/asynchronous tap changeover	
	Valid	Automatic tool length measurement, deceleration range r	
	Valid	Rotation angle	
S	Invalid	Spindle function codes	
	Invalid	Maximum spindle clamp speed	
	Invalid	Constant surface speed control, surface speed	
	Invalid	Program parameter input, word type data	2 bytes
T	Invalid	Tool function codes	
U	Valid	Coordinate position data	
V	Valid	Coordinate position data	
W	Valid	Coordinate position data	
X	Valid	Coordinate position data	
	Valid	Dwell time	
Y	Valid	Coordinate position data	
Z	Valid	Coordinate position data	

(Note 1) All decimal points are valid for the user macro arguments.

6. Interpolation Functions

6.1 Positioning (Rapid traverse); G00



Function and purpose

This command is accompanied by coordinate words. It positions the tool along a linear or non-linear path from the present point as the start point to the end point which is specified by the coordinate words.



Command format

G00 Xx Yy Zz αα ; (α represents additional axis)

x, y, z, α : Represent coordinates, and could be either absolute values or incremental values, depending on the setting of G90/G91.



Detailed description

- (1) Once this command has been issued, the G00 mode is retained until it is changed by another G function or until the G01, G02, G03 or G33 command in the 01 group is issued. If the next command is G00, all that is required is simply that the coordinate words be specified.
- (2) In the G00 mode, the tool is always accelerated at the start point of the block and decelerated at the end point. Refer to (Note 4) of "Example program".
- (3) Any G command (G72 to G89) in the 09 group is cancelled (G80) by the G00 command.
- (4) The tool path can be selected from linear or non-linear.
The positioning time is the same for the linear and non-linear paths.
 - (a) Linear path.....: This is the same as linear interpolation (G01), and the speed is limited by the rapid traverse rate of each axis.
 - (b) Non-linear path...: The tool is positioned at the rapid traverse rate independently for each axis.

CAUTION


 The commands with "no value after G" will be handled as "G00".

6. Interpolation Functions

6.1 Positioning (Rapid traverse)




Example of program

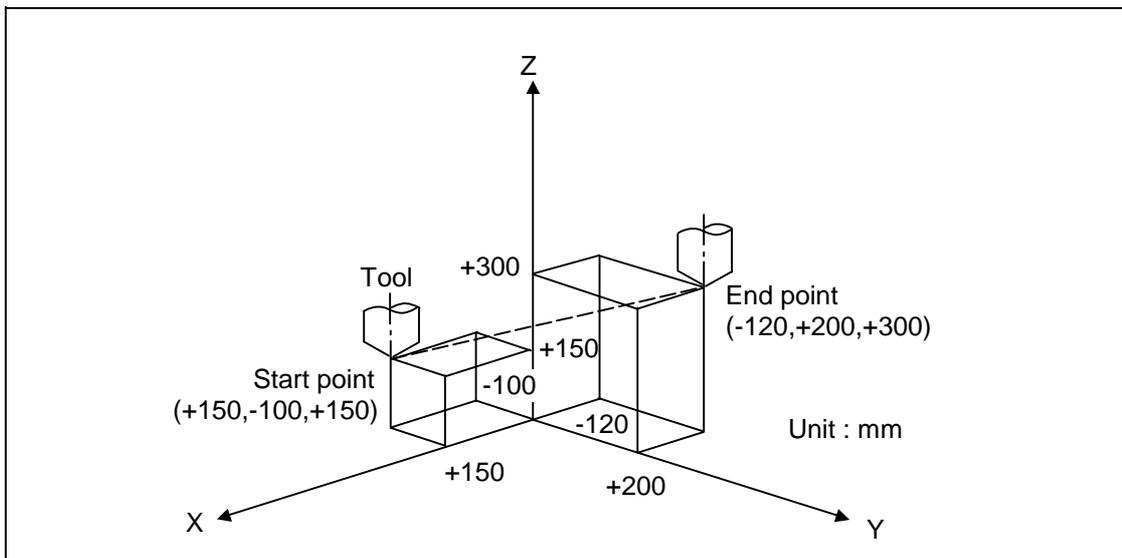

```
G91 G00 X-270000 Y300000 Z150000 ; (For input setting unit: 0.001mm)
```

(Note 1) When parameter "#1086 G0Intp" is set to "0", the path along which the tool is positioned is the shortest path connecting the start and end points. The positioning speed is automatically calculated so that the shortest distribution time is obtained in order that the commanded speeds for each axis do not exceed the rapid traverse rate.


When for instance, the Y-axis and Z-axis rapid traverse rates are both 9600mm/min, the tool will follow the path in the figure below if the following is programmed:
 G91 G00 X-300000 Y200000 ; (With an input setting unit of 0.001mm)

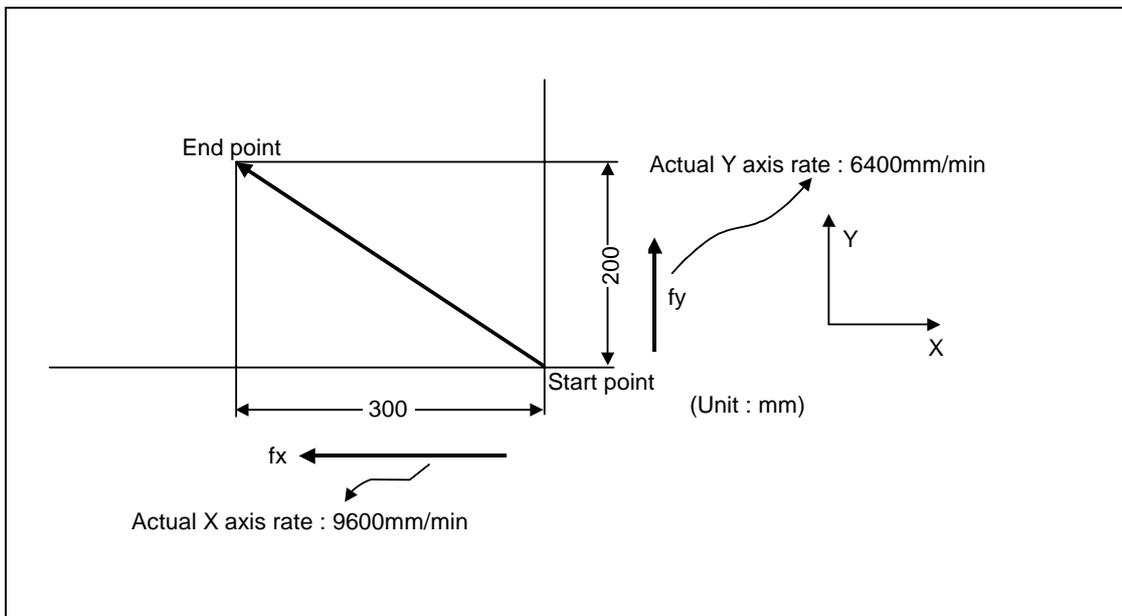

6. Interpolation Functions

6.1 Positioning (Rapid traverse)

(Note 2) When parameter "#1086 G0Intp" is set to 1, the tool will move along the path from the start point to the end point at the rapid traverse rate of each axis.
When, for instance, the Y-axis and Z-axis rapid traverse rates are both 9600mm/min, the tool will follow the path in the figure below if the following is programmed:
G91 G00 X-300000 Y200000 ; (With an input setting unit of 0.001mm)

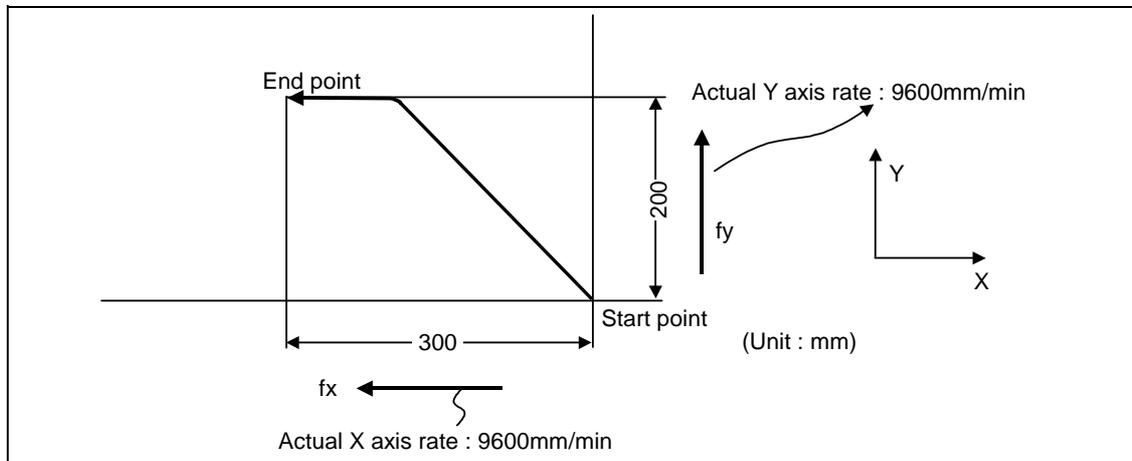

6. Interpolation Functions

6.1 Positioning (Rapid traverse)

(Note 3) The rapid traverse rate for each axis with the G00 command differs according to the individual machine and so reference should be made to the machine specifications.

(Note 4) Rapid traverse (G00) deceleration check

There are two methods for the deceleration check at rapid traverse; commanded deceleration method and in-position check method. Select a method with the parameter "#1193 inpos".

■ When "inpos" = "1"

Upon completion of the rapid traverse (G00), the next block will be executed after confirming that the remaining distances for each axis are below the fixed amounts. (Refer to following drawing.)

The confirmation of the remaining distance should be done with the imposition width, L_R . L_R is the setting value for the servo parameter "#2224 sv024".


The purpose of checking the rapid feedrate is to minimize the time it takes for positioning. The bigger the setting value for the servo parameter "#2224 sv024", the longer the reduced time is, but the remaining distance of the previous block at the starting time of the next block also becomes larger, and this could become an obstacle in the actual processing work. The check for the remaining distance is done at set intervals.

Accordingly, it may not be possible to get the actual amount of time reduction for positioning with the setting value sv024.


■ When "inpos" = "0"

Upon completion of the rapid traverse (G00), the next block will be executed after the deceleration check time (T_d) has elapsed. The deceleration check time (T_d) is as follows, depending on the acceleration/deceleration type.

(1) Linear acceleration/linear deceleration $T_d = T_s + \alpha$

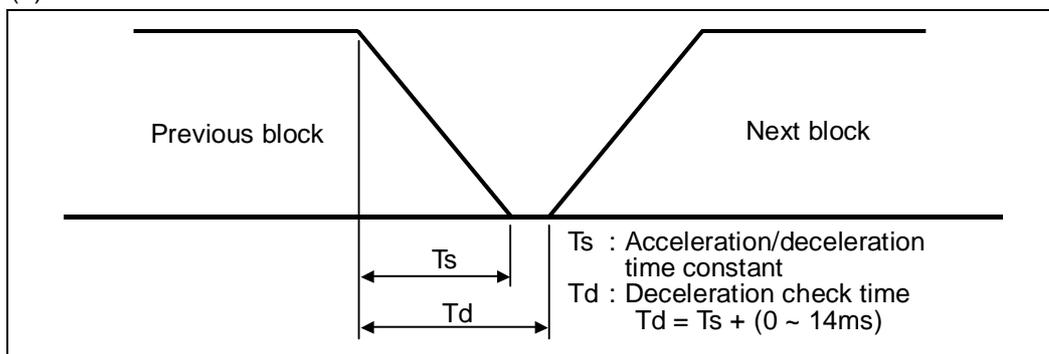


(2) Exponential acceleration/linear deceleration $T_d = 2 \times T_s + \alpha$

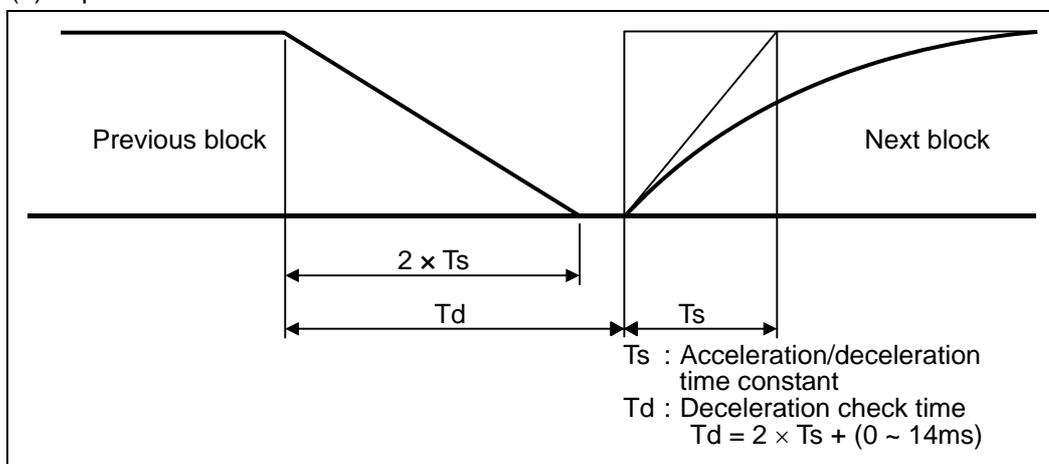

6. Interpolation Functions

6.1 Positioning (Rapid traverse)

(3) Exponential acceleration/exponential deceleration..... $T_d = 2 \times T_s + \alpha$

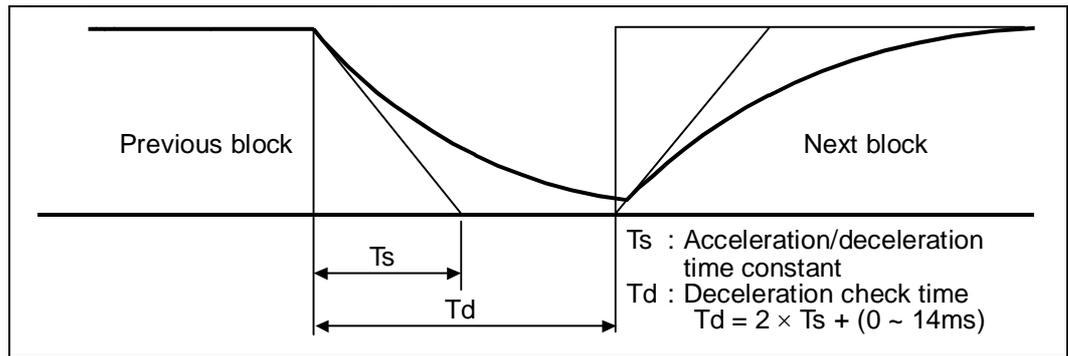


Where T_s is the acceleration time constant, $\alpha = 0$ to 14ms

The time required for the deceleration check during rapid traverse is the longest among the rapid traverse deceleration check times of each axis determined by the rapid traverse acceleration/deceleration time constants and by the rapid traverse acceleration/deceleration mode of the axes commanded simultaneously.

6. Interpolation Functions

6.1 Positioning (Rapid traverse)

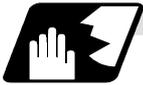

Programmable in-position width command for positioning

This command commands the in-position width for the positioning command from the machining program.

```
G00 X_ Y_ Z_ , I_ ;
```

In-position width
Positioning coordinate value of each axis



Operation during in-position check

Execution of the next block starts after confirming that the position error amount of the positioning (rapid traverse: G00) command block and the block that carries out deceleration check with the linear interpolation (G01) command is less than the in-position width issued in this command.

The in-position width in this command is valid only in the command block, so the deceleration check method set in base specification parameter "#1193 inpos" is used for blocks that do not have the in-position width command.

When there are several movement axes, the system confirms that the position error amount of each movement axis in each system is less than the in-position width issued in this command before executing the next block.

The differences of when the in-position check is validated with the parameter (base specification parameter "#1193 inpos" set to 1; refer to next page for in-position width) and when validated with this command are shown in the following drawing.

Differences between in-position check with this command and in-position check with parameter

In-position check with ",I" address command	In-position check with parameter
After starting deceleration of the command system, the position error amount and commanded in-position width are compared.	After starting deceleration of the command system, the servo system's position error amount and the parameter setting value (in-position width) are compared.
<p>Block being executed</p> <p>Servo</p> <p>Command</p> <p>In-position width (Error amount of command end point and machine position)</p> <p>T_s</p> <p>T_d</p> <p>Start of in-position check with ",I" address command</p>	<p>Block being executed</p> <p>Servo</p> <p>Command</p> <p>In-position width (Servo system position error amount)</p> <p>T_s</p> <p>T_d</p> <p>Start of in-position check with parameter</p>
<p>T_s : Acceleration/deceleration time constant</p> <p>T_d : Deceleration check time</p> <p>$T_d = T_s + (0 \text{ to } 14\text{ms})$</p>	


6. Interpolation Functions

6.1 Positioning (Rapid traverse)



In-position width setting

When the servo parameter "#2224 SV024" setting value is smaller than the setting value of the G0 in-position width "#2077 G0inps" and the G1 in-position width "#2078 G1inps", the in-position check is carried out with the G0 in-position width and the G1 in-position width.

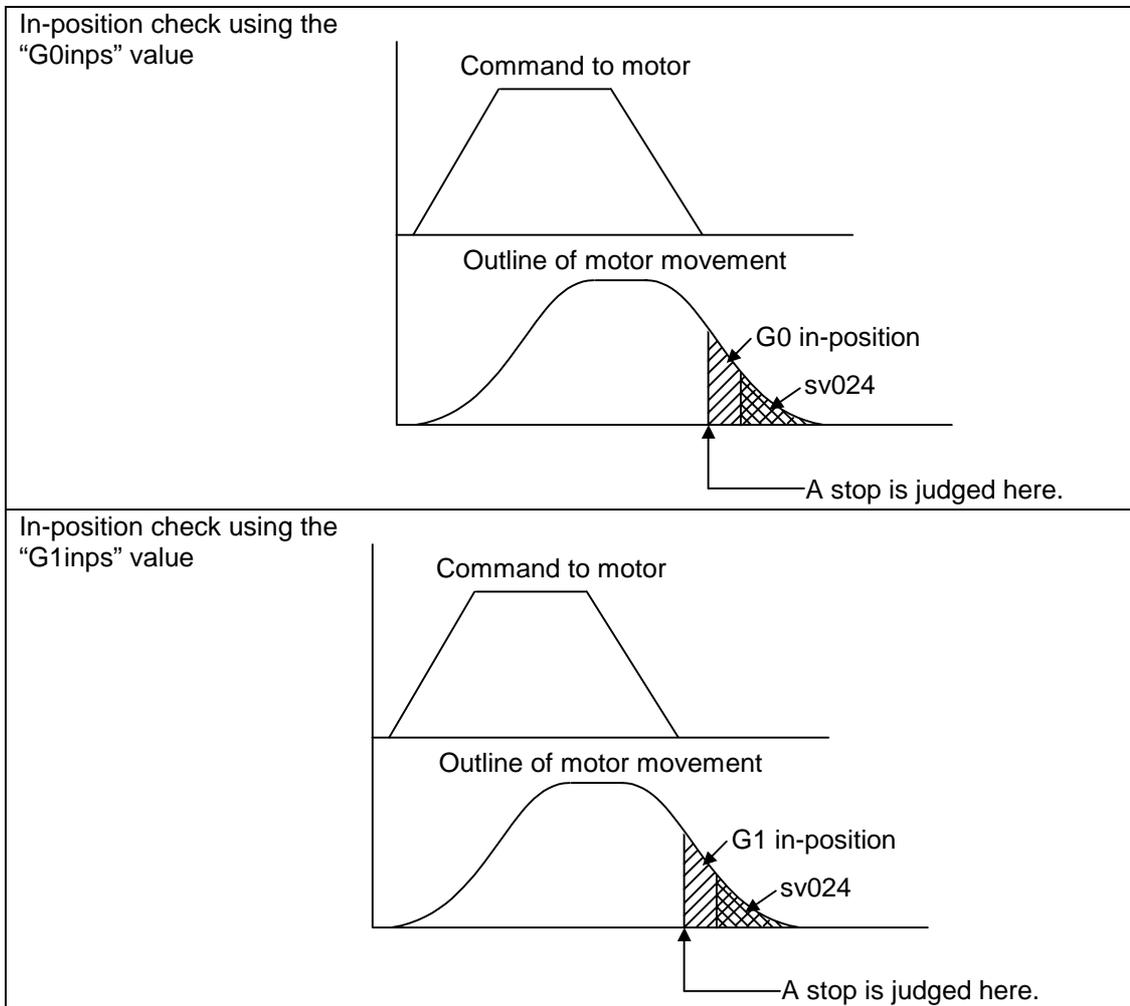

When the SV024 value is larger, the in-position check is completed when the motor position becomes within the specified with SV024.


The in-position check method depends on the method set in the deceleration check parameter.

(Note 1) When the in-position width check is carried out, the in-position width commanded in the program takes place the in-position width set with the parameters such as SV024, G0inps, or G1inps.

(Note 2) When the SV024 setting value is larger than the G0 in-position width/G1 in-position width, the in-position check is carried out with the SV024 value.

(Note 3) When the error detect is ON, the in-position check is forcibly carried out.

6.2 Linear interpolation; G01

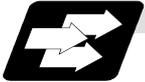

Function and purpose

This command is accompanied by coordinate words and a feedrate command. It makes the tool move (interpolate) linearly from its present position to the end point specified by the coordinate words at the speed specified by address F. In this case, the feedrate specified by address F always acts as a linear speed in the tool nose center advance direction.



Command format

G01 Xx Yy Zz αα Ff ,li ; (α represents additional axis)

x, y, z, α	:Represents the coordinate value. An absolute position or incremental position is indicated based on the state of G90/G91 at that time.
f	:Feedrate (mm/min or °/min)
i	:In-position width. A program error occurs if a decimal point command is issued. This is valid only in the commanded block. A block that does not contain this address will follow the parameter "#1193 inpos" settings.




Detailed description

- (1) Once this command is issued, the mode is maintained until another G function (G00, G02, G03, G33) in the 01 group which changes the G01 mode is issued. Therefore, if the next command is also G01 and if the feedrate is the same, all that is required to be done is to specify the coordinate words. If no F command is given in the first G01 command block, program error (P62) results.
- (2) The feedrate for a rotary axis is commanded by °/min (decimal point position unit). (F300 = 300°/min)
- (3) The G functions (G70 - G89) in the 09 group are cancelled (G80) by the G01 command.



Example of program

(Example 1) Cutting in the sequence of $P_1 \rightarrow P_2 \rightarrow P_3 \rightarrow P_4 \rightarrow P_1$ at 300 mm/min feedrate
 $P_0 \rightarrow P_1$ is for tool positioning

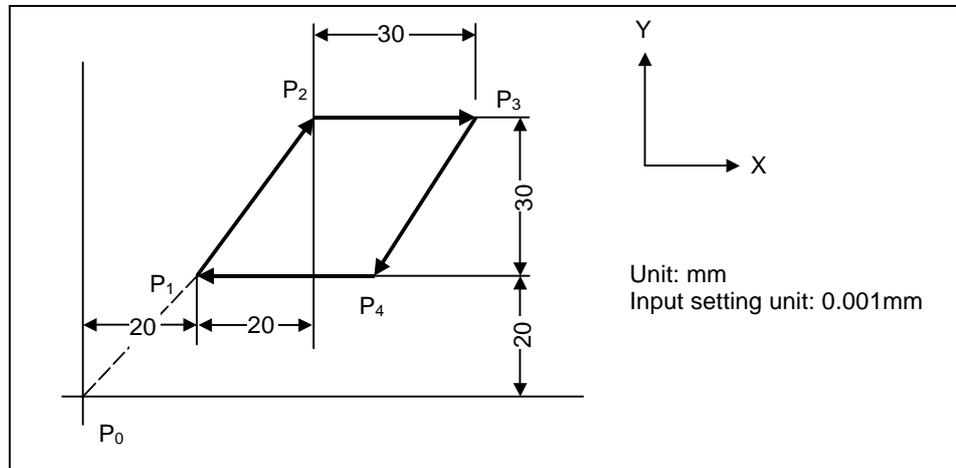

G90	G00	X20000	Y20000 ;	$P_0 \rightarrow P_1$
	G01	X20000	Y30000 F300	$P_1 \rightarrow P_2$
		X30000	;	$P_2 \rightarrow P_3$
		X-20000	Y-30000 ;	$P_3 \rightarrow P_4$
		X-30000 ;		$P_4 \rightarrow P_1$




Programmable in-position width command for linear interpolation

This command commands the in-position width for the linear interpolation command from the machining program.

The commanded in-position width is valid in the linear interpolation command only when carrying out deceleration check.


- When the error detect switch is ON.
- When G09 (exact stop check) is commanded in the same block.
- When G61 (exact stop check mode) is selected.

```
G01 X_ Y_ Z_ F_ , I_ ;
```

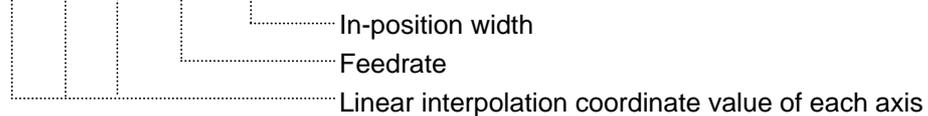

(Note 1) Refer to section "6.1 Positioning (rapid traverse); G00" for details on the in-position check operation.

6.3 Plane selection; G17, G18, G19

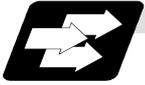

Function and purpose

The plane to which the movement of the tool during the circle interpolation (including helical cutting) and tool diameter compensation command belongs is selected.

By registering the basic three axes and the corresponding parallel axis as parameters, a plane can be selected by two axes that are not the parallel axis. If the rotary axis is registered as a parallel axis, a plane that contains the rotary axis can be selected.

The plane selection is as follows:

- Plane that executes circular interpolation (including helical cutting)
- Plane that executes tool diameter compensation
- Plane that executes fixed cycle positioning.



Command format

G17 ;	(ZX plane selection)
G18 ;	(YZ plane selection)
G19 ;	(XY plane selection)

X, Y and Z indicate each coordinate axis or the parallel axis.



Parameter entry

Table 1 Example of plane selection parameter entry

	#1026 to 1028 base_I,J,K	#1029 to 1039 aux_I,J,K
I	X	U
J	Y	
K	Z	V

As shown in the above example, the basic axis and its parallel axis can be registered.

The basic axis can be an axis other than X, Y and Z.

Axes that are not registered are irrelevant to the plane selection.



Plane selection system

In Table 1,

I is the horizontal axis for the G17 plane or the vertical axis for the G18 plane

J is the vertical axis for the G17 plane or the horizontal axis for the G19 plane

K is the horizontal axis for the G18 plane or the vertical axis for the G19 plane

In other words,

G17 IJ plane

G18 KI plane

G19 JK plane

- (1) The axis address commanded in the same block as the plane selection (G17, G18, G19) determines which basic axis or parallel axis is used for the plane selection.

For the parameter registration example in Table 1.

G17X__Y__ ; XY plane

G18X__V__ ; VX plane

G18U__V__ ; VU plane

G19Y__Z__ ; YZ plane

G19Y__V__ ; YV plane

- (2) The plane will not changeover at a block where a plane selection G code (G17, G18, G19) is not commanded.

G17X__Y__ ; XY plane

Y__Z__ ; XY plane (plane does not change)

- (3) If the axis address is omitted in the block where the plane selection G code (G17, G18, G19) is commanded, it will be viewed as though the basic three axes address has been omitted.

For the parameter registration example in Table 1.

G17 ; XY plane

G17U__ ; UY plane

G18U__ ; ZU plane

G18V__ ; VX plane

G19Y__ ; YZ plane

G19V__ ; YV plane

- (4) The axis command that does not exist in the plane determined by the plane selection G code (G17, G18, G19) is irrelevant to the plane selection.

For the parameter registration example in Table 1.

G17U__Z__ ;

- (5) If the above is commanded, the UY plane will be selected, and Z will move regardless of the plane.

If the basic axis and parallel axis are commanded in duplicate in the same block as the plane selection G code (G17, G18, G19), the plane will be determined in the priority order of basic axis and parallel axis.


For the parameter registration example in Table 1.

G17U__Y__W__-;

If the above is commanded, the UY plane will be selected, and W will move regardless of the plane.

(Note 1) The plane set with parameter "#1025 I_plane" will be selected when the power is turned ON or reset.

6.4 Circular interpolation; G02, G03

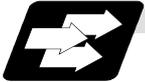

Function and purpose

These commands serve to move the tool along an arc.



Command format

G02 (G03) Xx Yy Ii Jj Kk Ff;

G02	: Clockwise (CW)
G03	: Counterclockwise (CCW)
Xx, Yy	: End point
Ii, Jj	: Arc center
Ff	: Feedrate

For the arc command, the arc end point coordinates are assigned with addresses X, Y (or Z, or parallel axis X, Y, Z), and the arc center coordinate value is assigned with addresses I, J (or K).

Either an absolute value or incremental value can be used for the arc end point coordinate value command, but the arc center coordinate value must always be commanded with an incremental value from the start point.

The arc center coordinate value is commanded with an input setting unit. Caution is required for the arc command of an axis for which the input command value differs. Command with a decimal point to avoid confusion.




Detailed description

- (1) G02 (or G03) is retained until another G command (G00, G01 or G33) in the 01 group that changes its mode is issued.

The arc rotation direction is distinguished by G02 and G03.

G02 Clockwise (CW)

G03 Counterclockwise (CCW)

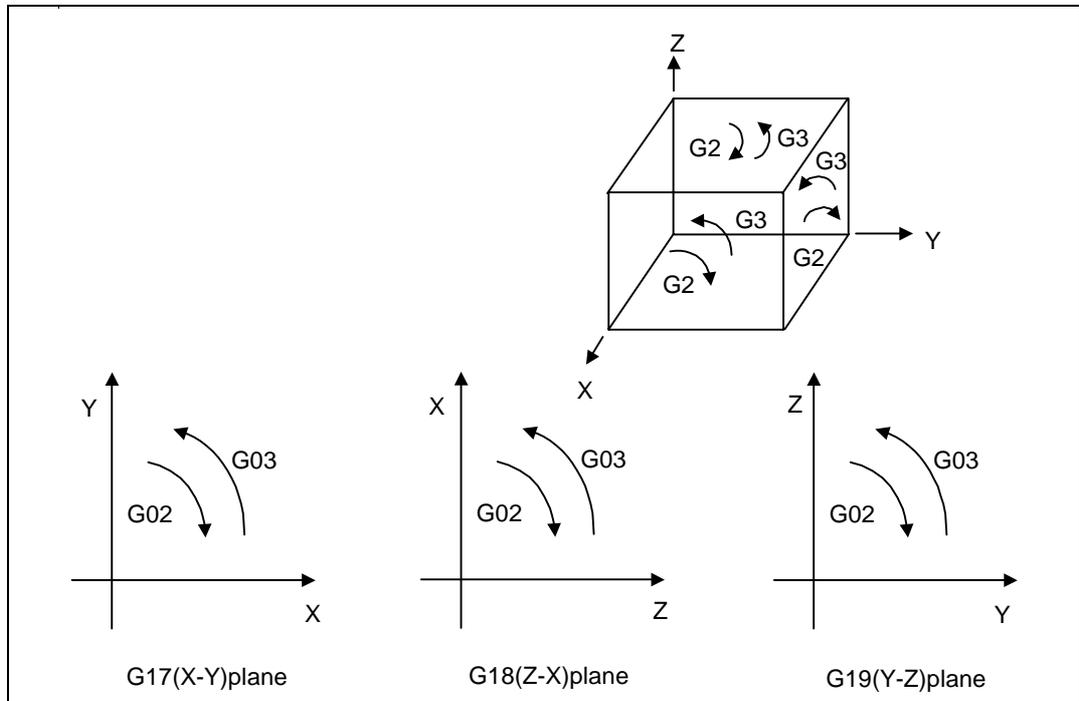

- (2) An arc which extends for more than one quadrant can be executed with a single block command.


- (3) The following information is needed for circular interpolation.

- Plane selection..... : Is there an arc parallel to one of the XY, ZX or YZ planes?
- Rotation direction : Clockwise (G02) or counterclockwise (G03)?
- Arc end point coordinates .. : Given by addresses X, Y, Z
- Arc center coordinates : Given by addresses I, J, K (incremental commands)
- Feed rate : Given by address F



Example of program


(Example 1)

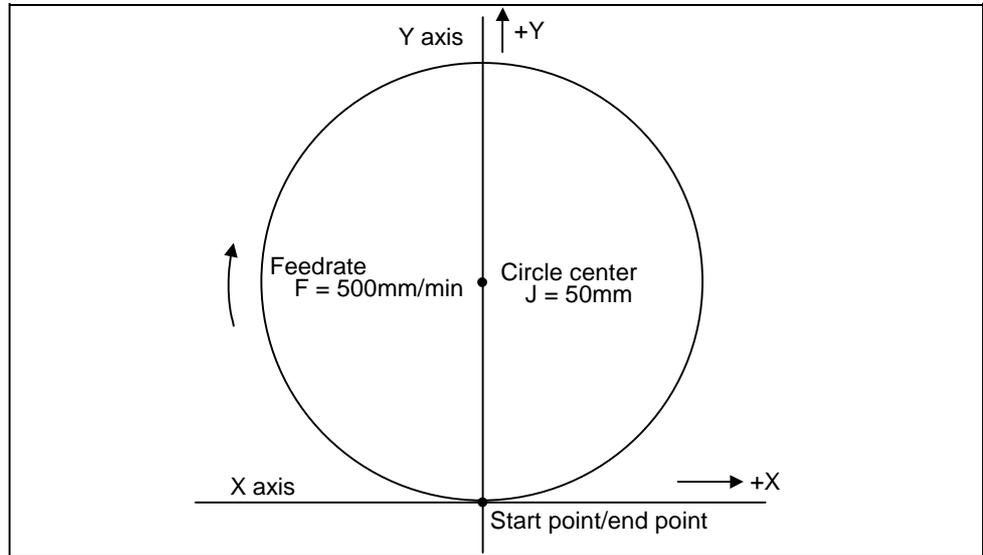

G02 J50000 F500 ;

Circle command

(Example 2)

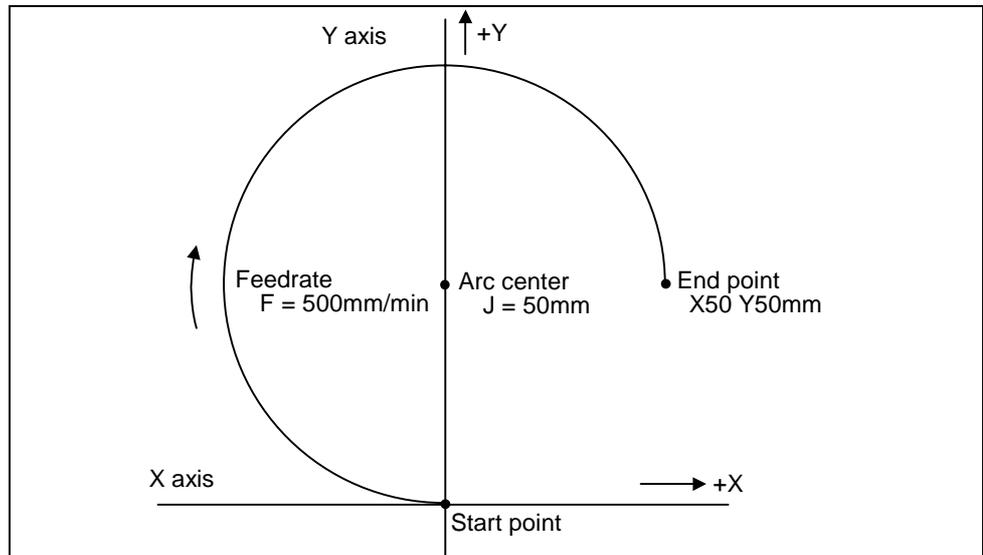

G01 G02 X50000 Y50000 J50000 F500 ;

3/4 command

6. Interpolation Functions

6.4 Circular interpolation



Plane selection

The planes in which the arc exists are the following three planes (refer to the detailed drawings), and are selected with the following method.

XY plane

G17; Command with a (plane selection G code)

ZX plane

G18; Command with a (plane selection G code)


YZ plane

G19; Command with a (plane selection G code)




Precautions for circular interpolation

- (1) The terms "clockwise" (G02) and "counterclockwise" (G03) used for arc operations are defined as a case where in a right-hand coordinate system, the negative direction is viewed from the position direction of the coordinate axis which is at right angles to the plane in question.
- (2) When all the end point coordinates are omitted or when the end point is the same position as the start point, a 360° arc (full circle) is commanded when the center is commanded using I, J and K.
- (3) The following occurs when the start and end point radius do not match in an arc command :
 - (a) Program error (P70) results at the arc start point when error ΔR is greater than parameter "#1084 RadErr".

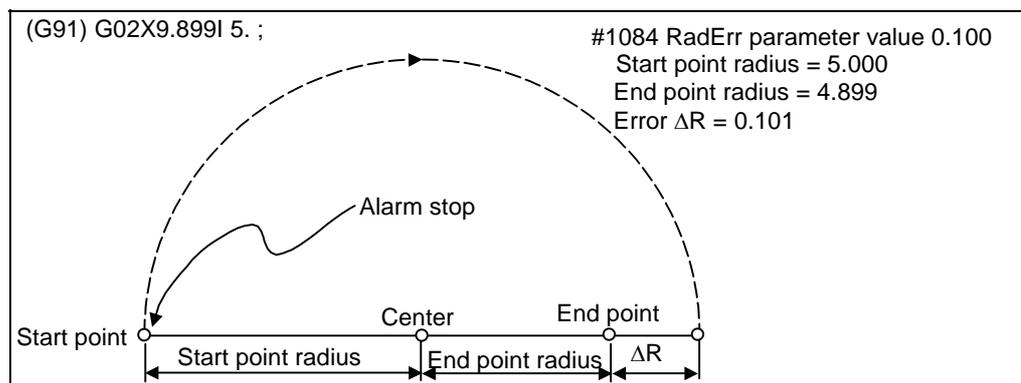

- (b) Spiral interpolation in the direction of the commanded end point results when error ΔR is less than the parameter value.

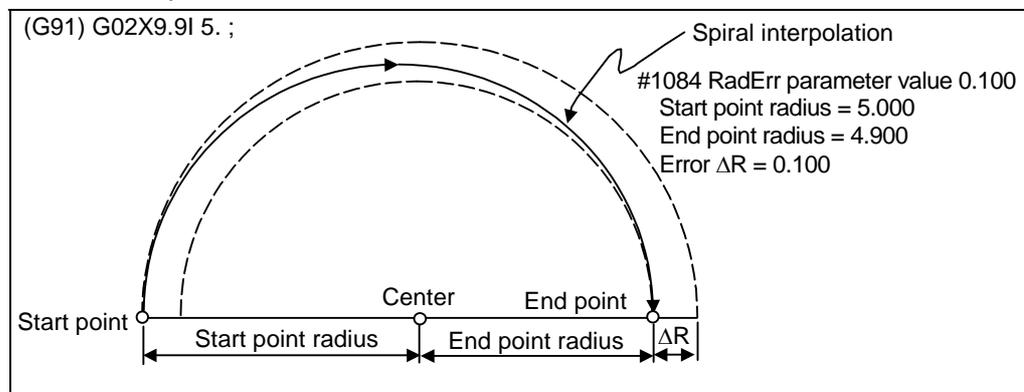

The parameter setting range is from 0.001mm to 1.000mm.

6. Interpolation Functions

6.5 R-specified circular interpolation

6.5 R-specified circular interpolation; G02, G03



Function and purpose

Along with the conventional circular interpolation commands based on the arc center coordinate (I, J, K) designation, these commands can also be issued by directly designating the arc radius R.



Command format

G02 (G03) Xx Yy Rr Ff ;


x	: X-axis end point coordinate
y	: Y-axis end point coordinate
r	: Arc radius
f	: Feedrate

The arc radius is commanded with an input setting unit. Caution is required for the arc command of an axis for which the input command value differs. Command with a decimal point to avoid confusion.



Detailed description

The arc center is on the bisector line which is perpendicular to the line connecting the start and end points of the arc. The point, where the arc with the specified radius whose start point is the center intersects the perpendicular bisector line, serves as the center coordinates of the arc command. If the R sign of the commanded program is plus, the arc is smaller than a semisphere; if it is minus, the arc is larger than a semisphere.

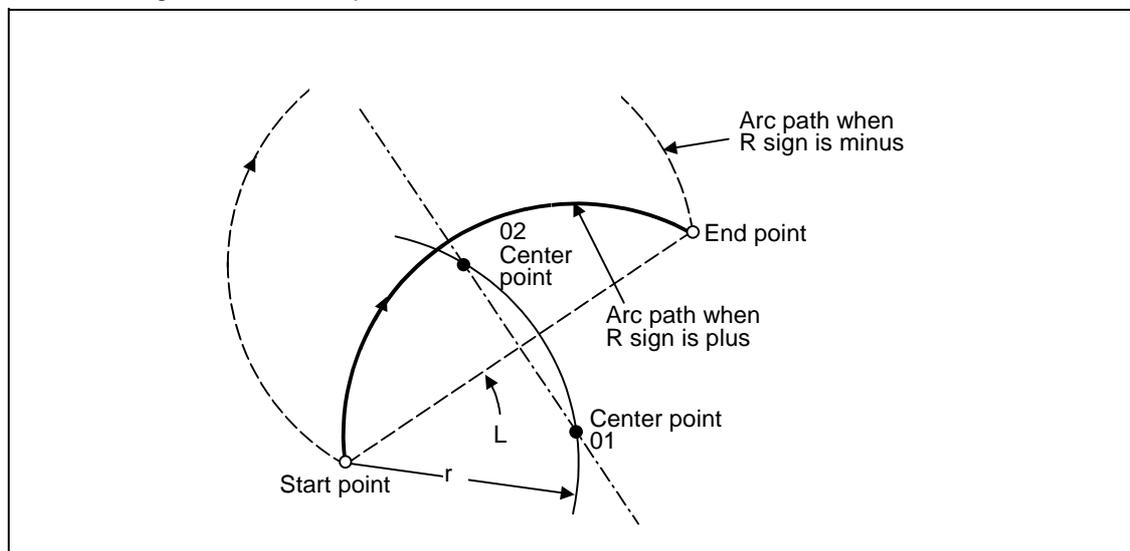

The following condition must be met with an R-specified arc interpolation command:

$L/(2r) \leq 1$ An error will occur when $L/2 - r > (\text{parameter : \#1084 RadErr})$

Where L is the line from the start point to end point.

When the R specification and I, J, K specification are contained in the same block, the R specification has priority in processing.

When the R specification and I, J, K specification are contained in the same block, the R specification has priority in processing.

The plane selection is the same as for the I, J, K-specified arc command.



Example of program

(Example 1)

G02 Xx ₁ Yy ₁ Rr ₁ Ff ₁ ;	XY plane R-specified arc
---	--------------------------

(Example 2)

G03 Zz ₁ Xx ₁ Rr ₁ Ff ₁ ;	ZX plane R-specified arc
---	--------------------------


(Example 3)

G02 Xx ₁ Yy ₁ Ii ₁ Jj ₁ Rr ₁ Ff ₁ ;	XY plane R-specified arc (When the R specification and I, J, (K) specification are contained in the same block, the R specification has priority in processing.)
---	---

(Example 4)

G17 G02 Ii ₁ Jj ₁ Rr ₁ Ff ₁ ;	XY plane This is an R-specified arc, but as this is a circle command, it is already completed.
---	--

6.6 Helical interpolation ; G17 to G19, G02, G03

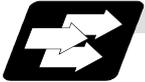

Function and purpose

While circular interpolating with G02/G03 within the plane selected with the plane selection G code (G17, G18, G19), the 3rd axis can be linearly interpolated.

Normally, the helical interpolation speed is designated with the tangent speed F' including the 3rd axis interpolation element as shown in the lower drawing of Fig. 1. However, when designating the arc plane element speed, the tangent speed F on the arc plane is commanded as shown in the upper drawing of Fig. 1.

The NC automatically calculates the helical interpolation tangent speed F' so that the tangent speed on the arc plane is F .

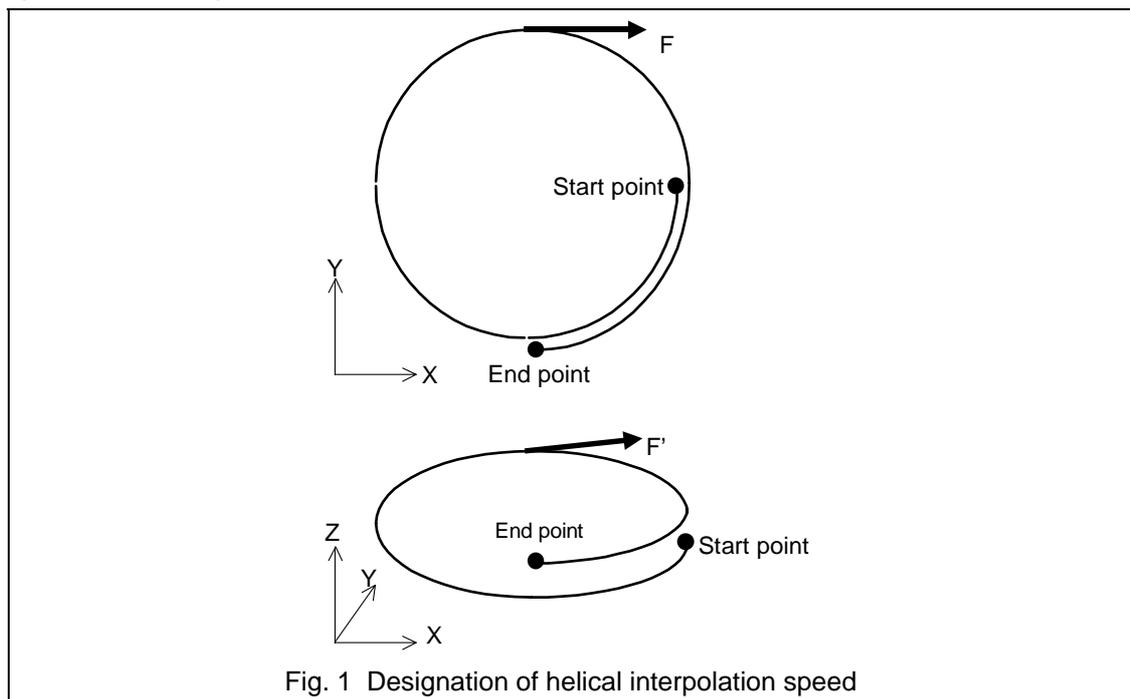


Fig. 1 Designation of helical interpolation speed



Command format

G17 G02 (G03) Xx₁ Yy₁ Zz₁ Ii₁ Jj₁ Pp₁ Ff₁ ;

G17 G02 (G03) Xx₂ Yy₂ Zz₂ Rr₂ Ff₂ ;

Xx ₁ Yy ₁ Xx ₂ Yy ₂	: Arc end point coordinate
Zz ₁ Zz ₂	: Linear axis end point coordinate
Ii ₁ Jj ₁	: Arc center coordinate
Pp ₁	: Pitch No.
Ff ₁ Ff ₂	: Feedrate
Rr ₂	: Arc radius

The arc center coordinate value and arc radius value are commanded with an input setting input. Caution is required for the helical interpolation command of an axis for which the input command value differs.


Command with a decimal point to avoid confusion.

6. Interpolation Functions


6.6 Helical interpolation

For the MELDASMAGIC64, the arc plane element speed designation and normal speed designation can be selected with the parameter.

#1235 set07/bit0	Meaning
1	Arc plane element speed designation is selected.
0	Normal speed designation is selected.

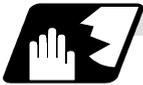

Normal speed designation

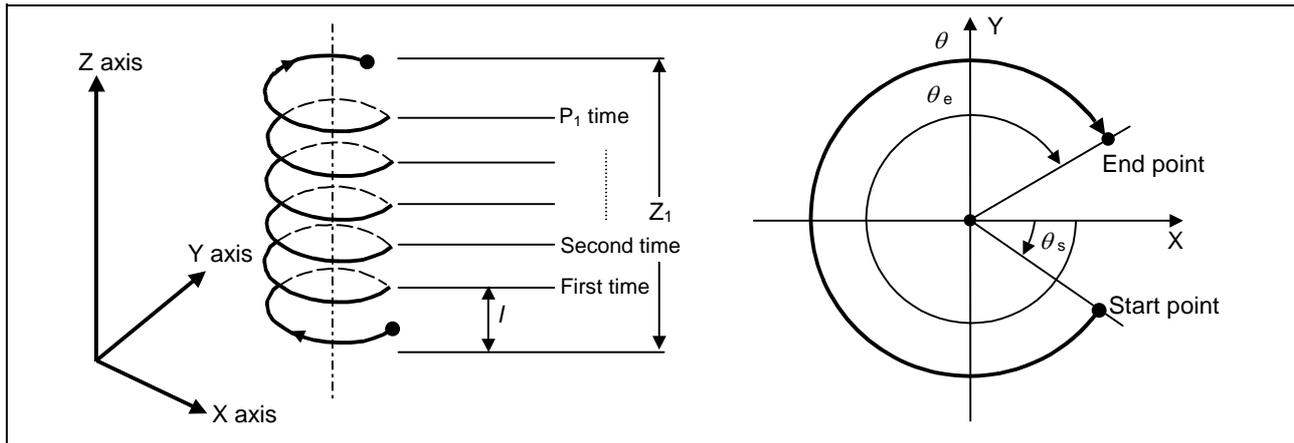

- (1) For this command, command a linear axis (multiple axes can be commanded) that does not contain a circular axis in the circular interpolation command.
- (2) For feedrate F, command the X, Y Z axis composite element directions speed.
- (3) Pitch l is obtained with the following expression.

$$l = \frac{Z_1}{(2\pi \cdot P_1 + \theta) / 2\pi}$$

$$\theta = \theta_e - \theta_s = \tan^{-1} \frac{y_e}{x_e} - \tan^{-1} \frac{y_s}{x_s} \quad (0 \leq \theta < 2\pi)$$

Where x_s, y_s are the start point coordinates from the arc center
 x_e, y_e are the end point coordinates from the arc center

- (4) If pitch No. is 0, address P can be omitted.

(Note) The pitch No. P command range is 0 to 99.

The pitch No. designation (P command) cannot be made with the R-specified arc.

- (5) Plane selection

The helical interpolation arc plane selection is determined with the plane selection mode and axis address as for the circular interpolation. For the helical interpolation command, the plane where circular interpolation is executed is commanded with the plane selection G code (G17, G18, G19), and the 2 circular interpolation axes and linear interpolation axis (axis that intersects with circular plane) 3 axis addresses are commanded.

XY plane circular, Z axis linear

Command the X, Y and Z axis addresses in the G02 (G03) and G17 (plane selection G code) mode.

ZX plane circular, Y axis linear

Command the X, Y and Z axis addresses in the G02 (G03) and G18 (plane selection G code) mode.

YZ plane circular, X axis linear

Command the X, Y and Z axis addresses in the G02 (G03) and G19 (plane selection G code) mode.

6. Interpolation Functions

6.6 Helical interpolation

The plane for an additional axis can be selected as with circular interpolation.

UY plane circular, Z axis linear


Command the U, Y and Z axis addresses in the G02 (G03) and G19 (plane selection G code) mode.

In addition to the basic command methods above, the command methods following the program example can be used. Refer to the section 6.4 plane selection for the arc planes selected with these command methods.




Example of program

(Example 1)

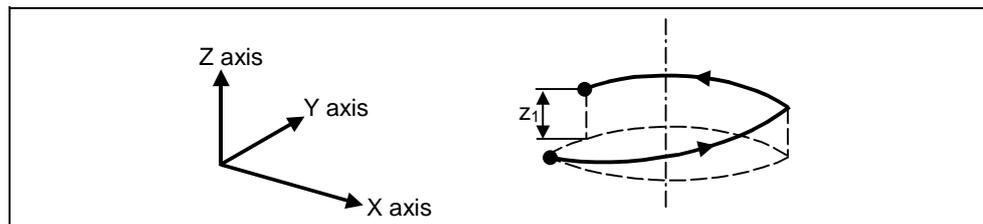

G17 ;	XY plane
G03 Xx ₁ Yy ₁ Zz ₁ Ii ₁ Jj ₁ P0 Ff ₁ ;	XY plane arc, Z axis linear


(Note) If pitch No. is 0, address P can be omitted.

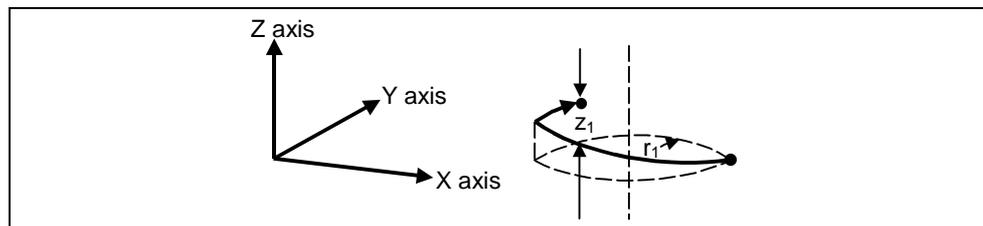

(Example 2)

G17 ;	XY plane
G02 Xx ₁ Yy ₁ Zz ₁ Rr ₁ Ff ₁ ;	XY plane arc, Z axis linear

(Example 3)

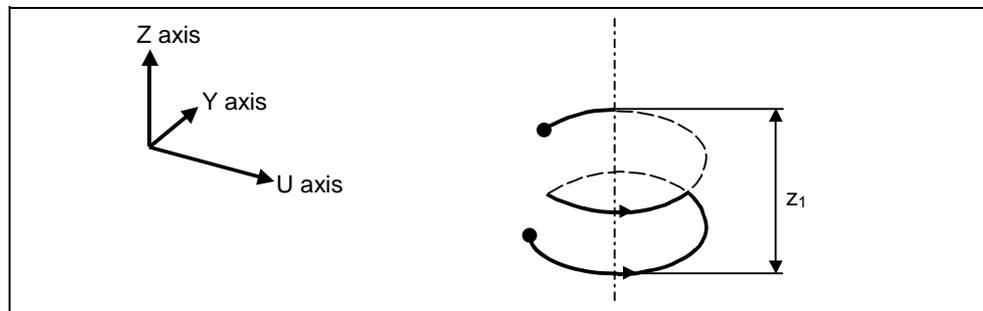

G17 G03 Uu ₁ Yy ₁ Zz ₁ Ii ₁ Jj ₁ P2 Ff ₁ ;	UY plane arc, Z axis linear
--	-----------------------------

(Example 4)



G18 G03 Xx ₁ Uu ₁ Zz ₁ Ii ₁ Kk ₁ Ff ₁ ;	ZX plane arc, U axis linear
---	-----------------------------

(Note) If the same system is used, the standard axis will perform circular interpolation and the additional axis will perform linear interpolation.

(Example 5)

G18 G02 Xx ₁ Uu ₁ Yy ₁ Zz ₁ Ii ₁ Jj ₁ Kk ₁ Ff ₁ ;	ZX plane arc, U axis, Y axis linear (The J command is ignored)
---	---

(Note) Two or more axes can be designated for the linear interpolation axis.



Arc plane element speed designation (MELDASMAGIC64 only)

If arc plane element speed designation is selected, the F command will be handled as modal data in the same manner as the normal F command. This will also apply to the following G01, G02 and G03 commands.

For example, the program will be as follows.

(Example)


G17 G91 G02 X10. Y10. Z-4. I10, F100 ;	Helical interpolation at speed at which arc plane element is F100
G01 X20. ;	Linear interpolation at F100
G02 X10. Y-10. Z4. J10. ;	Helical interpolation at speed at which arc plane element is F100
G01 Y-40. F120 ;	Linear interpolation at F120
G02 X-10. Y-10. Z-4. I10. ;	Helical interpolation at speed at which arc plane element is F120
G01 X-20. ;	Linear interpolation at F120

When the arc plane element speed designation is selected, only the helical interpolation speed command is converted to the speed commanded with the arc plane element. The other linear and arc commands operate as normal speed commands.

- (1) The actual feedrate display (Fc) indicates the tangent element of the helical interpolation.
- (2) The modal value speed display (FA) indicates the command speed.
- (3) The speed data acquired with DDB or API functions follows the Fc and FA display.
- (4) During the high-speed mode, the normal helical interpolation speed command is issued.
- (5) This function is valid only when feed per minute (asynchronous feed: G94) is selected. If feed per revolution (synchronous feed: G95) is selected, the arc plane element speed will not be designated.
- (6) The helical interpolation option is required to use this function.

6.7 Thread cutting

6.7.1 Constant lead thread cutting ; G33

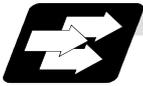

Function and purpose

The G33 command exercises feed control over the tool which is synchronized with the spindle rotation and so this makes it possible to conduct constant-lead straight thread-cutting and tapered thread-cutting. Multiple thread screws, etc., can also be machined by designating the thread cutting angle.



Command format

G32 Zz Ff₁ Qq ; (Normal lead thread cutting commands)

Zz : Thread cutting direction axis address (X, Y, Z, a) and thread length
 Ff : Lead of long axis (axis which moves most) direction.
 Qq : Thread cutting start shift angle, (0 to 360°)


G33 Zz Ee₁ Qq ; (Precision lead thread cutting commands)

Zz : Thread cutting direction axis address (X, Y, Z, α) and thread length
 Ee : Lead of long axis (axis which moves most) direction
 Qq : Thread cutting start shift angle, (0 to 360°)



Detailed description

- (1) The E command is also used for the number of ridges in inch thread cutting, and whether the ridge number or precision lead is to be designated can be selected by parameter setting. (Precision lead is designated by setting the parameter "#1229 set 01/bit 1" to 1.)
- (2) The lead in the long axis direction is commanded for the tapered thread lead.

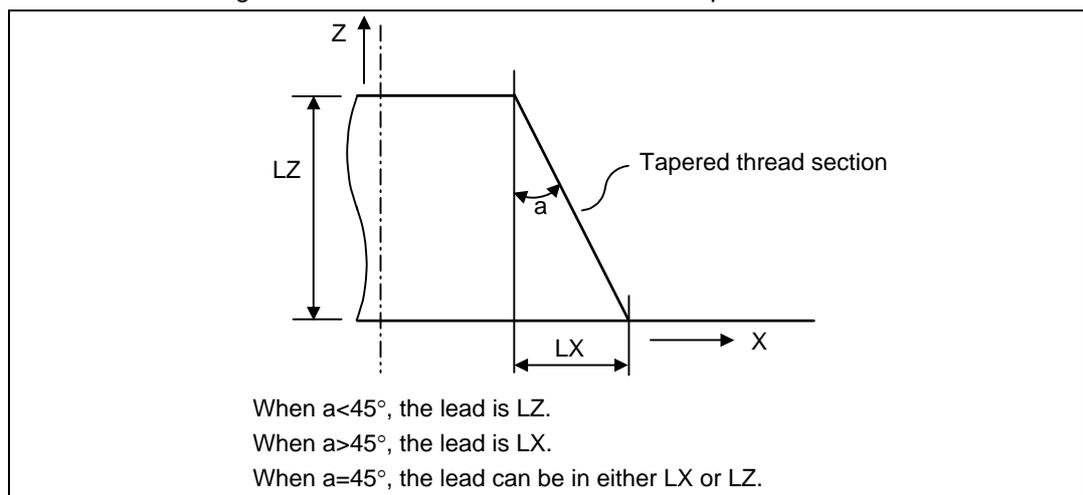

Thread cutting Metric input

Input unit system	B (0.001mm)			C (0.0001mm)		
	F (mm/rev)	E (mm/rev)	E (threads/inch)	F (mm/rev)	E (mm/rev)	E (threads/inch)
Command address	F (mm/rev)	E (mm/rev)	E (threads/inch)	F (mm/rev)	E (mm/rev)	E (threads/inch)
Minimum command unit	1 (= 1.000), (1.=1.000)	1 (= 1.00000), (1.=1.00000)	1 (= 1.00), (1.=1.00)	1 (= 1.0000), (1.=1.0000)	1(=1.00000), (1.=1.00000)	1 (= 1.000), (1.=1.000)
Command range	0.001 to 999.999	0.00001 to 999.99999	0.03 to 999.99	0.00001 to 99.9999	0.000001 to 99.99999	0.1 to 2559999.999

Thread cutting Inch input

Input unit system	B (0.0001inch)			C (0.00001inch)		
	F (inch/rev)	E (inch/rev)	E (threads/inch)	F (inch/rev)	E (inch/rev)	E (threads/inch)
Minimum command unit	1(=1.0000), (1.=1.0000)	1(=1.000000), (1.=1.000000)	1 (= 1.0000), (1.=1.0000)	1(=1.00000), (1.=1.00000)	1(=1.000000), (1.=1.000000)	1(=1.0000), (1.=1.0000)
Command range	0.0001 to 99.9999	0.000001 to 39370078	0.0255 to 9999.9999	0.00001 to 3937009	0.000001 to 3937009	0.25401 to 999.9999

(Note 1) It is not possible to assign a lead where the feed rate as converted into per-minute feed exceeds the maximum cutting feed rate.

- (3) The thread cutting will start by the one rotation synchronous signal from the encoder installed on the spindle.
- (4) The spindle speed should be kept constant throughout from the rough cutting until the finishing.
- (5) If the feed hold function is employed during thread cutting to stop the feed, the thread ridges will lose their shape. For this reason, feed hold does not function during thread cutting. If the feed hold switch is pressed during thread cutting, block stop will result at the end point of the block following the block in which thread cutting is completed (no longer G33 mode).
- (6) The converted cutting feedrate is compared with the cutting feed clamp rate when thread cutting starts, and if it is found to exceed the clamp rate, an operation error will result.
- (7) In order to protect the lead during thread cutting, a cutting feed rate which has been converted may sometimes exceed the cutting feed clamp rate.
- (8) An illegal lead is normally produced at the start of the thread and at the end of the cutting because of servo system delay and other such factors. Therefore, it is necessary to command a thread length which is determined by adding the illegal lead lengths to the required thread length.
- (9) The spindle speed is subject to the following restriction :


$$1 \leq R \leq \frac{\text{Maximum feedrate}}{\text{Thread lead}}$$

Where $R \leq$ Permissible speed of encoder (r/min)

 - R : Spindle speed (r/min)
 - Thread lead : mm or inches
 - Maximum feedrate : mm/min or inch/mm (This is subject to the restrictions imposed by the machine specifications).
- (10) The thread cutting start angle is designated with an integer or 0 to 360.




Example of program

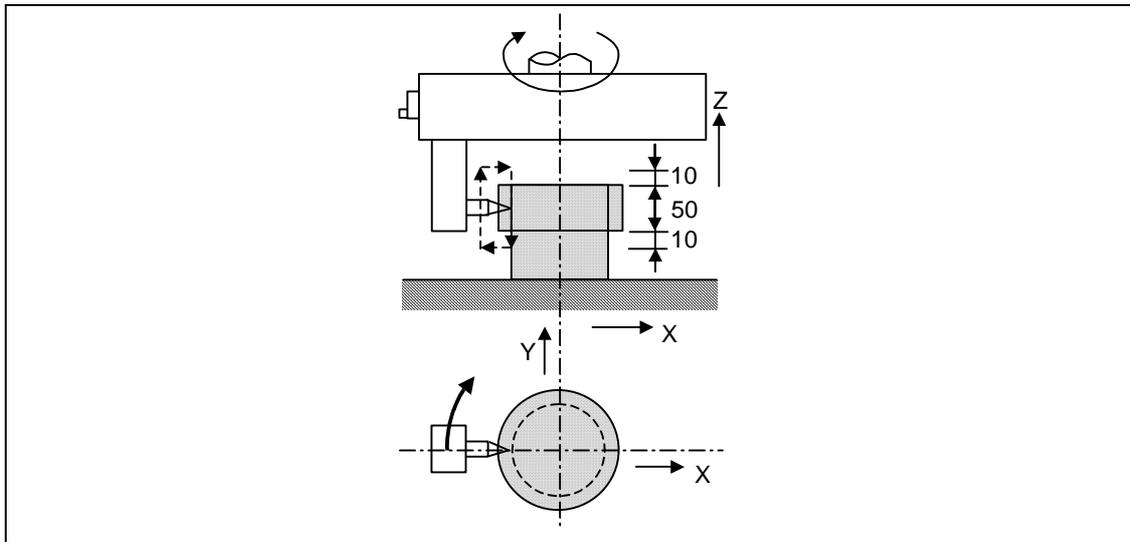

N110 G90 G0 X-200. Y-200. S50 M3 ;	The spindle center is positioned to the workpiece center, and the spindle rotates in the forward direction.
N111 Z110. ;	
N112 G33 Z40. F6.0 ;	The first thread cutting is executed. Thread lead = 6.0mm
N113 M19 ;	Spindle orientation is executed with the M19 command.
N114 G0X-210. ;	The tool is evaded in the X axis direction.
N115 Z110. M0 ;	The tool rises to the top of the workpiece, and the program stops with M00. Adjust the tool if required.
N116 X-200. ; M3 ;	Preparation for second thread cutting is done.
N117 G04 X5.0 ;	Command dwell to stabilize the spindle rotation if necessary.
N11 G33 Z40. ;	The second thread cutting is executed.

6.7.2 Inch thread cutting; G33

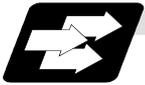

Function and purpose

If the number of ridges per inch in the long axis direction is assigned in the G33 command, the feed of the tool synchronized with the spindle rotation will be controlled, which means that constant-lead straight thread-cutting and tapered thread-cutting can be performed.



Command format

G33 Zz Ee Qq ;

Zz	: Thread cutting direction axis address (X, Y, Z, α) and thread length
Ee	: Number of ridges per inch in direction of long axis (axis which moves most) (decimal point command can also be assigned)
Qq	: Thread cutting start shift angle, 0 to 360°.



Detailed description

- (1) The number of ridges in the long axis direction is assigned as the number of ridges per inch.
- (2) The E code is also used to assign the precision lead length, and whether the ridge number of precision lead length is to be designated can be selected by parameter setting. (The number of ridges is designated by setting the parameter "#1229 set01/bit1" to 0.)
- (3) The E command value should be set within the lead value range when the lead is converted.




Example of program

Thread lead 3 threads/inch (= 8.46666 ...)

When programmed with $\delta_1 = 10\text{mm}$,

$\delta_2 = 10\text{mm}$ using metric input

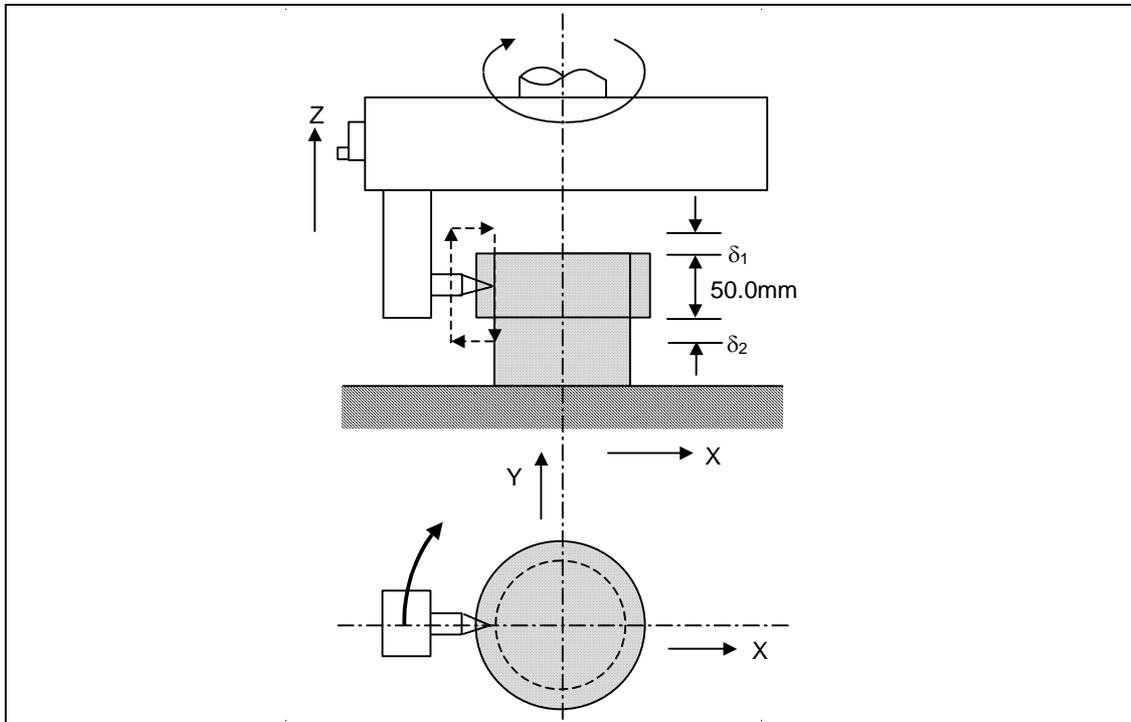

N210 G90 G0X-200. Y-200. S50M3;	
N211 Z110.;	
N212 G91 G33 Z-70.E3.0;	(First thread cutting)
N213 M19;	
N214 G90 G0X-210.;	
N215 Z110.M0;	
N216 X-200.;	
M3;	
N217 G04 X2.0;	
N218 G91 G33 Z-70.;	(Second thread cutting)

6.8 Uni-directional positioning; G60



Function and purpose

The G60 command can position the tool at a high degree of precision without backlash error by locating the final tool position from a single determined direction.

6. Interpolation Functions

6.8 Uni-directional positioning




Command format

G60 Xx Yy Zz αα ;
α : Optional axis




Detailed description

- (1) The creep distance for the final positioning as well as the final positioning direction is set by parameter.
- (2) After the tool has moved at the rapid traverse rate to the position separated from the final position by an amount equivalent to the creep distance, it move to the final position in accordance with the rapid traverse setting where its positioning is completed.

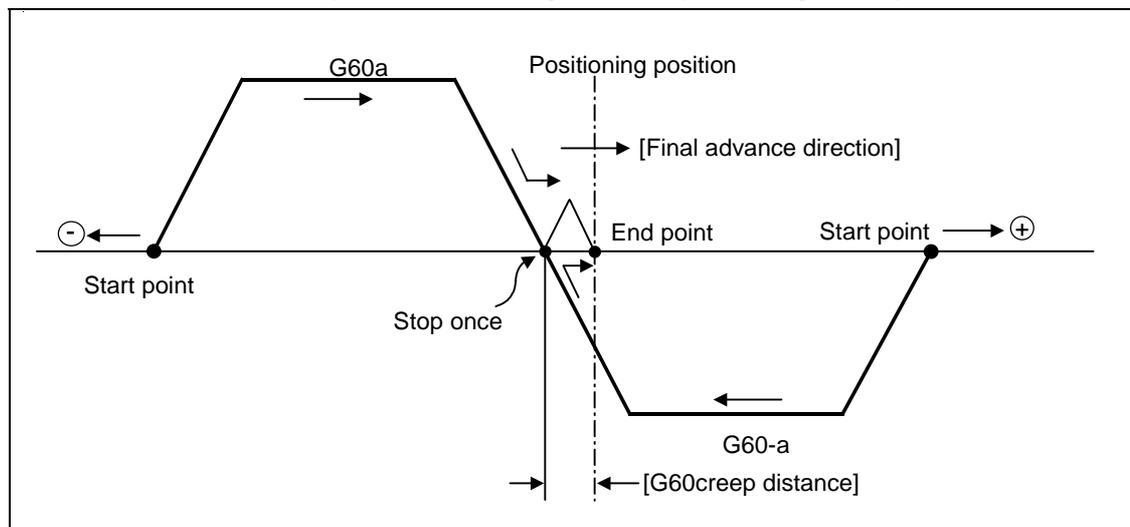


- (3) The above positioning operation is performed even when Z-axis commands have been assigned for Z-axis cancel and machine lock. (Display only)
- (4) When the mirror image function is ON, the tool will move in the opposite direction as far as the intermediate position due to the mirror image function but the operation within the creep distance during its final advance will not be affected by mirror image.
- (5) The tool moves to the end point at the dry run speed during dry run when the G0 dry run function is valid.
- (6) Feed during creep distance movement with final positioning can be stopped by resetting, emergency stop, interlock, feed hold and rapid traverse override zero. The tool moves over the creep distance at the rapid traverse setting. Rapid traverse override is valid.
- (7) Uni-directional positioning is not performed for the drilling axis during drilling fixed cycles.
- (8) Uni-directional positioning is not performed for shift amount movements during the fine boring or back boring fixed cycle.
- (9) Normal positioning is performed for axes whose creep distance has not been set by parameter.
- (10) Uni-directional positioning is always a non-interpolation type of positioning.
- (11) When the same position (movement amount of zero) has been commanded, the tool moves back and forth over the creep distance and is positioned at its original position from the final advance direction.
- (12) Program error (P61) results when the G60 command is assigned with an NC system which has not been provided with this particular specification.

6.9 Circular interpolation; G07.1

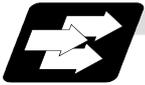


Function and purpose

This function develops a shape with a cylindrical side (shape in cylindrical coordinate system) into a plane. When the developed shape is programmed as the plane coordinates, that is converted into the linear axis and rotation axis movement in the cylindrical coordinates and the contour is controlled during machining.

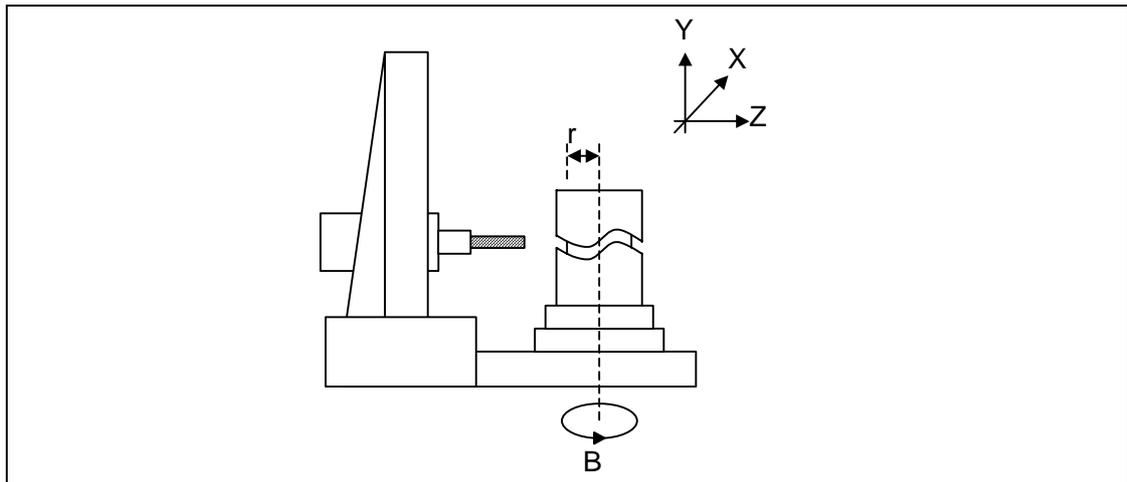

As programming can be carried out with a shape with which the side on the cylinder is developed, this is effective for machining cylindrical cams, etc. When programmed with the rotation axis and its orthogonal axis, slits, etc., can be machined on the cylinder side.

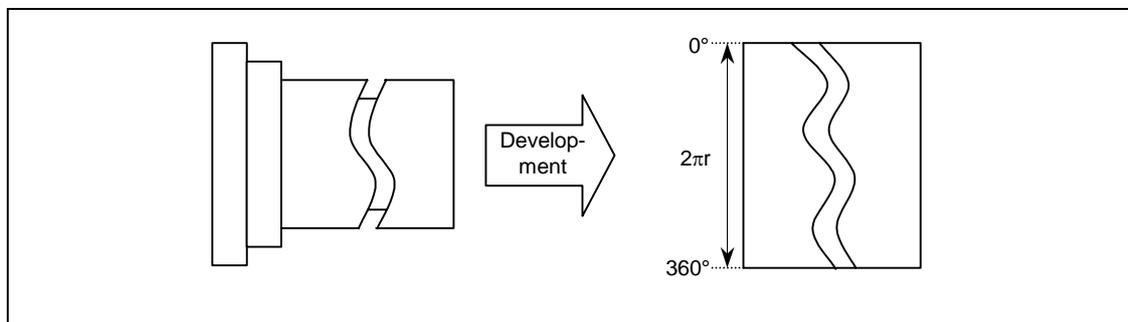



Command format

G07.1 Cc ;	(Cylindrical interpolation mode start/cancel)
Cc	Cylinder radius value
	<ul style="list-style-type: none"> • Radius value \neq 0: Cylindrical interpolation mode start • Radius value = 0: Cylindrical interpolation mode cancel

(Note) The above format applies when the name of the rotation axis is "C". If the name is not "C", command the name of the rotation axis being used instead of "C".

- (1) The coordinates commanded in the interval from the start to cancellation of the cylindrical interpolation mode will be the cylindrical coordinate system.

G07.1 C	Cylinder radius value;	Cylindrical interpolation mode start
:	:	(Cylindrical interpolation will start)
:	:	(The coordinate commands in this interval will be
:	:	the cylindrical coordinate system)
G07.1 C0 ;		Cylindrical interpolation mode cancel
		(Cylindrical interpolation will be canceled)
- (2) G107 can be used instead of G07.1.
- (3) Command G07.1 in an independent block. A program error (P33) will occur if this command is issued in the same block as another G code.
- (4) Program the rotation axis with an angle degree.
- (5) Linear interpolation or circular interpolation can be commanded during the cylindrical interpolation mode. Note that the plane selection command must be issued just before the G07.1 block.
- (6) The coordinates can be commanded with either an absolute command or incremental command.
- (7) Tool radius compensation can be applied on the program command. Cylindrical interpolation will be executed on the path after tool radius compensation.
- (8) Command the segment feed in the cylinder development with F. The F unit is mm/min or inch/min.



Detailed description

(1) Cylindrical interpolation accuracy

In the cylindrical interpolation mode, the movement amount of the rotation axis commanded with an angle is converted on the circle periphery, and after operating the linear and circular interpolation between the other axes, the amount is converted into an angle again.

Thus, the actual movement amount may differ from the commanded value such as when the cylinder radius is small.

Note that the error generated at this time is not cumulated.

(2) Related parameters

#	Item	Details	Setting range
1516	mill_ax Milling axis name	Set the name of the rotation axis for milling interpolation (pole coordinate interpolation, cylindrical interpolation). Only one of the rotation axes can be set.	A to Z
8111	Milling Radius	Select the diameter and radius of the linear axis for milling interpolation (pole coordinate interpolation, cylindrical interpolation). 0: Radius command for all axes 1: Each axis setting (follows #1019 dia diameter designation axis)	0 / 1
1267 (PR)	ext03 (bit0) G code type	The type of high-speed high-accuracy G code is changed. 0: G61.1 type 1: G8 type	0 / 1
1270 (PR)	ext06 (bit7) Handle C axis coordinate during cylindrical interpolation	Specify whether the rotary axis coordinate before the cylindrical interpolation start command is issued is kept during the cylindrical interpolation or not. 0: Do not keep 1: keep	0 / 1


(3) Plane selection

The axis used for cylindrical interpolation must be set with the plane selection command.


(Note)

The correspondence of the rotation axis to an axis' parallel axis is set with the parameters (#1029, #1030, #1031).

The circular interpolation and tool radius compensation, etc., can be designated on that plane. The plane selection command is set immediately before or after the G07.1 command. If not set and a movement command is issued, a program error (P485) will occur.

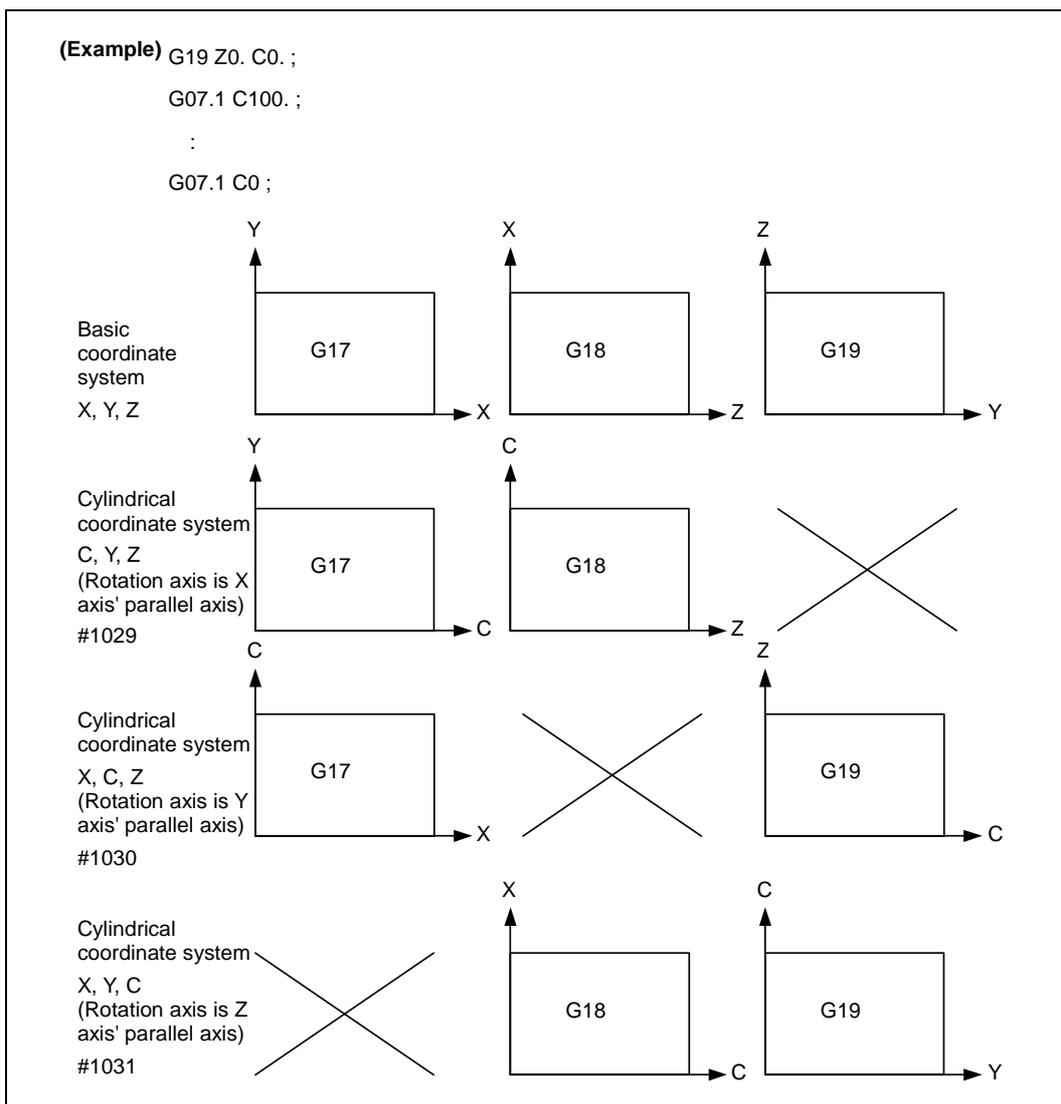

(Note) Depending on the model or version, the Z-C plane (Y-Z cylinder plane) will be automatically selected with G07.1 and G19. The circular interpolation and tool radius compensation, etc., can be designated on that plane.

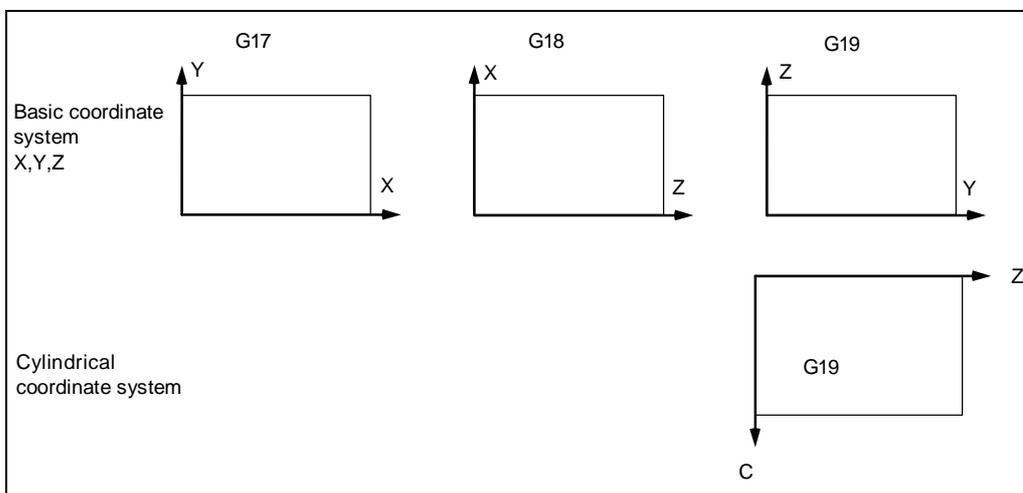



Relation with other functions

(1) Circular interpolation

- (a) Circular interpolation between the rotation axis and linear axis is possible during the cylindrical interpolation mode.
- (b) An R specification command can be issued with circular interpolation. (I, J and K cannot be designated.)

(2) Tool radius compensation

The tool radius can be compensated during the cylindrical interpolation mode.

- (a) Command the plane selection in the same manner as circular interpolation. When using tool radius compensation, start up and cancel the compensation within the cylindrical interpolation mode.
- (b) A program error (P485) will occur if G07.1 is commanded during tool radius compensation.
- (c) If the G07.1 command is issued with no movement command given after the tool radius compensation is canceled, the position of the axis in the G07.1 command block is interpreted as the position applied after the tool radius compensation is canceled and the following operations are performed.

(3) Cutting asynchronous feed

- (a) The asynchronous mode is forcibly set when the cylindrical interpolation mode is started.
- (b) When the cylindrical interpolation mode is canceled, the synchronization mode will return to the state before the cylindrical interpolation mode was started.
- (c) A program error (P485) will occur if G07.1 is commanded in the constant surface speed control mode (G96).

(4) Miscellaneous functions

- (a) The miscellaneous function (M) and 2nd miscellaneous function can be issued even in the cylindrical interpolation mode.
- (b) The S command in the cylindrical interpolation mode issues the rotary tool's rotation speed instead of the spindle rotation speed.
- (c) Issue the T command before cylindrical interpolation is started. A program error (P485) will occur if the T command is issued in the cylindrical interpolation mode.

⋮

T12 ; ... T command before cylindrical interpolation → Valid

T0 X100. Z0 ;

G19 Z C ;

G07.1 C100. ;

⋮

T11 ; ... T command in cylindrical interpolation mode →Program error

⋮

G07.1 C0 ;

- (d) When the tool offset is executed by the axis command after the T command, the tool offset by the T command may be uncompleted. In this case, execute the tool offset by the axis command during the cylindrical interpolation mode. Note that a program error (P482) will occur if the cylindrical interpolation command is issued with the tool offset cancel uncompleted.

(5) F command during cylindrical interpolation

As for the F command in the cylindrical interpolation mode, whether the previous F command is used or not depends on that the mode just before G07.1 is the feed per minute command (G94) or feed per rotation command (G95).

(a) When G94 is commanded just before G07.1

If there is no F command in the cylindrical interpolation, the previous F command feedrate will be used.

The feedrate after the cylindrical interpolation mode is canceled will remain the F command feedrate issued when the cylindrical interpolation mode was started or the final F command feedrate set during cylindrical interpolation.

(b) When G95 is commanded just before G07.1

The previous F command feedrate cannot be used during cylindrical interpolation, thus a new F command must be issued.

The feedrate after the cylindrical interpolation mode is canceled will return to that applied before the cylindrical interpolation mode was started.

When there is no F command in G07.1

Previous mode	No F command	After G07.1 is canceled
G94	Previous F is used	←
G95	Program error (P62)	F just before G07.1 is used

When F is commanded in G07.1

Previous mode	No F command	After G07.1 is canceled
G94	Commanded F is used	←
G95	Commanded F is used *1	F just before G07.1 is used

*1) Moves with the feed per minute command during G07.1.



Restrictions and precautions

- (1) The following G code commands can be used during the cylindrical interpolation mode.

G code	Details
G00	Positioning
G01	Linear interpolation
G02	Circular interpolation (CW)
G03	Circular interpolation (CWW)
G04	Dwell
G09	Exact stop check
G40-42	Tool nose R compensation
G61	Exact stop check mode
G64	Cutting mode
G65	Macro call (simple call)
G66	Macro modal call A (modal call)
G66.1	Macro modal call B (block call per macro)
G67	Macro modal call cancel (modal call cancel)
G80-89	Hole drilling fixed cycle
G90/91	Absolute/incremental value command
G94	Asynchronous feed
G98	Hole drilling cycle initial return
G99	Hole drilling cycle R point return

A program error (P481) may occur if a G code other than those listed above is commanded during cylindrical interpolation.

- (2) The cylindrical interpolation mode is canceled when the power is turned ON or reset.
- (3) A program error (P484) will occur if any axis commanded for cylindrical interpolation has not completed zero point return.
- (4) Tool radius compensation must be canceled before the cylindrical interpolation mode can be canceled.
- (5) When the cylindrical interpolation mode is canceled, the mode will change to the cutting mode, and the plane will return to that selected before cylindrical interpolation.
- (6) The program of the block during the cylindrical interpolation cannot be restarted (program restart).
- (7) A program error (P486) will occur if the cylindrical interpolation command is issued during the mirror image.
- (8) When the cylindrical interpolation mode is started or canceled, the deceleration check is performed.
- (9) A program error (P486) will occur if the cylindrical interpolation or the pole coordinate interpolation is commanded during the cylindrical interpolation mode.

6. Interpolation Functions

6.9 Circular interpolation



Example of program

<Program>

```

N01 G28XZC;
N02 T02;
N03 G97S100M23;
N04 G00X50.Z0.;
N05 G94G01X40.F100.;
N06 G19C0Z0;
N07 G07.1C20.;
N08 G41;
N09 G01Z-10.C80.F150;
N10 Z-25.C90.;
N11 Z-80.C225;
N12 G03Z-75.C270.R55.;
N13 G01Z-25;
N14 G02Z-20.C280.R80.;
N15 G01C360.
N16 G40;
N17 G07.1C0;
N18 G01X50.;
N19 G0X100.Z100.;
N20 M25;
N21 M30;
    
```

<Parameter>


```

#1029 aux_I
#1030 aux_J   C
#1031 aux_K
    
```


Command of plane selection for cylindrical interpolation and command of two interpolation axes

Cylindrical interpolation start

Cylindrical interpolation cancel

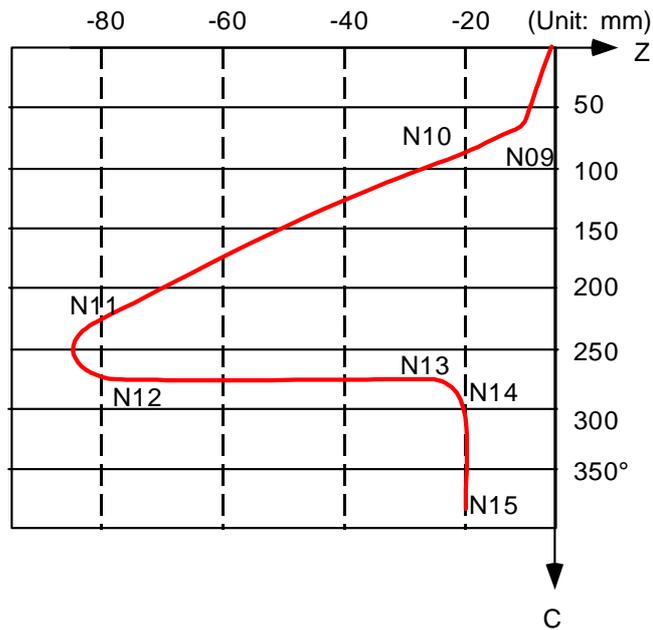


6.10 Pole coordinate interpolation; G12.1

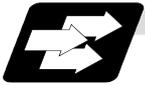

Function and purpose

This function converts the commands programmed with the orthogonal coordinate axis into linear axis movement (tool movement) and rotation axis movement (workpiece rotation), and controls the contour.

The plane that uses the linear axis as the plane's 1st orthogonal axis, and the intersecting hypothetical axis as the plane's 2nd axis (hereafter "pole coordinate interpolation plane") is selected. Pole coordinate interpolation is carried out on this plane. The workpiece coordinate system zero point is used as the coordinate system zero point during pole coordinate interpolation.

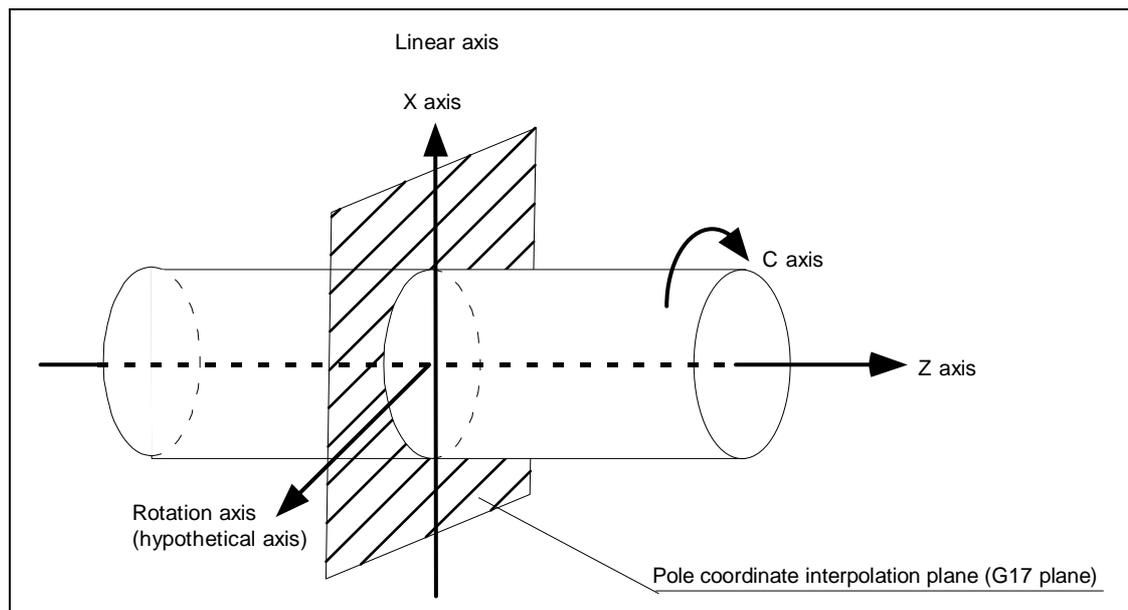

This is effective for cutting a notch section on a linear section of the workpiece diameter, and for cutting cam shafts, etc.



Command format

G12.1 ; Pole coordinate interpolation mode start

G13.1 ; Pole coordinate interpolation mode cancel

- (1) The coordinates commanded in the interval from the start to cancellation of the pole coordinate interpolation mode will be the pole coordinate interpolation.

G12.1 ;	Pole coordinate interpolation mode start	
:		(Pole coordinate interpolation will start)
:		(The coordinate commands in this interval will be the pole coordinate interpolation)
:		
G13.1 ;	Pole coordinate interpolation mode cancel	
		(Pole coordinate interpolation is canceled)
- (2) G112 and G113 can be used instead of G12.1 and G13.1.
- (3) Command G12.1 and G13.1 in an independent block. A program error (P33) will occur if this command is issued in the same block as another G code.
- (4) Linear interpolation or circular interpolation can be commanded during the pole coordinate interpolation mode.
- (5) The coordinates can be commanded with either an absolute command or incremental command.
- (6) Tool radius compensation can be applied on the program command. Pole coordinate interpolation will be executed on the path after tool radius compensation.
- (7) Command the segment feed in the pole coordinate interpolation plane (orthogonal coordinate system) with F. The F unit is mm/min or inch/min.
- (8) When the G12.1 and G13.1 commands are issued, the deceleration check is executed.



Detailed description

(1) Plane selection

The linear axis and rotation axis used for pole coordinate interpolation must be set beforehand with the parameters.

- (a) Determine the deemed plane for carrying out pole coordinate interpolation with the parameter (#1533) for the linear axis used for pole coordinate interpolation.

#1533 setting value	Deemed plane
X	G17 (XY plane)
Y	G19 (YZ plane)
Z	G18 (ZX plane)
Blank (no setting)	G17 (XY plane)

- (b) A program error (P485) will occur if the plane selection command (G16 to G19) is issued during the pole coordinate interpolation mode.

(Note) Depending on the model or version, parameter (#1533) may not be provided. In this case, the operation will be the same as if the parameter (#1533) is blank (no setting).

(2) Related parameters

#	Item	Details	Setting range
1516	mill_ax	Milling axis name Set the name of the rotation axis for milling interpolation (pole coordinate interpolation, cylindrical interpolation). Only one of the rotation axes can be set.	A to Z
1517	mill_c	Milling interpolation hypothetical axis name Select the hypothetical axis command name for milling interpolation (pole coordinate interpolation, cylindrical interpolation). 0: Y axis command 1: Command rotation axis name	0 / 1
8111	Milling Radius	Select the diameter and radius of the linear axis for milling interpolation. 0: Radius command for all axes 1: Each axis setting (follows #1019 dia diameter designation axis)	0 / 1



Relation with other functions

(1) Program commands during pole coordinate interpolation

- (a) The program commands in the pole coordinate interpolation mode are commanded with the orthogonal coordinate value of the linear axis and rotation axis (hypothetical axis) on the pole coordinate interpolation plane.
The axis address of the rotation axis (C) is commanded as the axis address for the plane's 2nd axis (hypothetical axis) command.
The command unit is not deg (degree), and instead is the same unit (mm or inch) as the command issued with the axis address for the plane's 1st axis (linear axis).
- (b) The hypothetical axis coordinate value will be set to "0" when G12.1 is commanded. In other words, the position where G12.1 is commanded will be interpreted as angle = 0, and the pole coordinate interpolation will start.

(2) Circular interpolation on pole coordinate plane

The arc radius address for carrying out circular interpolation during the pole coordinate interpolation mode is determined with the linear axis parameter (#1533).

#1533 setting value	Center designation command
X	I, J (pole coordinate plane is interpreted as XY plane)
Y	J, K (pole coordinate plane is interpreted as YZ plane)
Z	K, I (pole coordinate plane is interpreted as ZX plane)
Blank (no setting)	I, J (pole coordinate plane is interpreted as XY plane)

The arc radius can also be designated with the R command.

(Note) Depending on the model or version, parameter (#1533) may not be provided. In this case, the operation will be the same as if the parameter (#1533) is blank (no setting).

(3) Tool radius compensation

The tool radius can be compensated during the pole coordinate interpolation mode.

- (a) Command the plane selection in the same manner as pole coordinate interpolation.
When using tool radius compensation, it must be started up and canceled within the pole coordinate interpolation mode.
- (b) A program error (P485) will occur if pole coordinate interpolation is executed during tool radius compensation.
- (c) If the G12.1 and G13.1 commands are issued with no movement command given after the tool radius compensation is canceled, the position of the axis in the G12.1 and G13.1 commands block is interpreted as the position applied after the tool radius compensation is canceled and the following operations are performed.

(4) Cutting asynchronous feed

- (a) The asynchronous mode is forcibly set when the pole coordinate interpolation mode is started.
- (b) When the pole coordinate interpolation mode is canceled, the synchronization mode will return to the state before the pole coordinate interpolation mode was started.
- (c) A program error (P485) will occur if G12.1 is commanded in the constant surface speed control mode (G96).

(5) Miscellaneous functions

- (a) The miscellaneous function (M) and 2nd miscellaneous function can be issued even in the pole coordinate interpolation mode.
- (b) The S command in the pole coordinate interpolation mode issues the rotary tool's rotation speed instead of the spindle rotation speed.
- (c) Issue the T command before pole coordinate interpolation is started. A program error (P485) will occur if the T command is issued in the pole coordinate interpolation mode.

⋮
⋮

T12 ; ... T command before pole coordinate interpolation → Valid

G0 X100. Z0 ;

G12.1 ;

⋮

T11 ; ... T command in pole coordinate interpolation mode → Program error

⋮

G13.1 ;

- (d) When the tool offset is executed by the axis command after the T command, the tool offset by the T command may be uncompleted. In this case, execute the tool offset by the axis command during the pole coordinate interpolation mode.
If a command is issued to even one axis of two hypothetical axes, which forms the pole coordinate plane, by the axis command during the pole coordinate interpolation mode, it is changed into the command for two actual axes.
Note that a program error (P482) will occur if the pole coordinate interpolation command is issued with the tool offset cancel uncompleted.

6. Interpolation Functions

6.10 Pole coordinate interpolation

(6) F command during pole coordinate interpolation

As for the F command in the pole coordinate interpolation mode, whether the previous F command is used or not depends on that the mode just before G12.1 is the feed per minute command (G94) or feed per rotation command (G95).

(a) When G94 is commanded just before G12.1

If there is no F command in the pole coordinate interpolation, the previous F command feedrate will be used.

The feedrate after the pole coordinate interpolation mode is canceled will remain the F command feedrate issued when the pole coordinate interpolation mode was started or the final F command feedrate set during pole coordinate interpolation.

The previous F command feedrate cannot be used during pole coordinate interpolation.

(b) When G95 is commanded just before G12.1

The previous F command feedrate cannot be used during pole coordinate interpolation. A new F command must be issued.

The feedrate after the pole coordinate interpolation mode is canceled will return to that applied before the pole coordinate interpolation mode was started.

When there is no F command in G12.1

Previous mode	No F command	After G13.1 is canceled
G94	Previous F is used	←
G95	Program error (P62)	F just before G12.1 is used

When F is commanded in G12.1

Previous mode	No F command	After G07.1 is canceled
G94	Commanded F is used	←
G95	Commanded F is used *1	F just before G12.1 is used

*1) Moves with the feed per minute command during G12.1.

(7) Hole drilling axis in the hole drilling fixed cycle command during the pole coordinate interpolation

Hole drilling axis in the hole drilling fixed cycle command during the pole coordinate interpolation is determined with the linear axis parameter (#1533).

#1533 setting value	Hole drilling axis
X	Z (pole coordinate plane is interpreted as XY plane)
Y	X (pole coordinate plane is interpreted as YZ plane)
Z	Y (pole coordinate plane is interpreted as ZX plane)
Blank (no setting)	Z (pole coordinate plane is interpreted as XY plane)

(8) Shift amount in the G76 (fine boring) or G87 (back boring) command during the pole coordinate interpolation

Shift amount in the G76 (fine boring) or G87 (back boring) command during the pole coordinate interpolation is determined with the linear axis parameter (#1533).

#1533 setting value	Center designation command
X	I, J (pole coordinate plane is interpreted as XY plane)
Y	J, K (pole coordinate plane is interpreted as YZ plane)
Z	K, I (pole coordinate plane is interpreted as ZX plane)
Blank (no setting)	I, J (pole coordinate plane is interpreted as XY plane)



Restrictions and precautions

- (1) The following G code commands can be used during the pole coordinate interpolation mode.


G code	Details
G00	Positioning
G01	Linear interpolation
G02	Circular interpolation (CW)
G03	Circular interpolation (CWW)
G04	Dwell
G09	Exact stop check
G40-42	Tool nose R compensation
G61	Exact stop check mode
G64	Cutting mode
G65	Macro call (simple call)
G66	Macro modal call A (modal call)
G66.1	Macro modal call B (block call per macro)
G67	Macro modal call cancel (modal call cancel)
G80-89	Hole drilling fixed cycle
G90/91	Absolute/incremental value command
G94	Asynchronous feed
G98	Hole drilling cycle initial return
G99	Hole drilling cycle R point return

A program error (P481) may occur if a G code other than those listed above is commanded during pole coordinate interpolation.

- (2) The program cannot be restarted (resumed) for a block in pole coordinate interpolation.
- (3) Before commanding pole coordinate interpolation, set the workpiece coordinate system so that the center of the rotation axis is at the coordinate system zero point. Do not change the coordinate system during the pole coordinate interpolation mode. (G50, G52, G53, relative coordinate reset, G54 to G59, etc.)
- (4) The feedrate during pole coordinate interpolation will be the interpolation speed on the pole coordinate interpolation plane (orthogonal coordinate system).
(The relative speed with the tool will be converted with pole coordinate conversion.)
When passing near the center of the rotation axis on the pole coordinate interpolation plane (orthogonal coordinate system), the rotation axis side feedrate after pole coordinate interpolation will be very high.
- (5) The axis movement command outside of the plane during pole coordinate interpolation will move unrelated to the pole coordinate interpolation.
- (6) The current position displays during pole coordinate interpolation will all indicate the actual coordinate value. However, the "remaining movement amount" will be the movement amount on the pole coordinate input plane.
- (7) The pole coordinate interpolation mode will be canceled when the power is turned ON or reset.
- (8) A program error (P484) will occur if any axis commanded for pole coordinate interpolation has not completed zero point return.
- (9) Tool radius compensation must be canceled before the pole coordinate interpolation mode can be canceled.
- (10) When the pole coordinate interpolation mode is canceled, the mode will change to the cutting mode, and the plane will return to that selected before pole coordinate interpolation.
- (11) A program error (P486) will occur if the pole coordinate interpolation command is issued during the mirror image.
- (12) A program error (P486) will occur if the cylindrical interpolation or the pole coordinate interpolation is commanded during the pole coordinate interpolation mode.



Example of program

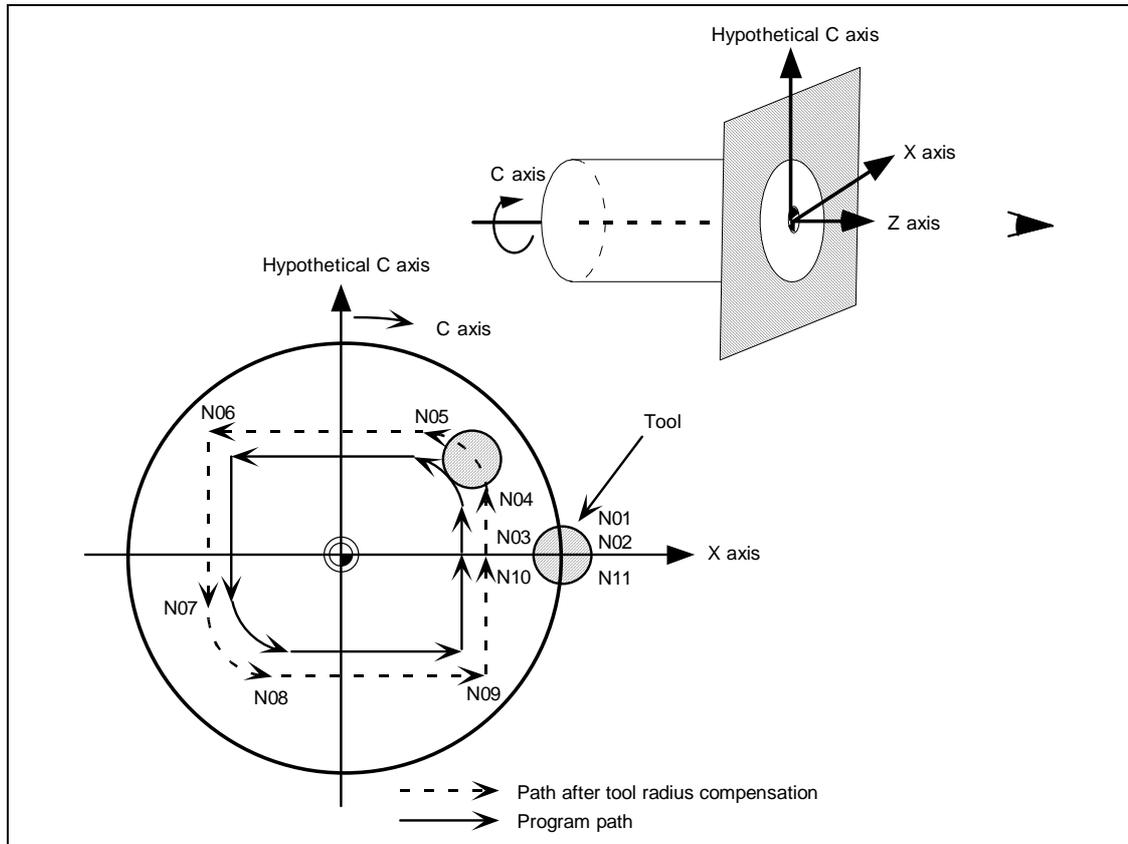

<Program>

```


:
:
N00 T01;
:
:
N01 G17 G90 G0 X40.0 C0 Z0;   Setting of start position
N02 G12.1;                   Pole coordinate interpolation mode: Start
N03 G1 G42 X20.0 F2000;      Actual machining start
N04 C10.0;
N05 G3 X10.0 C20.0 R10.0;
N06 G1 X-20.0;               Shape program
N07 C-10.0;
N08 G3 X-10.0 C-20.0 I10.0 J0; (Follows orthogonal coordinate values on X-C
N09 G1 X20.0;               hypothetical axis plane.)
N10 C0;
N11 G40 X40.0;
N12 G13.1;                   Pole coordinate interpolation mode: Cancel
:
:
M30 ;

```

6. Interpolation Functions

6.11 Exponential function interpolation

6.11 Exponential function interpolation; G02.3, G03.3

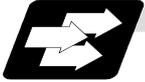

Function and purpose


Exponential function interpolation changes the rotation axis into an exponential function shape in respect to the linear axis movement.

At this time, the other axes carry out linear interpolation between the linear axis.


This allows a machining of a taper groove with constant torsion angle (helix angle) (uniform helix machining of taper shape).

This function can be used for slotting or grinding a tool for use in an end mill, etc.

• Uniform helix machining of taper shape

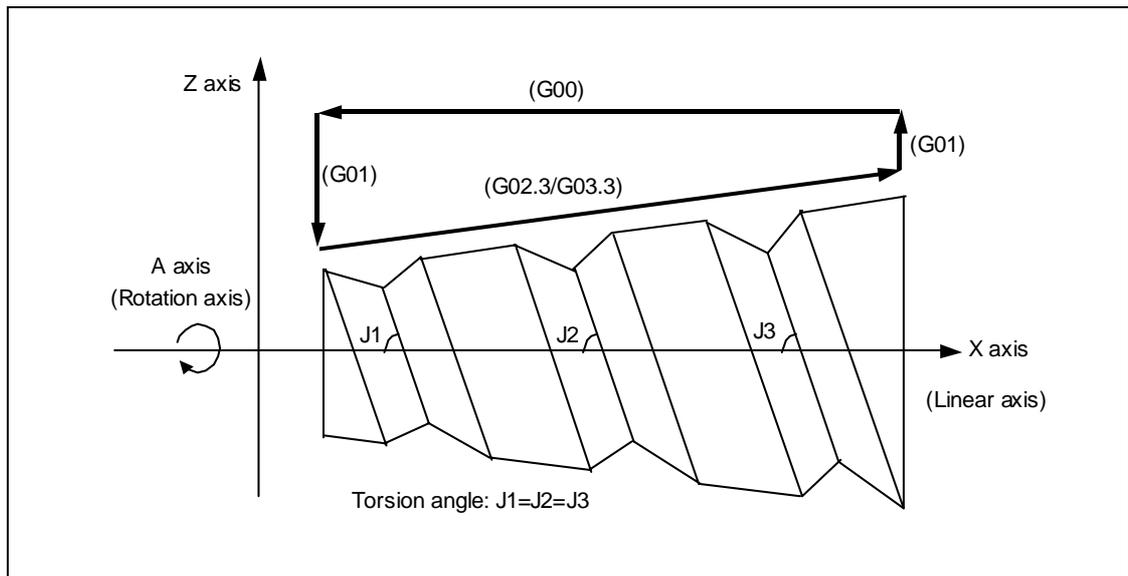

• Relation of linear axis and rotation axis

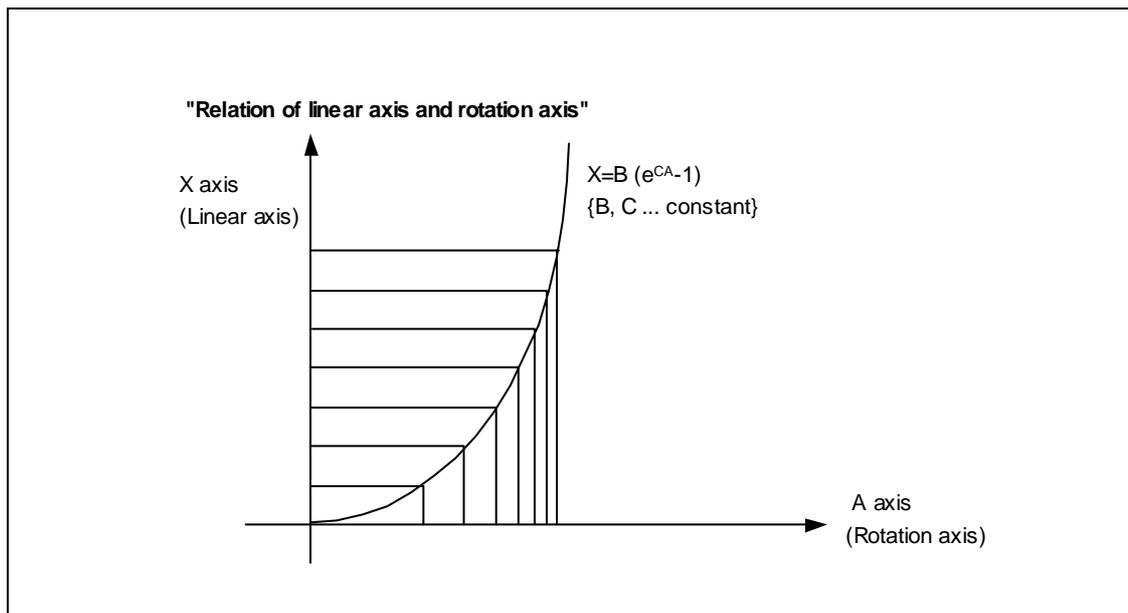

6. Interpolation Functions

6.11 Exponential function interpolation



Command format

G02.3/G03.3 Xx1 Yy1 Zz1 Ii1 Jj1 Rr1 Ff1 Qq1 ;

G02.3	Forward rotation interpolation
G03.3	Negative rotation interpolation
X	X axis end point (Note 1)
Y	Y axis end point (Note 1)
Z	Z axis end point (Note 1)
I	Angle i1 (Note 2)
J	Angle j1 (Note 2)
R	Constant value r1 (Note 3)
F	Initial feedrate (Note 4)
Q	Feedrate at end point (Note 5)

(Note 1) Designate the end point of the linear axis designated with parameter “#1514 expLinax” and the axis that carries out linear interpolation between that axis.

If the end point on of the rotation axis designated with parameter “#1515 expRotax” is designated, linear interpolation without exponential function interpolation will take place.

(Note 2) The command unit is as follows.

Setting unit	#1003=B	#1003=C
(Unit = °)	0.001	0.0001

The command range is -89 to $+89^\circ$.

A program error (P33) will occur if there is no address I or J command.

A program error (P35) will occur if the address I or J command value is 0.

(Note 3) The command unit is as follows.

Setting unit	#1003=B	#1003=C	Unit
Metric system	0.001	0.0001	mm
Inch system	0.0001	0.00001	inch

The command range is a positive value that does not include 0.

A program error (P33) will occur if there is no address R command.

A program error (P35) will occur if the address R command value is 0.

(Note 4) The command unit and command range is the same as the normal F code. (Command as a per minute feed.)

Command the composite feedrate that includes the rotation axis.

The normal F modal value will not change by the address F command.

A program error (P33) will occur if there is no address F command.

A program error (P35) will occur if the address F command value is 0.

(Note 5) The command unit is as follows.

Setting unit	#1003=B	#1003=C	Unit
Metric system	0.001	0.0001	mm
Inch system	0.0001	0.00001	inch

The command unit and command range is the same as the normal F code.

Command the composite feedrate that includes the rotation axis.

The normal F modal value will not change by the address Q command.

The axis will interpolate between the initial speed (F) and end speed (Q) in the CNC according to the linear axis.


If there is no address Q command, interpolation will take place with the same value as the initial feedrate (address F command). (The start point and end point feedrates will be the same.)

A program error (P35) will occur if the address Q command value is 0.

6. Interpolation Functions

6.11 Exponential function interpolation

- Example of uniform helix machining of taper shape

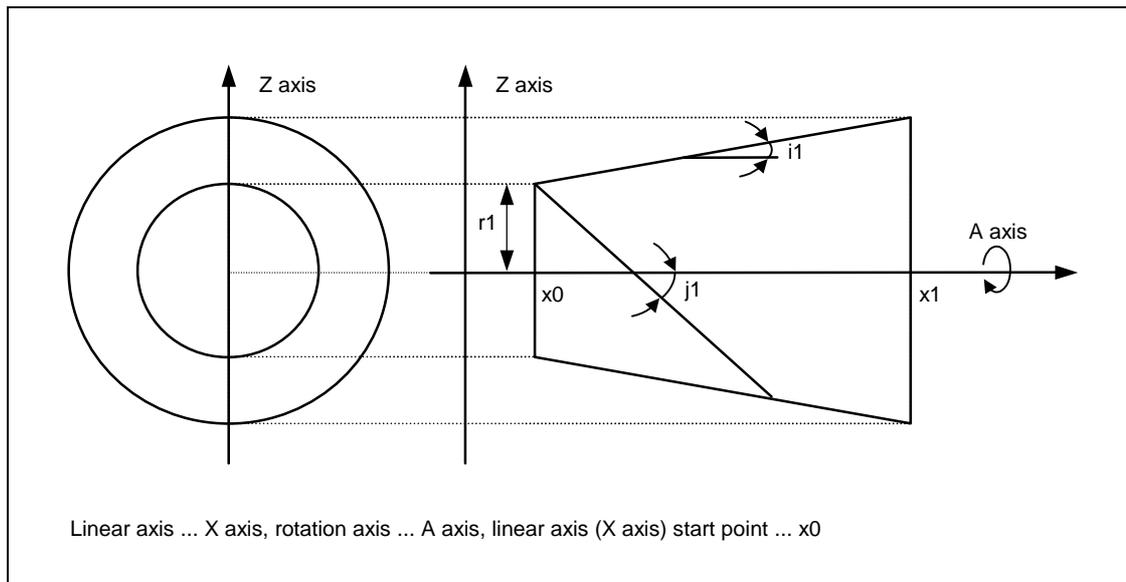

Relational expression of exponential function

The exponential function relational expression of the linear axis (X) and rotation axis (A) in the G02.3/G03.3 command is defined in the following manner.

$$X(\theta) = r1 * (e^{\theta/D} - 1) / \tan(i1) \quad (\text{linear axis (X) movement (1)})$$

$$A(\theta) = (-1)^\omega * 360 * \theta / (2\pi) \quad (\text{rotation axis (A) movement})$$

$$D = \tan(j1) / \tan(i1)$$

$\omega = 0$ during forward rotation (G02.3), and $\omega = 1$ during reverse rotation (G03.3)

θ is the rotation angle (radian) from the rotation axis' start point


The rotation axis' rotation angle (θ) is as follows according to expression (1).

$$\theta = D * \ln \{ (X * \tan(i1) / r1) + 1 \}$$



Machining example

• Example of uniform helix machining of taper shape

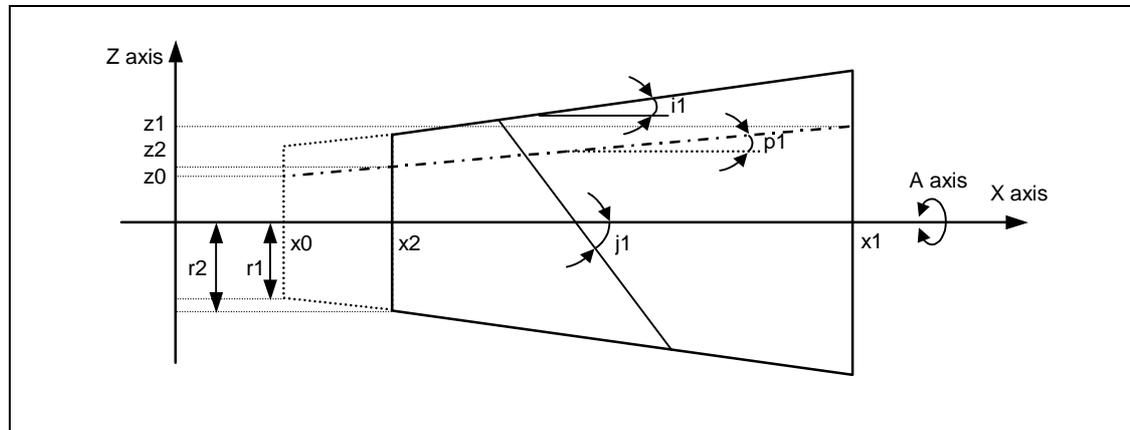

<Relational expression of exponential function in machining example>

$$Z(\theta) = r1 * (e^{\theta/D} - 1) * \tan(p1) / \tan(i1) + z0 \quad \dots (1)$$

$$X(\theta) = r1 * (e^{\theta/D} - 1) / \tan(i1) \quad \dots (2)$$

$$A(\theta) = (-1)^\omega * 360 * \theta / (2\pi)$$

$$D = \tan(j1) / \tan(i1)$$

Z(θ) Absolute value from zero point of Z axis (axis that linearly interpolates between interval with linear axis (X axis))

X(θ) Absolute value from X axis (linear axis) start point

A(θ) Absolute value from A axis (rotation axis) start point

r1 Exponential function interpolation constant value (address R command)

r2 Workpiece left edge radius

x2 X axis (linear axis) position at workpiece left edge

x1 X axis (linear axis) end point (address X command)

x0 X axis (linear axis) start point (Set as "x0 ≤ x1" so that workpiece does not interfere with tool)

z1 End point of Z axis (axis that linearly interpolates between interval with linear axis (X axis)) (address Z command)

z0 Start point of Z axis (axis that linearly interpolates between interval with linear axis (X axis))

i1 Taper gradient angle (address I command)

p1 Slot base gradient angle

j1 Torsion angle (helix angle) (address J command)

ω Torsion direction (0: Forward rotation, 1: reverse direction)

θ Workpiece rotation angle (radian)

f1 Initial feedrate (address F command)

q1 Feedrate at end point (address Q command)

k1 Insignificant data (address K command)

According to expressions (1) and (2):

$$Z(\theta) = X(\theta) * \tan(p1) + z0 \quad \dots (3)$$

According to expression (3), the slot base gradient angle (p1) is determined from the X axis and Z axis end point positions (x1, z1).

The Z axis movement amount is determined by the slot base gradient angle (p1) and X axis position.

In the above diagram, the exponential function interpolation's constant value (r1) is determined with the following expression using the workpiece left edge radius (r2), X axis start point (x0), X axis position at workpiece left edge (x2) and taper gradient angle (i1).

$$r1 = r2 - \{ (x2 - x0) * \tan(i1) \}$$

6. Interpolation Functions

6.11 Exponential function interpolation

The taper gradient angle ($i1$) and torsion angle ($j1$) are each issued with the command address I and J.

Note that if the shape is a reverse taper shape, the taper gradient angle ($i1$) is issued as a negative value.

The torsion direction (ω) is changed with the G code. (Forward rotation when G02.3 is commanded, negative rotation when G03.3 is commanded)

The above settings allow uniform helix machining of a taper shape (or reverse taper shape).



Command and operation

		G2.3(Equivalent to G3.3 if $j1 < 0$)			
		X movement direction > 0		X movement direction < 0	
		$i1 > 0$	$i1 < 0$	$i1 > 0$	$i1 < 0$
Command					
Operation					
Machining program example		N10 G28XYZC; N20 G91G0 X100. Z100.; N30 G2.3 X100. Z100. I50. J80. R105. F500.; N40 M30;	N10 G28XYZC; N20 G91G0 X100. Z200.; N30 G2.3 X100. Z-100. I-50. J80. R105. F500.; N40 M30;	N10 G28XYZC; N20 G91G0 X-100. Z100.; N30 G2.3 X-100. Z100. I50. J80. R105. F500.; N40 M30;	N10 G28XYZC; N20 G91G0 X-100. Z200.; N30 G2.3 X-100. Z-100. I-50. J80. R105. F500.; N40 M30;

		G3.3(Equivalent to G2.3 if $j1 < 0$)			
		X movement direction > 0		X movement direction < 0	
		$i1 > 0$	$i1 < 0$	$i1 > 0$	$i1 < 0$
Command					
Operation					
Machining program example		N10 G28XYZC; N20 G91G0 X100. Z100.; N30 G3.3 X100. Z100. I50. J80. R105. F500.; N40 M30;	N10 G28XYZC; N20 G91G0 X100. Z200.; N30 G3.3 X100. Z-100. I-50. J80. R105. F500.; N40 M30;	N10 G28XYZC; N20 G91G0 X-100. Z100.; N30 G3.3 X-100. Z100. I50. J80. R105. F500.; N40 M30;	N10 G28XYZC; N20 G91G0 X-100. Z200.; N30 G3.3 X-100. Z-100. I-50. J80. R105. F500.; N40 M30;



Precautions for programming

- (1) When G02.3/G03.3 is commanded, interpolation takes place with the exponential function relational expression using the start position of the linear axis and rotation axis as 0.
- (2) Linear interpolation will take place in the following cases, even if in the G02.3/G03.3 mode. The feedrate for linear interpolation will be the F command in that block. (Note that the normal F modal is not updated.)
 - The linear axis designated with the parameter (#1514 expLinax) is not commanded, or the movement amount for that axis is 0.
 - The rotation axis designated with the parameter (#1515 expRotax) is commanded.
- (3) Tool length offset and tool radius compensation cannot be used during the G02.3/G03.3 mode. Note that the tool length offset started before interpolation is started before the G02.3/G03.3 mode will normally continue.
- (4) A program error will occur if commands are issued during the pole coordinate interpolation, cylindrical interpolation or milling interpolation modes.
- (5) G02.3/G03.3 will function with asynchronous feed even during the synchronous feed mode.
- (6) If the parameter "#1515 expRota" setting is the same axis name as the initial C axis, the axis selected with the C axis selection signal will interpolate as the rotation axis.

6.12 Polar coordinate command; G16



Function and purpose

With this function, the end point coordinate value is commanded with the polar coordinate of the radius and angle.




Command format

G16 ; Polar coordinate command mode ON

G15 ; Polar coordinate command mode OFF

- (1) The polar coordinate command is applied in the interval from turning ON to OFF of the polar coordinate command mode.

G1x ;	Plane selection for polar coordinate command (G17/G18/G19)
G16 ;	Polar coordinate command mode ON
G9x G01 Xx1 Yy1 F2000 ;	Polar coordinate command
:	G9x : Center selection for polar coordinate command (G90/G91)
	G90 ...The workpiece coordinate system zero point is the polar coordinate center.
	G91 ...The present position is the polar coordinate center.
	x1 : 1st axis for the plane ...The radius commanded
	y1 : 2nd axis for the plane ...The angle commanded

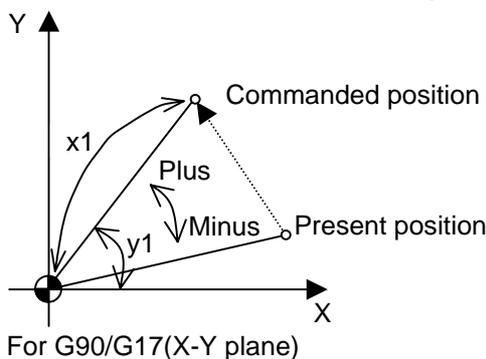

G15 ; Polar coordinate command mode OFF

- (2) The plane selection during the polar coordinate command mode is carried out with G17, G18 and G19.
- (3) The polar coordinate command is a modal. The polar coordinate command mode when the power is turned ON is OFF (G15). Whether to initialize the modal at reset or not can be selected with the parameter (#1210 RstGmd/bit 11) setting.
- (4) During polar coordinate command mode, command the radius with the 1st axis for the selected plane, and the angle with the 2nd axis. For example, when the X-Y plane is selected, command the radius with the address "X", and the angle with the address "Y".
- (5) For the angle, the counterclockwise direction of the selected plane is positive and the clockwise direction is negative.
- (6) The radius and angle can be commanded with both the absolute value and incremental value (G90, G91).
- (7) When the radius is commanded with the absolute value, command the distance from the zero point in the workpiece coordinate system (note that the local coordinate system is applied when the local coordinate system is set).

6. Interpolation Functions

6.12 Polar coordinate command


- (8) When the radius is commanded with the incremental value command, considering the end point of the previous block as the polar coordinate center, command the incremental value from that end point. The angle is commanded with the incremental value of the angle from the previous block.
- (9) When the radius is commanded with the negative value, the same operation as the command that the radius command value is changed to the absolute value and 180° is added to the angle command value.



Command position


- (1) **When the zero point in the workpiece coordinate system is applied to the polar coordinate center**

The zero point in the workpiece coordinate system is applied to the polar coordinate center by commanding the radius value with the absolute value. Note that the zero point in the local coordinate system is applied to the polar coordinate center if the local coordinate system (G52) is used.

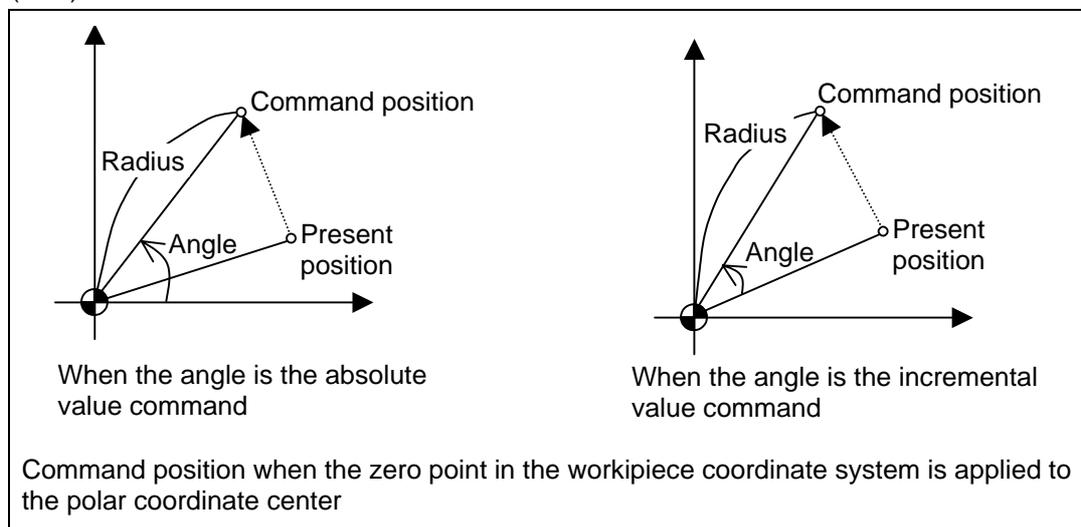


- (2) **When the present position is applied to the polar coordinate center**

The present position is applied to the polar coordinate center by commanding the radius value with the incremental value.

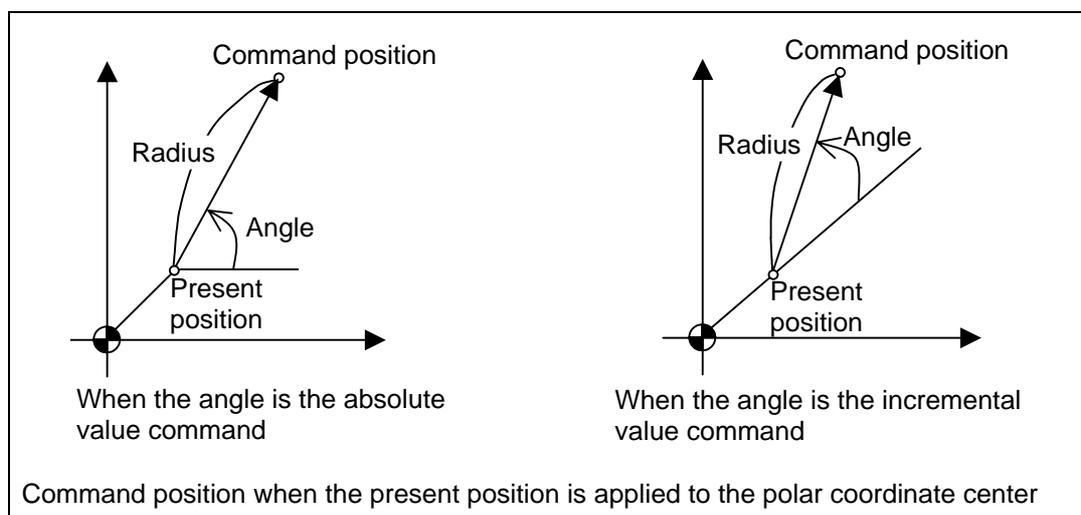

(3) When the radius value command is omitted

When the radius value command is omitted, the zero point in the workpiece coordinate system is applied to the polar coordinate center. Note that the zero point in the local coordinate system is applied to the polar coordinate center if the local coordinate system (G52) is used.

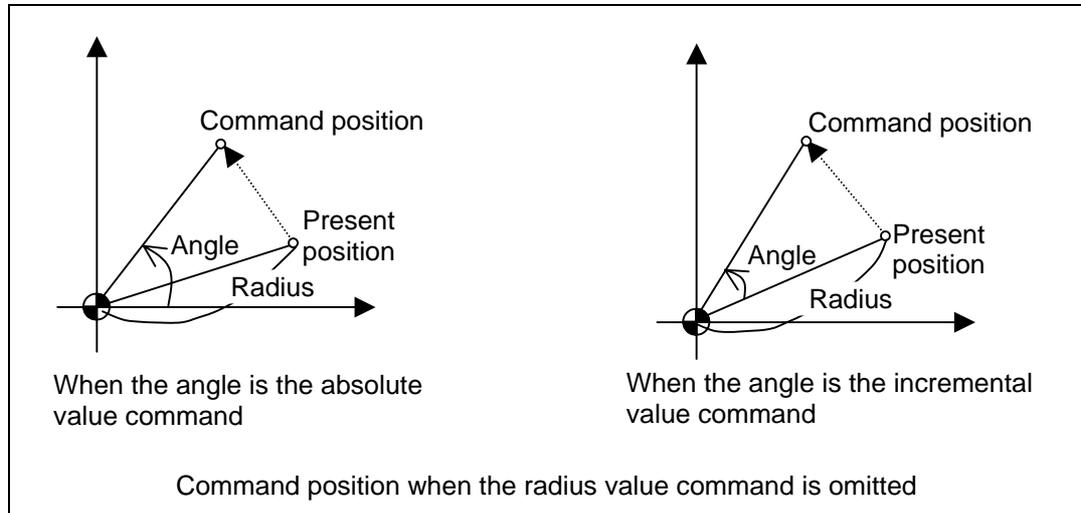


(4) When the angle command is omitted

When the angle command is omitted, the angle of the present position in the workpiece coordinate system is applied to the angle command.

The zero point in the workpiece coordinate system is applied to the polar coordinate center by commanding the radius value with the absolute value. Note that the zero point in the local coordinate system is applied to the polar coordinate center if the local coordinate system (G52) is used.

If the radius value is commanded with the incremental value, the present position is applied to the polar coordinate center.

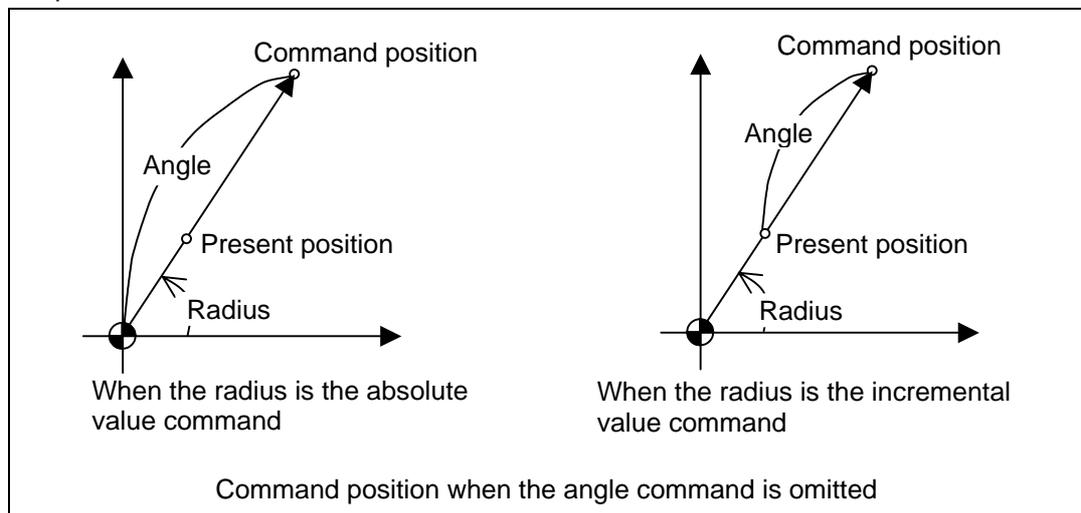



Axis command not interpreted as the polar coordinate command


The axis command with the following command is not interpreted as the polar coordinate command during the polar coordinate command mode. The movement command that has no axes commands for the 1st axis and 2nd axis in the selected plane mode is also not interpreted as polar coordinate command during the polar coordinate command mode.

Function	G code
Dwell	G04
Program parameter input/compensation input	G10
Local coordinate system setting	G52
Machine coordinate system setting	G92
Machine coordinate system selection	G53
Coordinate rotation by program	G68
Scaling	G51
G command mirror image	G51.1
Reference point check	G27
Reference point return	G28
Start point return	G29
2nd to 4th reference point return	G30
Tool change position return 1	G30.1
Tool change position return 2	G30.2
Tool change position return 3	G30.3
Tool change position return 4	G30.4
Tool change position return 5	G30.5
Tool change position return 6	G30.6
Automatic tool length measurement	G37
Skip	G31
Multi-skip function 1	G31.1
Multi-skip function 2	G31.2
Multi-skip function 3	G31.2
Linear angle command	G01 Aa1



Example of program

When the zero point in the workpiece coordinate system is the polar coordinate zero point

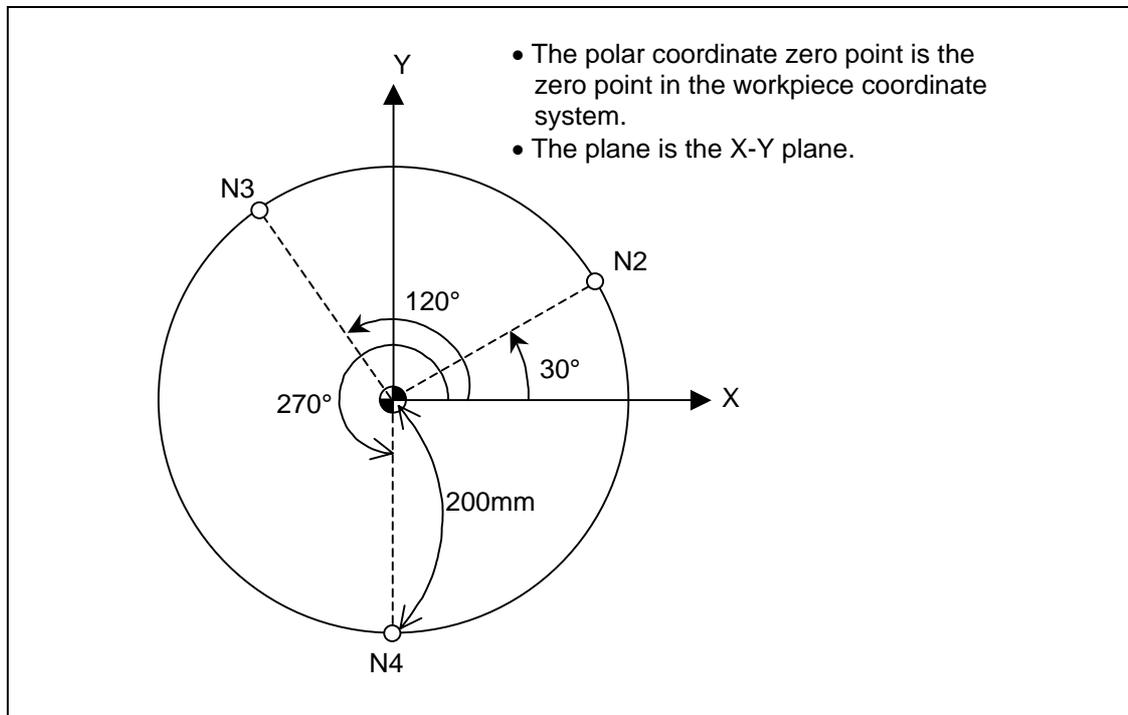

(1) When the radius value and angle are the absolute value command

N1 G17 G90 G16 ;	Polar coordinate command, X-Y plane selection The polar coordinate zero point is the zero point in the workpiece coordinate system.
N2 G85 X200. Y30. Z-20. F200. ;	Radius 200mm, angle 30°
N3 Y120. ;	Radius 200mm, angle 120°
N4 Y270. ;	Radius 200mm, angle 270°
N5 G15 G80 ;	Polar coordinate command cancel

(2) When the radius value is the absolute value command and the angle is the incremental value command

N1 G17 G90 G16 ;	Polar coordinate command, X-Y plane selection The polar coordinate zero point is the zero point in the workpiece coordinate system.
N2 G85 X200. Y30. Z-20. F200. ;	Radius 200mm, angle 30°
N3 G91 Y90. ;	Radius 200mm, angle +90°
N4 Y150. ;	Radius 200mm, angle +150°
N5 G15 G80 ;	Polar coordinate command cancel




Precautions

- (1) If the following commands are carried out during the polar coordinate command mode, or if the polar coordinate command is carried out during the following command mode, a program error (P34) will occur.

Function	G code
High-speed machining mode 3	G05 P3
High-speed high-accuracy control I	G05.1 Q1
High-speed high-accuracy control II	G05 P10000
Spline	G05.1 Q2

- (2) When the mirror image (G code/parameter/external signal) is canceled anywhere except at the mirror image center during the polar coordinate command mode, the absolute value and machine position will deviate. The mirror center is set with an absolute value and so if another mirror center is assigned in this state, the center may be set at an unforeseen position. Cancel the mirror image above the mirror center or, after cancellation, assign a positioning command using absolute value command that the radius and angle of the polar coordinate command are designated.

6.13 Spiral Interpolation; G02.1/G03.1

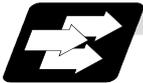

Function and purpose

This function carries out interpolation that smoothly joins the start and end points in a spiral. This interpolation is carried out for arc commands such as those in which the start point and end point are not on the same circumference.



Command format

G17 G02.1/G03.1 Xx Yy Ii Jj Pp Ff ;

G17	:Rotation plane
G02.1/G03.1	:Arc rotation direction
Xx Yy	:End point coordinates
Ii Jj	:Arc center value
Pp	:Number of pitches (number of rotations)
Ff	:Feedrate (tool path direction speed)

Circular interpolation operations are carried out at the f1 speed by the commands above. The path is toward the end point, following a spiral arc path centered at the position designated by distance i (X axis direction) and distance j (Y axis direction) in respect to the start point.

- (1) The arc plane is designated by G17, G18 and G19.
 - G17 XY plane
 - G18 ZX plane
 - G19 YZ plane
- (2) The arc rotation direction is designated by G02.1 or G03.1.
 - G02.1 . . . Clockwise (CW)
 - G03.1 . . . Counterclockwise (CCW)
- (3) P designates the number of pitches (number of rotations). p1 = 0 is less than one rotation and can be omitted. p1 = 1 is more than one rotation and less than two rotations. The command range is from 0 to 9999.



Detailed description

- (1) The arc rotation direction G02.1 is the same as G02, and G03.1 is the same as G03.
- (2) There are no R-designated arcs in spiral interpolation.
- (3) Conical cutting, tapered thread-cutting and other such machining operations can be conducted by changing the start point and end point radius and commanding the linear axis simultaneously.
- (4) Normally the spiral interpolation is automatically enabled with the arc commands (G02, G03) when the difference between the start point radius and the end point radius is less than the parameter setting value.
- (5) The axis combination that can be simultaneously commanded depends on the specifications. The combination within that range is random.
- (6) The feedrate is the constant tangential speed.
- (7) Simultaneous control by combining with tool radius compensation (G41, G42) is not possible.

6. Interpolation Functions

6.13 Spiral Interpolation


- (8) The arc plane always follows G17, G18 and G19. The plane arc control is carried out by G17, G18 and G19, even if designated by two addresses that do not match the plane.
- (9) When an axis designation other than the spiral interpolation plane is simultaneously designated, other axes are also interpolated in synchronization with the spiral interpolation.



Example of program

(Example 1)

```
G91 G17 G01 X60. F500 ;
Y140. ;
G02.1 X60. Y0 I100. P1 F300 ;
G01 X-120 ;
G90
G17 G01 X60. F500 ;
Y140. ;
G02.1 X120. Y140. I100. P1 F300 ;
G01 X0 ;
```

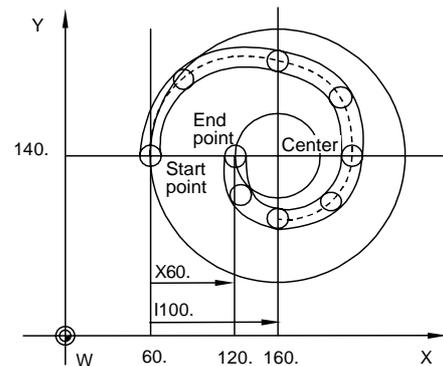


(Example 2)

```
G91 G17 G01 X60. F500 ;
Y140. ;
G02.1 X60.0 Z100.0 I100. P1 F300 ; → Because this is the G17 plane, arc control
G01 X-120 ;                               is not carried out by X-Z.
                                             Arc control is carried out by X-Y.
```


(Example 3) In this examples, the interpolation is truncated cone interpolation.

```
G17 G91 G02.1 X100. Z150. I150. P3 F500 ;
```

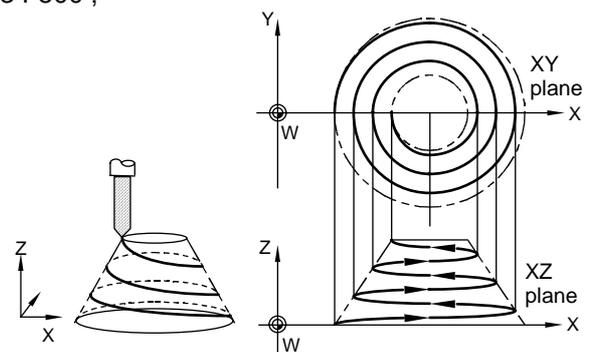

7. Feed Functions

7.1 Rapid traverse rate

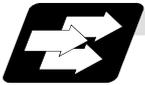

Function and purpose

The rapid traverse rate can be set independently for each axis. The available speed ranges are from 1 mm/min to 1,000,000 mm/min for input setting unit of 1 μ m. The upper limit is subject to the restrictions imposed by the machine specifications.

Refer to the specifications manual of the machine for the rapid traverse rate settings.

The feedrate is valid for the G00, G27, G28, G29, G30 and G60 commands.

Two paths are available for positioning: the interpolation type where the area from the start point to the end point is linearly interpolated or the non-interpolation type where movement proceeds at the maximum speed of each axis. The type is selected with parameter "#1086 G0Intp". The positioning time is the same for each type.

7.2 Cutting feed rate



Function and purpose

The cutting feedrate is assigned with address F and 8 digits (F8-digit direct designation).

The F8 digits are assigned with a decimal point for a 5-digit integer and a 3-digit fraction. The cutting feedrate is valid for the G01, G02, G03, G02.1 and G03.1 commands.

(Examples)

	Feedrate	
G1 X100. Y100. F200 ;	200.0mm/min	F200 or F200.000 gives the same rate.
G1 X100. Y100. F123.4 ;	123.4mm/min	
G1 X100. Y100. F56.789 ;	56.789mm/min	

Speed range that can be commanded (when input setting unit is 1 μ m or 10 μ m)

Command mode	F command range	Feed rate command range	Remarks
mm/min	0.001 to 1000000.000	0.01 to 1000000 mm/min	
inch/min	0.0001 to 39370.0787	0.001 to 100000 inch/min	
°/min	0.001 to 1000000.000	0.01 to 1000000 °/min	

(Note 1) A program error (P62) results when there is no F command in the first cutting command (G01, G02, G03) after the power has been switched on.

(Note 2) Depending on the model, the speed range may be 0.001 to 240000.000mm/min, 0.0001 to 9448.8188inch/min or 0.001 to 240000.000°/min.

7.3 F1-digit feed

**Function and purpose**

By setting the F1-digit feed parameter, the feedrate which has been set to correspond to the 1-digit number following the F address serves as the command value.

When F0 is assigned, the rapid traverse rate is established and the speed is the same as for G00. (G modal does not change.)

When F1 to F5 is assigned, the feedrate set to correspond to the command serves as the command value.

The command greater than F6 is considered to be the normal cutting feedrate.

The F1-digit command is valid in a G01, G02, G03, G02.1 or G03.1 modal.

The F1-digit command can also be used for fixed cycle.

**Detailed description**

The override function of the feedrate which is set in accordance to the F1-digit is performed by using the manual handle.

The amount by which the feedrate can be increased or reduced is determined by the following formula.

$$\pm\Delta F = \frac{FM}{K} \times (\pm \text{number of manual handle pulse generator pulses})$$

Where "+" means increase, and "-" means reduction.

K : Operation constant (This is the number of FM divisions, and is the calculated constant of the increment/decrement speed per scale of the manual handle pulse generator.)
This is set with the base specification parameter "#1507 F1_K".

FM : This is the clamp speed of F1 to F5
This is set with the base specification parameter "#1506 F1_FM".

Set the corresponding speed of F1 to F5 with the base specification parameters "#1185 spd_F1" to "#1189 spd_F5" respectively.

The increase/reduction range is from "0" to the set value of the parameter "#1506 F1_FM".

Operation alarm "104" will occur when the feedrate is 0.

(1) Operation method

- (a) Make the F1-digit command valid. (Set the base specification parameter "#1079 F1digit" to 1.)
- (b) Set FM and K.

Setting range	
K : 1 to 32767	(Base specification parameter "#1507 F1_K")
FM : 0 to Fmax (mm/min)	(Base specification parameter "#1506 F1_FM")
- (c) Set F1 to F5. (Base specification parameter "1185 spd_F1" to "#1189 spd_F5")

(2) Special notes

- (a) Use of both the F1-digit command and normal cutting feedrate command is possible when the F1-digit is valid.

(Example 1)

F0	Rapid traverse rate
F1 to F5	F1-digit
F6 or more	Normal cutting feedrate command

- (b) F1 to F5 are invalid in the G00 mode and the rapid traverse rate is established instead.
- (c) If F0 is used in the G02 or G03 mode, a program error (P121) will result.
- (d) When F1. to F5. (with decimal point) are assigned, the 1mm/min to 5mm/min direct commands are established instead of the F1-digit command.
- (e) When the commands are used with the millimeter or degree units, the feedrate set to correspond to F1 to F5 serves as the assigned speed mm (°)/min.
- (f) When the commands are used with inch units, one-tenth of the feedrate set correspond to F1 to F5 serves at the assigned speed inch/min.
- (g) The number of manual handle pulses is 1 pulse per scale unit regardless of the scaling factor.
- (h) During a F1-digit command, the F1-digit number and F1-digit command signal are output as the PLC signals.

(3) F1-digit and G commands

- (a) 01 group G command in same block as F1-digit commands

	Executed feedrate	Modal display rate	G modal
G0F0 F0G0	Rapid traverse rate	0	G0
G0F1 F1G0	Rapid traverse rate	1	G0
G1F0 F0G1	Rapid traverse rate	0	G1
G1F1 F1G1	F1 contents	1	G1

- (b) F1-digit and unmodal commands may be assigned in the same block. In this case, the unmodal command is executed and at the same time the F1-digit modal command is updated.

(4) Example of arithmetic constant K setting

When the handle scale unit is to be made ±10mm/min.

FM is made 15000 mm/min:

$$\Delta F = 10 = \frac{15000}{K}$$

Therefore, K is 1500.


The feed rate is made F (1 to 5) ±10 (mm/min) by rotating the handle through one scale unit.

(5) Valid manual handle conditions

The manual handle is valid during cutting feed (F1 to F5), automatic start, F1-digit valid and manual handle valid switch ON at the machine side as well as in the MDI mode, tape mode or memory mode provided that the machine lock (machine lock rapid traverse) or dry run status has not been established.

The function cannot be used when the handle specifications have not been provided.

7.4 Synchronous feed; G94, G95

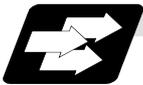

Function and purpose

Using the G95 command, it is possible to assign the feed amount per rotation with an F code. When this command is used, the rotary encoder must be attached to the spindle.

When the G94 command is issued the per-minute feed rate will return to the designated per-minute feed (asynchronous feed) mode.



Command format

G94;

G95;

G94 : Per-minute feed (mm/min) (asynchronous feed) (F1 = 1mm/min)

G95 : Per-revolution feed (mm/rev) (synchronous feed) (F1 = 0.01mm/rev)

The G95 command is a modal command and so it is valid until the G94 command (per-minute feed) is next assigned.

- The F code command range is as follows.
The movement amount per spindle revolution with synchronous feed (per-revolution feed) is assigned by the F code and the command range is as shown in the table below.

Metric input

Input unit system	B (0.001mm)		C (0.0001mm)	
	Feed per minute	Feed per rotation	Feed per minute	Feed per rotation
Command mode	F (mm/min)	E (mm/rev)	F (mm/min)	E (mm/rev)
Command address	F (mm/min)	E (mm/rev)	F (mm/min)	E (mm/rev)
Minimum command unit	1 (= 1.00), (1. = 1.00)	1 (= 0.01), (1. = 1.00)	1 (= 1.000), (1. = 1.000)	1 (= 0.01), (1. = 1.00)
Command range	0.01 to 1000000.00	0.001 to 999.999	0.001 to 100000.000	0.0001 to 99.9999

Inch input

Input unit system	B (0.0001inch)		C (0.00001inch)	
	Feed per minute	Feed per rotation	Feed per minute	Feed per rotation
Command mode	F (inch/min)	E (inch/rev)	F (inch/min)	E (inch/rev)
Command address	F (inch/min)	E (inch/rev)	F (inch/min)	E (inch/rev)
Minimum command unit	1 (= 1.000), (1. = 1.000)	1 (= 0.001), (1. = 1.000)	1 (= 1.0000), (1. = 1.0000)	1 (= 0.001), (1. = 1.000)
Command range	0.001 to 100000.0000	0.0001 to 999.9999	0.0001 to 10000.00000	0.00001 to 99.99999

- The effective speed (actual movement speed of machine) under per-revolution feed conditions is given in the following formula (Formula 1).

$$FC = F \times N \times OVR \dots \text{(Formula 1)}$$

Where FC = Effective rate (mm/min, inch/min)
 F = Commanded feedrate (mm/rev, inch/rev)
 N = Spindle speed (r/min)
 OVR = Cutting feed override


When a multiple number of axes have been commanded at the same time, the effective rate FC in formula 1 applies in the vector direction of the command.

- (Note 1)** The effective rate (mm/min or inch/min), which is produced by converting the commanded speed, the spindle speed and the cutting feed override into the per-minute speed, appears as the FC on the monitor 1. Screen of the setting and display unit.
- (Note 2)** When the above effective rate exceeds the cutting feed clamp rate, it is clamped at that clamp rate.
- (Note 3)** If the spindle speed is zero when synchronous feed is executed, operation alarm "105" results.
- (Note 4)** During machine lock high-speed processing, the rate will be 60,000mm/min (or 2,362 inch/min, 60,000 °/min) regardless of the commanded speed and spindle speed. When high-speed processing is not undertaken, the rate will be the same as for non-machine lock conditions.
- (Note 5)** Under dry run conditions, asynchronous speed applies and movement results at the externally set rate (mm/min, inch/min, °/min).
- (Note 6)** The fixed cycle G84 (tapping cycle) and G74 (reverse tapping cycle) are executed to the feed mode that is already designated.
- (Note 7)** Whether asynchronous feed (G94) or synchronous feed (G95) is to be established when the power is switched on or when M02 or M30 is executed is set with parameter "#1074 I_Sync".

7. Feed Functions

7.5 Feedrate designation and effects on control axes

7.5 Feedrate designation and effects on control axes

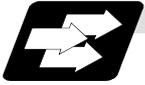

Function and purpose

It has already been mentioned that a machine has a number of control axes. These control axes can be divided into linear axes which control linear movement and rotary axes which control rotary movement. The feedrate is designed to assign the displacement speed of these axes, and the effect exerted on the tool movement speed which poses problems during cutting differs according to when control is exercised over the linear axes or when it is exercised over the rotary axes.

The displacement amount for each axis is assigned separately for each axis by a value corresponding to the respective axis. The feedrate is not assigned for each axis but assigned as a single value. Therefore, when two or more axes are to be controlled simultaneously, it is necessary to understand how this will work for each of the axes involved.


The assignment of the feedrate is described with the following related items.



When controlling linear axes


Even when only one machine axis is to be controlled or there are two or more axes to be controlled simultaneously, the feed rate which is assigned by the F code functions as a linear speed in the tool advance direction.

(Example) When the feedrate is designated as "f" and linear axes (X and Y) are to be controlled.

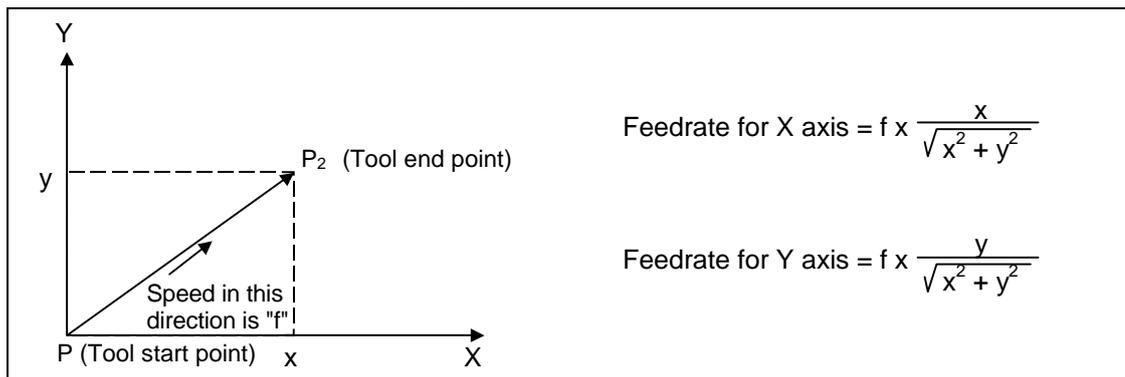

When only linear axes are to be controlled, it is sufficient to designate the cutting feed in the program. The feedrate for each axis is such that the designated rate is broken down into the components corresponding to the movement amounts.

(Note) When the circular interpolation function is used and the tool is moved along the circumference of an arc by the linear control axis, the rate in the tool advance direction, or in other words the tangential direction, will be the feedrate designated in the program.

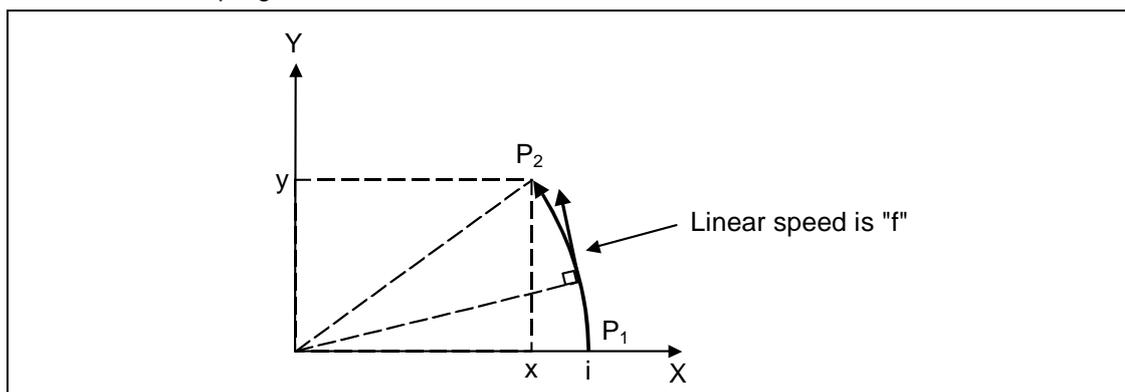

7. Feed Functions

7.5 Feedrate designation and effects on control axes

(Example) When the feedrate is designated as "f" and the linear axes (X and Y) are to be controlled using the circular interpolation function. In this case, the feed rate of the X and Z axes will change along with the tool movement. However, the combined speed will always be maintained at the constant value "f".




When controlling rotary axes

When rotary axes are to be controlled, the designated feedrate functions as the rotary speed of the rotary axes or, in other words, as an angular speed.

Consequently, the cutting feed in the tool advance direction, or in other words the linear speed, varies according to the distance between the center of rotation and the tool. This distance must be borne in mind when designating the feedrate in the program.

(Example) When the feedrate is designated as "f" and rotary axis (CA) is to be controlled ("f" units = °/min)

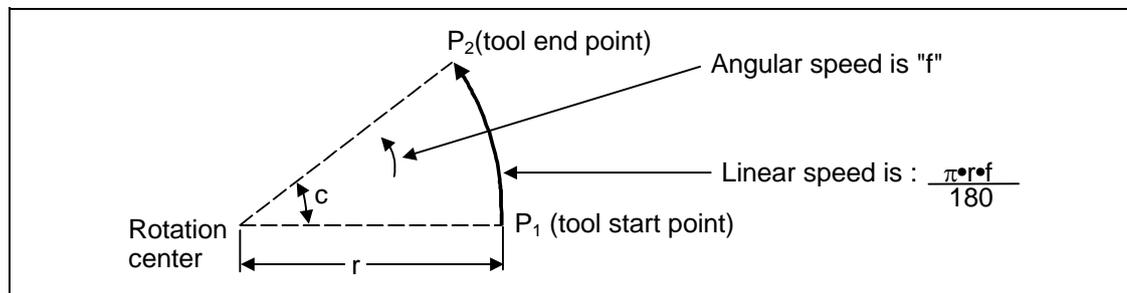

In this case, in order to make the cutting feed (linear feed) in the tool advance direction "fc" :

$$fc = f \times \frac{\pi \cdot r}{180}$$

Therefore, the feedrate to be designated in the program must be :

$$f = fc \times \frac{180}{\pi \cdot r}$$




When linear and rotary axes are to be controlled at the same time

The controller proceeds in exactly the same way whether linear or rotary axes are to be controlled. When a rotary axis is to be controlled, the numerical value assigned by the coordinate word (A, B, C) is the angle and the numerical values assigned by the feedrate (F) are all handled as linear speeds. In other words, 1° of the rotary axis is treated as being equivalent to 1mm of the linear axis. Consequently, when both linear and rotary axes are to be controlled simultaneously, the components for each axis of the numerical values assigned by F will be the same as previously described "When controlling linear axes". However, although in this case both the size and direction of the speed components based on linear axis control do not vary, the direction of the speed components based on rotary axis control will change along with the tool movement (their size will not change). This means, as a result, that the combined tool advance direction feedrate will vary along with the tool movement.

7. Feed Functions

7.5 Feedrate designation and effects on control axes

(Example) When the feed rate is designated as "f" and Linear (X) and rotary © axes are to be controlled simultaneously.
In the X-axis incremental command value is "x" and the C-axis incremental command values is "c":

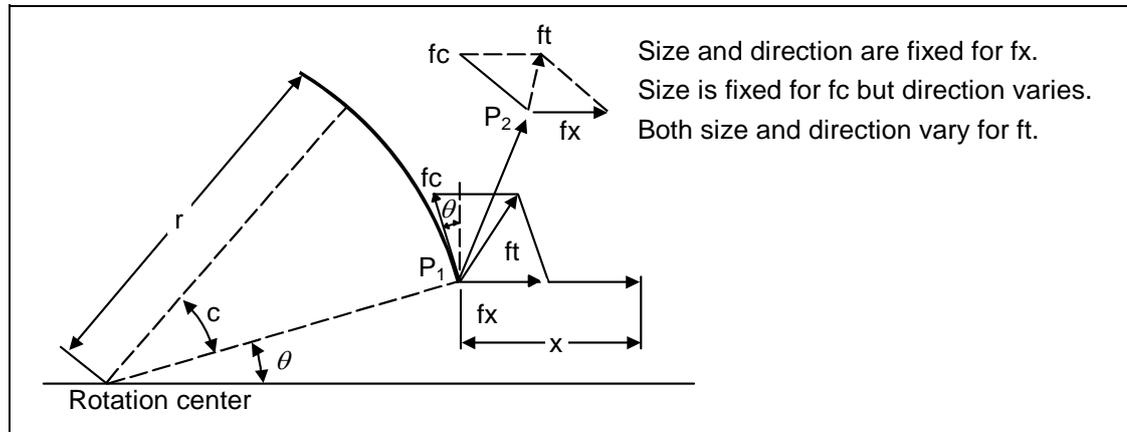

X-axis feedrate (linear speed) "fx" and C-axis feedrate (angular speed) "ω" are expressed as:

$$fx = f \times \frac{x}{\sqrt{x^2 + c^2}} \dots\dots\dots (1)$$

$$\omega = f \times \frac{c}{\sqrt{x^2 + c^2}} \dots\dots\dots (2)$$

Linear speed "fc" based on C-axis control is expressed as:

$$fc = \omega \times \frac{\pi \times r}{180} \dots\dots\dots (3)$$

If the speed in the tool advance direction at start point P1 is "ft" and the component speeds in the X-axis and Y-axis directions are "ftx" and "fty", respectively, then these can be expressed as:

$$ftx = -r \sin \left(\frac{\pi}{180} \theta \right) \times \frac{\pi}{180} \omega + fx \dots\dots\dots (4)$$

$$fty = -r \cos \left(\frac{\pi}{180} \theta \right) \times \frac{\pi}{180} \omega \dots\dots\dots (5)$$

Where r is the distance between center of rotation and tool (in mm units), and θ is the angle between the P1 point and the X axis at the center of rotation (in units °).

The combined speed "ft" according to (1), (2), (3), (4) and (5) is:

$$ft = \sqrt{ftx^2 + fty^2}$$

$$= f \times \frac{\sqrt{x^2 - x \cdot c \cdot r \sin \left(\frac{\pi}{180} \theta \right) \frac{\pi}{90} + \left(\frac{\pi \cdot r \cdot c}{180} \right)^2}}{\sqrt{x^2 + c^2}} \dots\dots\dots (6)$$


Consequently, feedrate "f" designated by the program must be as follows:

$$f = ft \times \frac{\sqrt{x^2 + c^2}}{\sqrt{x^2 - x \cdot c \cdot r \sin \left(\frac{\pi}{180} \theta \right) \frac{\pi}{90} + \left(\frac{\pi \cdot r \cdot c}{180} \right)^2}} \dots\dots\dots (7)$$

"ft" in formula (6) is the speed at the P1 point and the value of θ changes as the C axis rotates, which means that the value of "ft" will also change.

Consequently, in order to keep the cutting feed "ft" as constant as possible the angle of rotation which is designated in one block must be reduced to as low as possible and the extent of the change in the θ value must be minimized.

7.6 Exact stop check; G09

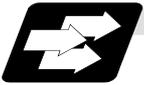

Function and purpose

In order to prevent roundness during corner cutting and machine shock when the tool feedrate changes suddenly, there are times when it is desirable to start the commands in the following block once the in-position state after the machine has decelerated and stopped or the elapsing of the deceleration check time has been checked. The exact stop check function is designed to accomplish this purpose.

Either the deceleration check time or in-position state is selected with parameter "#1193 inpos". In-position check is valid when "#1193 inpos" is set to 1.

The in-position width is set with parameter "#2224 sv024" on the servo parameter screen by the machine manufacturer.



Command format


G09 ;

The exact stop check command G09 has an effect only with the cutting command (G01 - G03) in its particular block.



Example of program


N001 G09 G01 X100.000 F150 ;	The following block is started once the deceleration check time or in-position state has been checked after the machine has decelerated and stopped.
N002 Y100.000 ;	

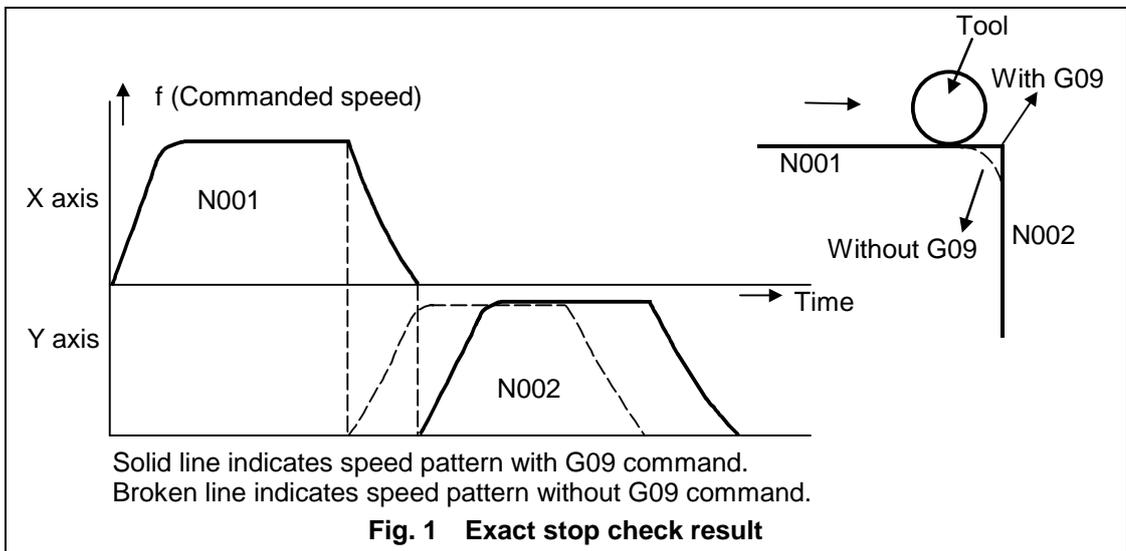




Detailed description

(1) With continuous cutting feed

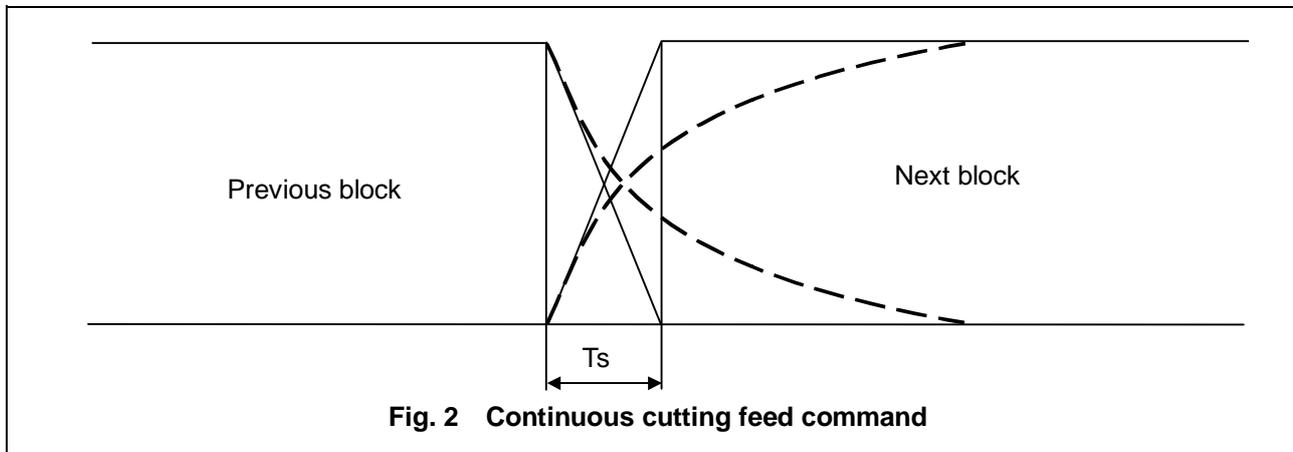

(2) With cutting feed in-position check

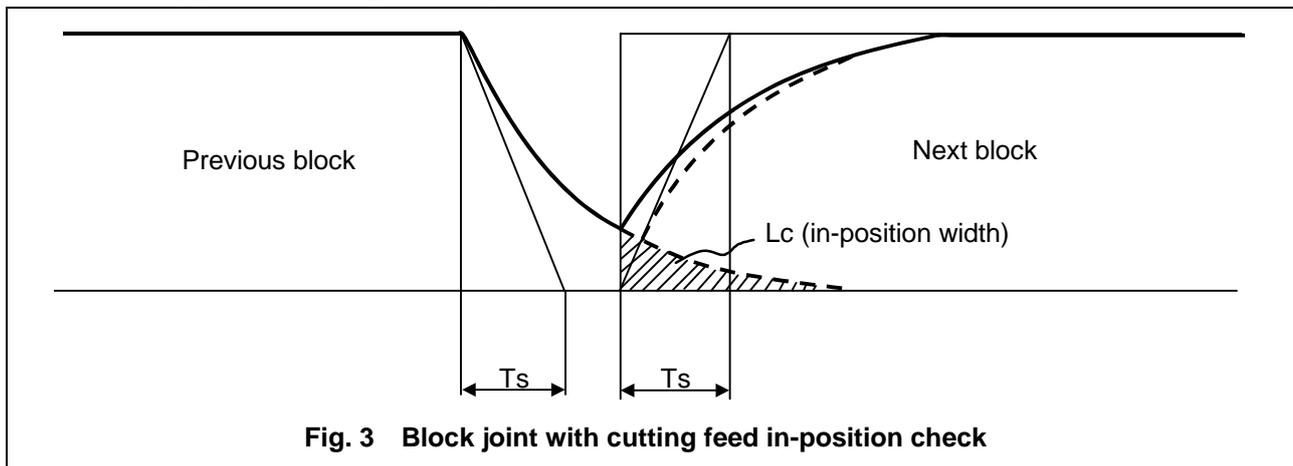


In Figs. 2 and 3:

T_s = Cutting feed acceleration/deceleration time constant
 L_c = In-position width

As shown in Fig. 3, the in-position width " L_c " can be set into the servo parameter "#2224 SV024" as the remaining distance (shaded area in Fig. 3) of the previous block when the next block is started.

The setting unit for the servo parameter "#2224 SV024" is 0.0005mm or 0.00005inch.


The in-position width is designed to reduce the roundness at the workpiece corners to below the constant value.

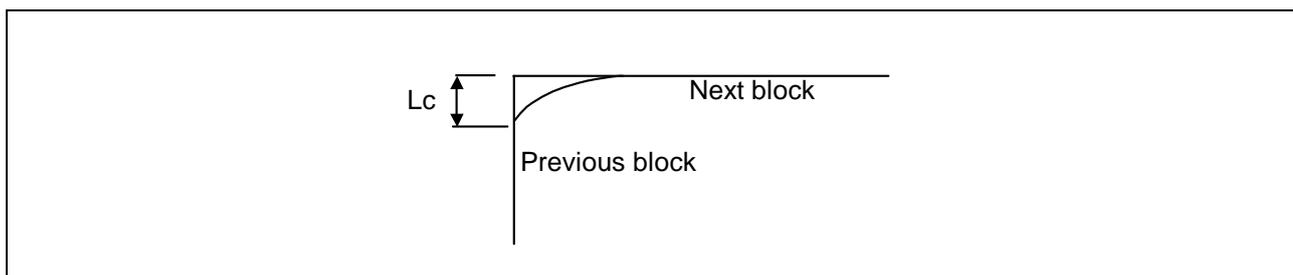


To eliminate corner roundness, set the servo parameter "#2224 SV024" to zero and perform an in-position check or assign the dwell command (G04) between blocks.

(3) With deceleration check


(a) With linear acceleration/deceleration

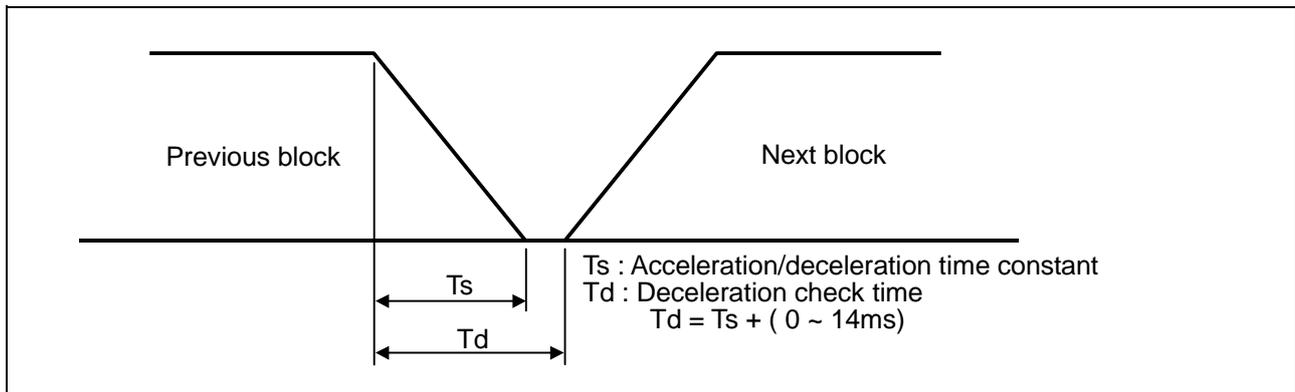

(b) With exponential acceleration/deceleration

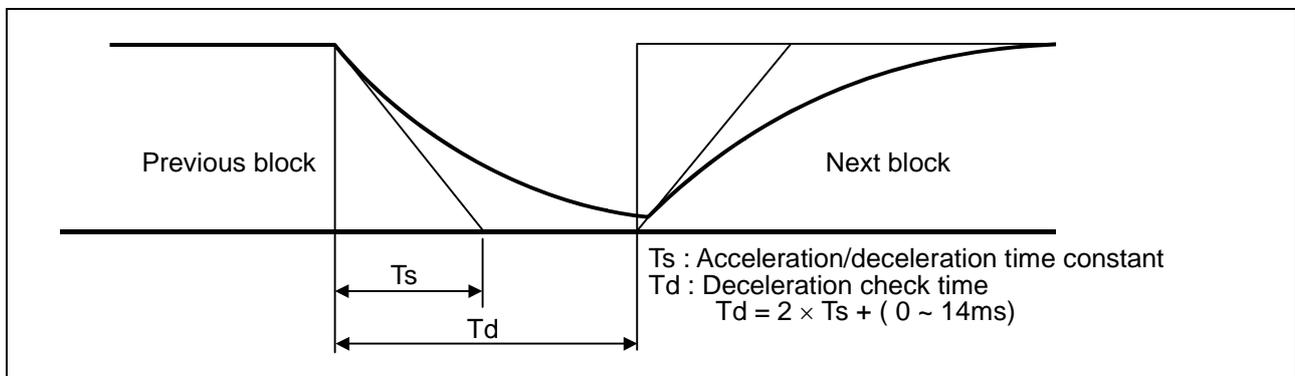

(c) With exponential acceleration/linear deceleration

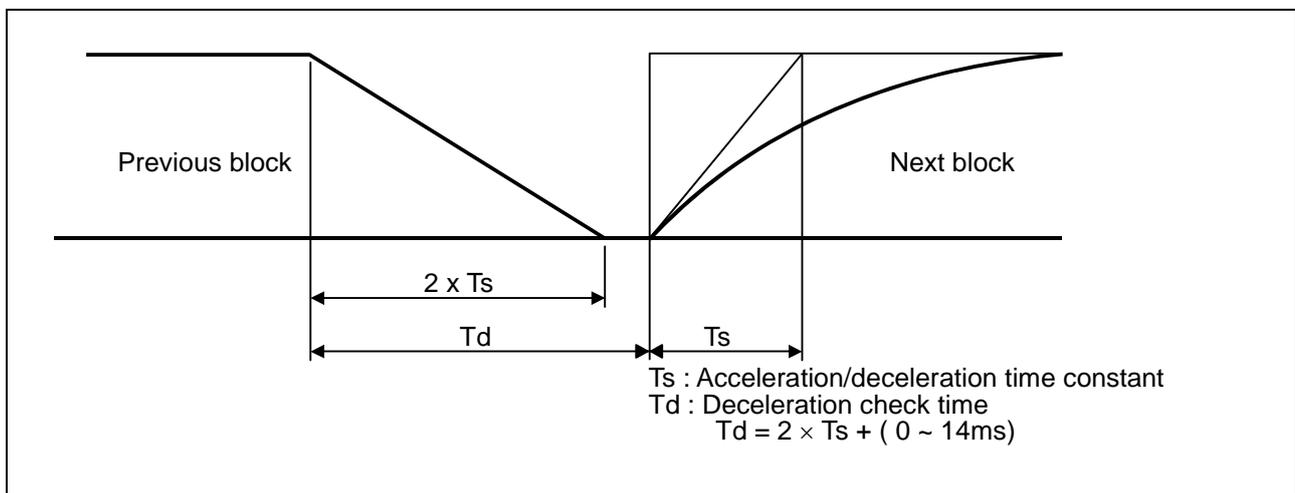

The time required for the deceleration check during cutting feed is the longest among the cutting feed deceleration check times of each axis determined by the cutting feed acceleration/deceleration time constants and by the cutting feed acceleration/deceleration mode of the axes commanded simultaneously.

(Note 1) To execute exact stop check in a fixed cycle cutting block, insert command G09 into the fixed cycle subprogram.

7.7 Exact stop check mode ; G61



Function and purpose

Whereas the G09 exact stop check command checks the in-position status only for the block in which the command has been assigned, the G61 command functions as a modal. This means that deceleration will apply at the end points of each block to all the cutting commands (G01 to G03) subsequent to G61 and that the in-position status will be checked. G61 is released by high-accuracy control (G61.1), automatic corner override (G62), tapping mode (G63), or cutting mode (G64).



Command format

G61 ;

In-position check is executed in the G61 block, and thereafter, the in-position check is executed at the end of the cutting command block is executed until the check mode is canceled.

7.8 Deceleration check



Function and purpose

The deceleration check is a function that determines the method of the check at the completion of the axis movement block's movement.


The deceleration check includes the in-position check and commanded speed check method.

The G0 and G1 deceleration check method combination can be selected.

(Refer to section "Deceleration check combination".)

With this function, the deceleration check in the reverse direction of G1 → G0 or G1 → G1 can be changed by changing the parameter setting.

(1) Types of deceleration check

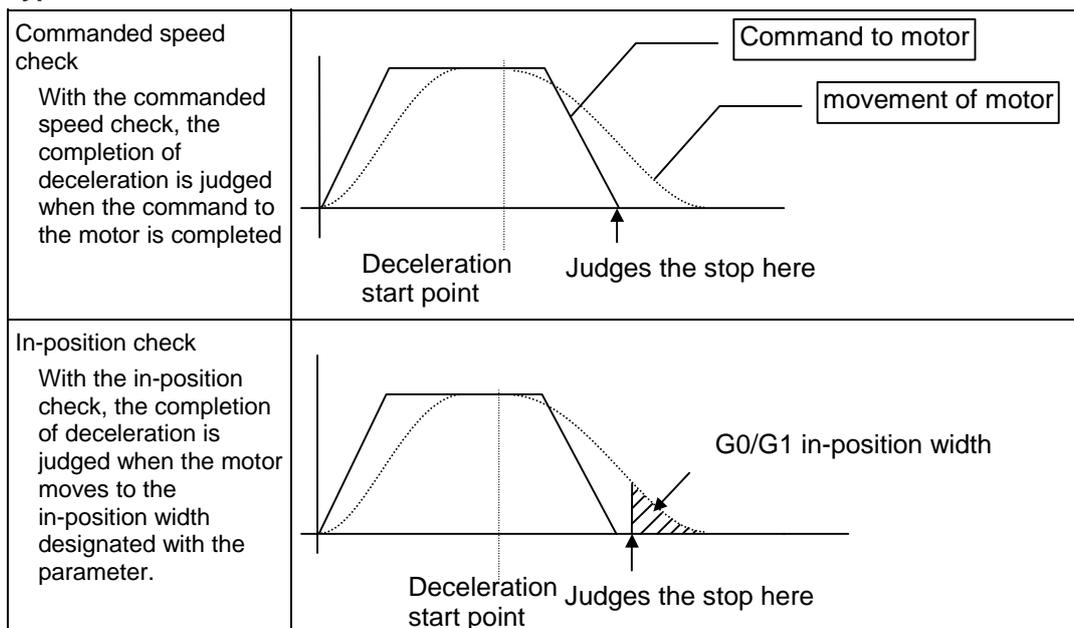

(2) Designating deceleration check

The deceleration check by designating a parameter includes "deceleration check specification type 1" and "deceleration check specification type 2". The setting is selected with the parameter "#1306 InpsTyp".

(a) Deceleration check specification type 1 ("#1306 InpsTyp" = 0)

The G0 and G1 deceleration check method can be selected with the base specification parameter deceleration check method 1 (#1193 inpos) and "deceleration check method 2" (#1223 aux07/bit1).

Parameter	Rapid traverse command	Parameter	Other than rapid traverse command (G1 : other than G0 command)	
Inpos (#1193)	G0→XX (G0+G9→XX)	AUX07/BIT-1 (#1223/BIT-1)	G1+G9→XX	G0→XX
0	Command deceleration check	0	Command deceleration check	No deceleration check
1	In-position check	1	In-position check	

(Note 1) XX expresses all commands.

(Note 2) "#1223 aux07" is the system common parameter.

(b) Deceleration check specification type 2 ("#1306 InpsTyp" = 1)


Rapid traverse and cutting in-position are designated with the "inpos" parameter.

Parameter	Command block		
#1193 Inpos	G0	G1+G9	G1
0	Command deceleration check	Command deceleration check	No deceleration check
1	In-position check	In-position check	No deceleration check

(Note 1) "#1193 inpos" is the parameter per system.





(Note 2) "G0" means the rapid traverse, and "G1" means the cutting feed.

7.8.1 G1 → G0 deceleration check

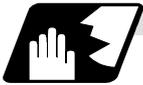

Detailed description

- (1) In G1 → G0 continuous blocks, the parameter "#1502 G0lpfg" can be changed to change the deceleration check in the reverse direction.

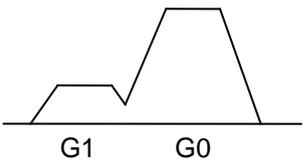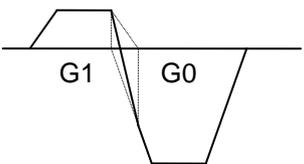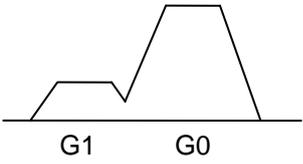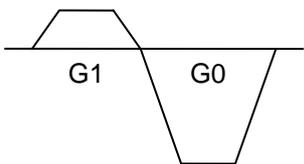	Same direction	Reverse direction
G0lpfg: 0		
G0lpfg: 1		



Example of program

When there is a deceleration check in the movement of several axes:

- | | |
|---|--|
| (1) G91 G1 X100. Y100. F4000 ;
G0 X-100. Y120. ; | A deceleration check is carried out, because the X axis moves in the reverse direction in the program above. |
| (2) G91 G1 X100. Y-100. F4000 ;
G0 X80. Y100. ; | A deceleration check is carried out, because the Y axis moves in the reverse direction in the program above. |
| (3) G90 G1 X100. Y100. F4000 ;
G0 X80. Y120. ; | A deceleration check is carried out, because the X axis moves in the reverse direction in the program above.
(When the program start position is X0 Y0) |
| (4) G91 G1 X100. Y100. F4000 ;
G0 X100. Y100. ; | A deceleration check is not carried out, because both the X axis and the Y axis move in the same direction in the program above. |
| (5) G91 G1 X100. Y80. F4000 ;
G0 X80. ; | A deceleration check is not carried out, because the X axis moves in the same direction, and there is no Y axis movement command in the program above. |

7.8.2 G1 → G1 deceleration check



Detailed description

- (1) In G1 → G1 continuous blocks, the parameter "#1503 G1lpfg" can be changed to change the deceleration check of the reverse direction.

	Same direction	Reverse direction
G1lpfg: 0		
G1lpfg: 1		



Example of program

When there is a deceleration check in the movement of several axes:

- | | |
|---|--|
| (1) G91 G1 X100. Y100. F4000 ;
G1 X-100. Y120. ; | A deceleration check is carried out, because the X axis moves in the reverse direction in the program above. |
| (2) G91 G1 X100. Y-100. F4000 ;
G1 X80. Y100. ; | A deceleration check is carried out, because the Y axis moves in the reverse direction in the program above. |
| (3) G90 G1 X100. Y100. F4000 ;
G1 X80. Y120. ; | A deceleration check is carried out, because the X axis moves in the reverse direction in the program above.
(When the program start position is X0 Y0) |
| (4) G91 G1 X100. Y100. F4000 ;
G1 X100. Y100. ; | A deceleration check is not carried out, because both the X axis and the Y axis move in the same direction in the program above. |
| (5) G91 G1 X100. Y80. F4000 ;
G1 X80. ; | A deceleration check is not carried out, because the X axis moves in the same direction, and there is no Y axis movement command in the program above. |

7.9 Automatic corner override ; G62



Function and purpose

With tool radius compensation, this function reduces the load during inside cutting of automatic corner R, or during inside corner cutting, by automatically applying override to the feed rate. Automatic corner override is valid until the tool radius compensation cancel (G40), exact stop mode (G61), high-accuracy control mode (G61.1), tapping mode (G63), or cutting mode (G64) command is issued.



Command format


G62 ;



Machining inside corners

When cutting an inside corner as in Fig. 1, the machining allowance amount increases and a greater load is applied to the tool. To remedy this, override is applied automatically within the corner set range, the feedrate is reduced, the increase in the load is reduced and cutting is performed effectively.

However, this function is valid only when finished shapes are programmed.

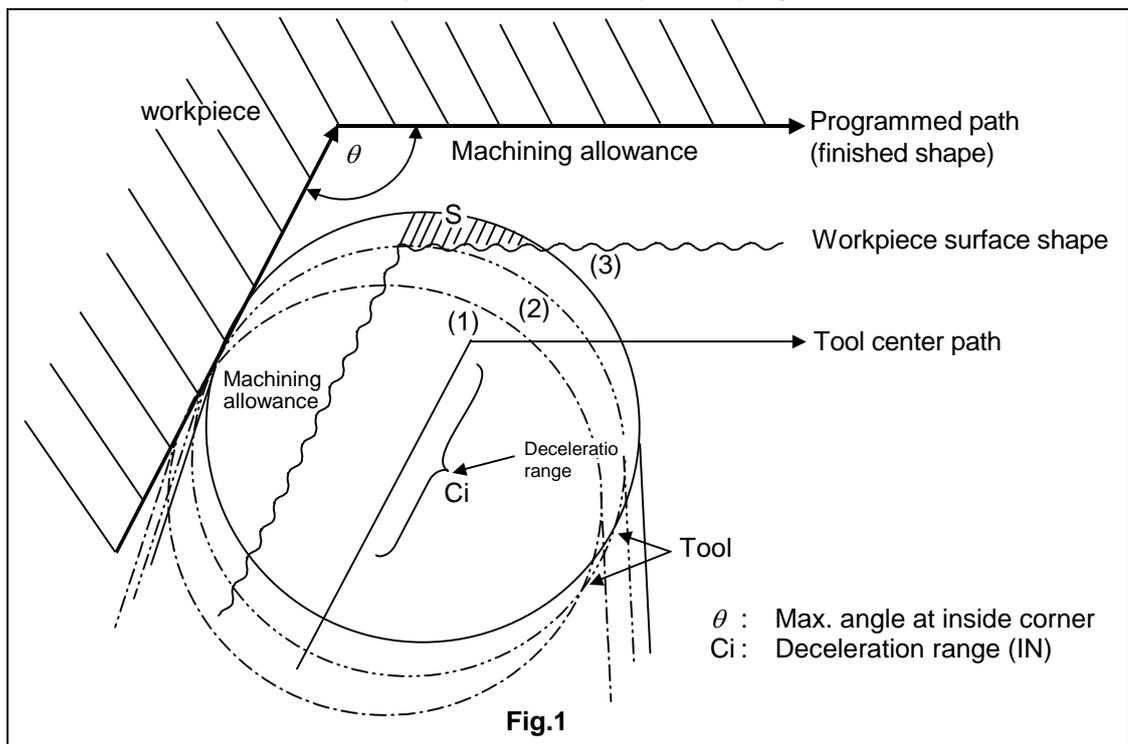

(1) Operation



- (a) When automatic corner override is not to be applied :
When the tool moves in the order of (1) → (2) → (3) in Fig. 1, the machining allowance at (3) increases by an amount equivalent to the area of shaded section S and so the tool load increases.
- (b) When automatic corner override is to be applied :
When the inside corner angle θ in Fig. 1 is less than the angle set in the parameter, the override set into the parameter is automatically applied in the deceleration range C_i .

(2) Parameter setting


The following parameters are set into the machining parameters :

#	Parameter	Setting range
#8007	OVERRIDE	0 to 100%
#8008	MAX ANGLE	0 to 180°
#8009	DSC. ZONE	0 to 99999.999mm or 0 to 3937.000 inches

Refer to the Operation Manual for details on the setting method.

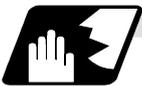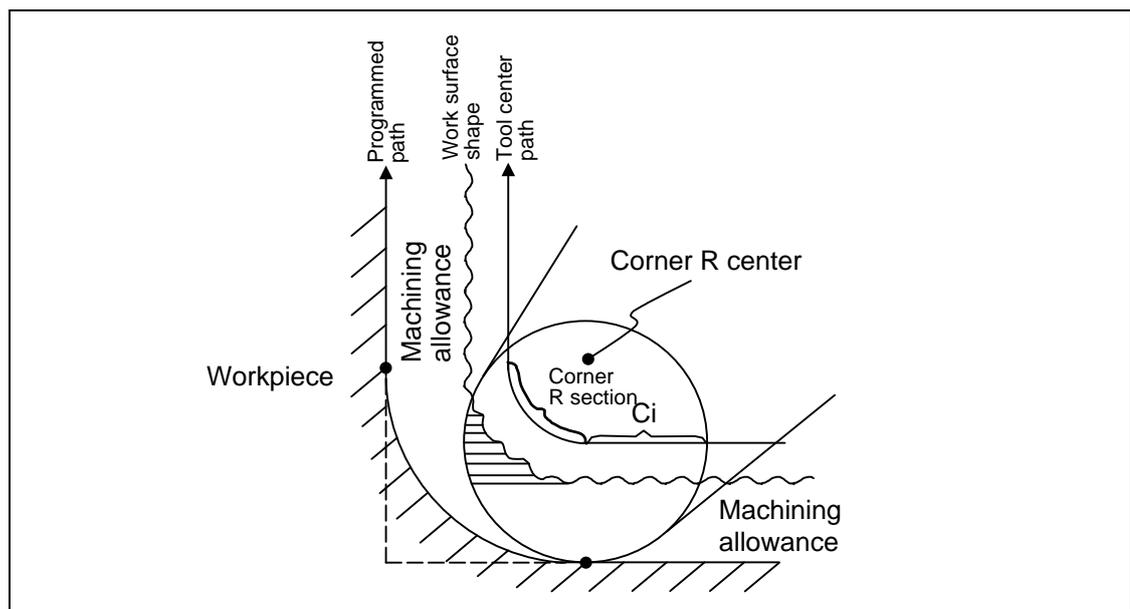
**Automatic corner R**

- (1) The override set in the parameter is automatically applied at the deceleration range C_i and corner R section for inside offset with automatic corner R. (There is no angle check.)

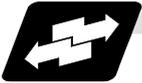


Application example

(1) Line – line corner

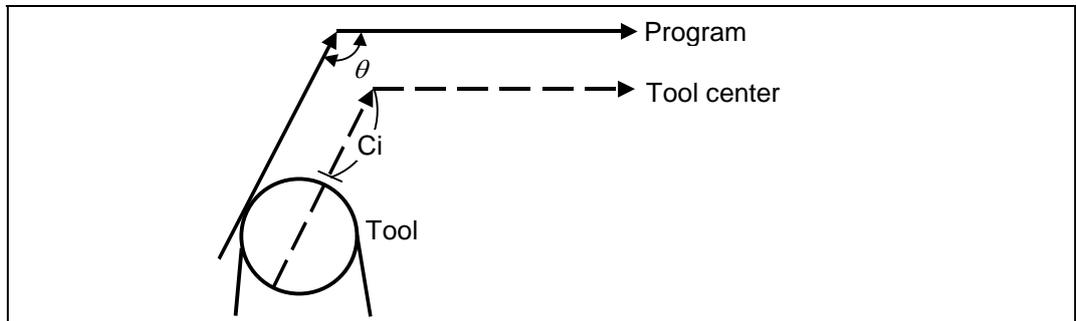


The override set in the parameter is applied at Ci.

(2) Line – arc (outside) corner

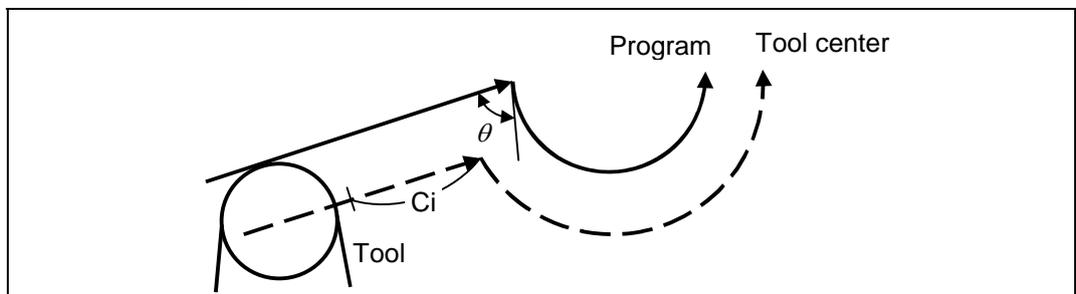

The override set in the parameter is applied at Ci.


(3) Arc (inside offset) – line corner

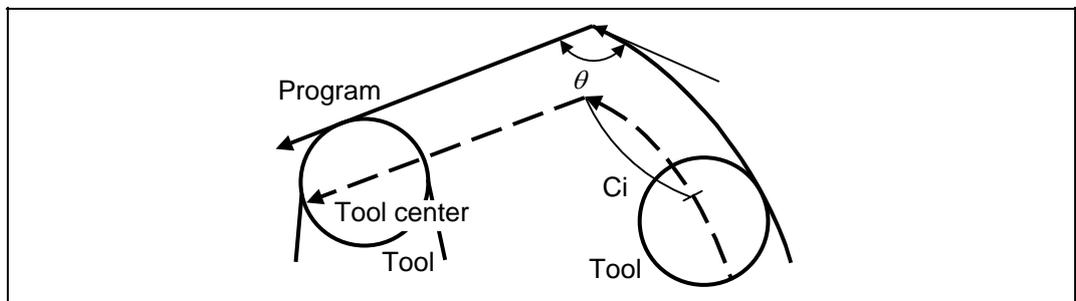

The override set in the parameter is applied at Ci.

(Note) The deceleration range Ci where the override is applied is the length of the arc with an arc command.

(4) Arc (inside offset) – arc (outside offset) corner

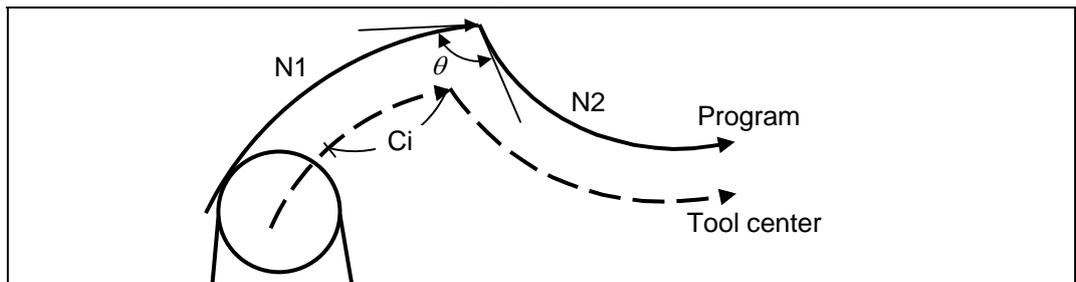

The override set in the parameter is applied at Ci.




Relation with other functions

Function	Override at corner
Cutting feed override	Automatic corner override is applied after cutting feed override has been applied.
Override cancel	Automatic corner override is not canceled by override cancel.
Speed clamp	Valid after automatic corner override
Dry run	Automatic corner override is invalid.
Synchronous feed	Automatic corner override is applied to the synchronous feedrate.
Thread cutting	Automatic corner override is invalid.
G31 skip	Program error results with G31 command during tool radius compensation.
Machine lock	Valid
Machine lock high speed	Automatic corner override is invalid.
G00	Invalid
G01	Valid
G02, G03	Valid




Precautions

- (1) Automatic corner override is valid only in the G01, G02, and G03 modes; it is not effective in the G00 mode. When switching from the G00 mode to the G01 (or G02 or G03) mode at a corner (or vice versa), automatic corner override will not be applied at that corner in the G00 block.
- (2) Even if the automatic corner override mode is entered, the automatic corner override will not be applied until the tool diameter compensation mode is entered.
- (3) Automatic corner override will not be applied on a corner where the tool diameter compensation is started or canceled.

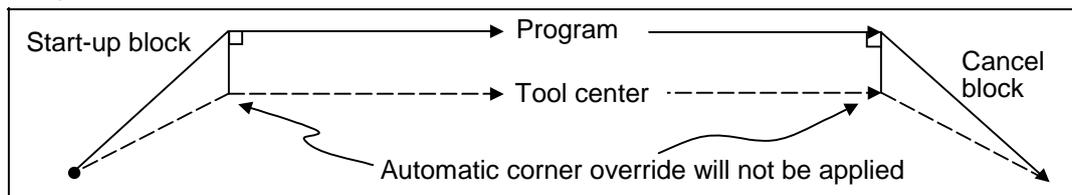


- (4) Automatic corner override will not be applied on a corner where the tool diameter compensation I, K vector command is issued.

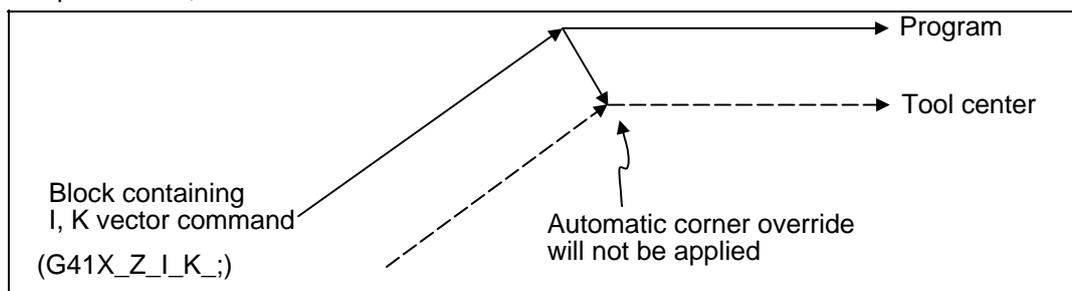

- (5) Automatic corner override will not be applied when intersection calculation cannot be executed.
Intersection calculation cannot be executed in the following case.
 - (a) When the movement command block does not continue for four or more times.
- (6) The deceleration range with an arc command is the length of the arc.
- (7) The inside corner angle, as set by parameter, is the angle on the programmed path.
- (8) Automatic corner override will not be applied when the maximum angle in the parameter is set to 0 or 180.
- (9) Automatic corner override will not be applied when the override in the parameter is set to 0 or 100.

7.10 Tapping mode ; G63

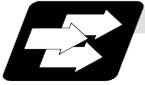

Function and purpose

The G63 command allows the control mode best suited for tapping to be entered, as indicated below :

- 1) Cutting override is fixed at 100%.
- 2) Deceleration commands at joints between blocks are invalid.
- 3) Feed hold is invalid.
- 4) Single block is invalid.
- 5) In-tapping mode signal is output.

G63 is released by the exact stop mode (G61), high-accuracy control mode (G61.1), automatic corner override (G62), or cutting mode (G64).



Command format

G63 ;

7.11 Cutting mode ; G64



Function and purpose

The G64 command allows the cutting mode in which smooth cutting surfaces are obtained to be established. Unlike the exact stop check mode (G61), the next block is executed continuously with the machine not decelerating and stopping between cutting feed blocks in this mode.

G64 is released by the exact stop mode (G61), high-accuracy control mode (G61.1), automatic corner override (G62), or tapping mode (G63).

This cutting mode is established in the initialized status.



Command format

G64 ;

8. Dwell

The G04 command can delay the start of the next block.

8.1 Per-second dwell ; G04



Function and purpose

The machine movement is temporarily stopped by the program command to make the waiting time state. Therefore, the start of the next block can be delayed. The waiting time state can be canceled by inputting the skip signal.



Command format

G04 X_ ; or G04 P_ ;
 X, P.....Dwell time

The input command unit for the dwell time depends on the parameter.




Detailed description

- (1) When designating the dwell time with X, the decimal point command is valid.
- (2) When designating the dwell time with P, the availability of the decimal point command can be selected with the parameter (#8112). When the decimal point command is invalid in the parameter setting, the command below the decimal point issued with P is ignored.
- (3) When the decimal point command is valid or invalid, the dwell time command range is as follows.

Command range when the decimal point command is valid	Command range when the decimal point command is invalid
0.001 ~ 99999.999 (s)	1 ~ 99999999 (ms)

- (4) The dwell time setting unit applied when there is no decimal point can be made 1s by setting 1 in the parameter #1078 Decpt2. This is effect only for X and P for which the decimal command is valid.
- (5) When a cutting command is in the previous block, the dwell command starts calculating the dwell time after the machine has decelerated and stopped. When it is commanded in the same block as an M, S, T or B command, the calculation starts simultaneously.
- (6) The dwell is valid during the interlock.
- (7) The dwell is valid even for the machine lock.
- (8) The dwell can be canceled by setting the parameter #1173 dwlskp beforehand. If the set skip signal is input during the dwell time, the remaining time is discarded, and the following block will be executed.

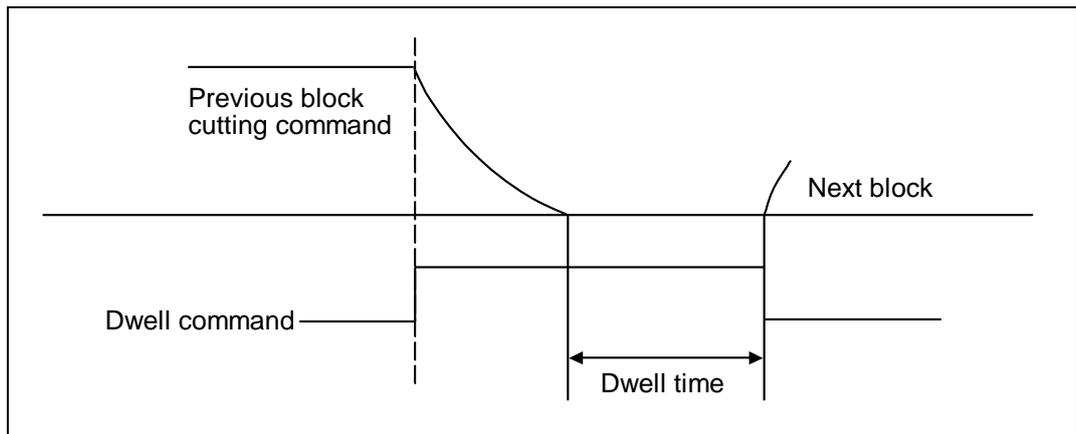

Example of program

Command	Dwell time [sec]			
	#1078 Decpt2 = 0		#1078 Decpt2 = 1	
	DECIMAL PNT-N	DECIMAL PNT-P	DECIMAL PNT-N	DECIMAL PNT-P
G04 X500 ;	0.5		500	
G04 X5000 ;	5		5000	
G04 X5. ;	5		5	
G04 X#100 ;	1000		1000	
G04 P5000 ;	5		5	5000
G04 P12.345 ;	0.012	12.345	0.012	12.345
G04 P#100 ;	1	1000	1	1000

(Note 1) The above examples are the results under the following conditions.

- Input setting unit 0.001mm or 0.0001inch
- #100 = 1000 ;

(Note 2) "DECIMAL PNT-P" is a control parameter (#8112).

(Note 3) If the input setting unit is 0.0001inch, the X before G04 will be multiplied by 10. For example for "X5. G04 ;", the dwell time will be 50 sec.



Precautions and restrictions


- (1) When using this function, command X after G04 in order to make sure that the dwell is based on X.

9. Miscellaneous Functions

9.1 Miscellaneous functions (M8-digits BCD)

9. Miscellaneous Functions

9.1 Miscellaneous functions (M8-digits BCD)

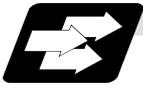

Function and purpose

The miscellaneous (M) functions are also known as auxiliary functions, and they include such numerically controlled machine functions as spindle forward and reverse rotation, operation stop and coolant ON/OFF.

These functions are designated by an 8-digit number (0 to 99999999) following the address M with this controller, and up to 4 groups can be commanded in a single block.

(Example) G00 Xx Mm1 Mm2 Mm3 Mm4 ;

When five or more commands are issued, only the last four will be valid.

The output signal is an 8-digit BCD code and start signal.

The eight commands of M00, M01, M02, M30, M96, M97, M98 and M99 are used as auxiliary commands for specific objectives and so they cannot be used as general auxiliary commands. This therefore leaves 94 miscellaneous functions which are usable as such commands. Reference should be made to the instructions issued by the machine manufacturer for the actual correspondence between the functions and numerical values.

When the M00, M01, M02, and M30 functions are used, the next block is not read into the pre-read buffer due to pre-read inhibiting.

If the M function is designated in the same block as a movement command, the commands may be executed in either of the following two orders. Which of these sequences actually applies depends on the machine specifications.

(1) The M function is executed after the movement command.

(2) The M function is executed at the same time as the movement command.

Processing and completion sequences are required in each case for all M commands except M96, M97, M98 and M99.

The 8M functions used for specific purposes will now be described.



Program stop : M00

When the tape reader has read this function, it stops reading the next block. As far as the NC system's functions are concerned, only the tape reading is stopped. Whether such machine functions as the spindle rotation and coolant supply are stopped or not differs according to the machine in question.

Re-start is enabled by pressing the automatic start button on the machine operation board.

Whether resetting can be initiated by M00 depends on the machine specifications.

9. Miscellaneous Functions

9.1 Miscellaneous functions (M8-digits BCD)



Optional stop : M01

If the tape reader reads the M01 command when the optional stop switch on the machine operation board is ON, it will stop and the same effect as with the M00 function will apply. If the optional stop switch is OFF, the M01 command is ignored.

(Example)

:	
N10 G00 X1000 ;	Optional stop switch status and operation Stops at N11 when switch is ON Next command (N12) is executed without stopping at N11 when switch is OFF
N11 M01 ;	
N12 G01 X2000 Z3000 F600 ;	
:	
:	



Program end : M02 or M30

This command is normally used in the final block for completing the machining, and so it is primarily used for tape rewinding. Whether the tape is actually rewound or not depends on the machine specifications.

Depending on the machine specifications, the system is reset by the M02 or M30 command upon completion of tape rewinding and any other commands issued in the same block.

(Although the contents of the command position display counter are not cleared by this reset action, the modal commands and compensation amounts are canceled.)

The next operation stops when the rewinding operation is completed (the in-automatic operation lamp goes off). To restart the unit, the automatic start button must be pressed or similar steps must be taken.

When the program is restarted after M02 and M30 are completed, if the first movement command is designated only with a coordinate word, the interpolation mode will function when the program ends. It is recommended that a G function always be designated for the movement command designated first.

(Note 1) Independent signals are also output respectively for the M00, M01, M02 and M30 commands and these outputs are each reset by pressing the reset key.

(Note 2) M02 or M30 can be assigned by manual data input (MDI). At this time, commands can be issued simultaneously with other commands just as with the tape.



Macro interrupt: M96, M97

M96 and M97 are M codes for user macro interrupt control.

The M code for user macro interrupt control is processed internally, and is not output externally. To use M96 and M97 as an auxiliary code, change the setting to another M code with the parameter (#1109 subs_M and #1110 M96_M, #1111 M97_M).



Subprogram call/completion : M98, M99

These commands are used as the return instructions from branch destination subprograms and branches to subprograms.

M98 and M99 are processed internally and so M code signals and strobe signals are not output.



Internal processing with M00/M01/M02/M30 commands

Internal processing suspends pre-reading when the M00, M01, M02 or M30 command has been read. Other tape rewinding operations and the initialization of modals by resetting differ according to the machine specifications.

9. Miscellaneous Functions

9.2 Secondary miscellaneous functions (B8-digits, A8 or C8-digits)

9.2 Secondary miscellaneous functions (B8-digits, A8 or C8-digits)



Function and purpose

These serve to assign the indexing table positioning and other such functions. In this controller, they are assigned by an 8-digit number from 0 to 99999999 following address A, B or C. The machine maker determines which codes correspond to which positions.

If the A, B or C function is designated in the same block as a movement command, the commands may be executed in either of the following two orders. The machine specifications determine which sequence applies.

- (1) The A, B or C function is executed after the movement command.
- (2) The A, B or C function is executed simultaneously with the movement command.


Processing and completion sequences are required for all secondary miscellaneous functions. The table below given the various address combinations. It is not possible to use an address which is the same for the axis name of an additional axis and secondary miscellaneous function.

Secondary miscellaneous function \ Additional axis name	A	B	C
A	×	○	○
B	○	×	○
C	○	○	×

(Note) When A has been assigned as the secondary miscellaneous function address, the following commands cannot be used.

- (1) Linear angle commands (.,A can be used.)
- (2) Geometric commands

9.3 Index table indexing

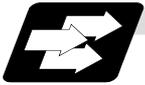

Function and purpose

Index table indexing can be carried out by setting the index axis. The indexing command only issues the indexing angle to the axis set for indexing. It is not necessary to command special M codes for table clamping and unclamping, thus simplifying the program.



Detailed description


The index table index function carries out operations as follows.

(Example) G00 B90 ;

↳ The axis that was designated as the index axis with parameter "#2076 index_x".

- (1) Set the "index_x" parameter (#2076) for the axis in which index table indexing will be carried out to "1".
- (2) The movement command (either absolute or incremental) for the selected axis is executed with the program command.
- (3) An unclamp process are carried out before the axis movement.
- (4) The commanded axis movement starts after the unclamp process completes.
- (5) The clamp process is carried out after the movement is completed.
- (6) The next block is processed after the unclamp process completes.

<Operation time chart>

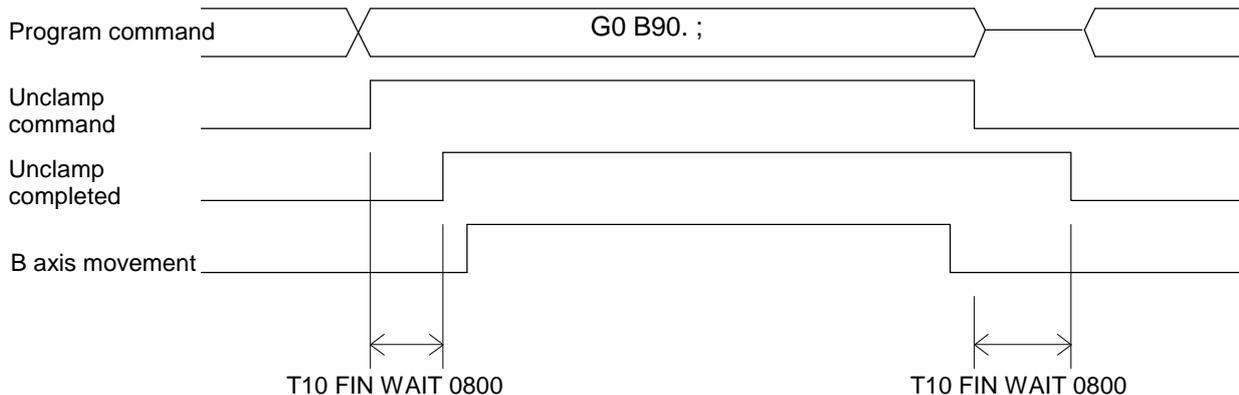




Precautions

- (1) Several axes can be set as index table indexing axes.
- (2) The movement speed of index table indexing axes follows the feedrate of the modal (G0/G1) at that time.
- (3) The unclamp process for the indexing axes is also issued when the index table indexing axes are commanded in the same block as other axes. Thus, the movement of other axes commanded in the same block is not carried out until the unclamp process completes.
Note that the movement of other axes commanded in the same block is carried out for non-interpolation commands.
- (4) Index table indexing axes are used as normal rotation axes, but this function performs an unclamp process even for linear axes.
- (5) If some error that makes unclamp command OFF occurs during indexing axis movement in automatic operation, the unclamp state will be remained, and the indexing axis will execute a deceleration stop.
Other axes commanded in the same block will also execute a deceleration stop, except for non-interpolation commands.
- (6) If the axis movement is interrupted by an interlock, etc., during indexing axis movement, the unclamp state will be remained.
- (7) The clamp and unclamp process are not executed when the movement commands of the index table indexing axis are continuous.
Note that the clamp and unclamp process are executed even when the movement commands are continued during single block operation.
- (8) Make sure that the command position is at a position where clamping is possible.

10. Spindle Functions

10.1 Spindle functions (S2-digits BCD) During standard PLC specifications

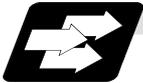

Function and purpose

The spindle functions are also known simply as S functions and they assign the spindle speed. In this controller, they are assigned with a 2-digit number following the address S ranging from 0 to 99, and 100 commands can be specified. Note that how many of these 100 types can be used, and which value corresponds to the actual rotation speed differs for each machine. Refer to the Instruction Manual issued by the machine maker for more details. When a number exceeding 2 digits is assigned, the last 2 digits will be valid.

If the S function is designated in the same block as a movement command, the commands may be executed in either of the following two orders. The machine specifications determine which sequence applies.

- (1) The S function is executed after the movement command.
- (2) The S function is executed simultaneously with the movement command.

Processing and completion sequences are required for all S commands from S00 through S99.

10.2 Spindle functions (S6-digits Analog)



Function and purpose

When the S6-digits function is added, a 6-digit value (0 to 999999) can be designated after the S code.

By assigning a 6-digit number following the S code, these functions enable the appropriate gear signals, voltages corresponding to the commanded spindle speed (r/min) and start signals to be output.

If the gear step is changed manually other than when the S command is being executed, the voltage will be obtained from the set speed at that gear step and the previously commanded speed, and then will be output.


The analog signal specifications are given below.

- (1) Output voltage..... 0 to 10V
- (2) Resolution $1/4096 (2^{-12})$
- (3) Load conditions..... $10k\Omega$
- (4) Output impedance..... 220Ω

If the parameters for up to 4 gear stages are set in advance, the gear stage corresponding to the S command will be selected and the gear signal will be output. The analog voltage is calculated in accordance with the input gear signal.

- (1) Parameters corresponding to individual gears Limit rotation speed, maximum rotation speed, shift rotation speed, tap rotation speed.
- (2) Parameters corresponding to all gears Minimum rotation speed, orientation rotation speed

10.3 Spindle functions (S8-digits)

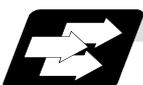


Function and purpose

These functions are assigned with an 8-digit (0 to 99999999) number following the address S, and one group can be assigned in one block.

The output signal is a 32-bit binary data with sign and start signal. Processing and completion sequences are required for all S commands.

10.4 Constant surface speed control; G96, G97

10.4.1 Constant surface speed control

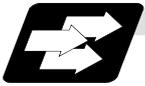

Function and purpose

These commands automatically control the spindle speed in line with the changes in the radius coordinate values as cutting proceeds in the diametrical direction, and they serve to keep the cutting point speed constant during the cutting.



Command format

G96 Ss Pp; Constant surface speed ON

Ss : Peripheral speed

Pp : Constant surface speed control axis

G97 ; Constant surface speed cancel



Detailed description

- (1) The constant surface speed control axis is set by parameter “#1181 G96_ax”.
 - 0 : Fixed at 1st axis (P command invalid)
 - 1 : 1st axis
 - 2 : 2nd axis
 - 3 : 3rd axis
- (2) When the above-mentioned parameter is not zero, the constant surface speed control axis can be assigned by address P.

(Example) With G96_ax (1)

Program	Constant surface speed control axis
G96 S100 ;	1st axis
G96 S100 P3 ;	3rd axis

- (3) Example of selection program and operation

<pre>G90 G96 G01 X50. Z100. S200 ; } G97 G01 X50. Z100. F300 S500 ; } M02 ;</pre>	<pre>} The spindle speed is controlled so that the peripheral speed is 200m/min. } } The spindle speed is controlled to 500r/min. } } The modal returns to the initial setting.</pre>
---	---



Precautions

Under the constant surface speed control (during G96 modal), if the axis targeted for the constant surface speed control moves toward the spindle center, the spindle rotation speed will increase and may exceed the allowable speed of the workpiece or chuck, etc. In this case, the workpiece, etc. may jump out during machining, which may result in breakage of tools or machine or may cause damage to the operators. Thus make sure to use this control while the "spindle speed clamp" is enabled. When the constant surface speed control is commanded, keep enough distance from the program zero point.

Example of program

(1) When the parameter "#1146 Sclamp" is set to "0"

G96 S200 ; ... The spindle speed is controlled so that the surface speed is 200m/min.

G92 S4000 Q200 ; ... The spindle speed is clamped up to 4000r/min and down to 200r/min.

M3 ; ... The rotation command to the spindle

(2) When the parameter "#1146 Sclamp" is set to "1"

G92 S4000 Q200 ; ... The spindle speed is clamped up to 4000r/min and down to 200r/min.

G96 S200 ; ... The spindle speed is controlled so that the surface speed is 200m/min.


M3 ; ... The rotation command to the spindle

(Note) For safety, issue the rotation command to the spindle after G92.

WARNING

Under the constant surface speed control (during G96 modal), if the axis targeted for the constant surface speed control moves toward the spindle center, the spindle rotation speed will increase and may exceed the allowable speed of the workpiece or chuck, etc. In this case, the workpiece, etc. may jump out during machining, which may result in breakage of tools or machine tool or may cause damage to the operators.

10.5 Spindle clamp speed setting; G92

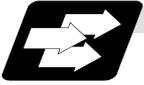

Function and purpose

The maximum clamp speed of the spindle can be assigned by address S following G92 and the minimum clamp speed by address Q.
Use this command when the spindle speed needs to be limited depending on the workpiece to be machined, the chuck to be mounted on the spindle and the tool specifications, etc.



Command format

G92 Ss Qq;

Ss : Maximum clamp speed

Qq : Minimum clamp speed



Detailed description

- (1) Besides this command, parameters can be used to set the rotation speed range up to 4 stages in 1 r/min units to accommodate gear selection between the spindle and spindle motor. The lowest upper limit and highest lower limit are valid among the rotation speed ranges based on the parameters and based on "G92 Ss Qq ;".
- (2) Set in the parameter (#1146 Sclamp, #1227 aux11/bit5) whether to carry out rotation speed clamp only in the constant surface speed mode or even when the constant surface speed is canceled.

(Note 1) G92S command and rotation speed clamp operation

		Sclamp = 0		Sclamp = 1	
		aux11/bit5 = 0	aux11/bit5 = 1	aux11/bit5 = 0	aux11/bit5 = 1
Command	In G96	ROTATION SPEED CLAMP COMMAND		ROTATION SPEED CLAMP COMMAND	
	In G97	SPINDLE ROTATION SPEED COMMAND		ROTATION SPEED CLAMP COMMAND	
Operation	In G96	ROTATION SPEED CLAMP EXECUTION		ROTATION SPEED CLAMP EXECUTION	
	In G97	NO ROTATION SPEED CLAMP		ROTATION SPEED CLAMP EXECUTION	NO ROTATION SPEED CLAMP

(Note 2) The address Q following the G92 command is handled as the spindle speed clamp speed regardless of the constant surface mode.

- (3) The command value of the spindle clamp speed will be cleared by modal reset (reset 2 or reset & rewind).
Note that the modal is retained if the parameter "#1210 RstGmd / bit19" is ON.
When the power is turned ON, the setting will be cleared to 0.




Precautions

- (1) Once the maximum clamp speed and the minimum clamp speed are set using the spindle clamp speed setting (G92 S__ Q__), the maximum speed clamp will not be cancelled even if the command "G92 S0" is issued. Even when G92 S0 is commanded, the value of Q__ is kept enabled and Q__ is greater than S0. Thus Q__ will be handled as the maximum clamp speed and S0 as the minimum clamp speed.
- (2) Note that if the spindle clamp speed setting (G92 S__ Q__) is not commanded, the speed may increase to the machine's maximum specified speed that is set by the parameter. Especially when the constant surface speed control (G96 S__) is commanded, command the spindle clamp speed setting as well as the spindle maximum rotation speed. As the tool moves closer to the spindle center, the spindle rotation speed will increase and may exceed the allowable speed of the workpiece or chuck etc.

WARNING


-  The spindle clamp speed setting command is a modal command, but you need to confirm that the G and F modal and coordinate values are appropriate if the operation is started from a block in the middle of the program. If there are coordinate system shift commands or M, S, T and B commands before the block set as the start position, carry out the required commands using the MDI, etc. If the program is run from the set block without carrying out these operations, the machine interference may occur or the machine may operate at an unexpected speed.

10.6 Spindle/C axis control

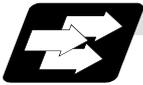

Function and purpose


This function enables one spindle (MDS-A/B-SP and later) to also be used as a C axis (rotation axis) by an external signal.

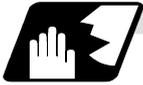


Detailed description

(1) Spindle/C axis changeover

Changeover between the spindle and C axis is done by the C axis SERVO ON signal.

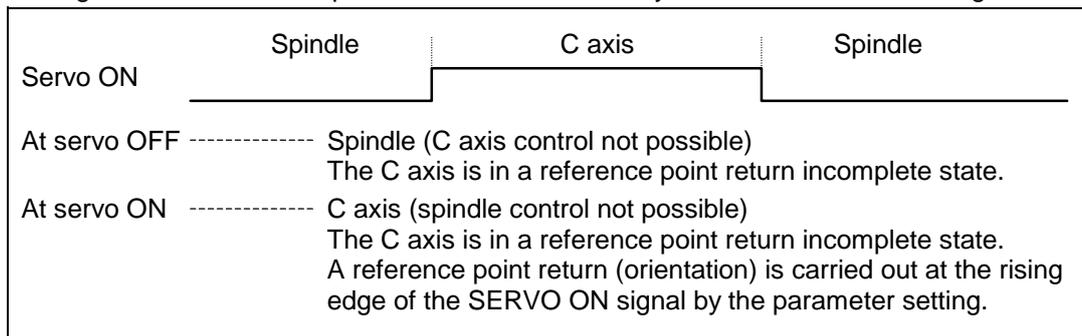

(2) Changeover timing chart example

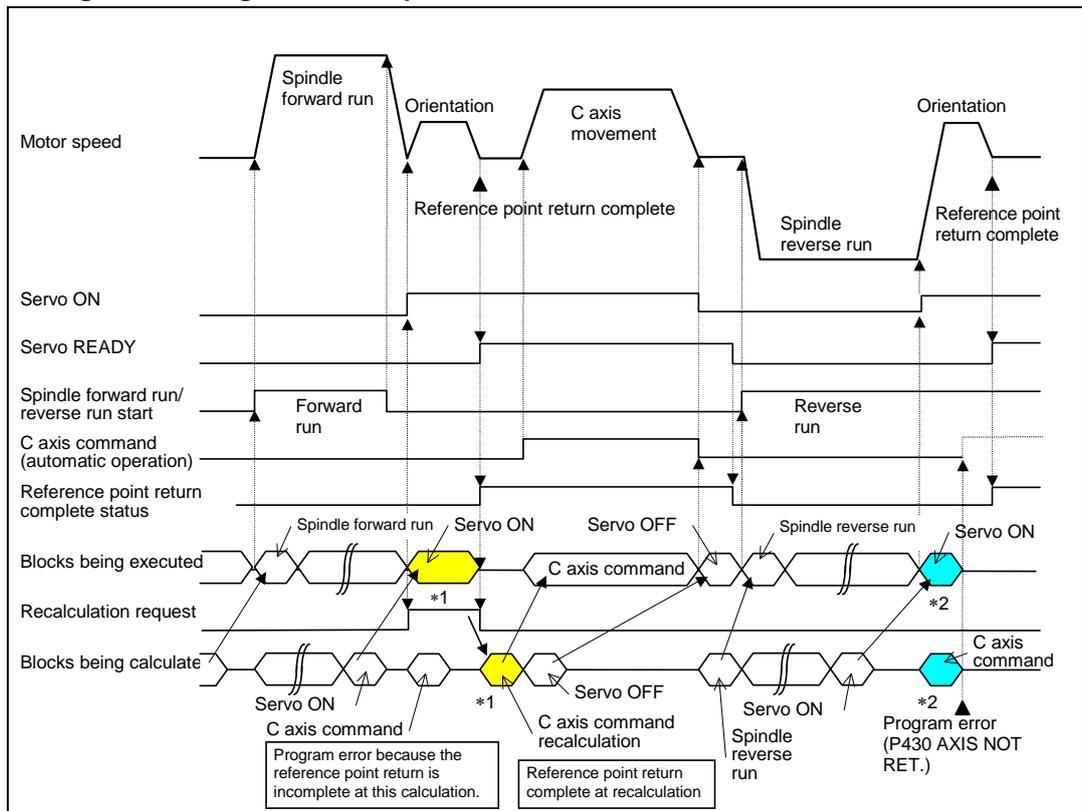


(Note) For axis commands, the reference point return complete is checked at calculation. Thus, when the C axis servo ON command and C axis command are continuous, the program error (P430) occur as shown above in *2.

In response to this kind of situation, the following two processes must be carried out on user PC, as shown above in *1.

- Input the recalculation request signal with a servo ON command.
- Wait for the completion of the servo ON command until the C axis enters a servo READY state.

(3) C axis gain

The C axis gain is changed over (the optimum gain is selected) by the C axis cutting condition. During C axis cutting feed, cutting gain is applied. During other axis' cutting feed (C axis face turning), non-cutting stop gain is applied. Non-cutting gain is applied in all other cases.

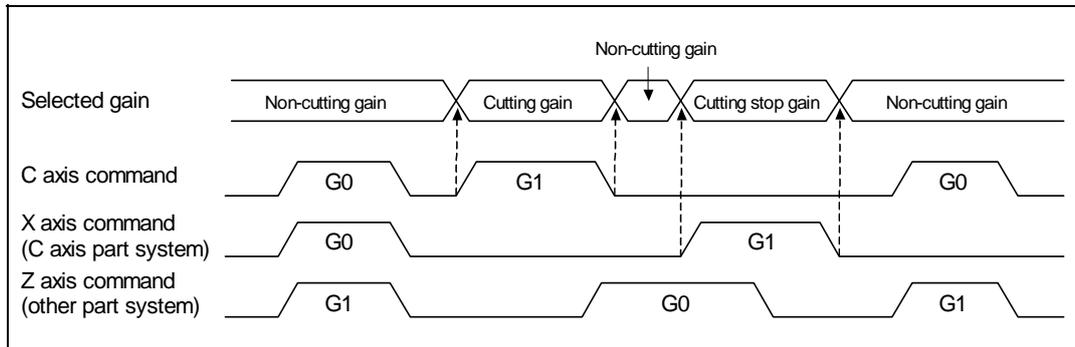

(Note 1) The cutting feed of other systems does not affect the C axis gain selection.

(Note 2) There are 1st to 3rd cutting gains, which are selected with the ladder.

(4) Deceleration check in movement including spindle/C-axis

The deceleration check in a movement command including the spindle/C-axis is as the table described below when the following condition is fulfilled.

When the different values are set for the position loop gain in non-cutting mode (spindle parameter #3203 PGCO) and the position loop gain in cutting mode (spindle parameter #3330 PGC1 to #3333 PGC4).

That is because a vibration and so on occurs in the machine when the gain is changed during the axis movement.

Parameter	Rapid traverse command	Parameter	Other than rapid traverse command (G1 : other than G0 command)	
Inpos (#1193)	G0→XX (G0+G9→XX)	AUX07/BIT-1 (#1223/BIT-1)	G1+G9→XX (G1+G9→XX)	G1→G1
0	Command deceleration check	0	In-position check (Applicable only to SV024)	No deceleration check
1	In-position check	1		

(Note 1) When G1 command is issued, the in-position check is performed regardless of the deceleration check parameter.


(Note 2) XX expresses all commands.



Precautions and Restrictions

- (1) A reference point return cannot be executed by the orientation when there is no Z phase in the detector (PLG, ENC, other).
Replace the detector with one having a Z phase, or if using the detector as it is, set the position control changeover to "After deceleration stop" in the parameters (Spindle parameters, SP129 bitE: 1), and set the axis to "Axis without zero point" (Zero point return parameters, noref: 1).
- (2) The program error (P430) will occur if a C axis command is issued during servo OFF or during orientation.
- (3) Do not execute a servo OFF during a C axis command.
The remaining C axis commands will be cleared at servo ON.
(If servo OFF is executed during C axis control, the feed will stop and spindle control will occur.)
- (4) If servo ON is executed during spindle rotation, the rotation will stop and C axis control will occur.
- (5) Dog-type reference point return are not possible for the C axis.
Set the reference point return to the orientation method in the parameters (Spindle parameters, SP129 bitE: 0), or set the axis to "Axis without zero point" (Zero point return parameters, noref: 1).

10.7 Spindle synchronization control II

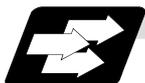

Function and purpose

In a machine having two or more spindles, this function controls the rotation speed and phase of one spindle (synchronous spindle) in synchronization with the rotation of the other spindle (basic spindle).

The function is used if a workpiece grasped by the basic spindle is to be grasped by a synchronous spindle, or if the spindle rotation speed has to be changed when one workpiece is grasped by both spindles.

Selection of the synchronized spindle and synchronization start, etc., are all designated from the PLC.



Basic spindle and synchronous spindle selection

Select the basic spindle and synchronous spindle for synchronization control from the PLC.

Device No.	Signal name	Abbrev.	Explanation
R446	Basic spindle selection	–	<p>Select a serially connected spindle to be controlled as the basic spindle. (0: 1st spindle), 1: 1st spindle, 2: 2nd spindle, 3: 3rd spindle, 4: 4th spindle</p> <p>(Note 1) Spindle synchronization control will not take place if a spindle not connected in serial is selected.</p> <p>(Note 2) If "0" is designated, the 1st spindle will be controlled as the basic spindle.</p>
R447	Synchronous spindle selection	–	<p>Select a serially connected spindle to be controlled as the synchronous spindle. (0: 2nd spindle), 1: 1st spindle, 2: 2nd spindle, 3: 3rd spindle, 4: 4th spindle</p> <p>(Note 3) Spindle synchronization control will not take place if a spindle not connected in serial is selected or if the same spindle as the basic spindle is selected.</p> <p>(Note 4) If "0" is designated, the 2nd spindle will be controlled as the synchronous spindle.</p>



Starting spindle synchronization

The spindle synchronization control mode is entered by inputting the spindle synchronization control signal (SPSYC). The synchronous spindle will be controlled in synchronization with the rotation speed commanded for the basic spindle during the spindle synchronization control mode. When the difference of the basic spindle and synchronous spindle rotation speeds reaches the spindle synchronization rotation speed reach level setting value (#3050 sprlv), the spindle rotation speed synchronization complete signal (FSPRV) will be output.

The synchronous spindle's rotation direction is designated with the spindle synchronization rotation direction designation as the same as the basic spindle or the reverse direction.

Device No.	Signal name	Abbrev.	Explanation
Y398	Spindle synchronization control signal	SPSYC	The spindle synchronization control mode is entered when this signal turns ON.
X308	In spindle synchronization control	SPSYN1	This notifies that the mode is the spindle synchronization control.
X309	Spindle rotation speed synchronization complete signal	FSPRV	This turns ON when the difference of the basic spindle and synchronous spindle rotation speeds reaches the spindle rotation speed reach level setting value during the spindle synchronization control mode. This signal turns OFF when the spindle synchronization control mode is canceled, or when an error exceeding the spindle rotation speed reach level setting value occurs during the spindle synchronization control mode.
Y39A	Spindle synchronization rotation direction designation	–	Designate the basic spindle and synchronous spindle rotation directions for spindle synchronization control. 0: The synchronous spindle rotates in the same direction as the basic spindle. 1: The synchronous spindle rotates in the reverse direction of the basic spindle.




Spindle phase alignment

Spindle phase synchronization starts when the spindle phase synchronization control signal (SPPHS) is input during the spindle synchronization control mode. The spindle phase synchronization complete signal is output when the spindle synchronization phase reach level setting value (#3051 spplv) is reached.

The synchronous spindle's phase shift amount can also be designated from the PLC.

Device No.	Signal name	Abbrev.	Explanation
Y399	Spindle phase synchronization control signal	SPPHS	Spindle phase synchronization starts when this signal is turned ON during the spindle synchronization control mode. (Note 1) If this signal is turned ON in a mode other than the spindle synchronization control mode, it will be ignored.
X30A	Spindle phase synchronization complete signal	FSPPH	This signal is output when the spindle synchronization phase reach level is reached after starting spindle phase synchronization.
R448	Phase shift amount setting	–	Designate the synchronous spindle's phase shift amount. Unit: 360°/4096

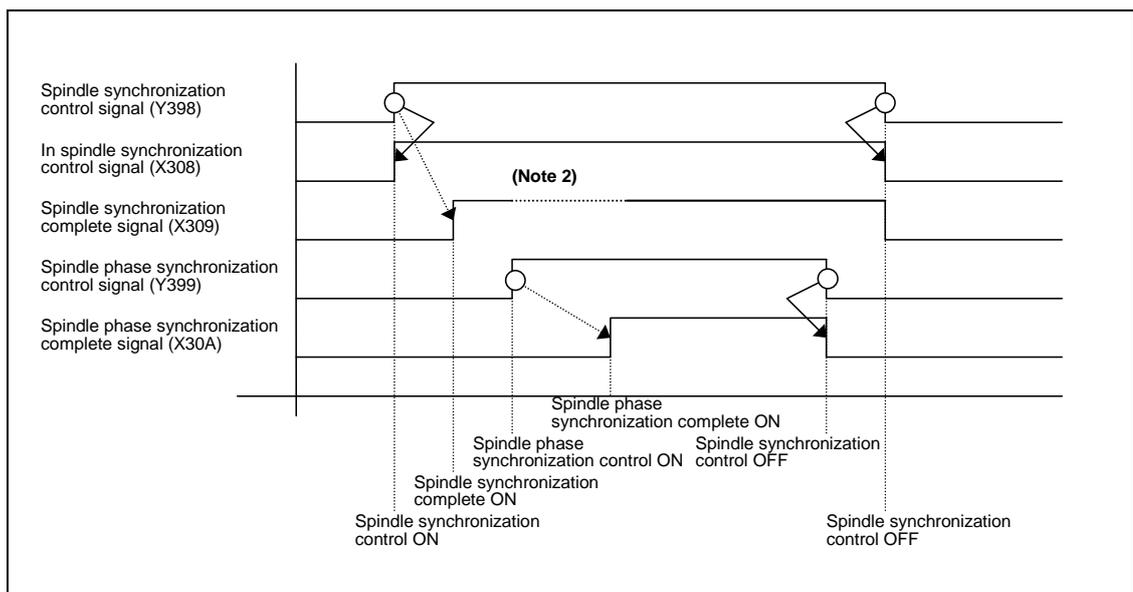

(Note 2) Turns OFF temporarily to change the rotation speed during phase synchronization.

10. Spindle Functions

10.7 Spindle synchronization control II




Calculating the spindle synchronization phase shift amount and requesting phase offset

The spindle phase shift amount calculation function obtains and saves the phase difference of the basic spindle and synchronous spindle by turning the PLC signal ON during spindle synchronization. When calculating the spindle phase shift, the synchronous spindle can be rotated with the handle, so the relation of the phases between the spindles can also be adjusted visually. If the spindle phase synchronization control signal is input while the phase offset request signal (SSPHF) is ON, the phases will be aligned using the position shifted by the saved phase shift amount as a reference.

This makes aligning of the phases easier when re-grasping profile materials.

Device No.	Signal name	Abbrev.	Explanation
Y39B	Phase shift calculation request	SSPHM	If spindle synchronization is carried out while this signal is ON, the phase difference of the basic spindle and synchronous spindle will be obtained and saved.
Y39C	Phase offset request	SSPHF	If spindle phase synchronization is carried out while this signal is ON, the phases will be aligned using the position shifted by the saved phase shift amount as a basic position.
R474	Phase difference output	—	The delay of the synchronous spindle in respect to the basic spindle is output. Unit: $360^\circ/4096$ (Note 1) If either the basic spindle or synchronous spindle has not passed through the Z phase, etc., and the phase cannot be calculated, -1 will be output. (Note 2) This data is output only while calculating the phase shift or during spindle phase synchronization.
R490	Phase offset data	—	The phase difference saved with phase shift calculation is output. Unit: $360^\circ/4096$ (Note 3) This data is output only during spindle synchronization control.

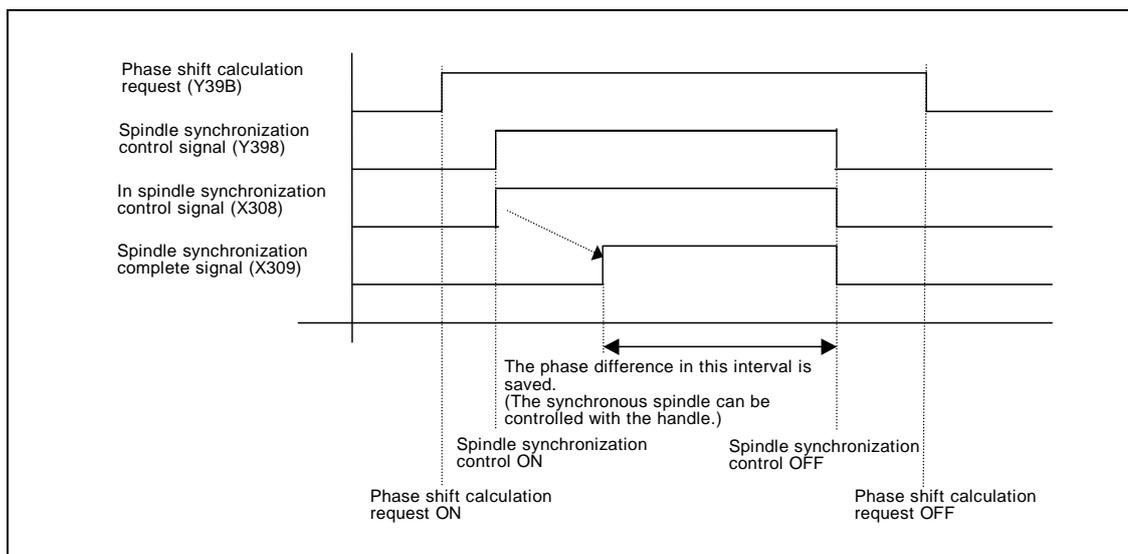

(Note 4) The phases cannot be aligned while calculating the phase shift.


(Note 5) The synchronous spindle cannot be rotated with the handle when the manual operation mode is set to the handle mode.



Chuck close signal

The synchronous spindle side carries out droop compensation while the chuck is opened, and aligns itself with the basic spindle. However, when the chuck is closed, the droop compensation is added, and the synchronization error with the base increases. Droop compensation is prevented with the chuck close signal and the position where the chuck is grasped is maintained with position compensation.

Device No.	Signal name	Abbrev.	Explanation
Y2E9	Chuck close signal	—	This turns ON when the chuck is closed. When this signal turns ON, the compensation between the basic spindle and synchronous spindle will change from droop compensation to position compensation.
X30E	Chuck close confirmation signal	—	This turns ON when the chuck close signal is received during the spindle synchronization control mode.

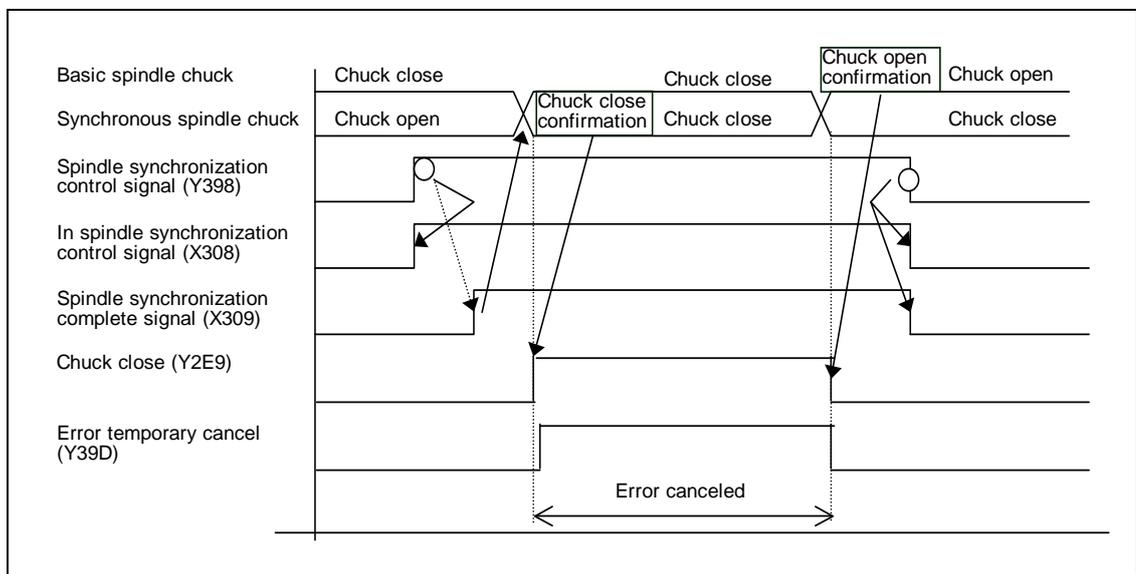

(Note 1) Use the error temporary cancel only when there is still an error between the spindle and synchronization with the chuck close signal.



Error temporary cancel function

When spindle synchronization is carried out while grasping the workpiece with the basic spindle and rotating, if the chuck is closed to grasp the workpiece with the synchronous spindle, the speed will fluctuate due to external factors and an error will occur. If spindle synchronization is continued without compensating this error, the workpiece will twist.

This torsion can be prevented by temporarily canceling this error.

Device No.	Signal name	Abbrev.	Explanation
Y39D	Error temporary cancel signal	SPDRP0	The error is canceled when this signal is ON.



Phase error monitor


The phase error can be monitored during spindle phase synchronization.

Device No.	Signal name	Abbrev.	Explanation
R477	Phase error monitor	–	The phase error during spindle phase synchronization control is output as a pulse unit.
R478	Phase error monitor (lower limit value)	–	The lower limit value of the phase error during spindle phase synchronization control is output as a pulse unit.
R479	Phase error monitor (upper limit value)	–	The upper limit value of the phase error during spindle phase synchronization control is output as a pulse unit.



Multi-speed acceleration/deceleration

Up to eight steps of acceleration/deceleration time constants for spindle synchronization can be selected according to the spindle rotation speed.

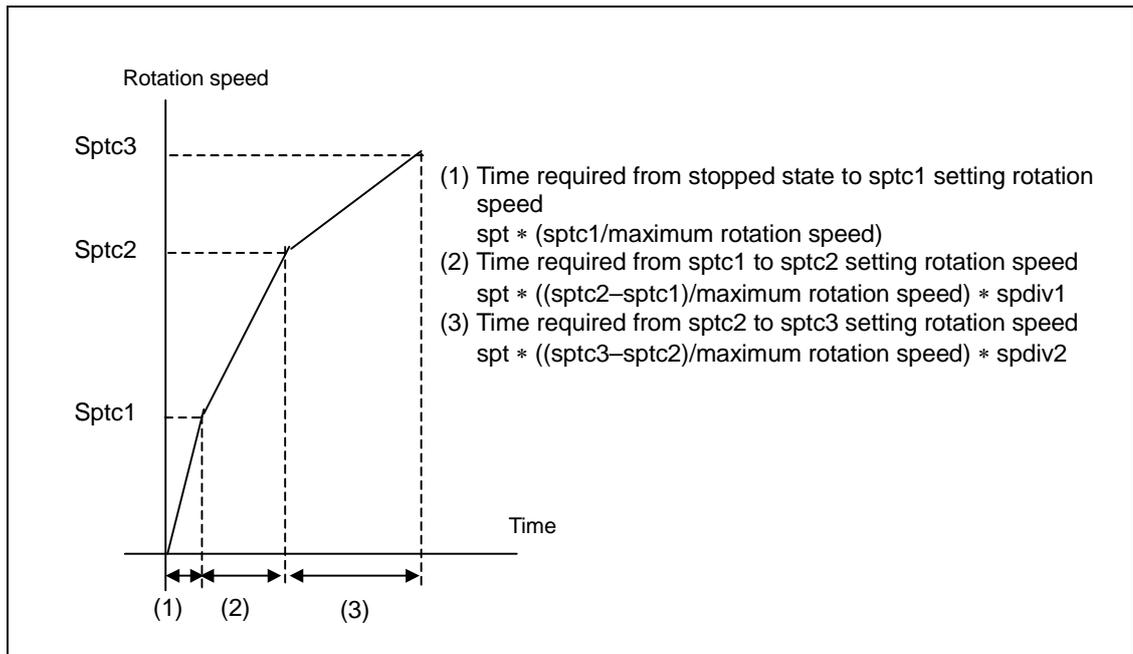




Precautions and restrictions

- (1) When carrying out spindle synchronization, a rotation command must be issued to both the basic spindle and synchronous spindle. The synchronous spindle's rotation direction will follow the basic spindle rotation direction and spindle synchronization rotation direction designation regardless of whether a forward or reverse run command is issued.
- (2) The spindle synchronization control mode will be entered even if the spindle synchronization control signal is turned ON while the spindle rotation speed command is ON. However, synchronous control will not actually take place. Synchronous control will start after the rotation command has been issued to the basic spindle, and then the spindle synchronization complete signal will be output.
- (3) The spindle rotating with spindle synchronization control will stop when emergency stop is applied.
- (4) An operation error will occur if the spindle synchronization control signal is turned ON while the basic spindle and synchronous spindle designations are illegal.
- (5) The rotation speed clamp during spindle synchronization control will follow the smaller clamp value set for the basic spindle or synchronous spindle.
- (6) Orientation of the basic spindle and synchronous spindle is not possible during the spindle synchronization. To carry out orientation, turn the spindle synchronization control signal OFF first.
- (7) The rotation speed command is invalid for the synchronous spindle during the spindle synchronization. The commanded rotation speed will be validated after spindle synchronization is canceled.
- (8) The constant surface speed control is invalid for the synchronous spindle during the spindle synchronization.
- (9) If the phase offset request signal is turned ON before the phase shift is calculated and then spindle phase synchronization is executed, the shift amount will not be calculated.
- (10) The spindle Z-phase encoder position parameters are invalid when phase offset is carried out.
- (11) If spindle phase synchronization is started while the phase shift calculation request signal is ON, the error "M01 operation error 1106" will occur.
- (12) Turn the phase shift calculation request signal ON when the basic spindle and synchronous spindle are both stopped. If the phase shift calculation request signal is ON while either of the spindles is rotating, the error "M01 operation error 1106" will occur.
- (13) The phase shift amount saved in the NC is held until the next phase shift is calculated. (This value is saved even when the power is turned OFF.)


10.8 Multiple spindle control

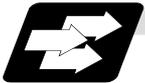


Function and purpose

Multiple spindle control is a function used to control the sub-spindle in a machine tool that has a main spindle (1st spindle) and a sub-spindle (2nd spindle to 4th spindle). The spindle control method differs between multiple spindle control I and multiple spindle control II. Whether to use multiple spindle control I or multiple spindle control II depends on the parameter (#1300 ext36/bit0) setting.

- | | |
|--|--|
| <p>Multiple spindle control I:
(ext36/bit0 = 0)</p> | <p>Control following the spindle selection command (G43.1, etc.) and spindle control command ([S***** ;] or [SO=***** ;]), etc.</p> |
| <p>Multiple spindle control II:
(ext36/bit0 = 1)</p> | <p>Control following the external signal (spindle command selection signal, spindle selection signal) and spindle control command ([S***** ;] only), etc.
The spindle selection command [SO=***** ;] cannot be used.</p> |

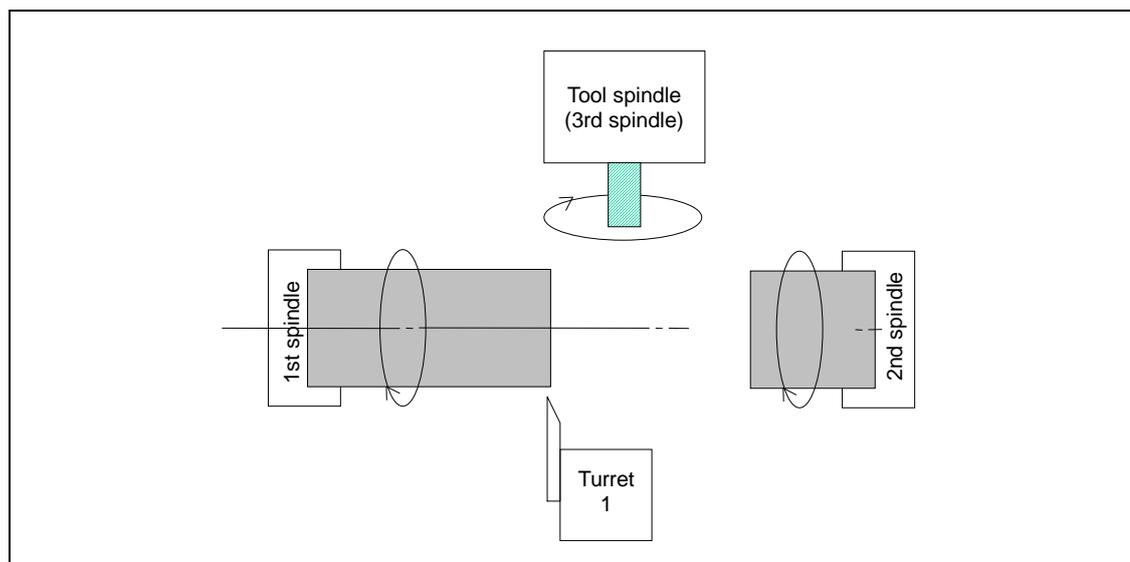

10.8.1 Multiple spindle control I (multiple spindle command)

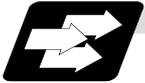

Function and purpose

In addition to the S***** command, the 1st to 4th spindles can be identified and commanded with the SO=***** command.



Command format

SO=***** ;	
○	Designate the spindle number with one numeric character (1: 1st spindle/2: 2nd spindle/3: 3rd spindle/4: 4th spindle). A variable can be designated.
*****	Rotation speed or constant surface speed command. A variable can be designated.

(Note 1) A program error (P35) will occur if the ○ value is not 1 to 4.

(Note 2) A program error (P33) will occur if G47.1 is issued in a modal.



Detailed description

(1) Each spindle command is delimited by the details of ○.

(Example)

S1 = 3500 ; 1st spindle 3500(r/min) command
 S2 = 1500 : 2nd spindle 1500(r/min) command


(2) Multiple spindles can be commanded in one block.

(3) If two or more commands are issued to the same spindle in a block, the command issued last will be valid.

(Example) S1 = 3500 S1 = 3600 S1 = 3700 ; S1 = 3700 will be valid.


(4) The S***** command and SO=***** command can be used together.

The spindle targeted for the S***** command is delimited by the spindle selection command.

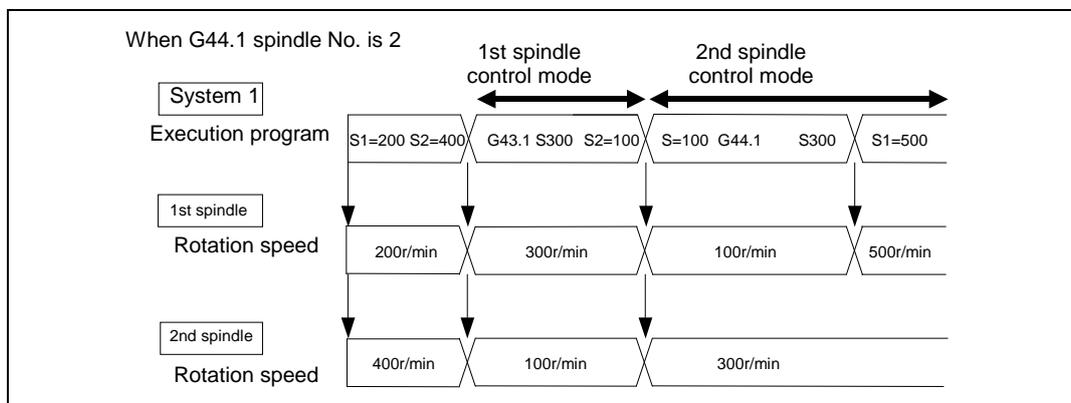

(5) The commands for each spindle can be commanded from the machining program for either system 1 or system 2.

10.8.2 Multiple spindle control I (spindle selection command)

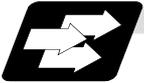

Function and purpose

The following S commands (S****) can be changed for the 1st spindle to 4th spindle by issuing the spindle selection command (G43.1, etc. [G group 20]).



Command format

G43.1;	1st spindle control mode ON
G44.1;	Selected spindle control mode ON (Selected spindle No. is set with SnG44.1)
G47.1;	All spindles simultaneous control mode ON



Detailed description

- (1) The selected spindle No. is set with the parameter (#1534 SnG44.1).
- (2) The spindle selection command is a modal G code.
- (3) A program error (P33) will occur if the spindle selection command is issued while the multiple spindle control II mode is valid.
- (4) The spindle control mode entered when the power is turned ON or reset can be set with the parameters for each system. The state when the power is turned ON or reset is as follows.

G group 20 modal state	Set with setup parameter "#1199 Sselect". 0:G43.1 1:G44.1 2:G47.1
G44.1 spindle No.	Set with setup parameter "#1534 SnG44.1". 0:2nd spindle 1:1st spindle 2:2nd spindle 3:3rd spindle 4:4th spindle


- (5) If the S command is issued in the same block as the spindle selection command, it will be valid for the spindle switched to with the spindle selection command.

Example

G43.1 S100 ;	→	Command 100 rotations for 1st spindle
S200 G44.1 S300 ;	→	After commanding 200 rotations for 1st spindle, command 300 rotations for 2nd spindle
(SnG44.1=2)		

If a spindle that does not exist is set, the 2nd spindle will be used. Note that if there is only one spindle, the 1st spindle will be used.

(6) Commands can be issued from either system 1 or system 2.

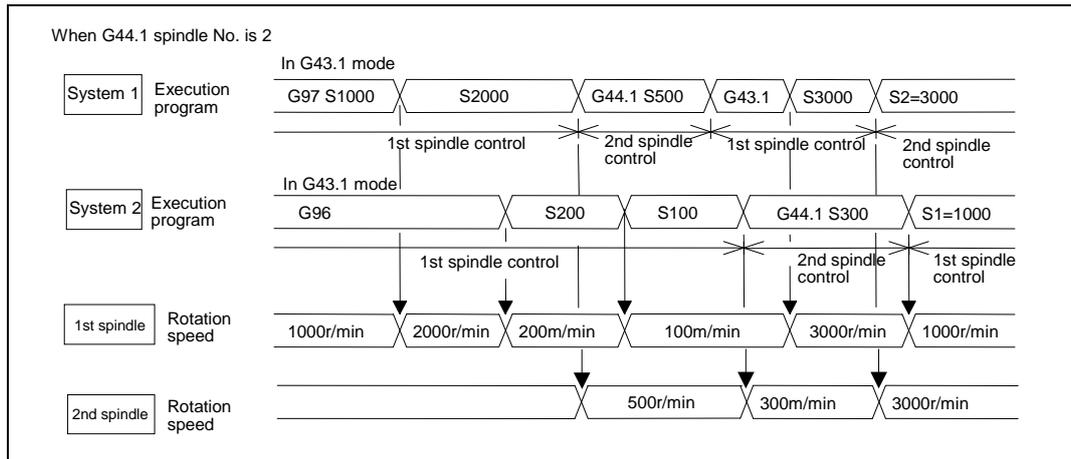

Relation with other functions

The following functions change after the spindle selection command.


- (1) S command (S****)
The S command in G97 (rotation speed command)/G96 (constant surface speed command) will be the command for the spindle designated with the spindle selection command.
- (2) Spindle clamp speed command
The spindle clamp speed command issued with G92 S_Q_ will also follow the spindle selection command mode.
- (3) Per rotation command (synchronous feed)
Even if F is commanded in the G95 mode, the per rotation feedrate for the spindle designated with the spindle selection command will be applied.
- (4) Constant surface speed control spindle changeover
The constant surface speed control will also follow the spindle selection command mode.

If spindle other than the current mode is commanded with SO=****, the spindle rotation speed command designated with O will have the priority.

(Example)

S2=**** in G43 system mode2nd spindle rotation speed command
S1=**** in G44 system 2nd spindle selection mode1st spindle rotation speed command


Note that the constant surface speed command in the constant surface speed control (G96) will be modal information independent from the rotation speed command.

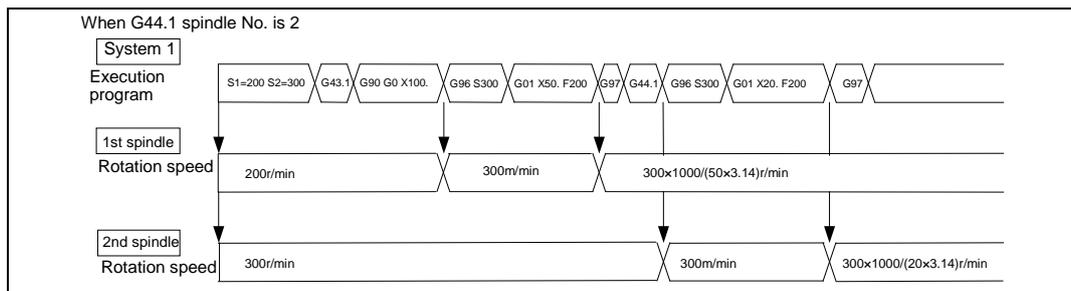




Spindle control rights

If the constant surface speed control, S command and spindle related M command are commanded randomly from each system to one spindle, the spindle may not operate correctly. For example, if S is commanded (per minute feed) during constant surface speed control with system 1, the rotation speed will not change from the system 1 side, and the actual rotation speed will rely on system 2 from which S was commanded last. These commands must be commanded from only one system, or commanded simultaneously while using standby, etc.

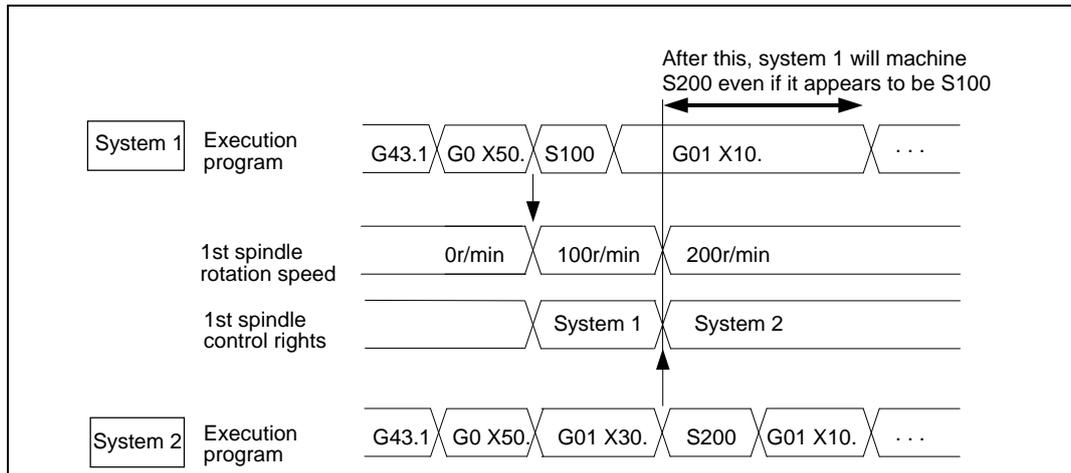


[Spindle control rights transfer conditions] When G44.1 spindle No. is 2

(1) The system that commanded the S command last has the spindle control rights.

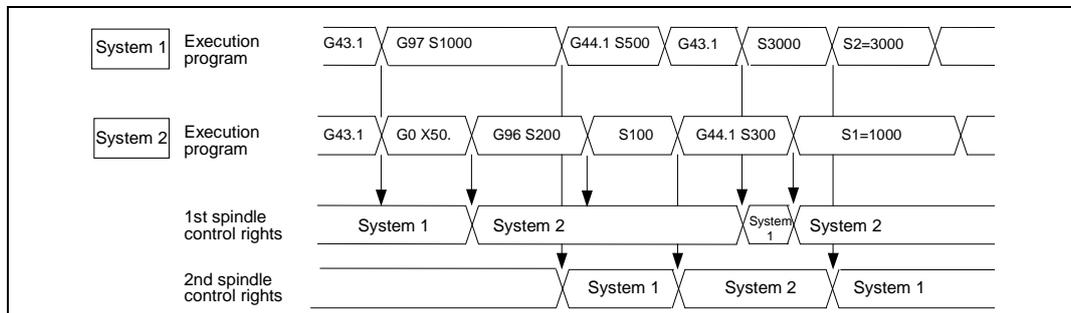

(2) If different S commands are executed simultaneously in both systems, system 2 will have the priority. In addition, system 2 will have the control rights.

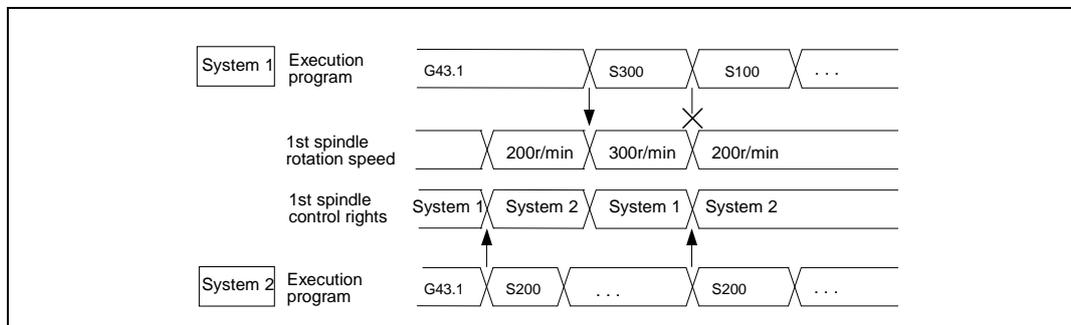

10.8.3 Multiple spindle control II



Function and purpose


Multiple spindle control II is a function that designates which spindle to select with the signals from PLC. The command is issued to the spindle with one S command.



Detailed description

(1) Spindle command selection, spindle selection

The S command to the spindle is output as the rotation speed command to the selected spindle when the spindle selection signal (SWS) from the PLC turns ON. The selected spindle rotates at the output rotation speed. The spindle whose selection is canceled when the spindle selection signal (SWS) turns OFF maintains the speed at which it was rotating at before being canceled. This allows each axis to be simultaneously rotated at differing rotation speeds. The spindle command selection signal is used to determine which system each spindle receives the S command from.

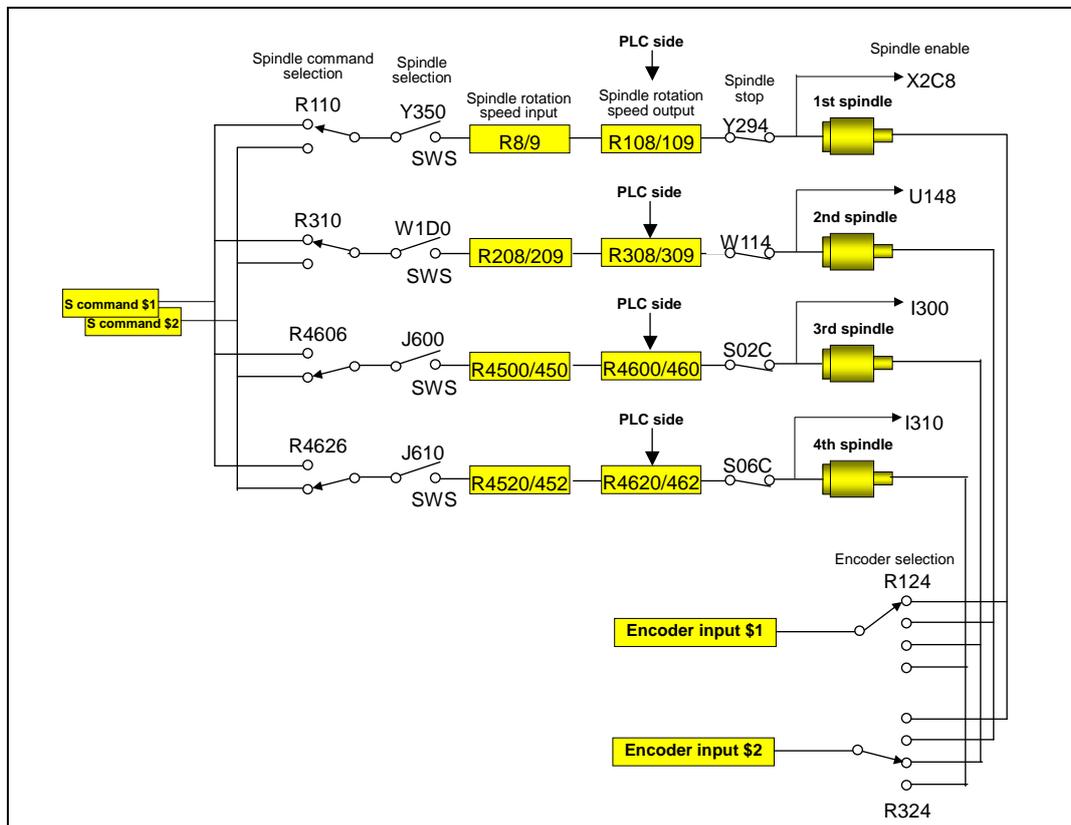

(Note) Refer to the PLC Interface Manual for details on each signal.



Relation with other functions

- (1) Spindle clamp speed setting (G92)
This is valid only on the spindle selected with the spindle selection signal (SWS).
The spindle not selected with the spindle selection signal (SWS) maintains the speed at which it was rotating at before being canceled.
(The spindle clamp speed is maintained with the G92 command.)
- (2) Constant surface speed control
Constant surface speed control can be applied on all spindles.
The spindle rotation speed is automatically controlled during constant surface speed control, so when machining with constant surface speed, the spindle selection signal (SWS) for that spindle must be left ON.
The spindle not selected with the spindle selection signal (SWS) maintains the speed at which it was rotating at before being canceled.
- (3) Thread cutting/synchronous feed
The threads are cut with the spindle selected with the spindle selection signal (SWS). The encoder feedback selected with the encoder selection signal is used.
- (4) Polygon machining (servo-spindle)
The polygon machining spindle is selected with the spindle selection signal (SWS). Do not select the polygon machining spindle multiple times, and do not change the polygon machining spindle selection signal during the polygon machining mode.
If a C axis mode command is issued to the polygon machining spindle, the "M01 operation error 1026" will occur. When the C axis command is canceled, the error will be canceled and machining will resume.
If synchronous tap is commanded during polygon machining, a program error (P34) will occur.
- (5) Synchronous tap
The synchronous tap spindle is selected with the spindle selection signal (SWS).
Select the synchronous tap spindle before issuing the synchronous tap command. Do not change the synchronous tap spindle selection signal during the synchronous tapping mode.
If a C axis mode command is issued to the synchronous tap spindle, the "M01 operation error 1026" will occur. When the C axis command is canceled, the error will be canceled and machining will resume.
If a polygon machining command is issued to the synchronous tap spindle, the "M01 operation error 1026" will occur. When the polygon machining command is canceled, the error will be canceled and machining will resume.
- (6) Asynchronous tap
The asynchronous tap spindle is selected with the spindle selection signal (SWS).
Select the asynchronous tap spindle before issuing the tap command. Input a calculation request to change the asynchronous tap spindle selection. Do not change the asynchronous tap spindle selection signal during the asynchronous tapping mode.
- (7) Tap return
The tap return spindle is selected with the spindle selection signal (SWS).
Select the spindle for which the tap cycle execution is stopped before turning the tap return signal ON.
If tap return is executed when a different spindle is selected, the "M01 operation error 1032" will occur. Do not change the spindle selection signal during tap return.




Restrictions

- (1) The S manual value command is invalid when multiple spindle control II is valid.
- (2) Setup parameter "#1199 Sselect" is invalid when multiple spindle control II is valid.
- (3) The spindle control mode changeover G code cannot be used when multiple spindle control II is valid. A program error (P34) will occur.
- (4) The "S1=***" and "S2=***" commands are invalid when multiple spindle control II is valid. A program error (P33) will occur.
- (5) The spindle gear shift command output signal (GR1/GR2) is not output when multiple spindle control II is valid.

11. Tool Functions

11.1 Tool functions (T8-digit BCD)

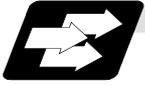

Function and purpose

The tool functions are also known simply as T functions and they assign the tool numbers and tool offset number. They are designated with a 8-digit number following the address T, and one set can be commanded in one block. The output signal is an 8-digit BCD signal and start signal.


If the T function is designated in the same block as a movement command, the commands may be executed in either of the following two orders. The machine specifications determine which sequence applies.

- (1) The T function is executed after the movement command.
- (2) The T function is executed simultaneously with the movement command.

Processing and completion sequences are required for all T commands.


12. Tool Offset Functions

12.1 Tool offset

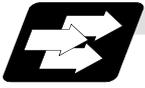

Function and purpose

The basic tool offset function includes the tool length offset and tool diameter compensation. Each offset amount is designated with the tool offset No. Each offset amount is input from the setting and display unit or the program.

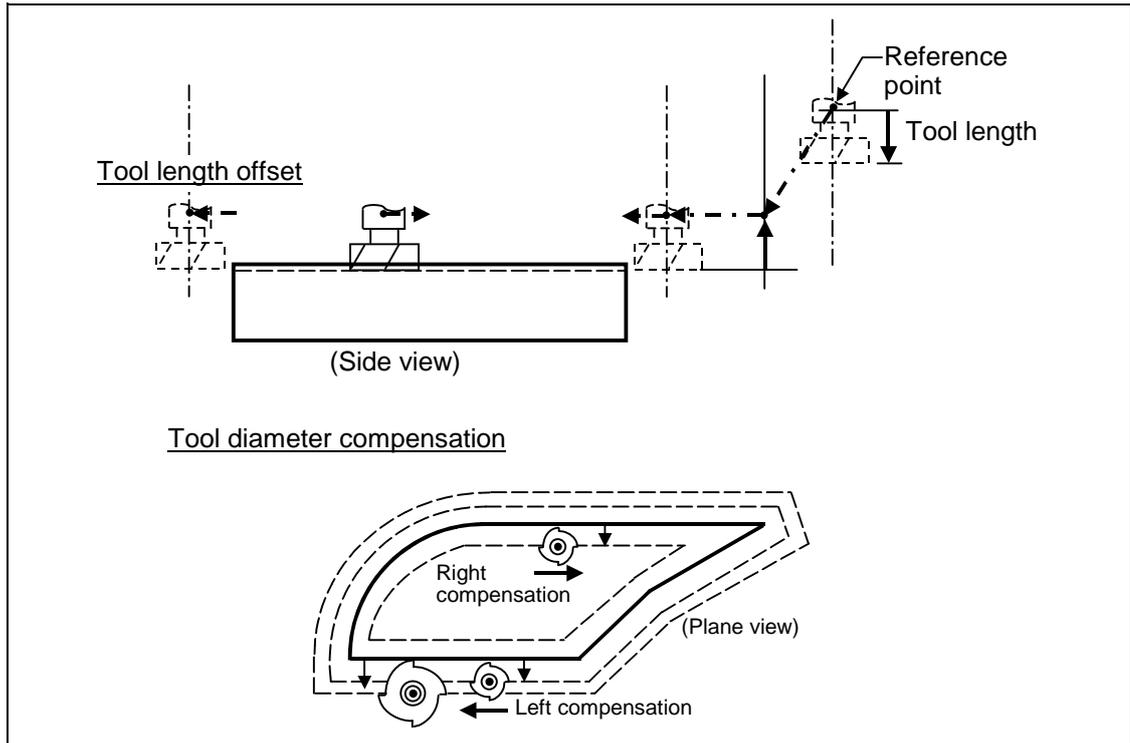




Tool offset memory

There are two types of tool offset memories for setting and selecting the tool offset amount. (The type used is determined by the machine maker specifications.)

The offset amount or offset amount settings are preset with the setting and display unit.

Type 1 is selected when parameter "#1037 cmdtyp" is set to "1", and type 2 is selected when set to "2".

Type of tool offset memory	Classification of length offset, diameter compensation	Classification of shape offset, wear compensation
Type 1	Not applied	Not applied
Type 2	Applied	Applied

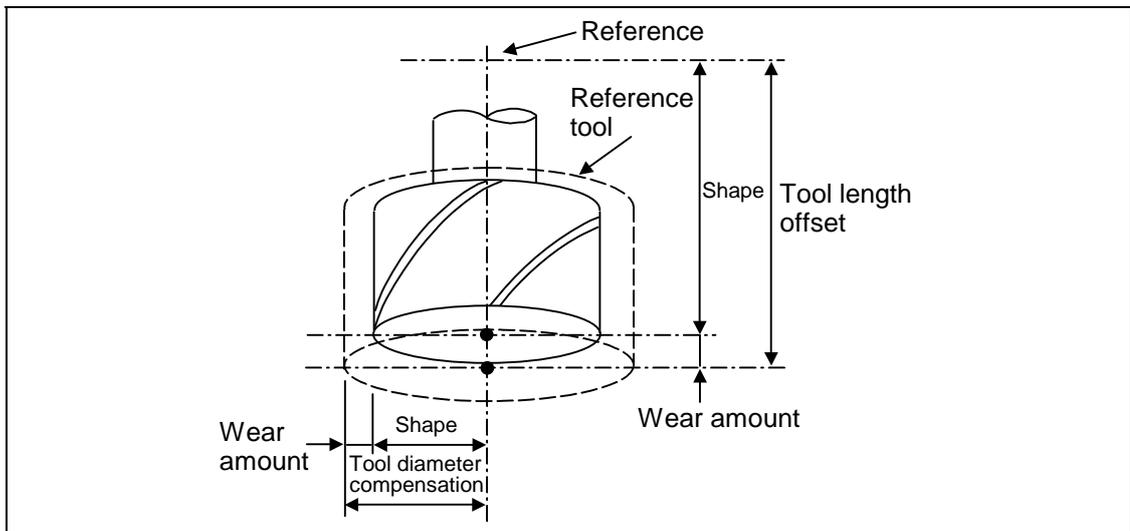

12. Tool Offset Functions

12.1 Tool offset

Type 1

One offset amount corresponds to one offset No. as shown on the right. Thus, these can be used commonly regardless of the tool length offset amount, tool diameter offset amount, shape offset amount and wear offset amount.

$$(D1) = a_1, (H1) = a_1$$

$$(D2) = a_2, (H2) = a_2$$

⋮

$$(Dn) = a_n, (Hn) = a_n$$

Offset No.	Offset amount
1	a_1
2	a_2
3	a_3
•	•
•	•
n	a_n

Type 2

The shape offset amount related to the tool length, wear offset amount, shape offset related to the tool diameter and the wear offset amount can be set independently for one offset No. as shown below.

The tool length offset amount is set with H, and the tool diameter offset amount with D.

$$(H1) = b1 + c1, (D1) = d1 + e1$$

$$(H2) = b2 + c2, (D2) = d2 + e2$$

⋮

$$(Hn) = bn + cn, (Dn) = dn + en$$

Offset No.	Tool length (H)		Tool diameter(D)/ (Position offset)	
	Shape offset amount	Wear offset amount	Shape offset amount	Wear offset amount
1	b1	c1	d1	e1
2	b2	c2	d2	e2
3	b3	c3	d3	e3
•	•	•	•	•
•	•	•	•	•
n	bn	cn	dn	en

CAUTION

 If the tool offset amount is changed during automatic operation (including during single block stop), it will be validated from the next block or blocks onwards.




Tool offset No. (H/D)

This address designates the tool offset No.

- (1) H is used for the tool length offset, and D is used for the tool position offset and tool diameter offset.
- (2) The tool offset No. that is designated once does not change until a new H or D is designated.
- (3) The offset No. can be commanded once in each block. (If two or more Nos. are commanded, the latter one will be valid.)
- (4) The No. of offset sets that can be used will differ according to the machine.
For 40 sets: Designate with the H01 to H40 (D01 to D40) numbers.
- (5) If a value larger than this is set, the program error (P170) will occur.
- (6) The setting value ranges are as follows for each No.
The offset amount for each offset No. is preset with the setting and display unit.

Input setting unit	Shape offset amount		Wear offset amount	
	Metric system	Inch system	Metric system	Inch system
#1015 cunit=100	±99999.99mm	±9999.999 inch	±9999.99 mm	±999.999 inch
#1015 cunit=10	±9999.999mm	±999.9999 inch	±999.999 mm	±99.9999 inch

12.2 Tool length offset/cancel; G43, G44/G49

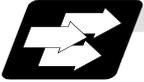

Function and purpose

The end position of the movement command can be offset by the preset amount when this command is used. A continuity can be applied to the program by setting the actual deviation from the tool length value decided during programming as the offset amount using this function.



Command format

When tool length offset is +

```
G43 Zz Hh ; Tool length offset + start
:
G49 Zz ; Tool length offset cancel
```

When tool length offset is -

```
G44 Zz Hh ; Tool length offset - start
:
G49 Zz ;
```



Detailed description

(1) Tool length offset movement amount

The movement amount is calculated with the following expressions when the G43 or G44 tool length offset command or G49 tool length offset cancel command is issued.

	Z axis movement amount	
G43 Zz Hh ₁ ;	z + (λh ₁)	Offset in + direction by tool offset amount
G44 Zz Hh ₁ ;	z - (λh ₁)	Offset in - direction by tool offset amount
G49 Zz ;	z -(+) (λh ₁)	Offset amount cancel.
	λh ₁ :	Offset amount for offset No. h ₁

Regardless of the absolute value command or incremental value command, the actual end point will be the point offset by the offset amount designated for the programmed movement command end point coordinate value.


The G49 (tool length offset cancel) mode is entered when the power is turned ON or when M02 has been executed.

(Example 1) For absolute value command

```
H01 = -100000
N1 G28 Z0 T01 M06 ;
N2 G90 G92 Z0 ;
N3 G43 Z5000 H01 ;
N4 G01 Z-50000 F500 ;
```

(Example 2) For incremental value command

```
H01 = -100000
N1 G28 Z0 T01 M06 ;
N2 G91 G92 Z0 ;
N3 G43 Z5000 H01 ;
N4 G01 Z-55000 F500 ;
```

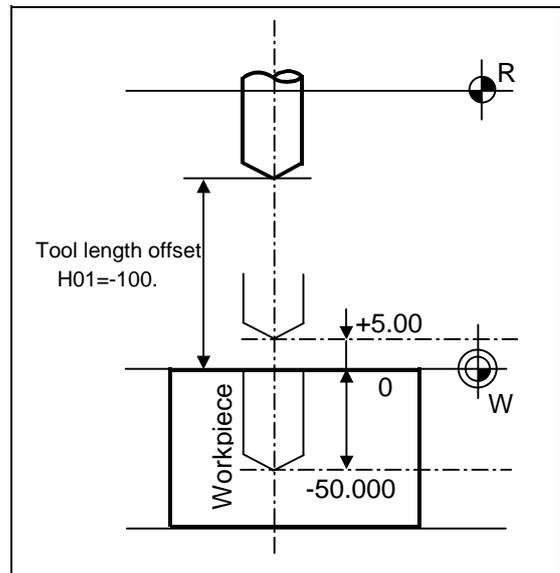


(2) Offset No.

- (a) The offset amount differs according to the compensation type.

Type 1

G43 Hh₁ ;

When the above is commanded, the offset amount h_1 commanded with offset No. h_1 will be applied commonly regardless of the tool length offset amount, tool diameter offset amount, shape offset amount or wear offset amount.

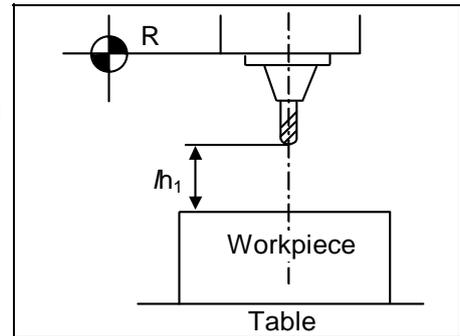


Type 2

G43 Hh₁ ;

When the above is commanded, the offset amount h_1 commanded with offset No. h_1 will be as follows.

h_1 : Shape offset (Note) + wear offset amount

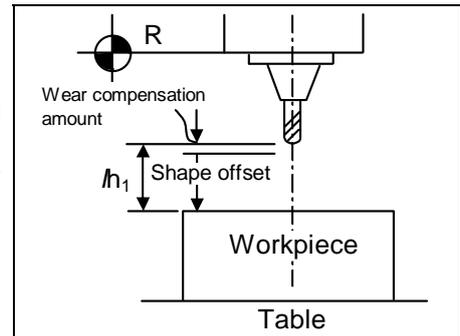

- (b) The valid range of the offset No. will differ according to the specifications (No. of offset sets).
 (c) If the commanded offset No. exceeds the specification range, the program error (P170) will occur.
 (d) Tool length cancel will be applied when H0 is designated.
 (e) The offset No. commanded in the same block as G43 or G44 will be valid for the following modals.

(Example 3)

```
G43 Zz1 Hh1 ; ..... Tool length offset is executed with h1.
:
G45 Xx1 Yy1 Hh6 ;
:
G49 Zz2 ; ..... The tool length offset is canceled.
:
G43 Zz2 ; ..... Tool length offset is executed again with h1.
```

- (f) If G43 is commanded in the G43 modal, an offset of the difference between the offset No. data will be executed.

(Example 4)

```
G43 Zz1 Hh1 ; ..... Becomes the z1 + (λ.h1) movement.
:
G43 Zz2 Hh2 ; ..... Becomes the z2 + (λ.h2 - lh1) movement.
:
```

The same applies for the G44 command in the G44 modal.

(3) Axis valid for tool length offset

- (a) When parameter "#1080 Dril_Z" is set to "1", the tool length offset is always applied on the Z axis.
- (b) When parameter "#1080 Dril_Z" is set to "0", the axis will depend on the axis address commanded in the same block as G43. The order of priority is shown below.
Zp > Yp > Xp

(Example 5)

```

G43 Xx1 Hh1 ; .....+ offset to X axis
:
G49 Xx2 ;
:
G44 Yy1 Hh2 ; .....-offset to Y axis
:
G49 Yy2 ;
:
G43 αα1 Hh3 ; .....+ offset to additional offset
:
G49 αα1 ;
:
G43 Xx3 Yy3 Zz3 ; .....Offset is applied on Z axis
:
G49 ;
    
```

The handling of the additional axis will follow the parameters "#1029 to 1031 aux_I, J and K" settings.

If the tool length offset is commanded for the rotary axis, set the rotary axis name for one of the parallel axes.

- (c) If H (offset No.) is not designated in the same block as G43, the Z axis will be valid.

(Example 6)

```

G43 Hh1 ; .....Offset and cancel to X axis
:
49 ;
    
```

(4) Movement during other commands in tool length offset modal

- (a) If reference point return is executed with G28 and manual operation, the tool length offset will be canceled when the reference point return is completed.


(Example 7)

```

G43 Zz1 Hh1 ;
:
G28 Zz2 ; ..... Canceled when reference point is reached.
:
G43 Zz2 Hh2 ; (Same as G49)
:
G49 G28 Zz2 ; ..... After the Z axis is canceled, reference point
return is executed.
    
```

- (b) The movement is commanded to the G53 machine coordinate system, the axis will move to the machine position when the tool offset amount is canceled. When the G54 to G49 workpiece coordinate system is returned to, the position returned to will be the coordinates shifted by the tool offset amount.

12.3 Tool radius compensation

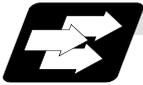

Function and purpose

This function compensates the radius of the tool. The compensation can be done in the random vector direction by the radius amount of the tool selected with the G command (G38 to G42) and the D command.



Command format

G40X__Y__ ;	: Tool radius compensation cancel	
G41X__Y__ ;	: Tool radius compensation (left)	
G42X__Y__ ;	: Tool radius compensation (right)	
G38I__J__ ;	: Change or hold of compensation vector	} Can be commanded only during the radius compensation mode.
G39X__Y__ ;	: Corner changeover	



Detailed description

The No. of compensation sets will differ according to the machine model.
(The No. of sets is the total of the tool length offset, tool position offset and tool radius compensation sets.)

The H command is ignored during the tool radius compensation, and only the D command is valid. The compensation will be executed within the plane designated with the plane selection G code or axis address 2 axis, and axes other than those included in the designated plane and the axes parallel to the designated plane will not be affected. Refer to the section on plane selection for details on selecting the plane with the G code.

12.3.1 Tool radius compensation operation



Tool radius compensation cancel mode

The tool radius compensation cancel mode is established by any of the following conditions.

- (1) After the power has been switched on
- (2) After the reset button on the setting and display unit has been pressed
- (3) After the M02 or M30 command with reset function has been executed
- (4) After the tool radius compensation cancel command (G40) has been executed

The offset vectors are zero in the compensation cancel mode, and the tool nose point path coincides with the programmed path.

Programs including tool radius compensation must be terminated in the compensation cancel mode.




Tool radius compensation start (start-up)

Tool radius compensation starts when all the following conditions are met in the compensation cancel mode.

- (1) The movement command is issued after G41 or G42.
- (2) The tool radius compensation offset No. is $0 < D \leq \text{max. offset No.}$

At the start of compensation, the operation is executed after at least three movement command blocks (if three movement command blocks are not available, after five movement command blocks) have been read regardless of the continuous operation or single block operation.

During compensation, 5 blocks are pre-read and the compensation is arithmetically processed.

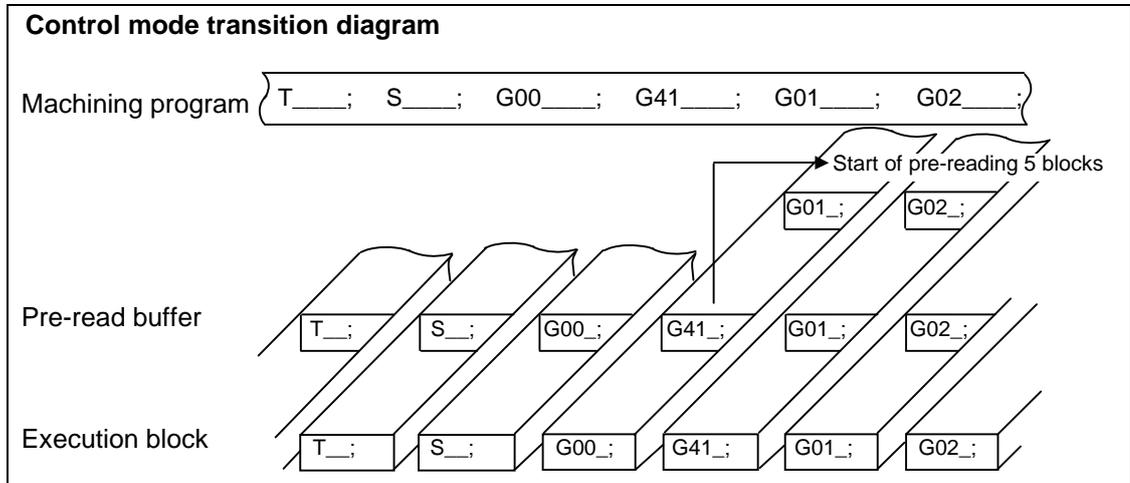

There are two ways of starting the compensation operation: type A and type B.

The type can be selected with bit 2 of parameter "#1229 set 01". This type is used in common with the compensation cancel type.

In the following explanatory figure, "S" denotes the single block stop point.


12. Tool Offset Functions

12.3 Tool radius compensation




Start of movement for tool radius compensation

(1) For inner side of corner

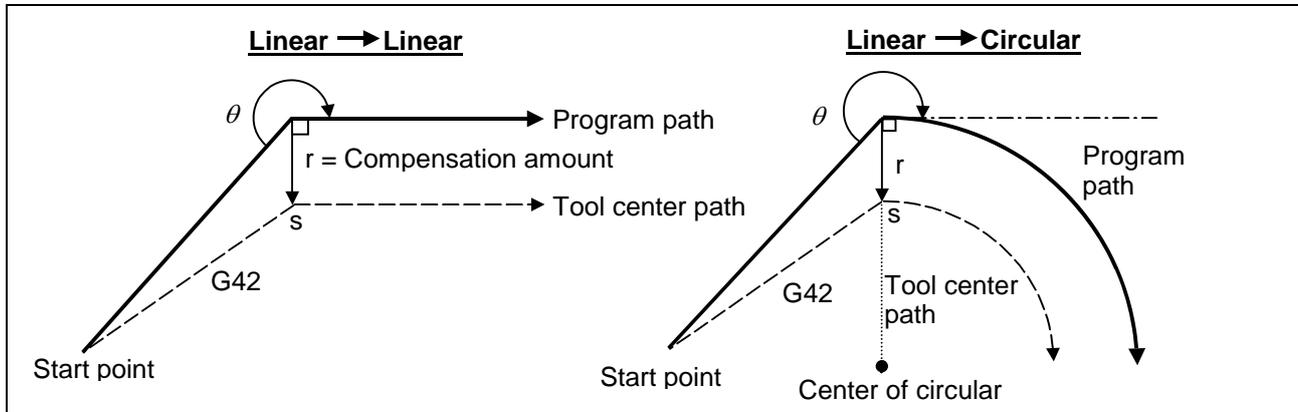


(2) For outer side of corner (obtuse angle) [$90^\circ \leq \theta < 180^\circ$]

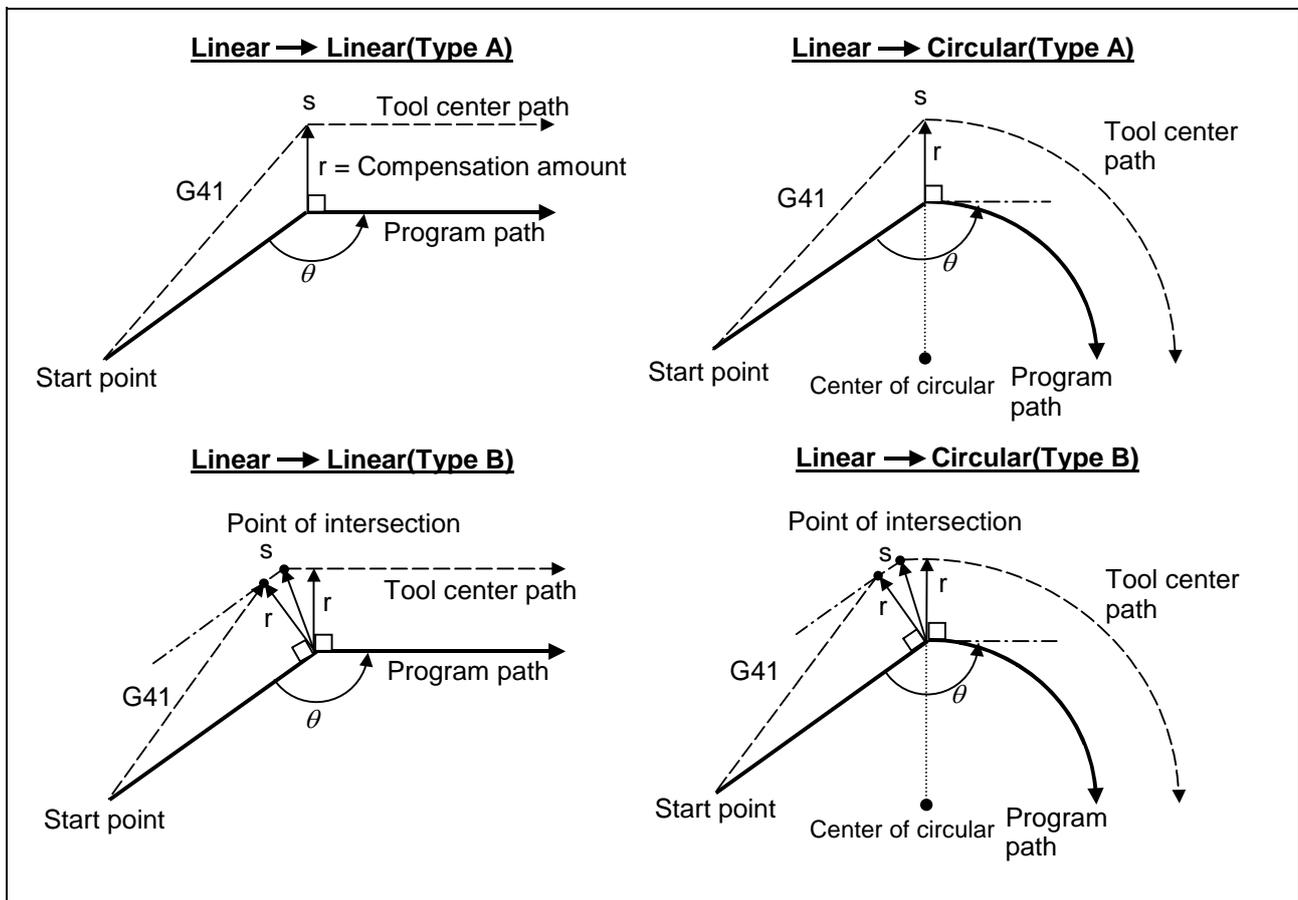

12. Tool Offset Functions

12.3 Tool radius compensation

(3) For outer side of corner (obtuse angle) [$0 < 90^\circ$]

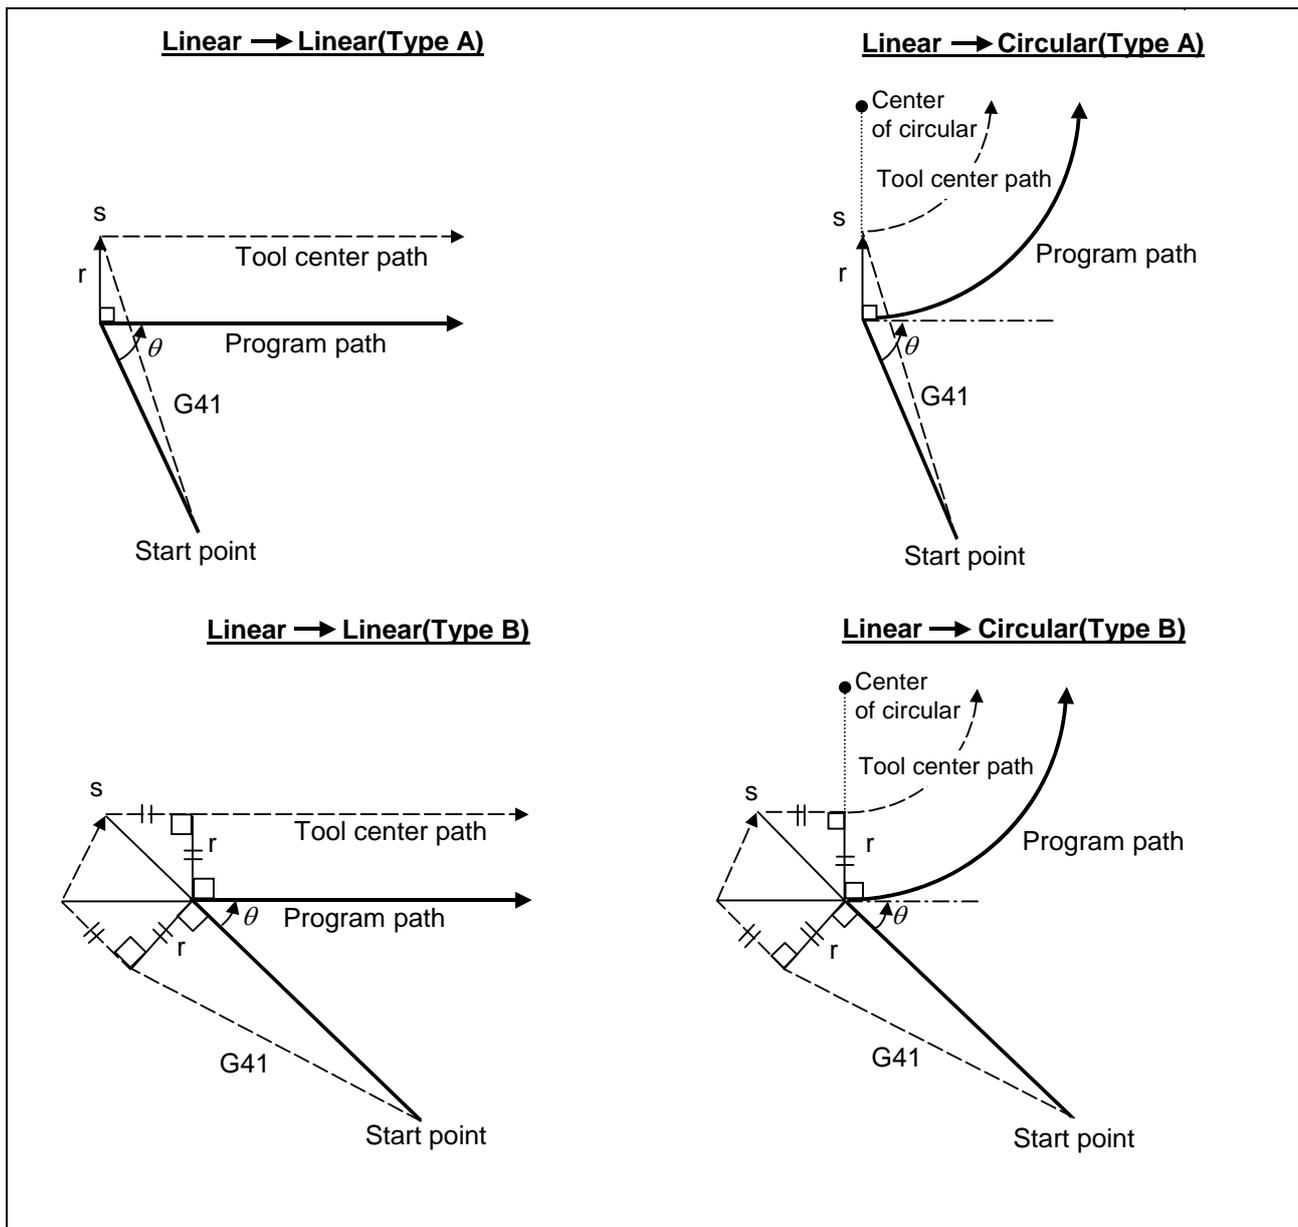

(Note 1) If there is axis movement command in the same block as G41 or G42, compensation is performed perpendicularly to the next block's direction.

12. Tool Offset Functions

12.3 Tool radius compensation



Operation in compensation mode


Relative to the program path (G00, G01, G02, G03), the tool center path is found from the straight line/circular arc to make compensation.

Even if the same compensation command (G41, G42) is issued in the compensation mode, the command will be ignored.

When 4 or more blocks not accompanying movement are commanded continuously in the compensation mode, overcutting or undercutting will result.


When the M00 command has been issued during tool radius compensation, pre-reading is prohibited.

(1) Machining an outer wall

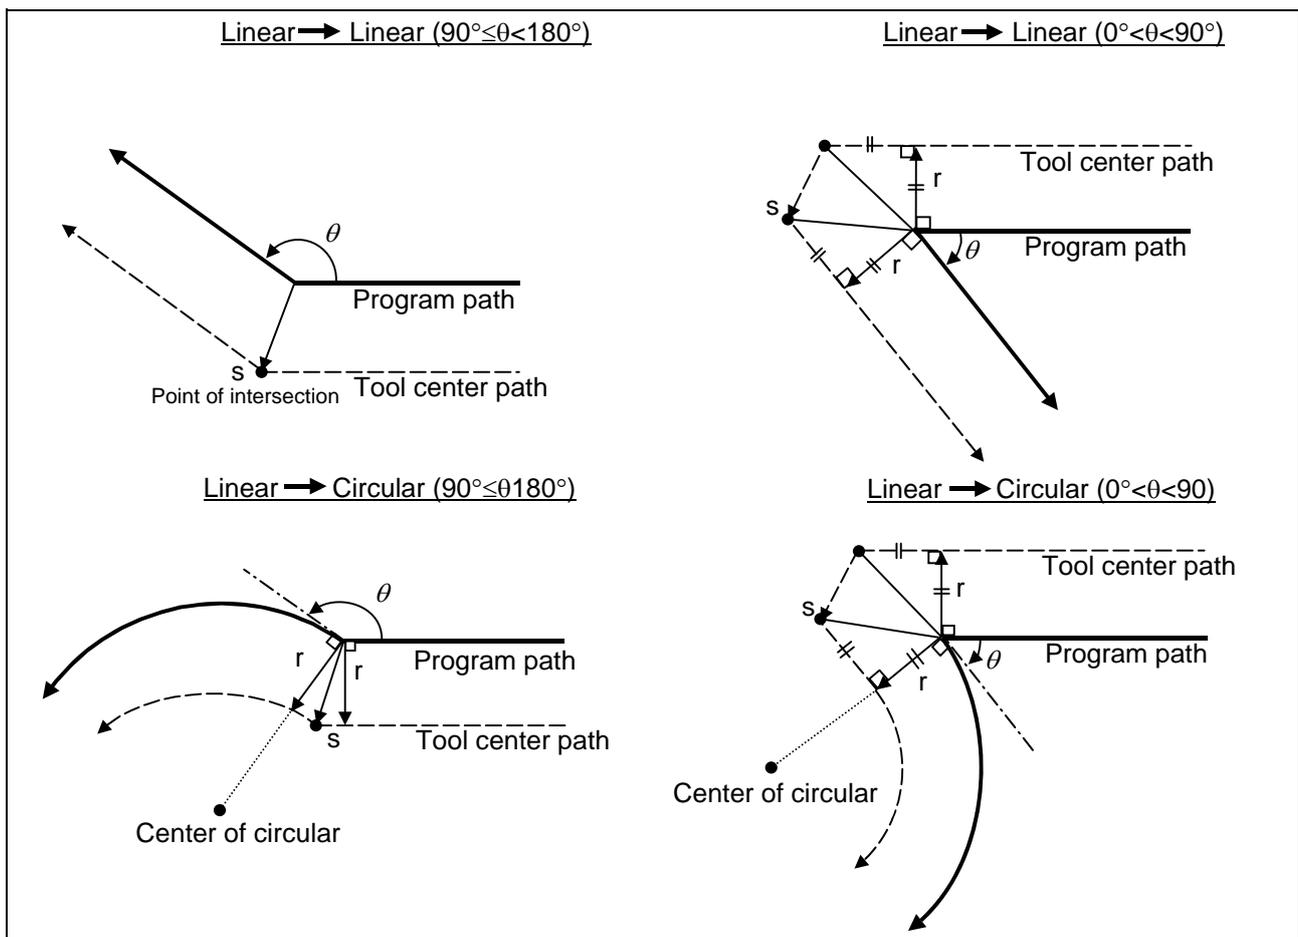

12. Tool Offset Functions

12.3 Tool radius compensation

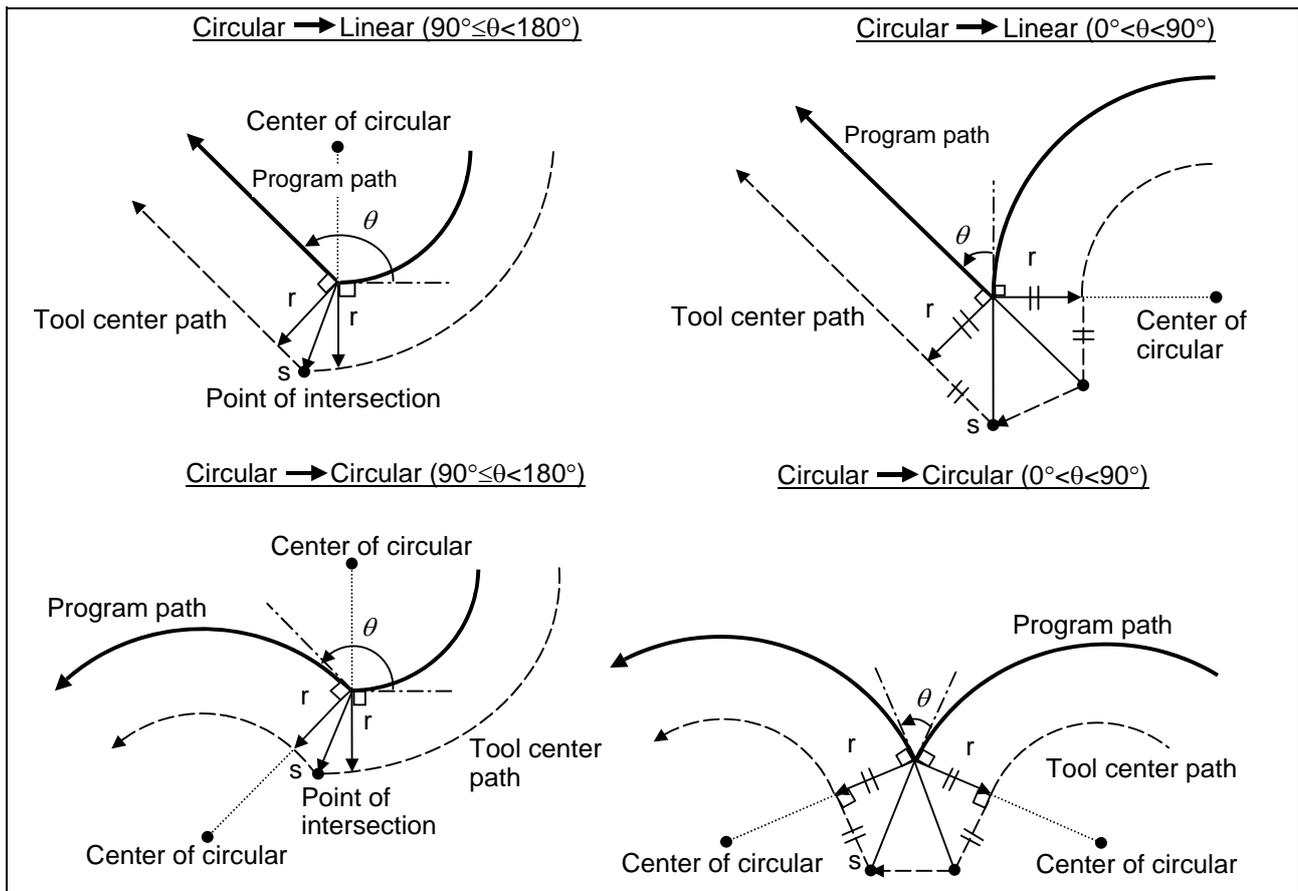


12. Tool Offset Functions


12.3 Tool radius compensation

(2) Machining an inner wall


Linear \rightarrow Linear (Obtuse angle)

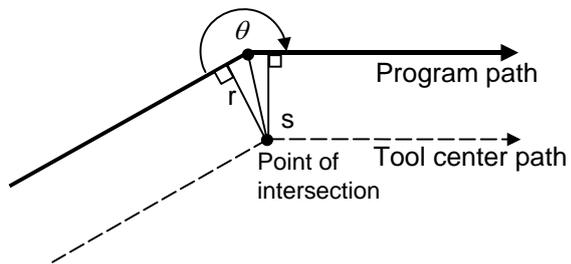


Linear \rightarrow Linear (Acute angle)

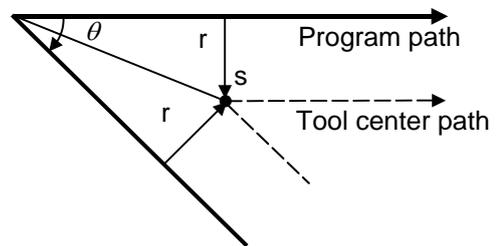


Linear \rightarrow Circular (Obtuse angle)

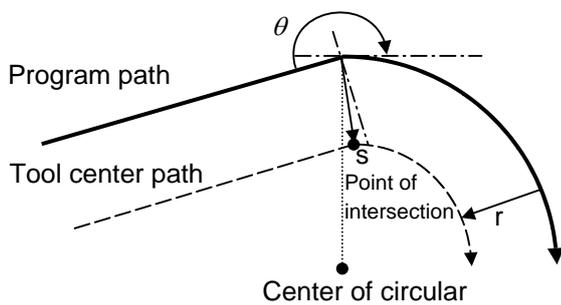


Linear \rightarrow Circular (Acute angle)

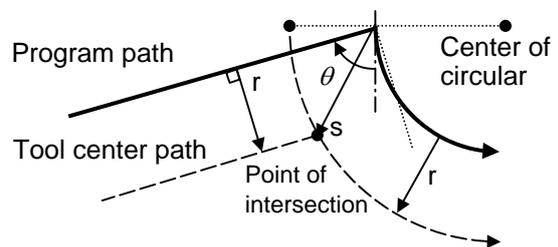

Circular \rightarrow Linear (Obtuse angle)

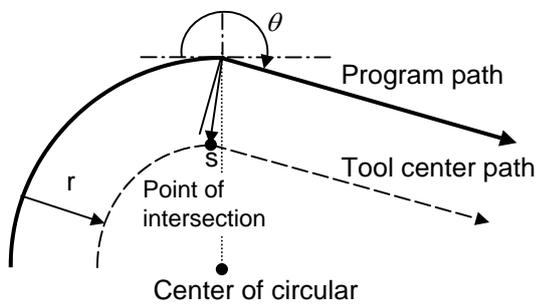


Circular \rightarrow Linear (Acute angle)

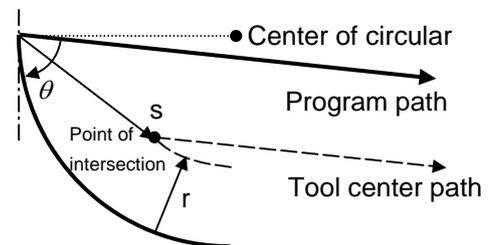

12. Tool Offset Functions


12.3 Tool radius compensation

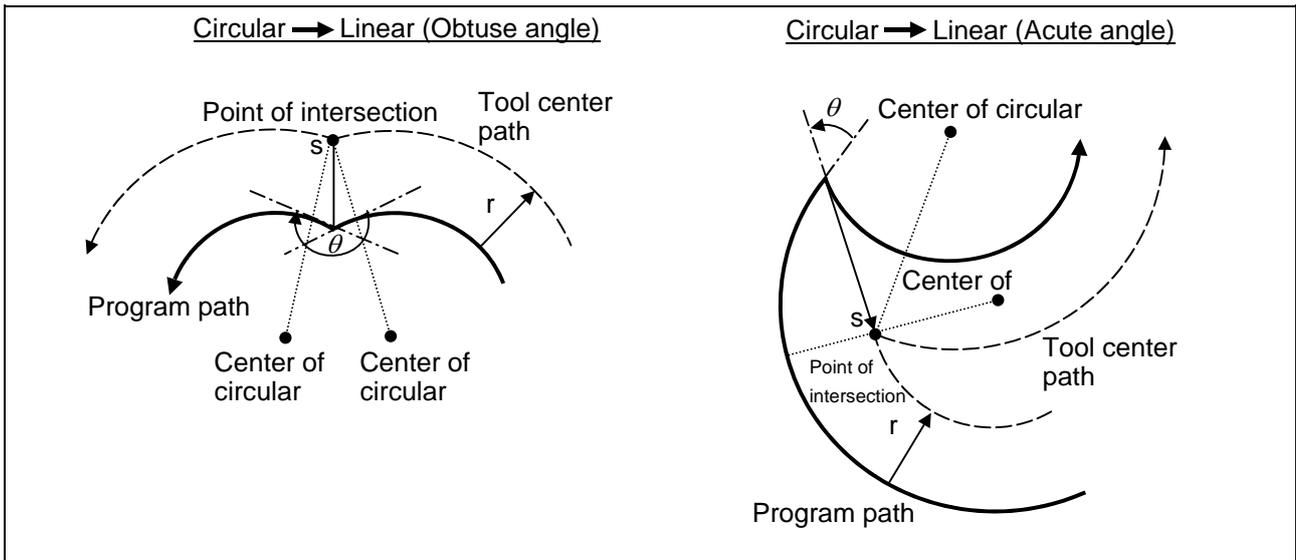

(3) When the arc end point is not on the arc


For spiral arc.....A spiral arc will be interpolated from the start to end point of the arc.

For normal arc command.....If the error after compensation is within parameter "#1084 RadErr", the area from the arc start point to the end point is interpolated as a spiral arc.

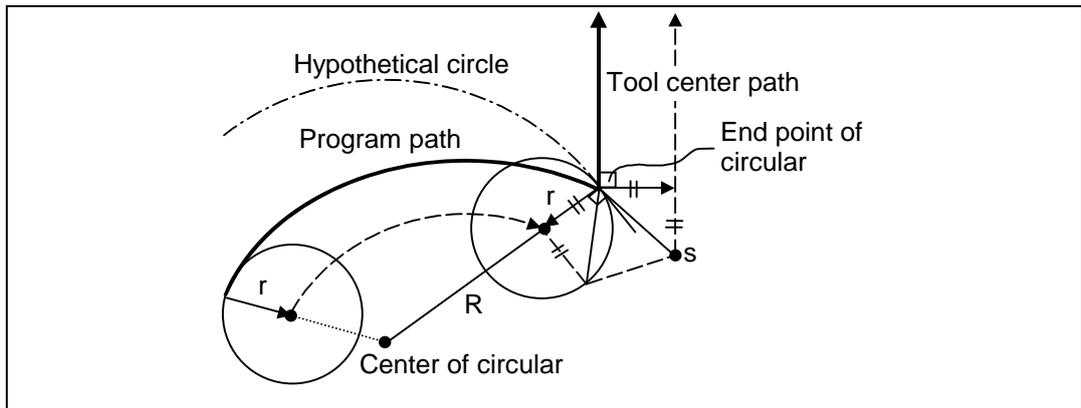

(4) When the inner intersection point does not exist

In an instance such as that shown in the figure below, the intersection point of arcs A and B may cease to exist due to the offset amount. In such cases, program error (P152) appears and the tool stops at the end point of the previous block.

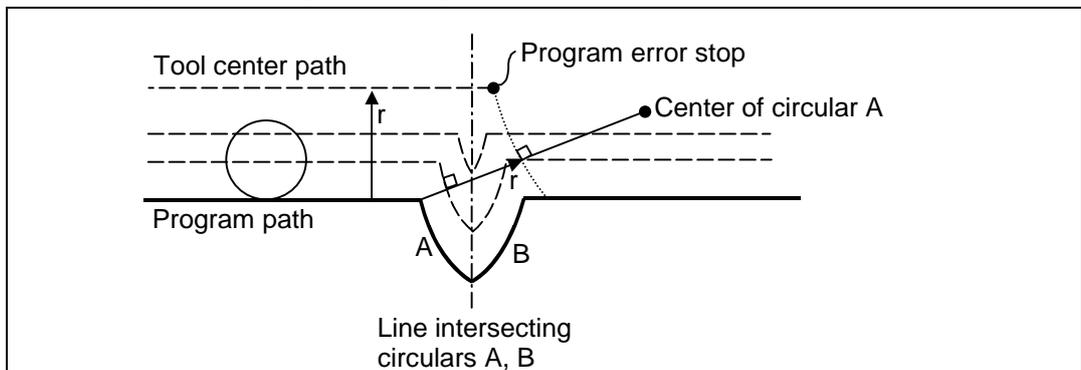



Tool radius compensation cancel

If either of the following conditions is met in the tool radius compensation mode, the compensation will be canceled. However, the movement command must be a command which is not a circular command.

If the compensation is canceled by a circular command, program error (P151) results.


- (1) The G40 command has been executed.
- (2) The D00 tool number has been executed.

The cancel mode is established once the compensation cancel command has been read, 5-block pre-reading is suspended and 1-block pre-reading is made operational.



Tool radius compensation cancel operation


(1) For inner side of corner

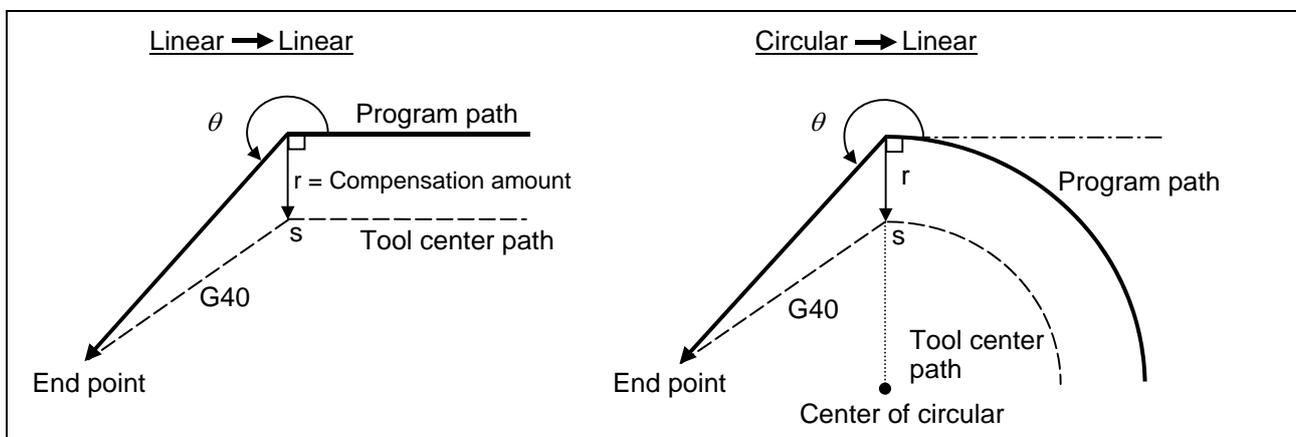

12. Tool Offset Functions

12.3 Tool radius compensation

(2) For outer side of corner (obtuse angle)

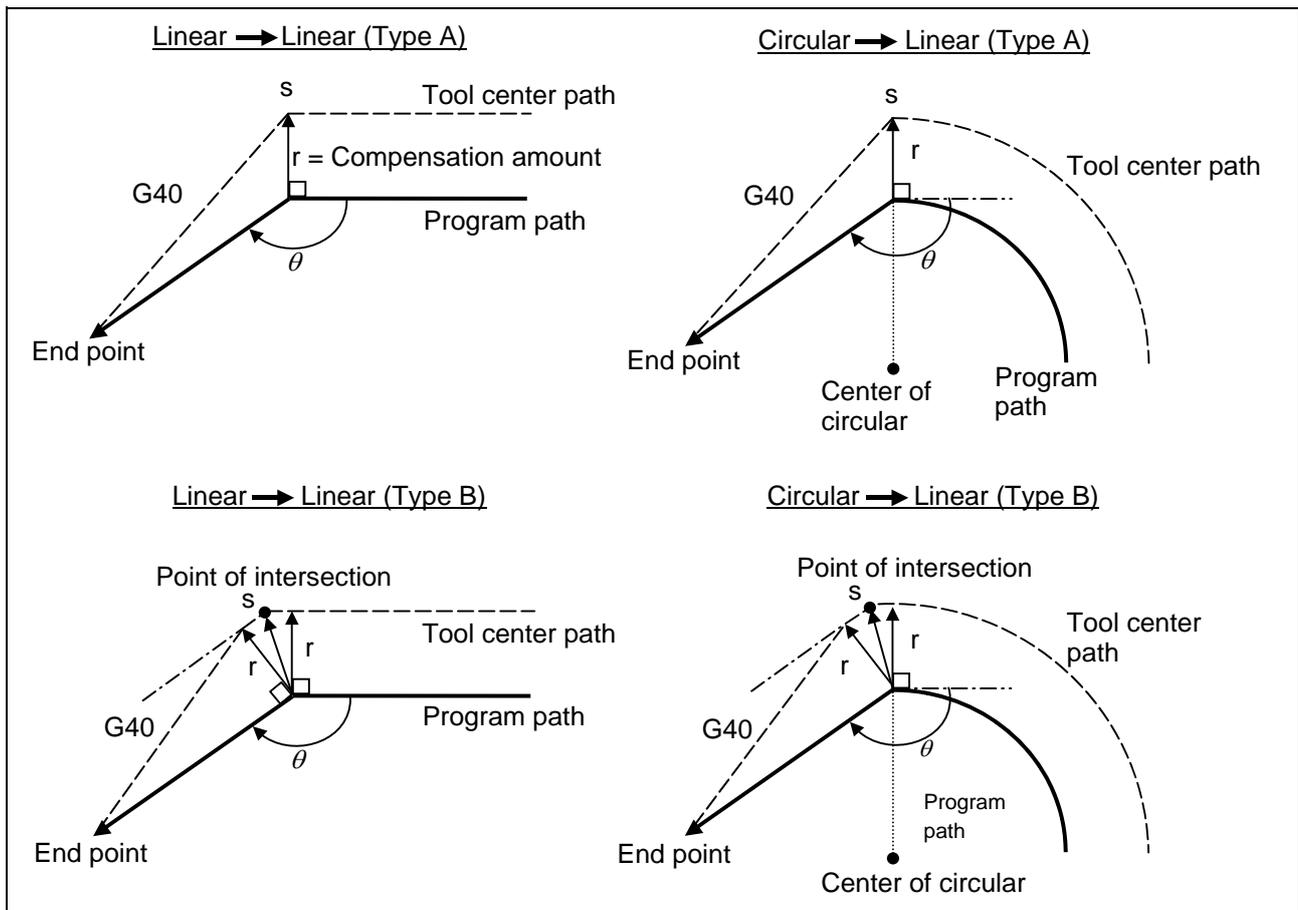


12. Tool Offset Functions


12.3 Tool radius compensation

(3) For outer side of corner (acute angle)


Linear → Linear (Type A)

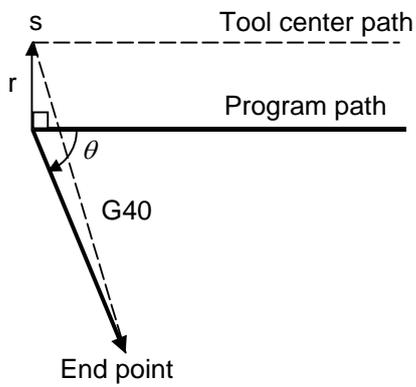


Circular → Linear (Type A)

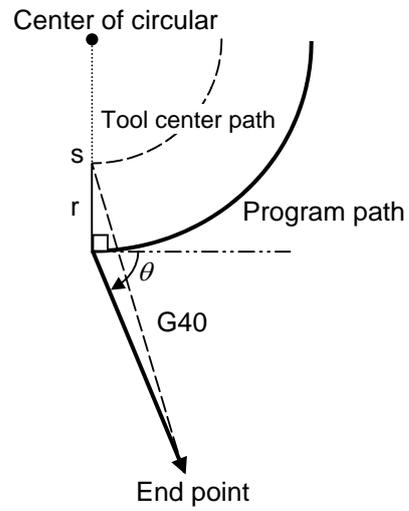

Linear → Linear (Type B)

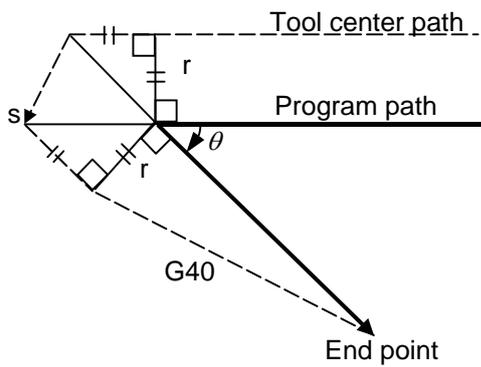

Circular → Linear (Type B)

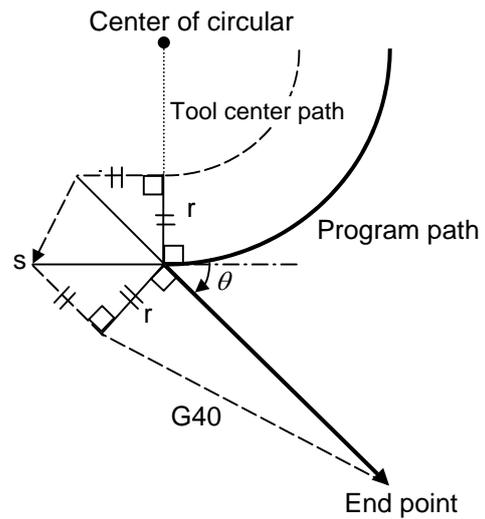

12. Tool Offset Functions



12.3 Tool radius compensation

12.3.2 Other operations during tool radius compensation



Insertion of corner arc

An arc that uses the compensation amount as the radius is inserted without calculating the point of intersection at the workpiece corner when G39 (corner arc) is commanded.

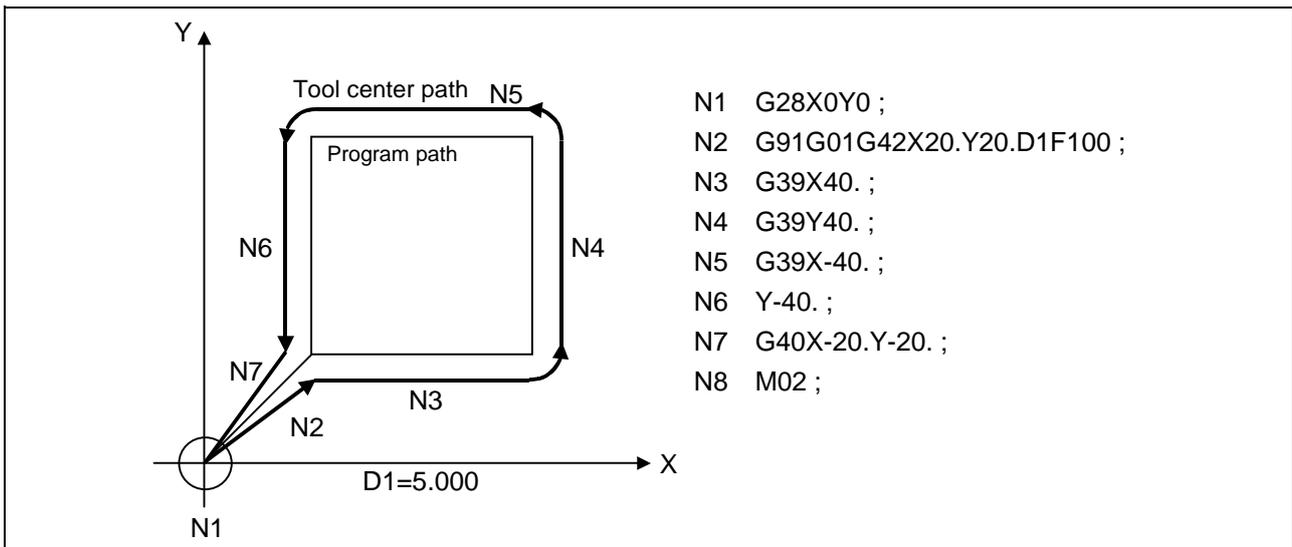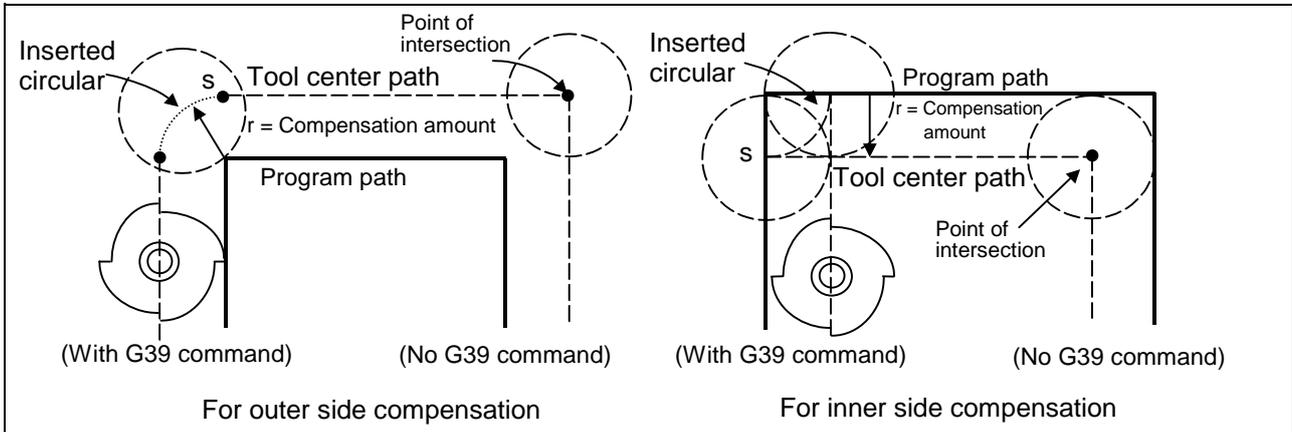

Changing and holding of compensation vector

The compensation vector can be changed or held during tool diameter compensation by using the G38 command.

- (1) Holding of vector: When G38 is commanded in a block having a movement command, the point of intersection will not be calculated at the program end point, and instead the vector of the previous block will be held.


G38 Xx Yy ;
This can be used for pick feed, etc.

- (2) Changing of vector: A new compensation vector direction can be commanded with I, J and K, and a new offset amount with D.

(These can be commanded in the same block as the movement command.)
G38 Ii Jj Dd ; (I, J and K will differ according to the selected plane.)

12. Tool Offset Functions

12.3 Tool radius compensation

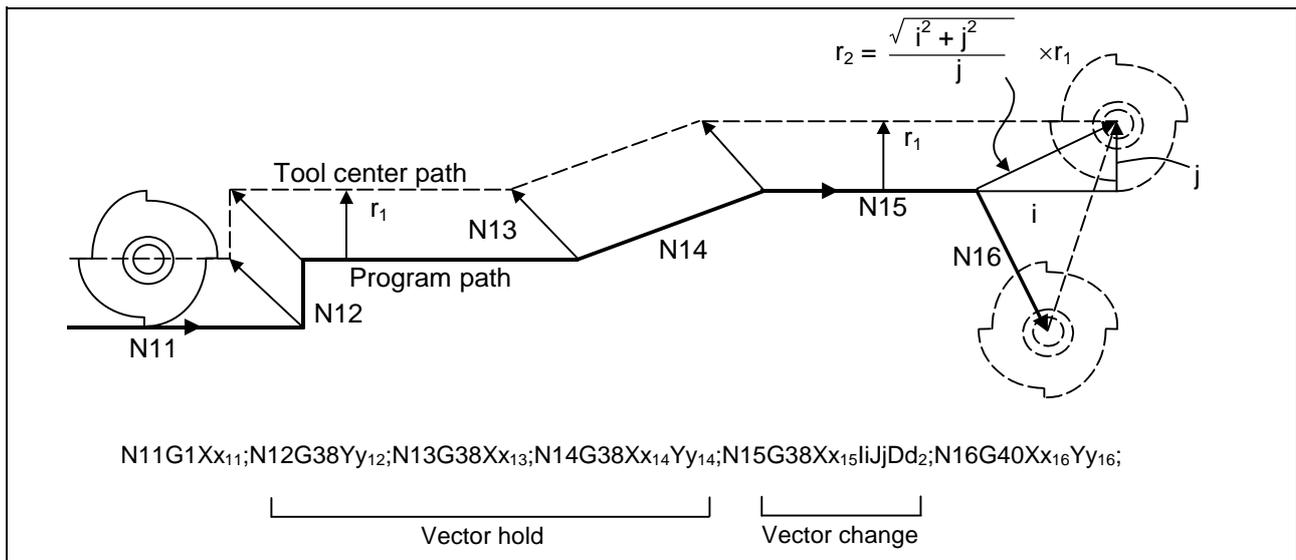


Changing the compensation direction during tool diameter compensation



The compensation direction is determined by the tool diameter compensation commands (G41, G42) and compensation amount sign.

G code \ Compensation amount sign	+	-
	G41	Left-hand compensation
G42	Right-hand compensation	Left-hand compensation

The compensation direction can be changed by changing the compensation command in the compensation mode without the compensation having to be first canceled. However, no change is possible in the compensation start block and the following block.

Refer to section 12.3.5 "Precautions for tool diameter compensation" for the movement when the symbol is changed.

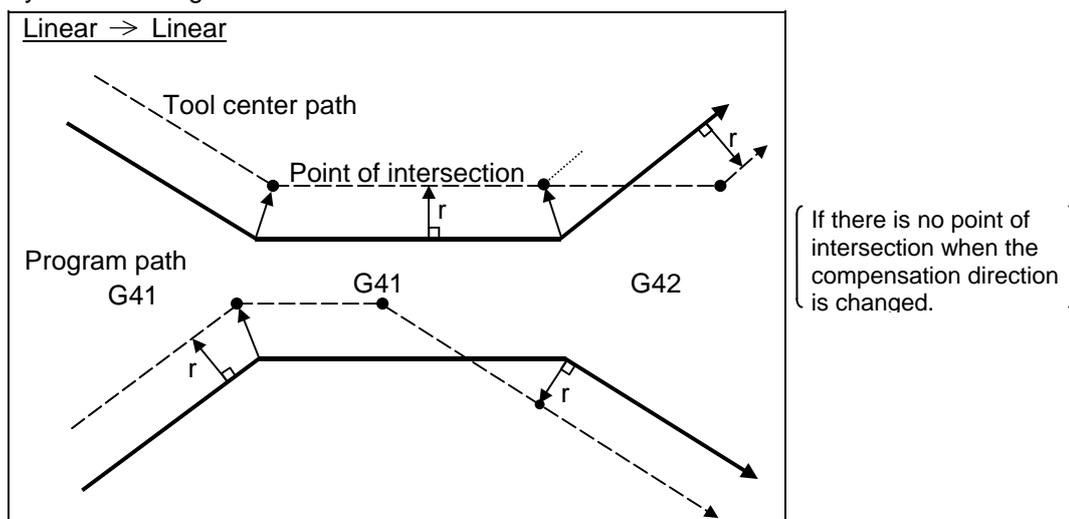

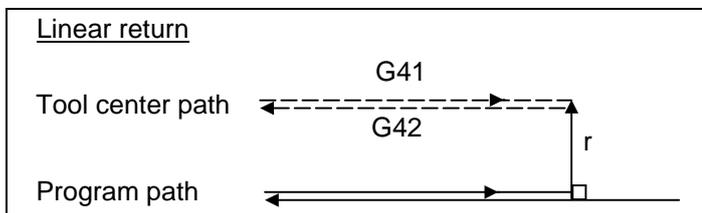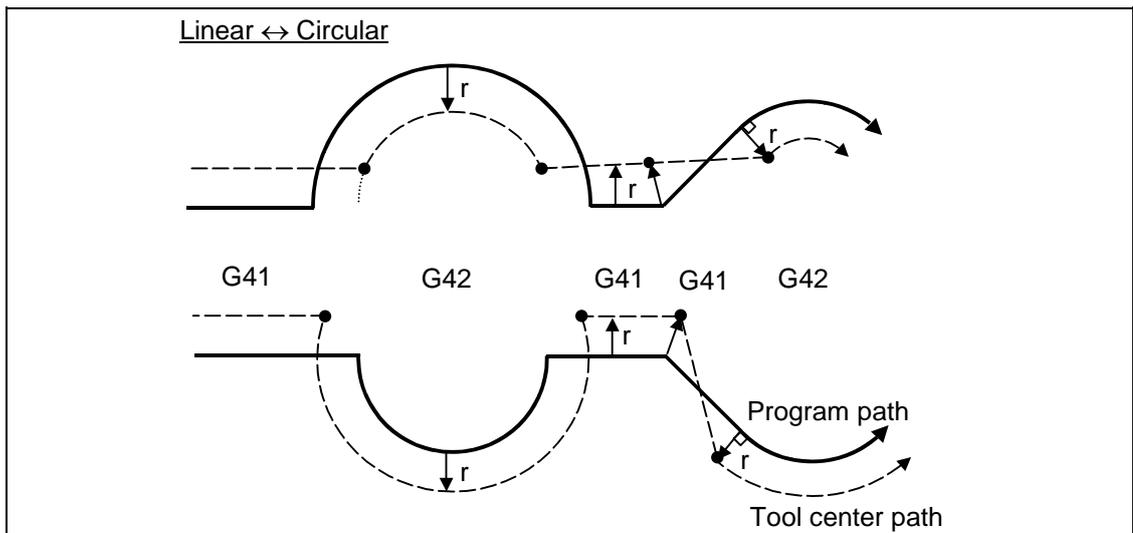

Arc exceeding 360° due to compensation

G42

Program path

Tool center path

G41

Uncut section

G42

In the case below, it is possible that the arc may exceed 360°

- With offset direction selection based on G41/G42
- I, J, K was commanded in G40.


In cases like this the tool center path will pass through a section where the arc is doubled due to the compensation and a section will be left uncut.



Command for eliminating offset vectors temporarily


When the following command is issued in the compensation mode, the offset vectors are temporarily eliminated and a return is then made automatically to the compensation mode. In this case, the compensation is not canceled, and the tool goes directly from the intersection point vector to the point without vectors or, in other words, to the programmed command point. When a return is made to the compensation mode, it goes directly to the intersection point.

(1) Reference point return command

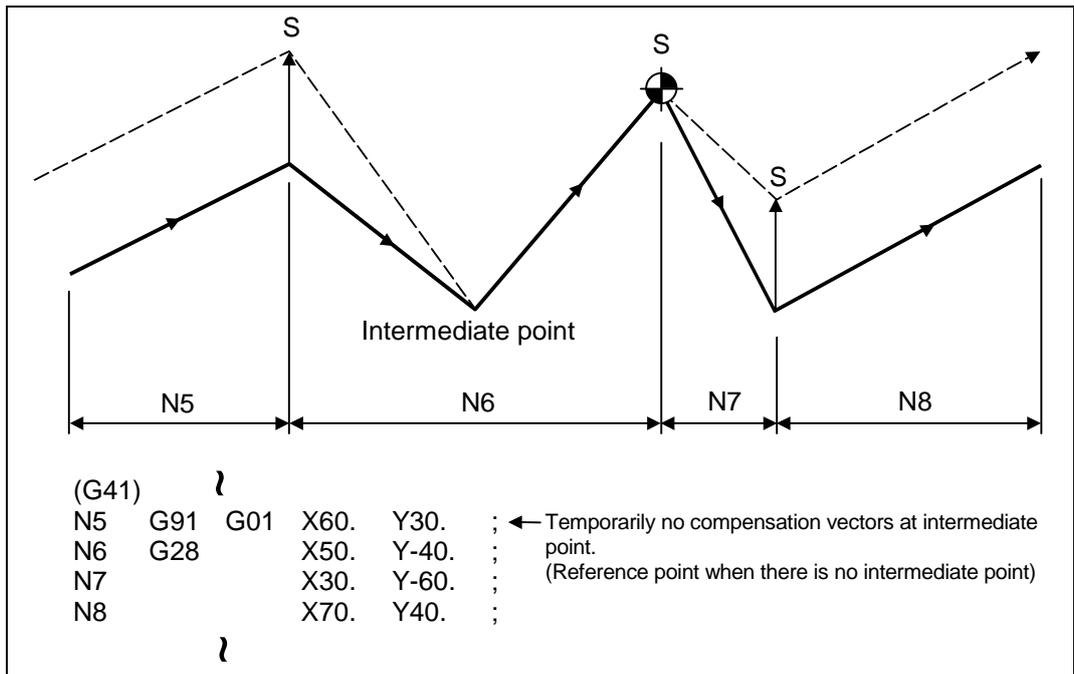

(2) G33 thread cutting command

Tool nose radius compensation does not apply to the G33 block.

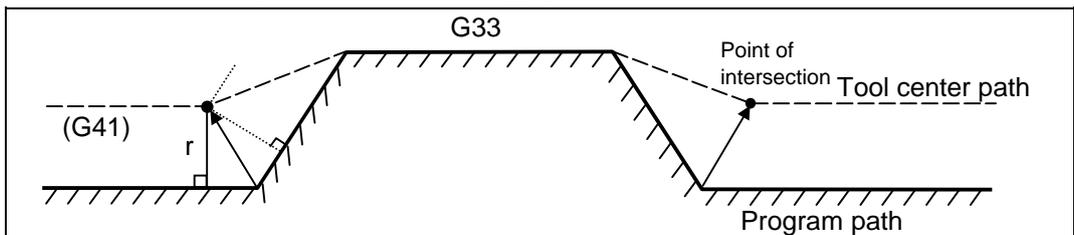

(3) The compensation vector will be eliminated temporarily with the G53 command (basic machine coordinate system selection).

(Note 1) The offset vectors do not change with the coordinate system setting (G92) command.



Blocks without movement and pre-read inhibit M command


The following blocks are known as blocks without movement.

- a. M03 ; M command
 - b. S12 ; S command
 - c. T45 ; T command
 - d. G04 X500 ; Dwell
 - e. G22 X200. Y150. Z100 ; Machining inhibit region setting
 - f. G10 L10 P01 R50 ; Offset amount setting
 - g. G92 X600. Y400. Z500. ; ... Coordinate system setting
 - h. (G17) Z40. ; Movement but not on offset plane
 - i. G90 ; G code only
 - j. G91 X0 ; Zero movement amount Movement amount is zero
- } No movement



M00, M01, M02 and M30 are handled as pre-read inhibit M codes.

(1) When command is assigned at start of the compensation

Perpendicular compensation will be applied on the next movement block.

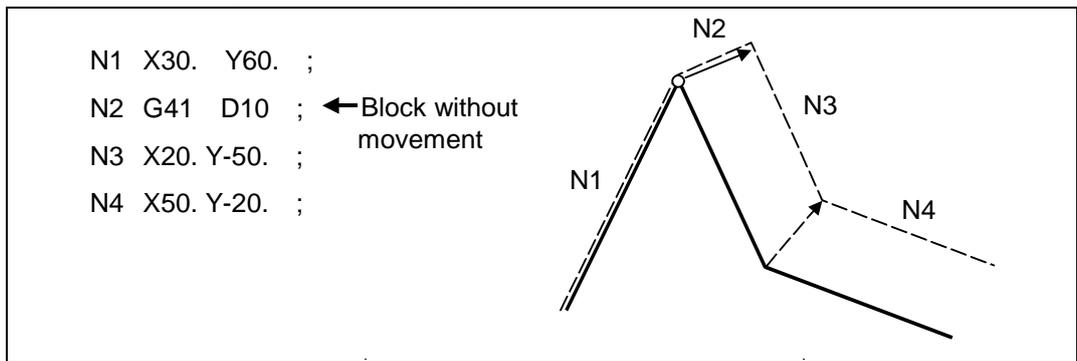


If four or more blocks containing no move command continue or if there is a pre-read inhibit M code, no compensation vector is generated.

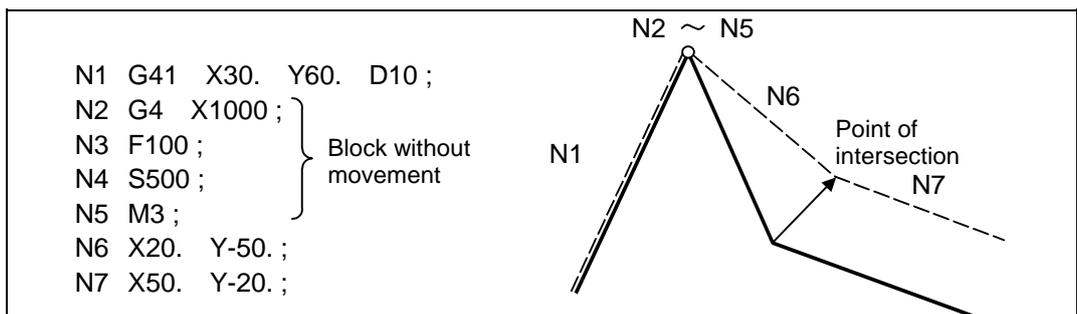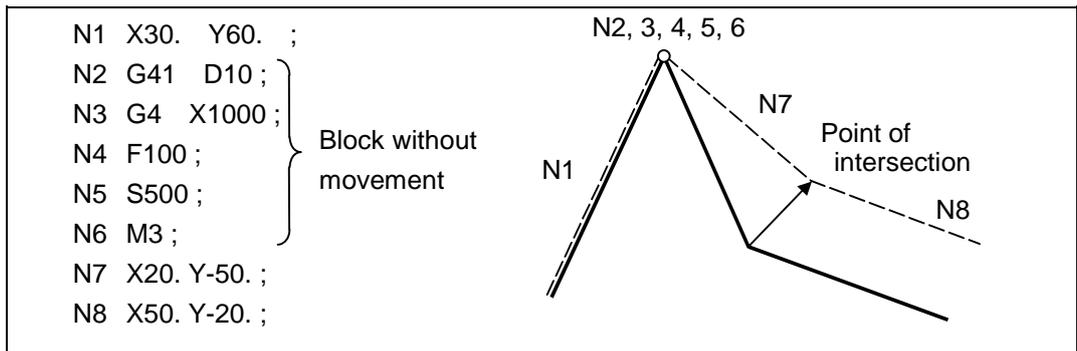


(2) When command is assigned in the compensation mode

When 4 or more blocks without movement follow in succession in the compensation mode or when there is no pre-read inhibit M code, the intersection point vectors will be created as usual.

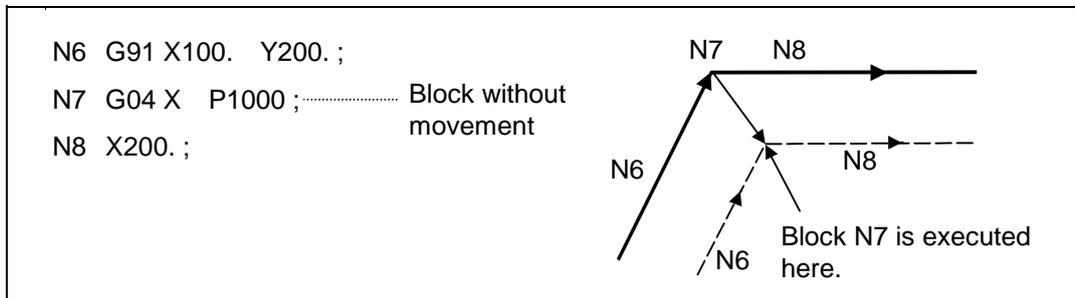


When 4 or more blocks without movement follow in succession or if there is a pre-read inhibit M code, the offset vectors are created perpendicularly at the end point of the previous block.

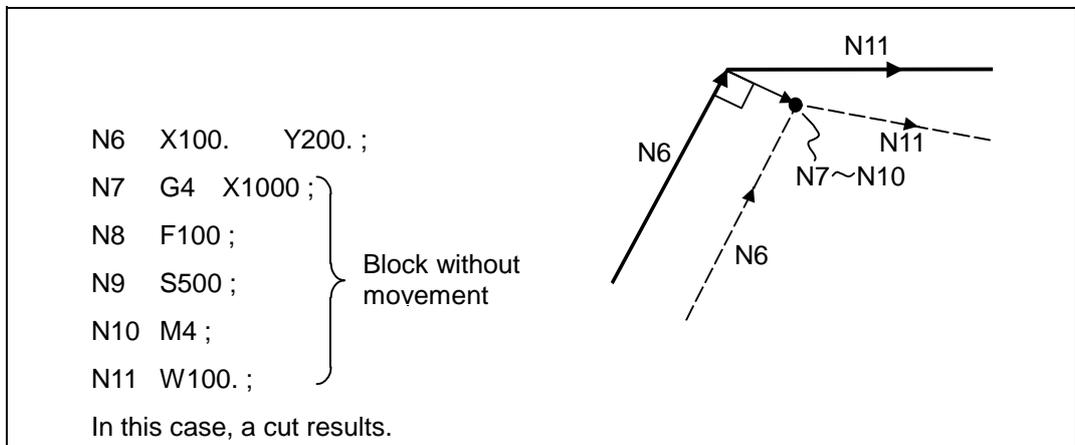

12. Tool Offset Functions


12.3 Tool radius compensation

(3) When commanded together with compensation cancel

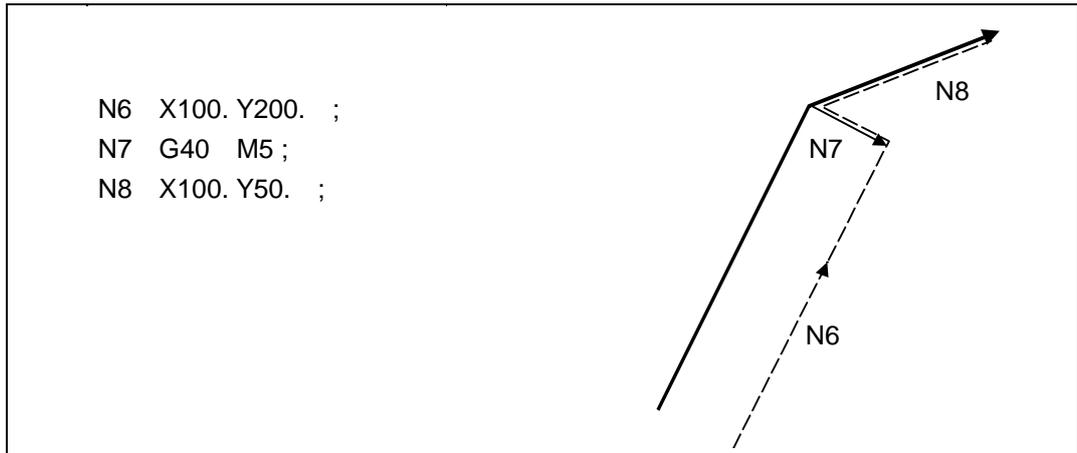


When I, J, K are commanded in G40

- (1) If the final movement command block in the four blocks before the G40 block is the G41 or G42 mode, it will be assumed that the movement is commanded in the vector I, J or K direction from the end point of the final movement command. After interpolating between the hypothetical tool center path and point of intersection, it will be canceled. The compensation direction will not change.

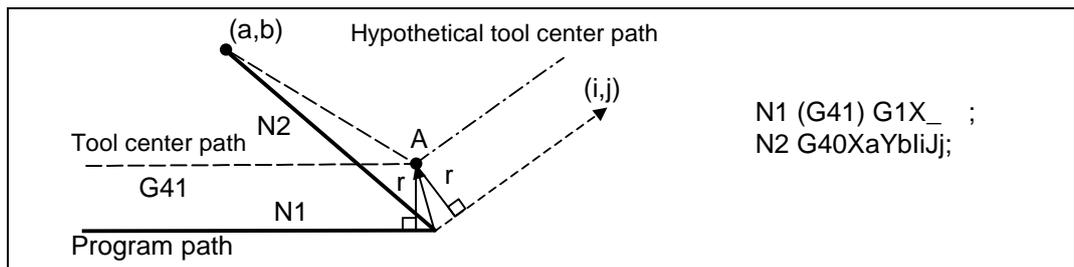


In this case, the point of intersection will always be obtained, regardless of the compensation direction, even when the commanded vector is incorrect as shown below.

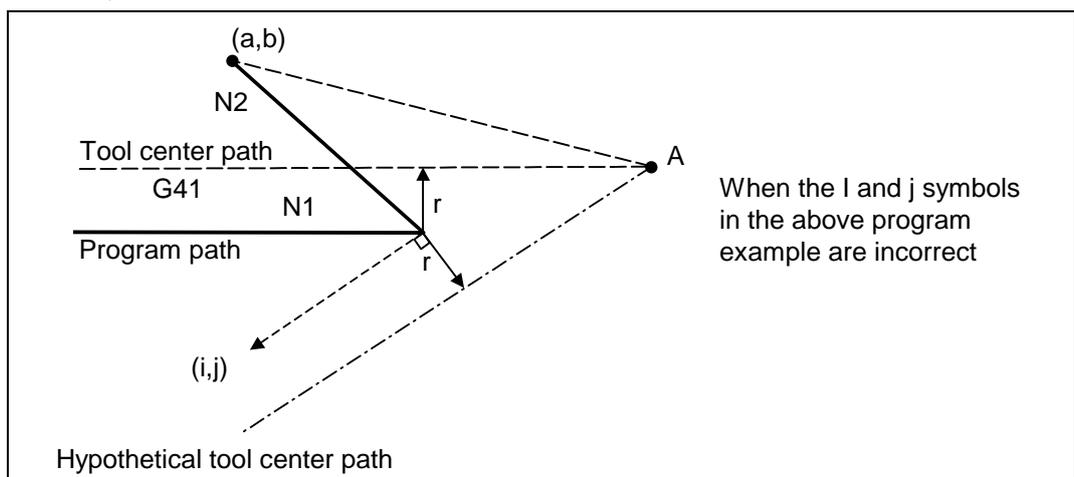


12. Tool Offset Functions

12.3 Tool radius compensation

If the compensation vector obtained with point of intersection calculation is extremely large, a perpendicular vector will be created in the block before G40.

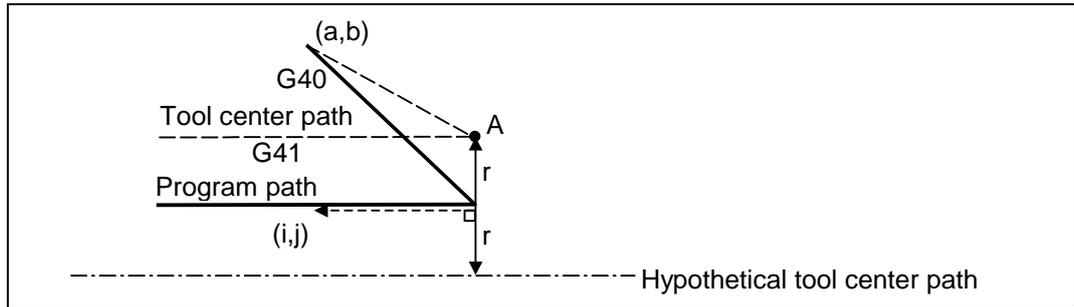

- (2) If the arc is 360° or more due to the details of I, J and K at G40 after the arc command, an uncut section will occur.

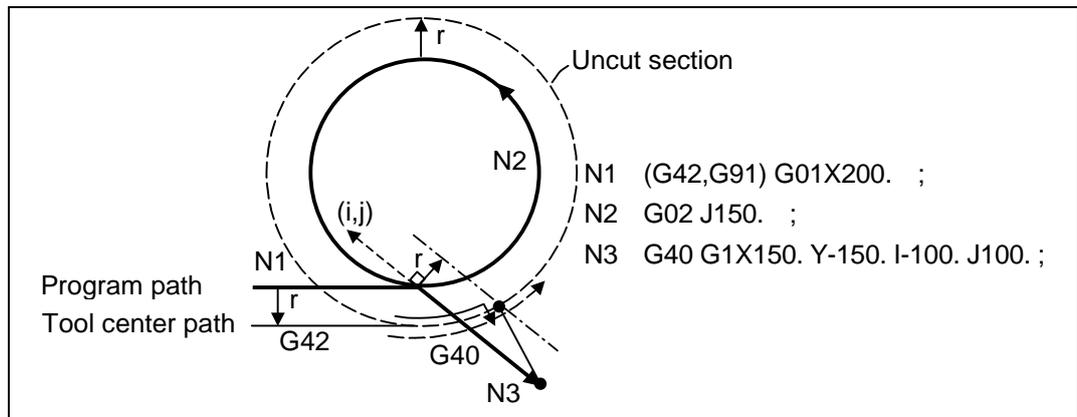


Corner movement

When a multiple number of offset vectors are created at the joints between movement command blocks, the tool will move in a straight line between those vectors.

This action is called corner movement.


When the vectors do not coincide, the tool moves in order to machine the corner although this movement is part and parcel of the joint block. Consequently, operation in the single block mode will execute the previous block + corner movement as a single block and the remaining joining movement + following block will be executed as a single block in the following operation.

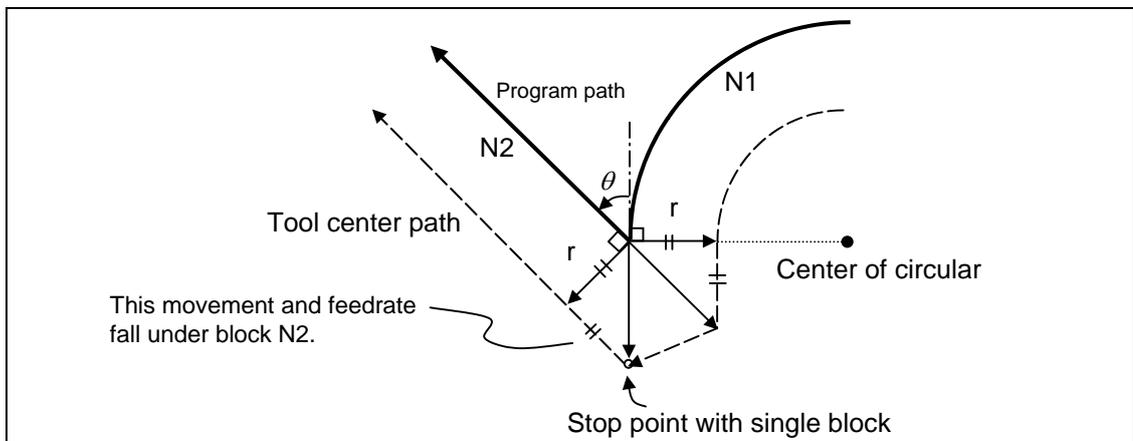

12. Tool Offset Functions

12.3 Tool radius compensation

12.3.3 G41/G42 commands and I, J, K designation

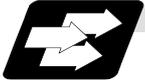

Function and purpose

The compensation direction can be intentionally changed by issuing the G41/G42 command and I, J, K in the same block.



Command format

G17 (XY plane) G41/G42 X__ Y__ I__ J__ ;
G18 (ZX plane) G41/G42 X__ Z__ I__ K__ ;
G19 (YZ plane) G41/G42 Y__ Z__ J__ K__ ;

Assign an linear command (G00, G01) in a movement mode.




I, J type vectors (G17 XY plane selection)


The new I, J type vector (G17 plane) created by this command is now described. (Similar descriptions apply to vector I, K for the G18 plane and to J, K for the G19 plane.)

As shown in the figures, the vectors with a size equivalent to the offset amount are made to serve as the I, J type compensation vector perpendicularly to the direction designated by I, J without the intersection point of the programmed path being calculated. the I, J vector can be commanded even in the mode (G41/G42 mode in the block before) and even at the compensation start (G40 mode in the block before).

(1) When I, J is commanded at compensation start

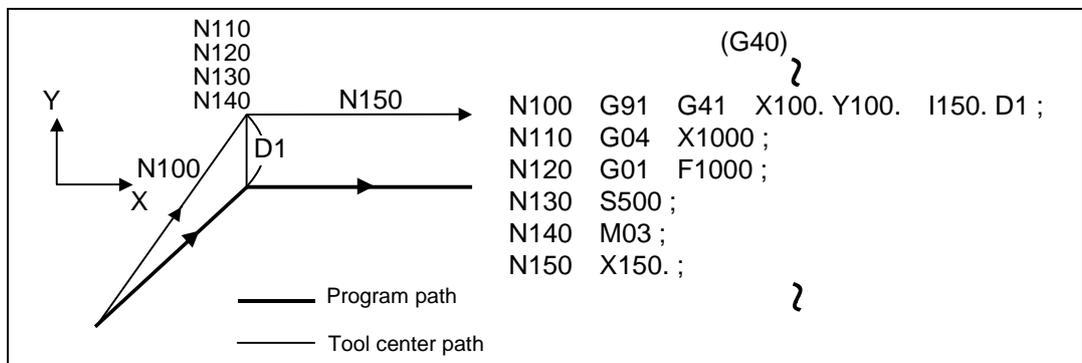


(2) When there are no movement commands at the compensation start.

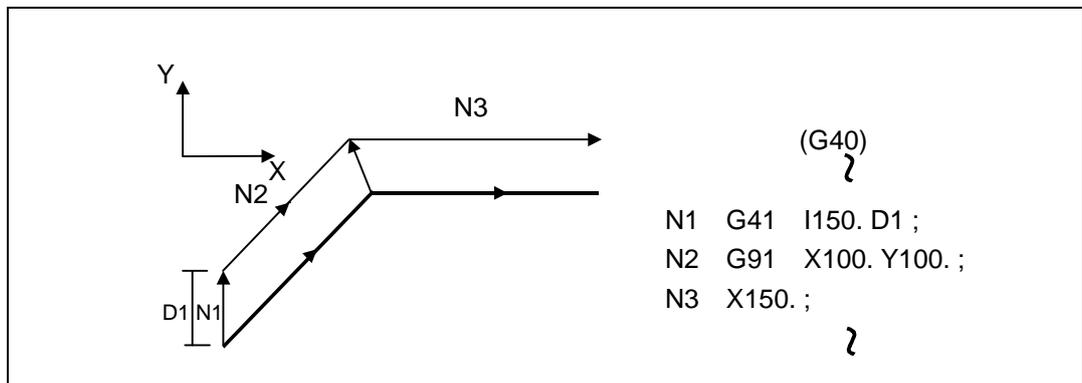

12. Tool Offset Functions


12.3 Tool radius compensation

(3) When I, J has been commanded in the G41/G42 mode (G17 plane)

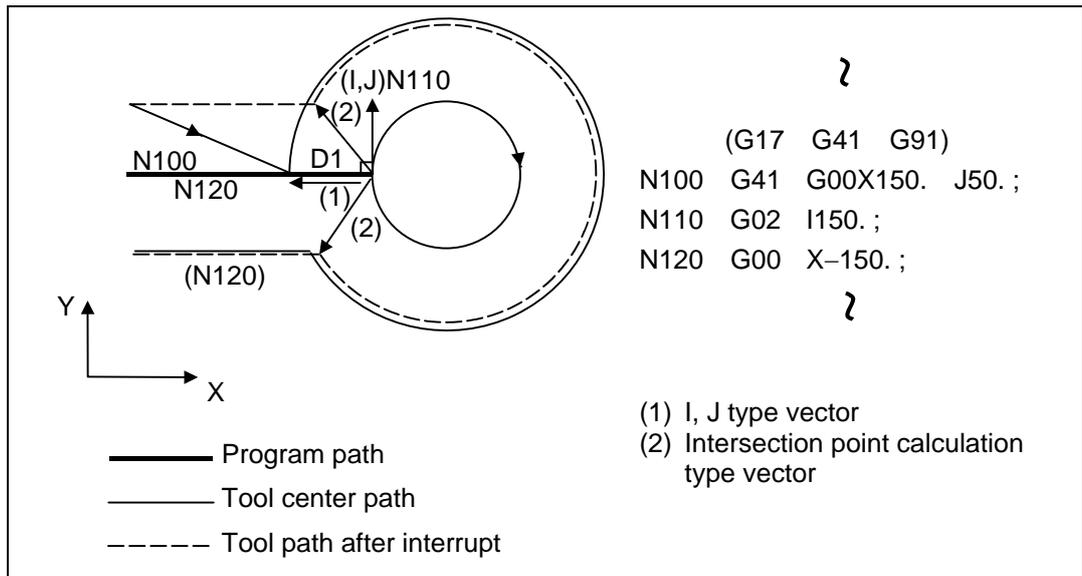


(Reference)

(a) G18 plane

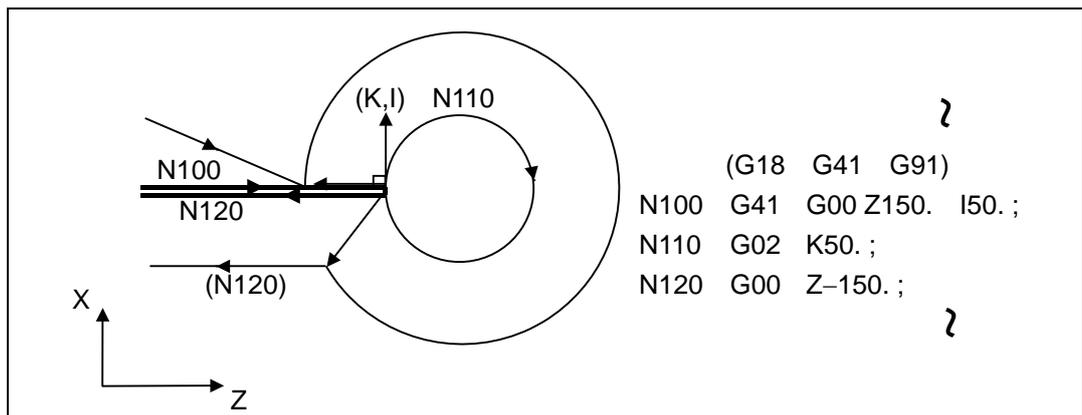


(b) G19 plane

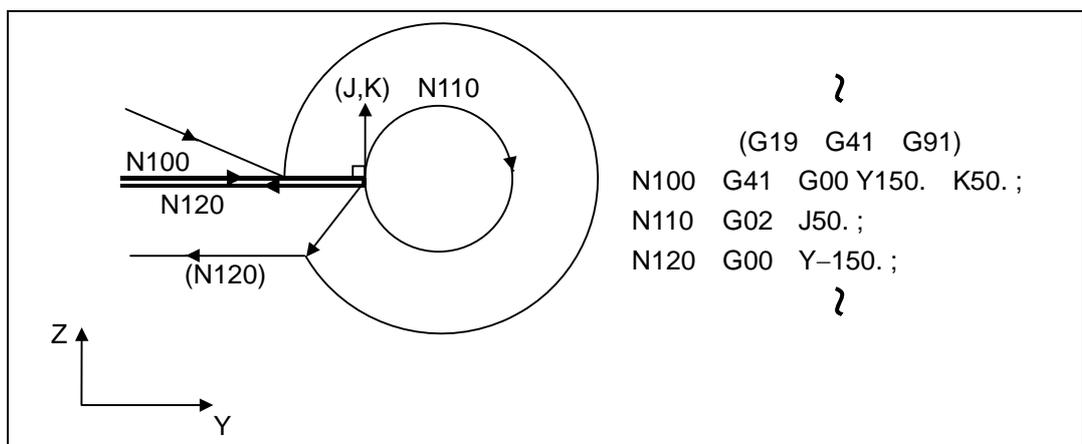

12. Tool Offset Functions

12.3 Tool radius compensation


(4) When I, J has been commanded in a block without movement

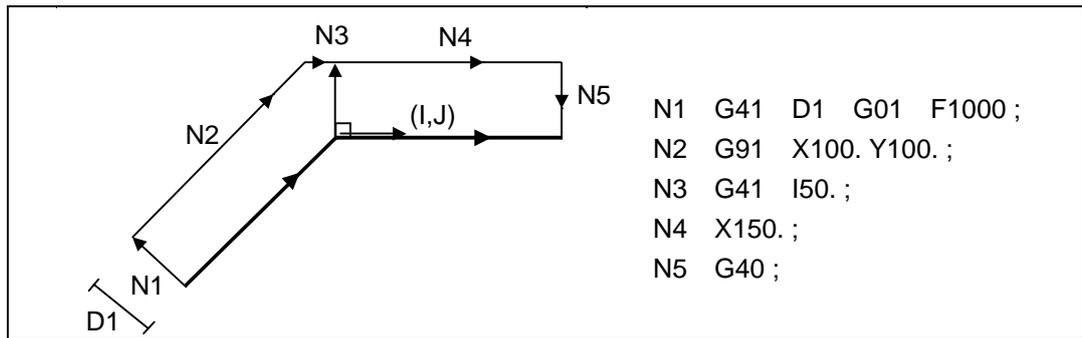

Direction of offset vectors


(1) In G41 mode

Direction produced by rotating the direction commanded by I, J through 90° to the left from the forward direction of the Z axis (axis 3) as seen from the zero point

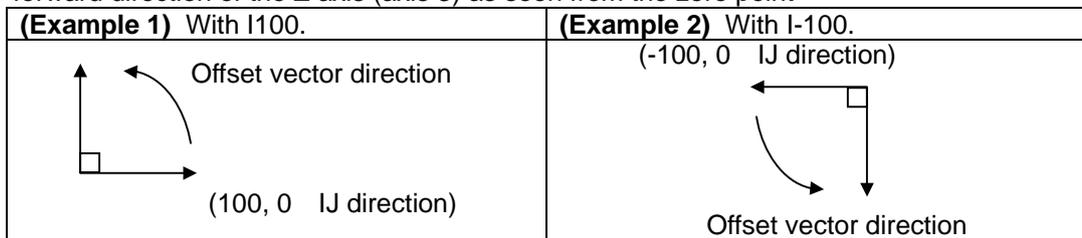

(2) In G42 mode

Direction produced by rotating the direction commanded by I, J through 90° to the right from the forward direction of the Z axis (axis 3) as seen from the zero point

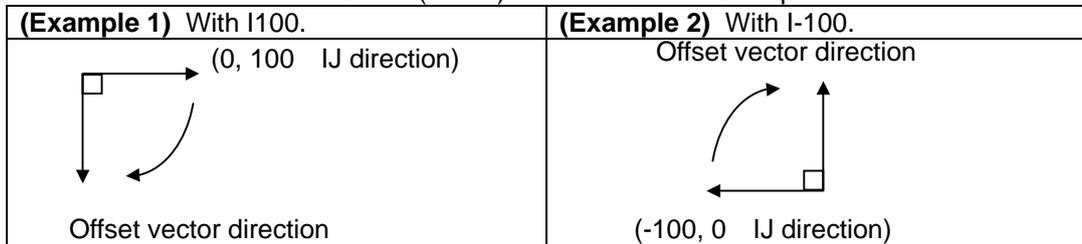


12. Tool Offset Functions

12.3 Tool radius compensation




Selection of offset modal

The G41 or G42 modal can be selected at any time.

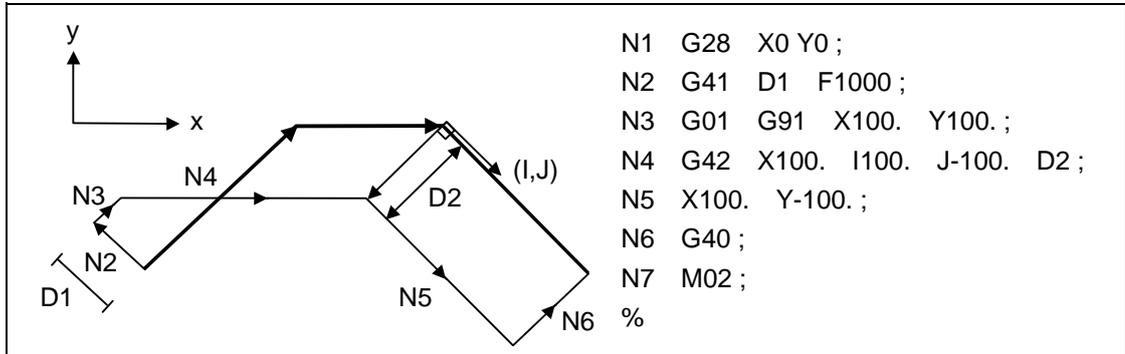


Offset amount for offset vectors

The offset amounts are determined by the offset number (modal) in the block with the I, J designation.

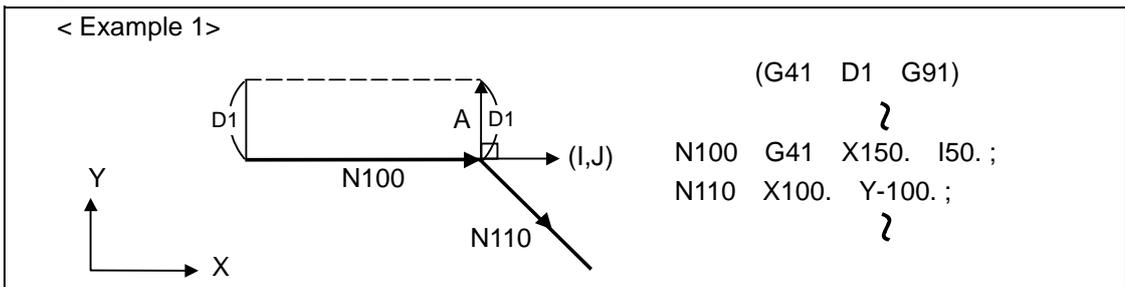

Vector A is the offset amount entered in offset number modal D1 in the N200 block.

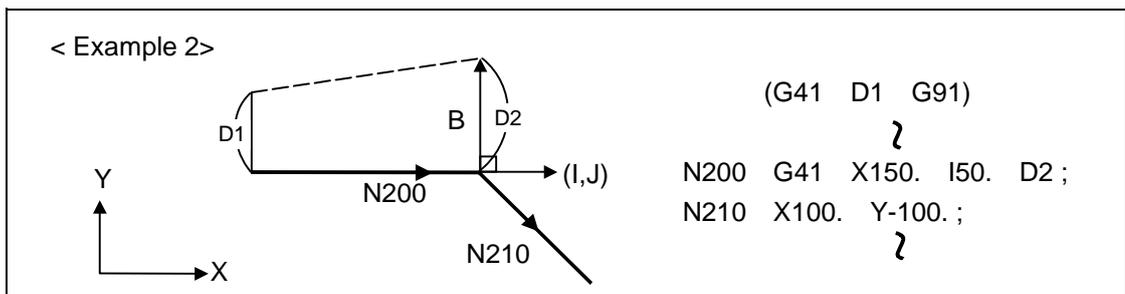


Vector B is the offset amount entered in offset number modal D2 in the N200 block.



Precautions

- (1) Issue the I, J type vector in a linear mode (G0, G1). If it is issued in an arc mode at the start of compensation, program error (P151) will occur.
An IJ designation in an arc mode functions as an arc center designation in the offset mode.
- (2) When the I, J type vector has been designated, it is not deleted (avoidance of interference) even if there is interference.
Consequently, overcutting may arise in such a case.

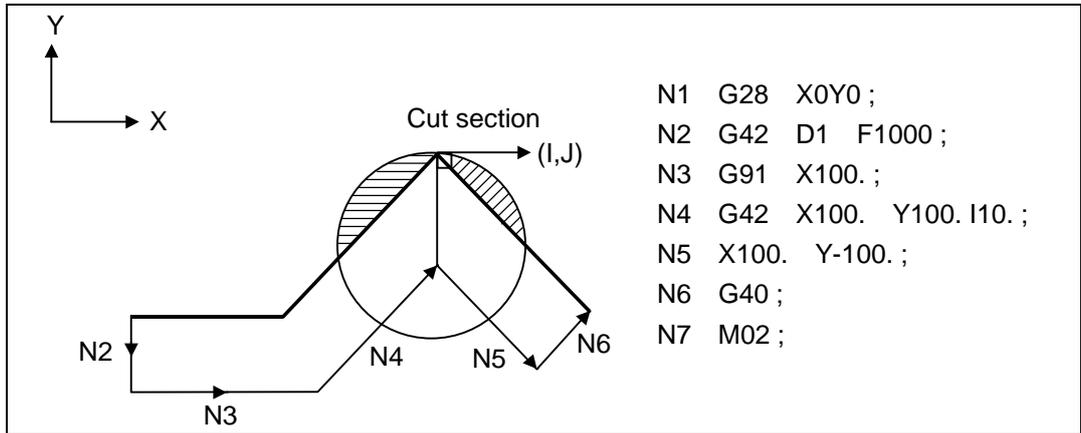

- (3) The vectors differ for the G38 I _J_ (K_) command and the G41/G42 I _J_ (K_) command.


	G38	G41/G42
Example	<pre> } (G41) } G38 G91 X100. I50. J50. ; } </pre>	<pre> } (G41) } G41 G91 X100. I50. J50. ; } </pre>
	<p>(Offset amount)</p>	<p>(Offset amount)</p>
	Vector in IJ direction having an offset amount size	Vector perpendicular in IJ direction and having an offset amount size

12. Tool Offset Functions

12.3 Tool radius compensation

- (4) Refer to the following table for the offset methods based on the presence and/or absence of the G41 and G42 commands and I, J, (K) command.

G41/G42	I, J (K)	Offset method
No	No	Intersection point calculation type vector
No	Yes	Intersection point calculation type vector
Yes	No	Intersection point calculation type vector
Yes	Yes	I, J, type vector No insertion block

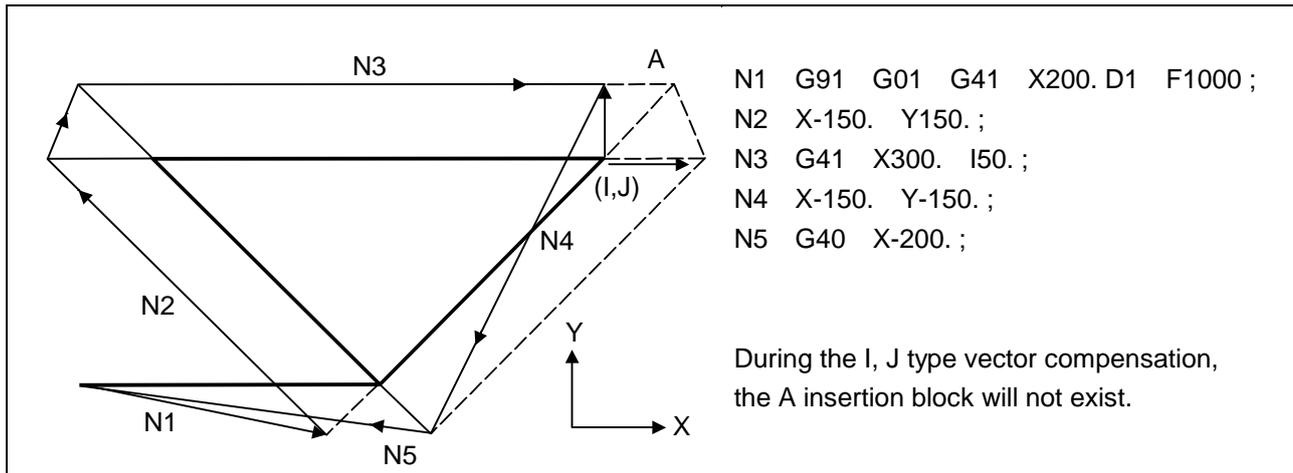

12.3.4 Interrupts during tool radius compensation




MDI interrupt

Tool radius compensation is valid in any automatic operation mode-whether tape, memory or MDI operation.



An interrupt based on MDI will give the result as in the figure below after block stop during tape or memory operation.

(1) Interrupt without movement (tool path does not change)

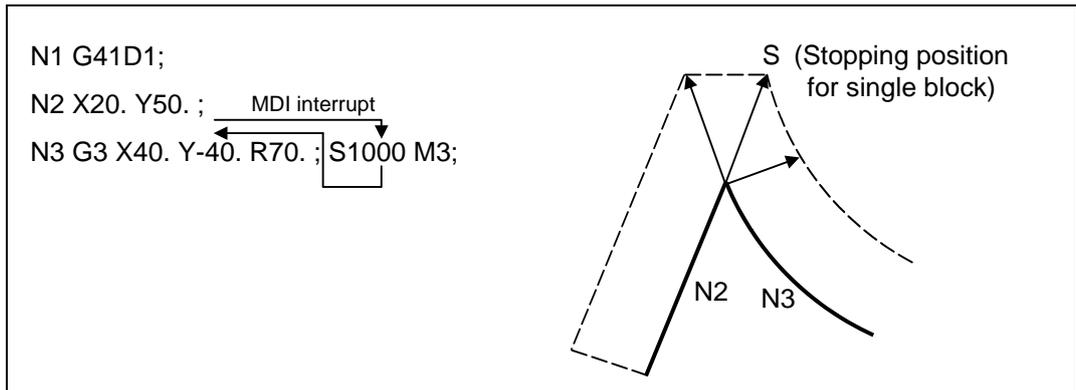

(2) Interrupt with movement

The offset vectors are automatically re-calculated at the movement block after interrupt.

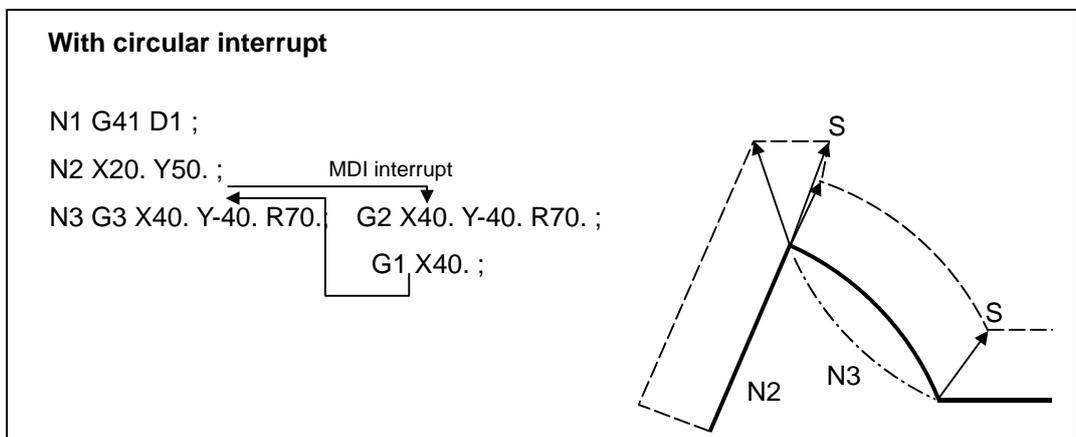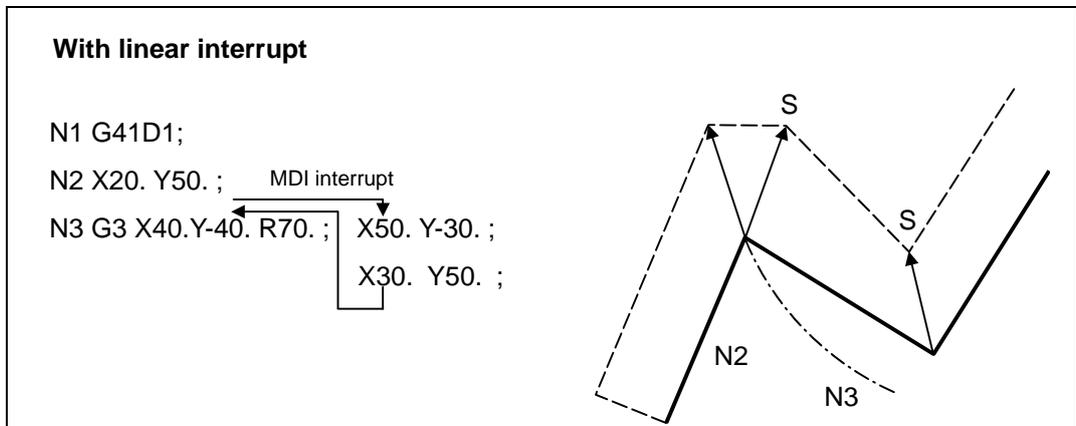




Manual interrupt

(1) Interrupt with manual absolute OFF.



The tool path is shifted by an amount equivalent to the interrupt amount.

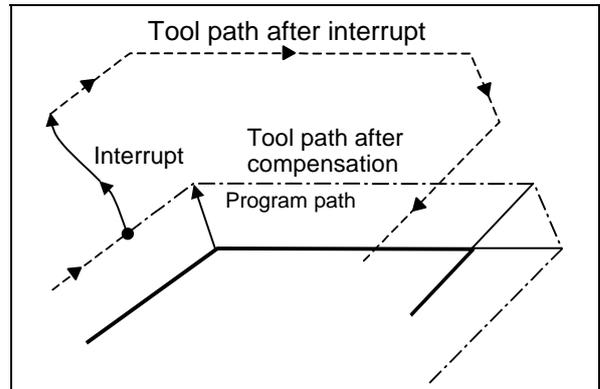

(2) Interrupt with manual absolute ON.

In the incremental value mode, the same operation results as with manual absolute OFF.

In the absolute value mode, however, the tool returns to its original path at the end point of the block following the interrupted block, as shown in the figure.

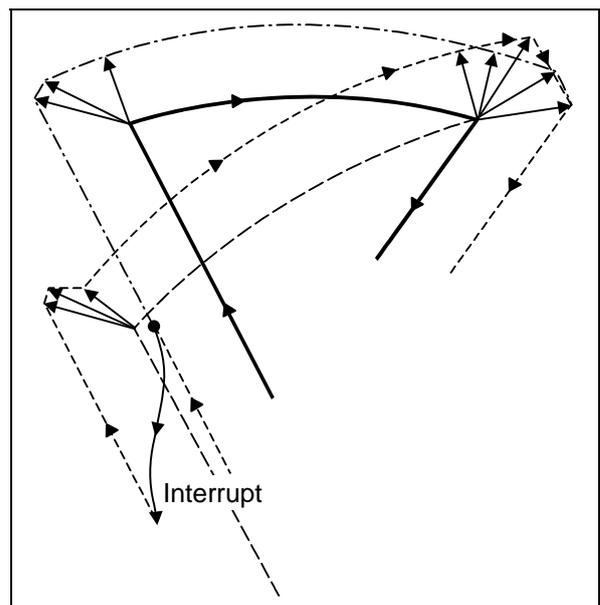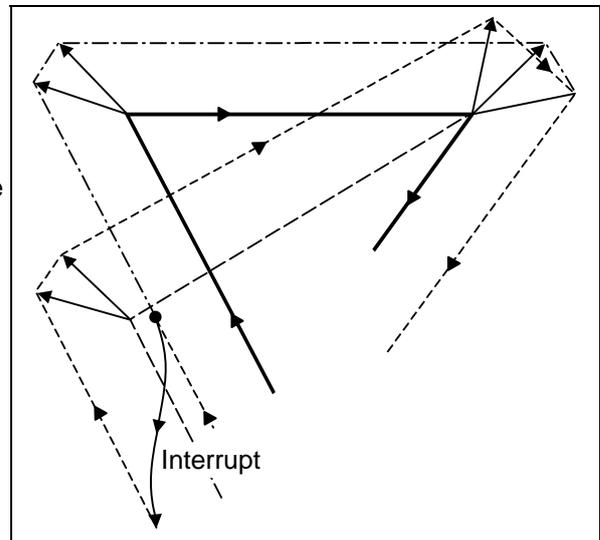

12.3.5 General precautions for tool radius compensation



Precautions

(1) Designating the offset amounts

The offset amounts can be designated with the D code by designating an offset amount No. Once designated, the D code is valid until another D code is commanded. If an H code is designated, the program error (P170) No COMP No will occur.

Besides being used to designate the offset amounts for tool radius compensation, the D codes are also used to designate the offset amounts for tool position offset.

(2) Changing the offset amounts


Offset amounts are normally changed when a different tool has been selected in the compensation cancel mode. However, when an amount is changed in the compensation mode, the vectors at the end point of the block are calculated using the offset amount designated in that block.

(3) Offset amount symbols and tool center path


If the offset amount is negative (-), the figure will be the same as if G41 and G42 are interchanged. Thus, the axis that was rotating around the outer side of the workpiece will rotate around the inner side, and vice versa.

An example is shown below. Normally, the offset amount is programmed as positive (+). However, if the tool path center is programmed as shown in (a) and the offset amount is set to be negative (-), the movement will be as shown in (b). On the other hand, if the program is created as shown in (b) and the offset amount is set to be negative (-), the movement will be as shown in (a). Thus, only one program is required to execute machining of both male and female shapes. The tolerance for each shape can be randomly determined by adequately selecting the offset amount.

(Note that a circle will be divided with type A when compensation is started or canceled.)

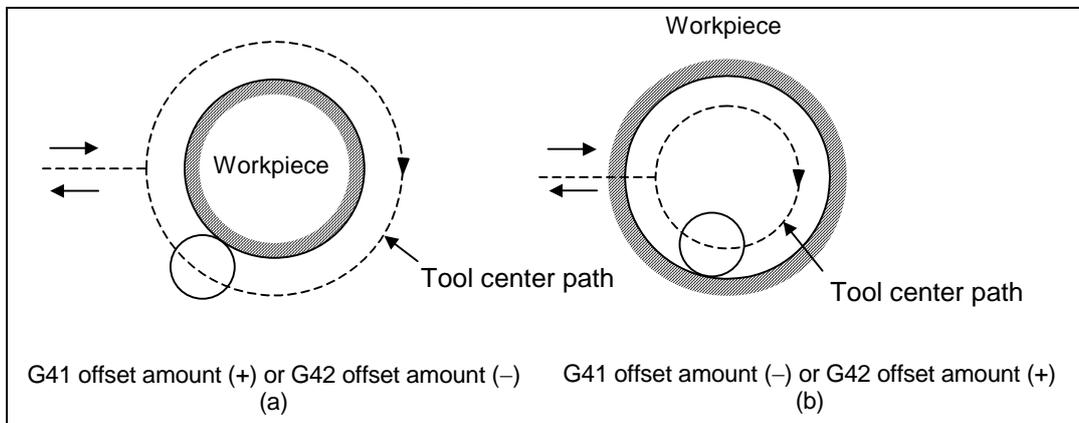

12.3.6 Changing of offset No. during compensation mode

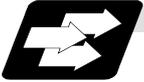

Function and purpose

As a principle, the offset No. must not be changed during the compensation mode. If changed, the movement will be as shown below.

When offset No. (offset amount) is changed:

G41 G01 Dr1 ;


$\alpha = 0, 1, 2, 3$

N101 G0 α Xx1 Yy1 ;


N102 G0 α Xx2 Yy2 Dr2 ; Offset No. changed

N103 Xx3 Yy3 ;


(1) During linear \rightarrow linear

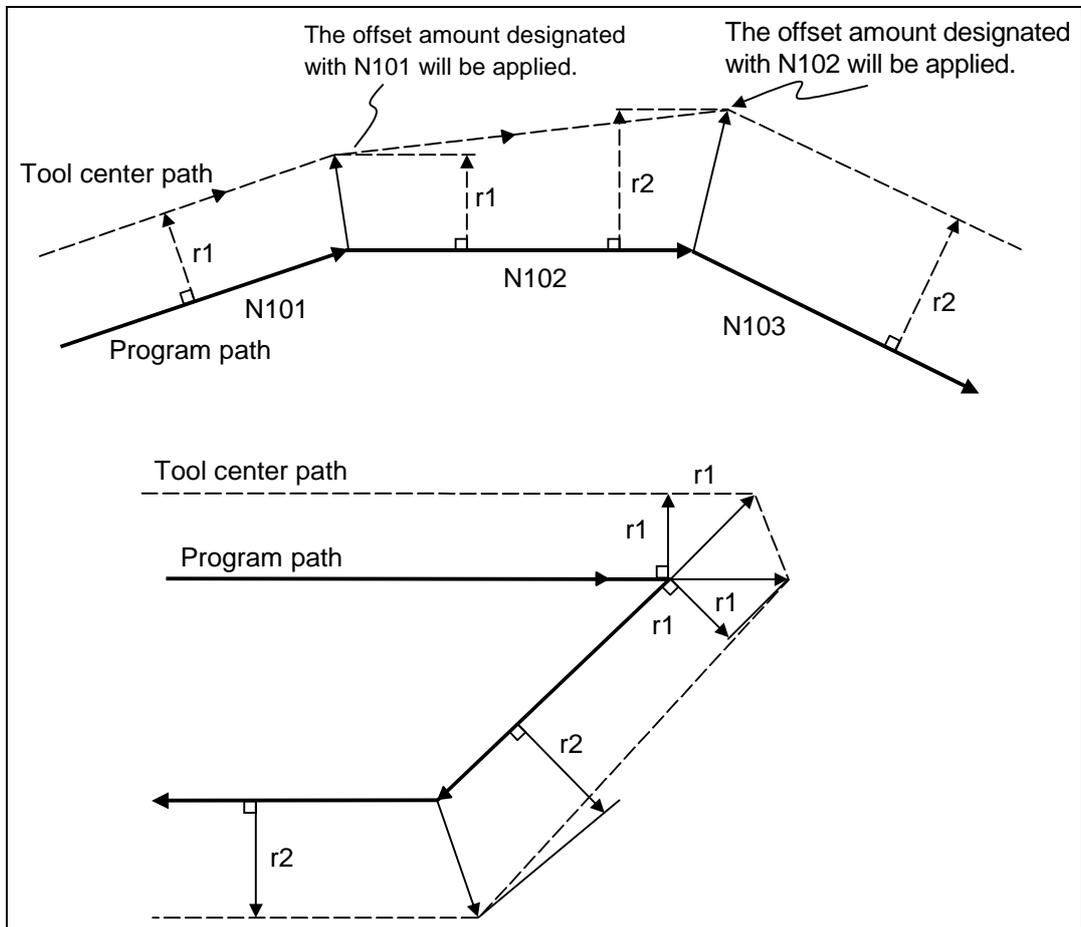

(2) Linear \rightarrow circular

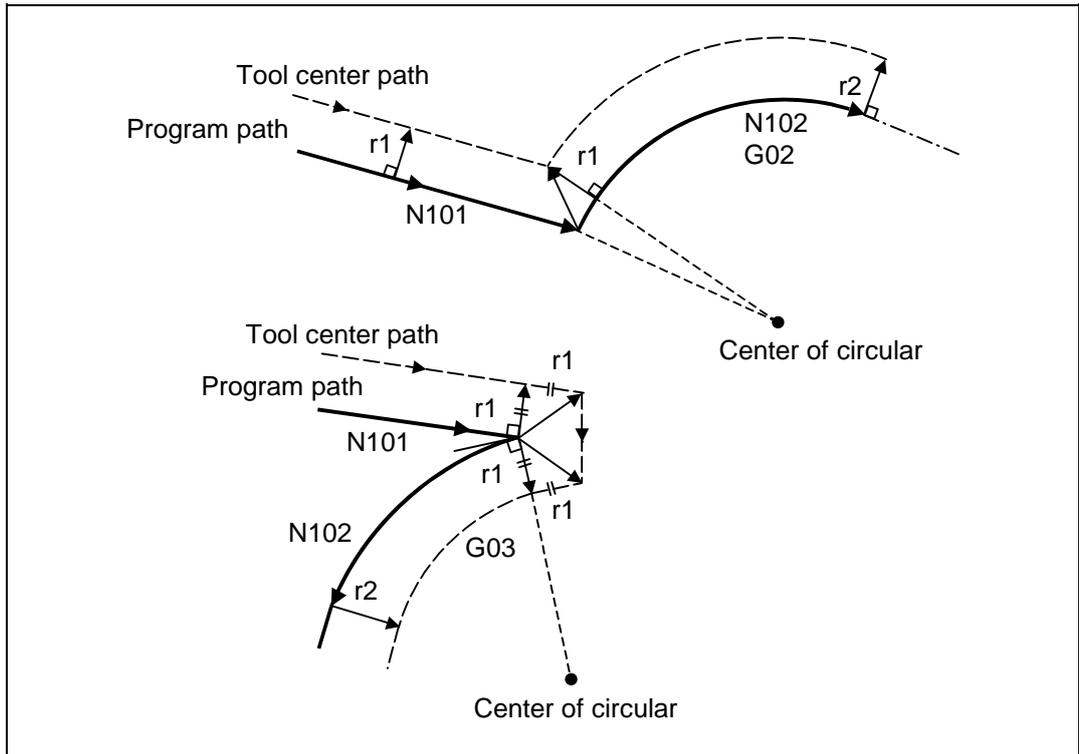


(3) Circular \rightarrow circular

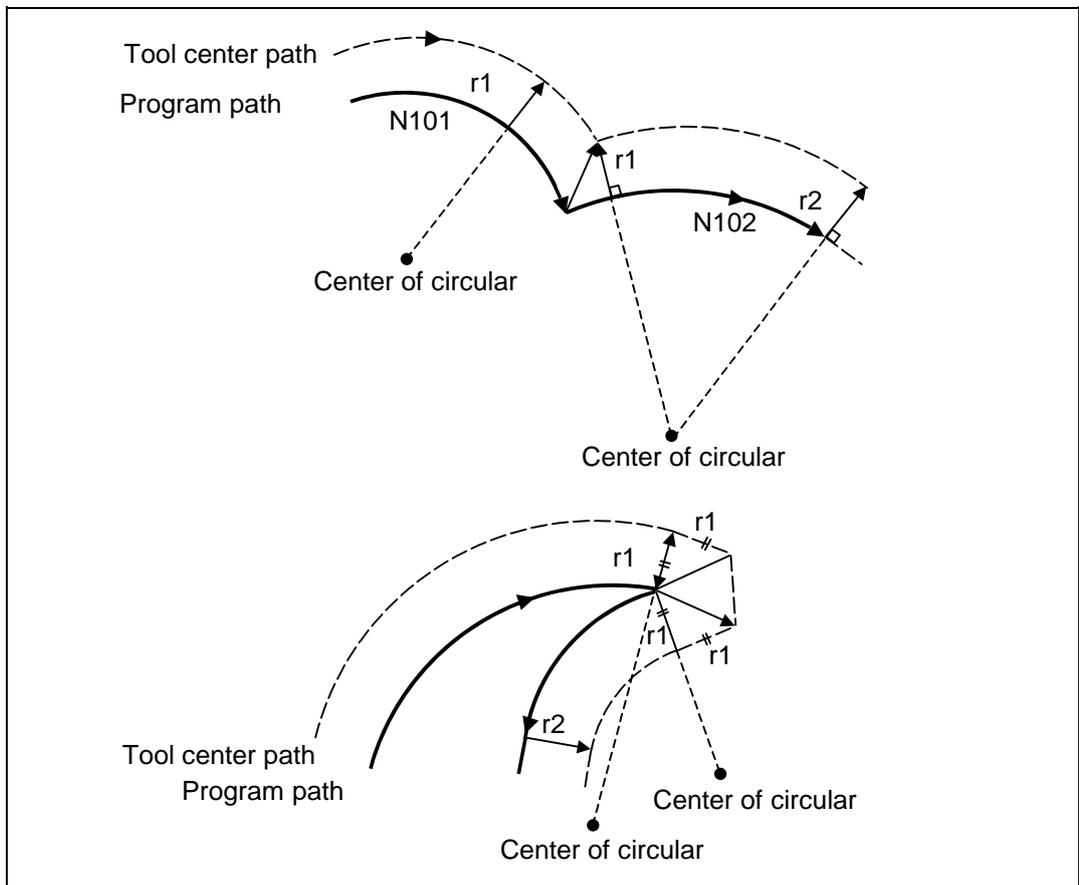

12. Tool Offset Functions

12.3 Tool radius compensation

12.3.7 Start of tool radius compensation and Z axis cut in operation

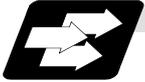


Function and purpose

Often when starting cutting, a method of applying a radius compensation (normally the XY plane) beforehand at a position separated for the workpiece, and then cutting in with the Z axis is often used. When using this method, create the program so that the Z axis movement is divided into the two steps of rapid traverse and cutting feed after nearing the workpiece.




Example of program

When the following type of program is created:

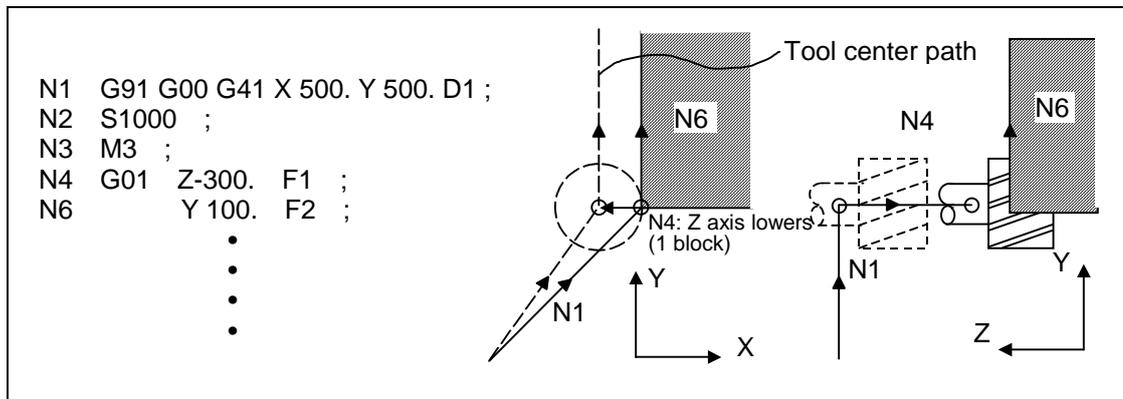

With this program, at the start of the N1 compensation the program will be read to the N6 block. The relation of N1 and N6 can be judged, and correct compensation can be executed as shown above.

If the above program's N4 block is divided into two

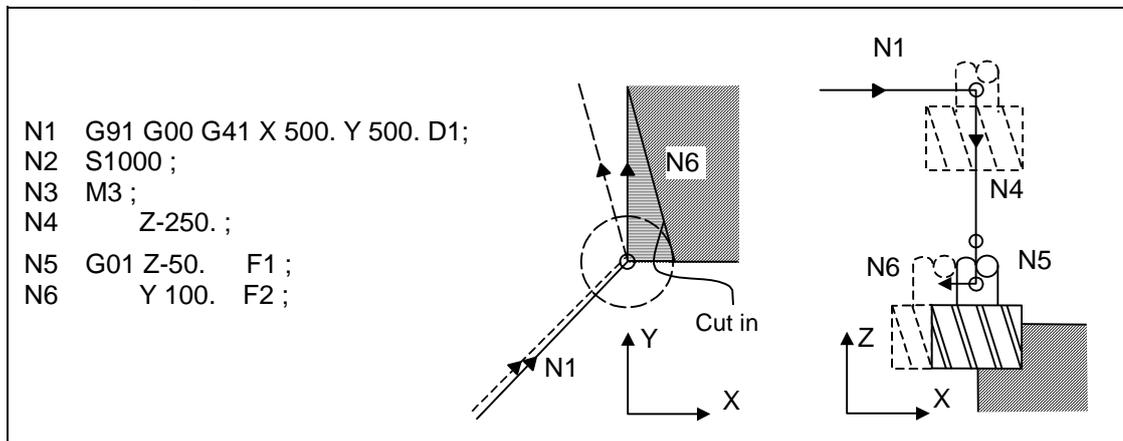


In this case, the four blocks N2 to N5 do not have a command in the XY plane, so when the N1 compensation is started, the program cannot be read to the N6 block.

As a result, the compensation is done based only on the information in the N1 block, and the compensation vector is not created at the start of compensation. Thus, an excessive cut in occurs as shown above.

12. Tool Offset Functions


12.3 Tool radius compensation

In this case, consider the calculation of the inner side, and before the Z axis cutting, issue a command in the same direction as the direction that the Z axis advances in after lowering, to prevent excessive cutting.

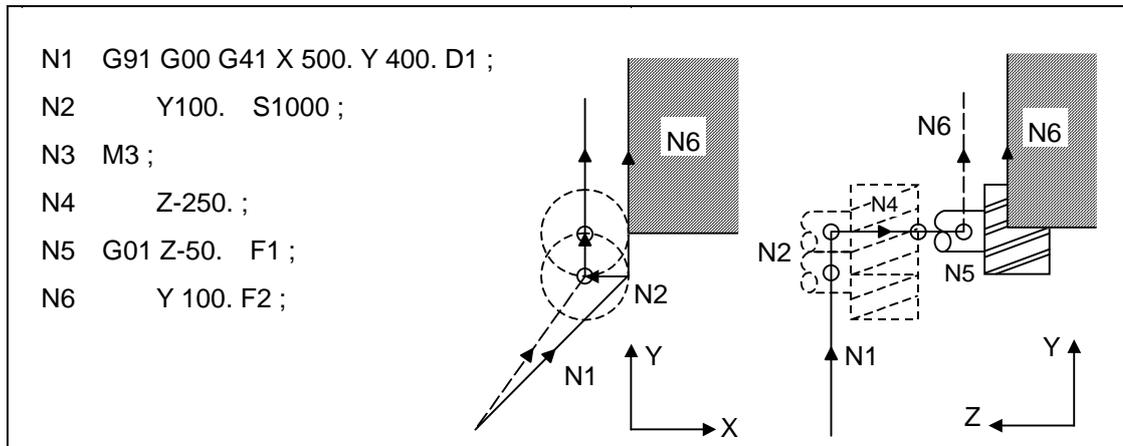

The movement is correctly compensated as the same direction as the N6 advance direction is commanded in N2.

12.3.8 Interference check

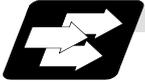

Function and purpose

(1) Outline

A tool, whose radius has been compensated with the tool radius compensation function by the usual 2-block pre-read, may sometimes cut into the workpiece. This is known as interference, and interference check is the function which prevents this from occurring.

There are three types of interference check, as indicated below, and each can be selected for use by parameter.


Function	Parameter	Operation
Interference check alarm function	#8102 : OFF #8103 : OFF	A program error results before the execution of the block in which the cut arises, and operation stops.
Interference check avoidance function	#8102 : ON #8103 : OFF	The tool path is changed so that workpiece is not cut into.
Interference check invalid function	#8103 : ON	Cutting proceeds unchanged even when it occurs. Use this for microscopic segment programs.

(Note) #8102 COLL. ALM OFF (interference check avoidance)
#8103 COLL. CHK OFF (interference check invalid)



Detailed description

(Example)

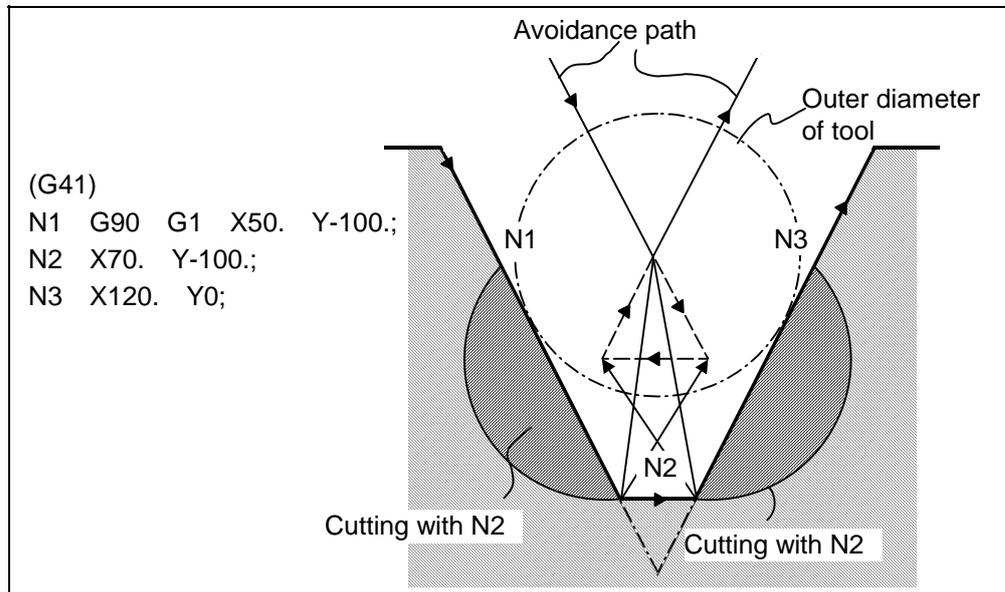

(1) With alarm function

The alarm occurs before N1 is executed and so, using the edit function, N1 can be changed as below and machining can be continued :


```
N1 G90 G1 X20. Y-40. ;
```

(2) With avoidance function

The intersection point of N1 and N3 is calculated and the interference avoidance vectors are created.

(3) With interference check invalid function

The tool passes while cutting the N1 and N3 line.

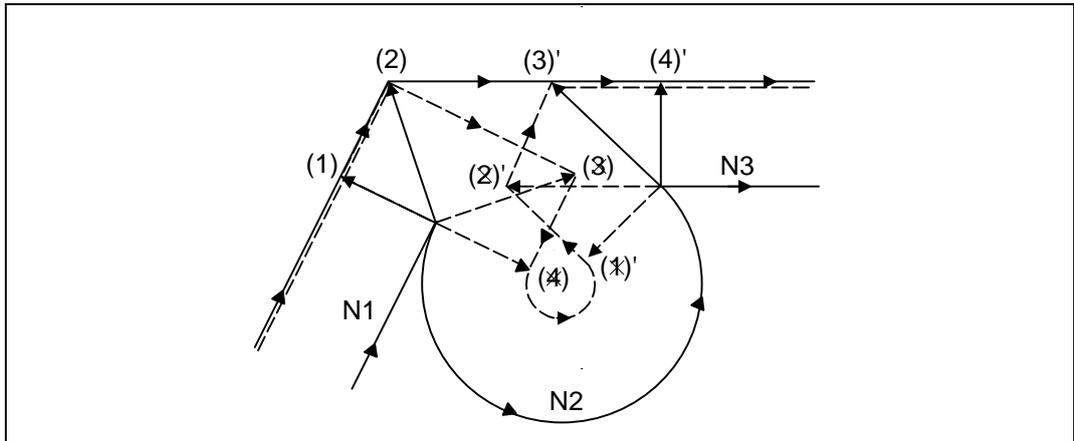

Example of interference check


- | | | |
|------------------------|-------------------|------------------------|
| Vectors (1) (4)' check | → No interference | |
| ↓ | | |
| Vectors (2) (3)' check | → No interference | |
| ↓ | | |
| Vectors (3) (2)' check | → Interference → | Erase vectors (3) (2)' |
| | | ↓ |
| | | Erase vectors (4) (1)' |

With the above process, the vectors (1), (2), (3)' and (4)' will remain as the valid vectors, and the path that connects these vectors will be executed as the interference avoidance path.




Conditions viewed as interference

If there is a movement command in three of the five pre-read blocks, and if the compensation calculation vectors created at the contacts of each movement command intersect, it will be viewed as an interference.

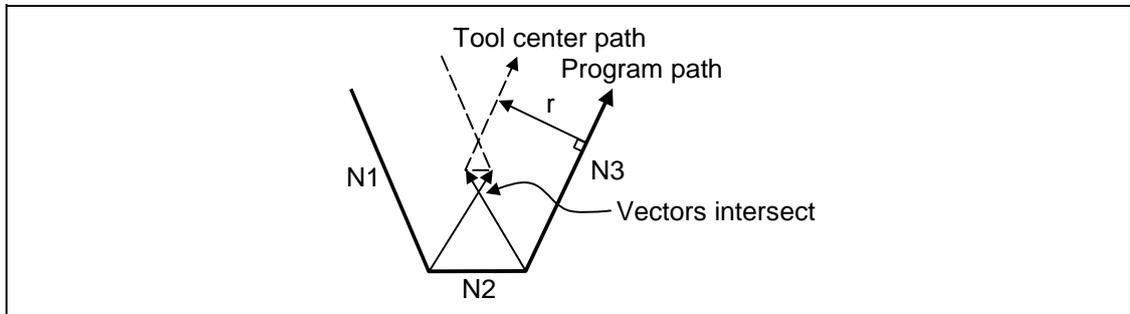

When interference check cannot be executed



- (1) When three of the movement command blocks cannot be pre-read
(When there are three or more blocks in the five pre-read blocks that do not have movement)
- (2) When there is an interference following the fourth movement block

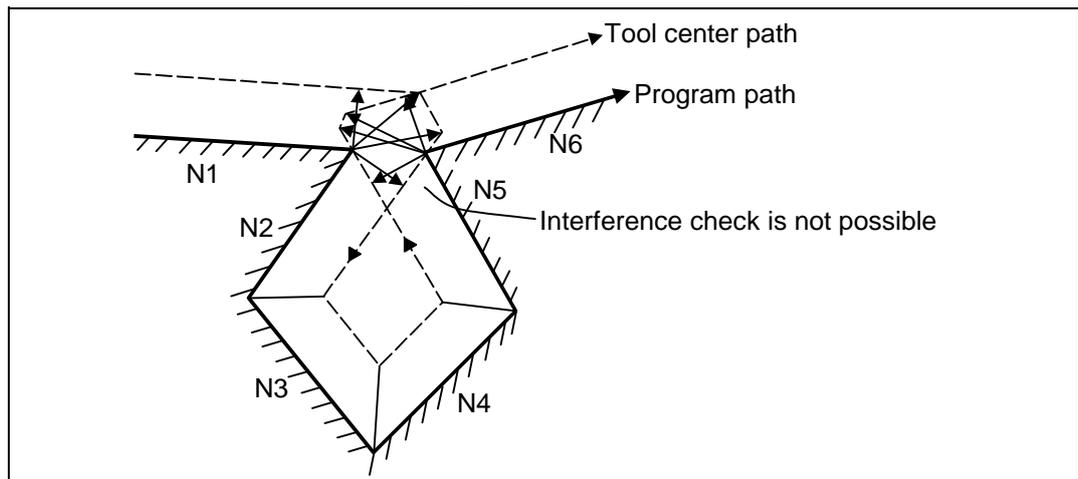





Operation during interference avoidance

The movement will be as shown below when the interference avoidance check is used.

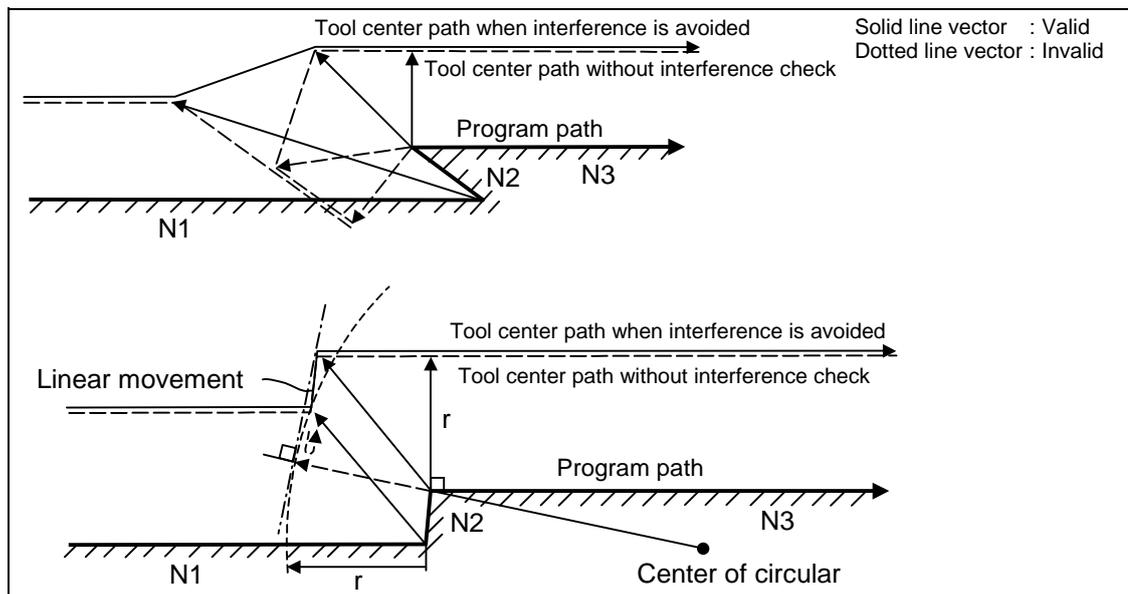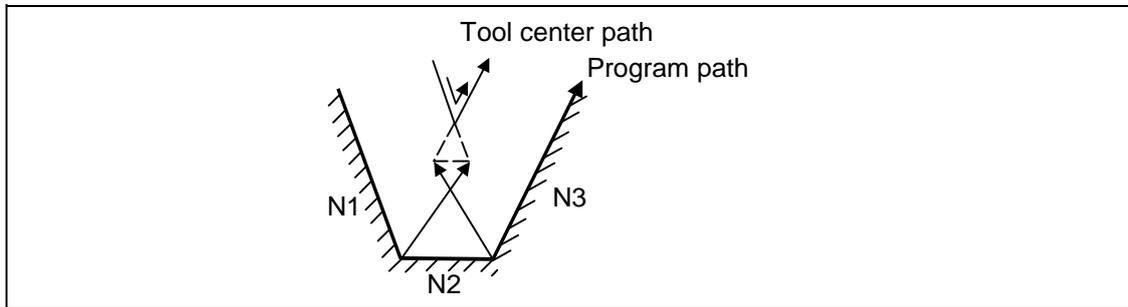

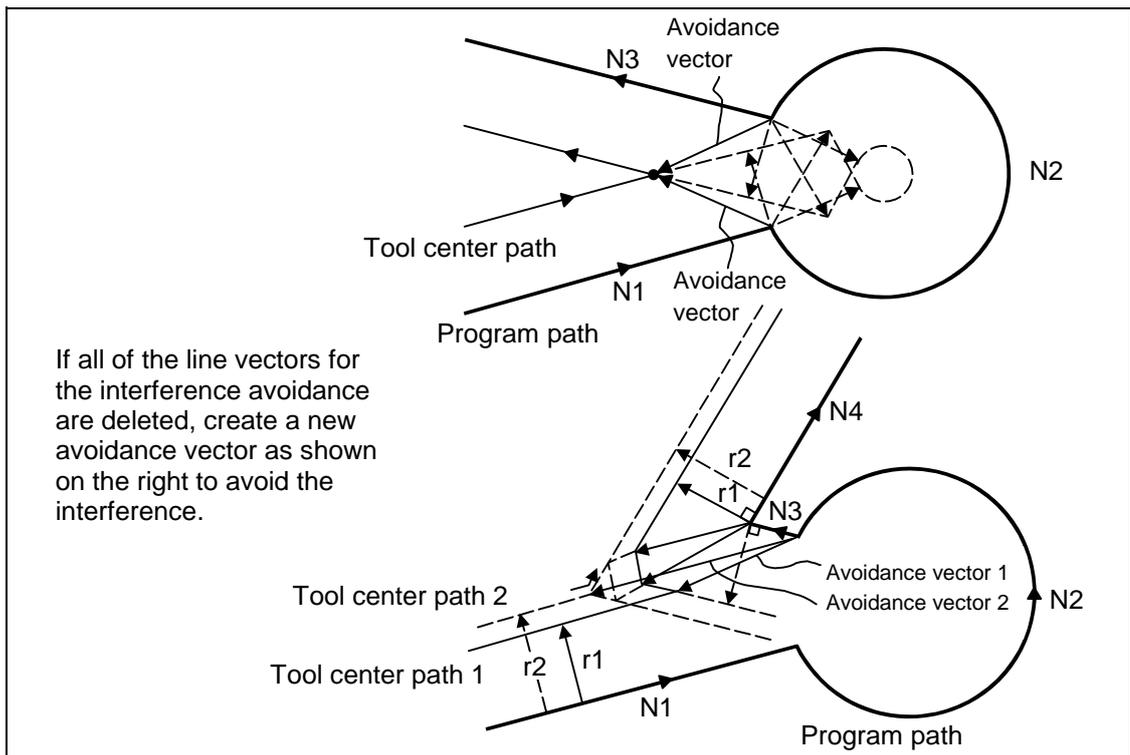

In the case of the figure below, the groove will be left uncut.

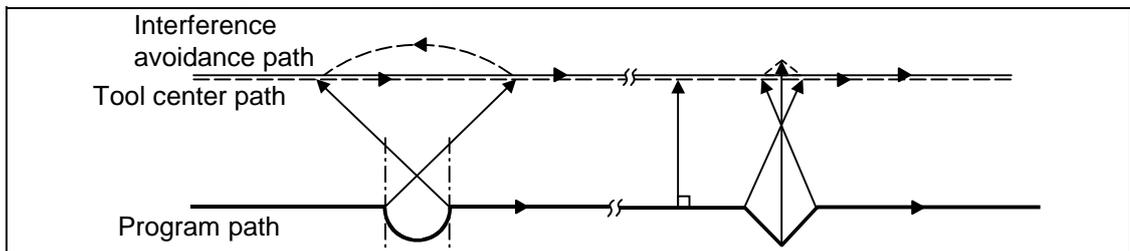




Interference check alarm

The interference check alarm occurs under the following conditions.

(1) When the interference check alarm function has been selected

- (a) When all the vectors at the end block of its own block have been deleted.


When, as shown in the figure, vectors 1 through 4 at the end point of the N1 block have all been deleted, program error (P153) results prior to N1 execution.

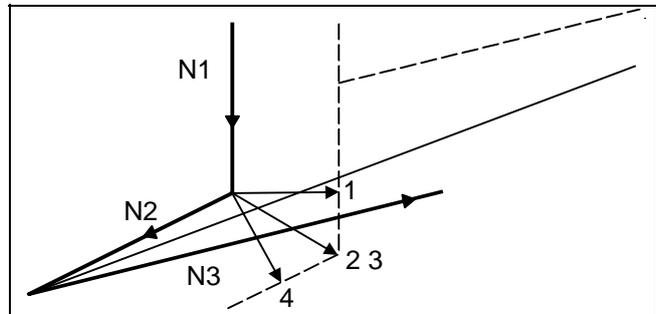


(2) When the interference check avoidance function has been selected

- (a) When there are valid vectors at the end point of the following block even when all the vectors at the end point of its own block have been deleted.

- (i) When, in the figure, the N2 interference check is conducted, the N2 end point vectors are all deleted but the N3 end point vectors are regarded as valid. Program error (P153) now occurs at the N1 end point.

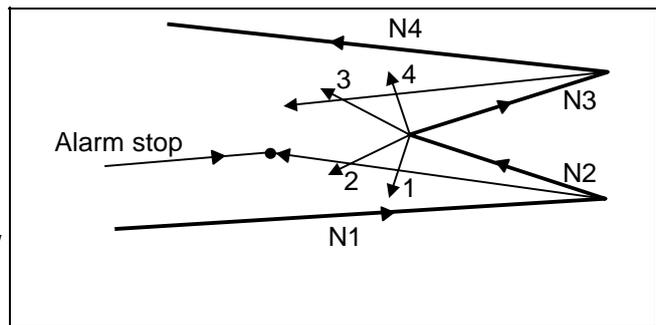

- (ii) In a case such as that shown in the figure, the tool will move in the reverse direction at N2. Program error (P153) occurs after N1 execution.


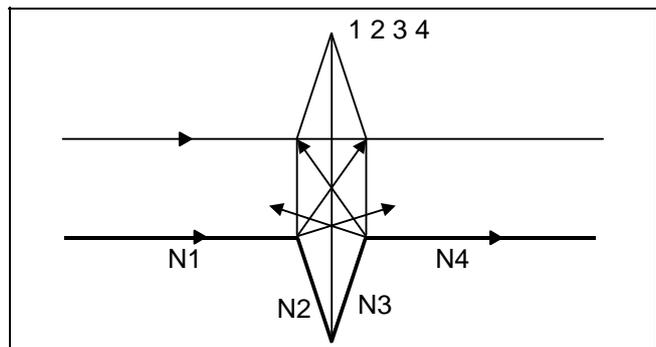


12. Tool Offset Functions

12.3 Tool radius compensation

(b) When avoidance vectors cannot be created


- (i) Even when, as in the figure, the conditions for creating the avoidance vectors are met, it may still be impossible to create these vectors or the interference vectors may interfere with N3. Program error (P153) will occur at the N1 end point when the vector intersecting angle is more than 90° .

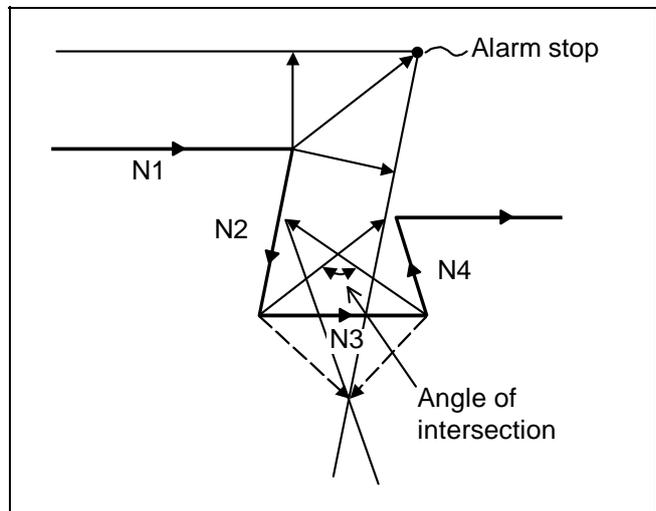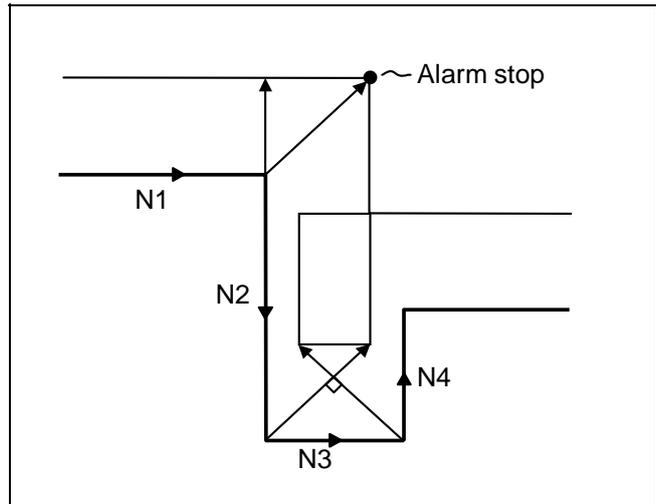


(c) When the program advance direction and the advance direction after compensation are reversed

In the following case, interference is still regarded as occurring even when there is actually no interference.

When grooves which are narrower than the tool radius or which have parallel or widening walls are programmed

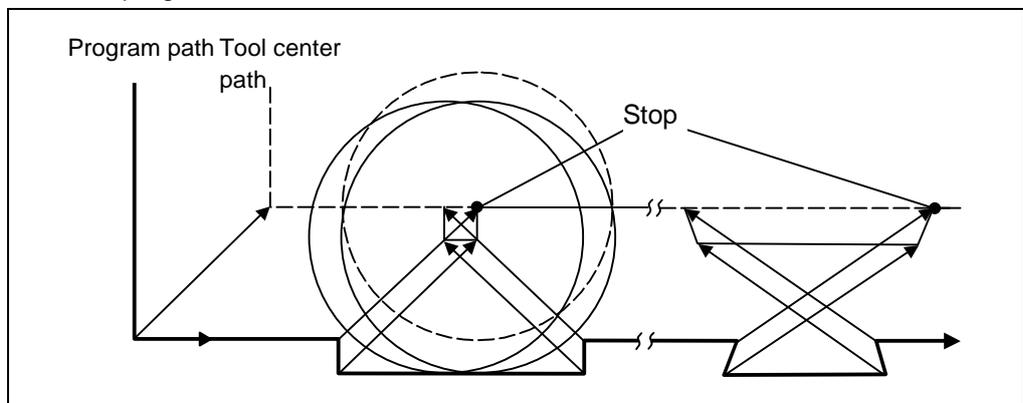

12.4 Programmed offset input; G10

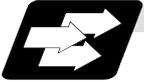

Function and purpose

The tool offset and workpiece offset can be set or changed on the tape using the G10 command. During the absolute value (G90) mode, the commanded offset amount will become the new offset amount, and during the incremental value (G91) mode, the commanded offset amount will be added to the currently set offset amount to create the new offset amount.



Command format

(1) Workpiece offset input

```
G90 G10 L2 P__Xp__Yp__Zp__;
G91
P          : 0 External workpiece
           1 G54
           2 G55
           3 G56
           4 G57
           5 G58
           6 G59
           If a value other than the above is set or if the P command is omitted,
           the currently selected workpiece offset will be handled as the input.
```

(Note) The offset amount in the G91 will be an incremental value and will be cumulated each time the program is executed. Command G90 or G91 before the G10 as a cautionary means to prevent this type of error.

(2) Tool offset input

(a) For tool offset memory I

```
G10 L10 P__R__ ;
P          : Offset No.
R          : Offset amount
```

(b) For tool offset memory II

```
G10 L10 P__R__ ;      Tool length compensation shape offset
G10 L11 P__R__ ;      Tool length compensation wear compensation
G10 L12 P__R__ ;      Tool radius shape offset
G10 L13 P__R__ ;      Tool radius wear compensation
```



Detailed description

- (1) Program error (P171) will occur if this command is input when the specifications are not available.
- (2) G10 is an unmodal command and is valid only in the commanded block.
- (3) The G10 command does not contain movement, but must not be used with G commands other than G21, G22, G54 to G59, G90 or G91.
- (4) If an illegal L No. or offset No. is commanded, the program errors (P172 and P170) will occur respectively.
If the offset amount exceeds the maximum command value, the program error (P35) will occur.
- (5) Decimal point inputs can be used for the offset amount.
- (6) The offset amounts for the external workpiece coordinate system and the workpiece coordinate system are commanded as distances from the basic machine coordinate system zero point.
- (7) The workpiece coordinate system updated by inputting the workpiece coordinate system will follow the previous modal (G54 to G59) or the modal (G54 to G59) in the same block.
- (8) L2 can be omitted when the workpiece offset is input.
- (9) Do not command G10 in the same block as the fixed cycle and sub-program call command. This will cause malfunctioning and program errors.



Example of program

- (1) Input the offset amount from the tape.

```
.....; G10L10P10R-12345 ; G10L10P05R98765 ; G10L10P30R2468 ; ...
```

```
H10=-12345 H05=98765 H30=2468
```

- (2) Updating of offset amount

(Example 1) Assume that H10 = -1000 is already set.

N1	G01 G90 G43 Z - 100000 H10;	(Z = -101000)
N2	G28 Z0;	
N3	G91 G10 L10 P10R - 500 ;	(The mode is the G91 mode, so -500 is added.)
N4	G01 G90 G43 Z - 100000 H10 ;	(Z = -101500)

12. Tool Offset Functions

12.4 Programmed offset input


(Example 2) Assume that $H10 = -1000$ is already set.

Main program

N1	G00 X100000 ;	a
N2	#1 = -1000 ;	
N3	M98 P1111 L4 ;	b_1, b_2, b_3, b_4

Subprogram O1111

N1	G01 G91 G43 Z0 H10 F100 ;	c_1, c_2, c_3, c_4
	G01 X1000 ;	d_1, d_2, d_3, d_4
	#1 = #1 - 1000 ;	
	G90 G10 L10 P10 R#1 ;	
	M99 ;	

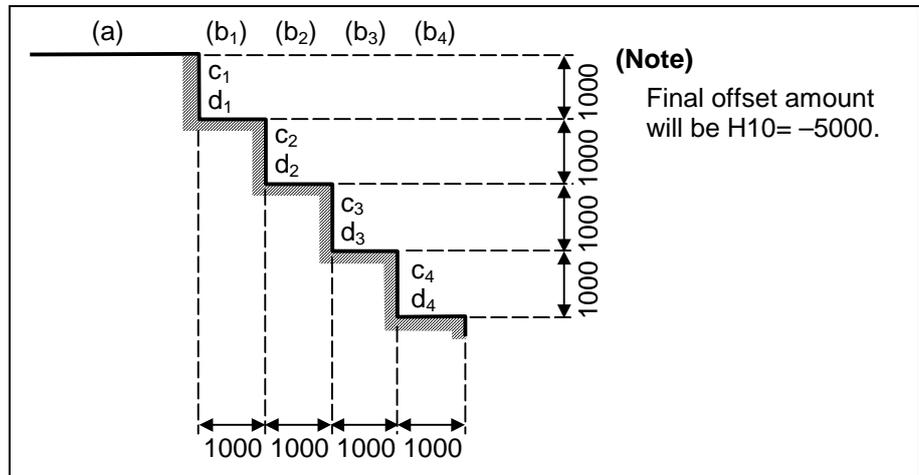

(Example 3) The program for Example 2 can also be written as follows.

Main program

N1	G00 X100000 ;
N2	M98 P1111 L4 ;

Subprogram

O1111 N1
G01 G91 G43 Z0 H10 F100 ;
N2 G01 X1000 ;
N3 G10 L10 P10 R-1000 ;
N4 M99 ;


12. Tool Offset Functions

12.4 Programmed offset input

(3) When updating the workpiece coordinate system offset amount

Assume that the previous workpiece coordinate system offset amount is as follows.
 $X = -10.000$ $Y = -10.000$

N100	G00 G90 G54 X0 Y0 ;
N101	G90 G10 L2 P1 X-15.000 Y-15.000 ;
N102	X0 Y0 ;
M02	;

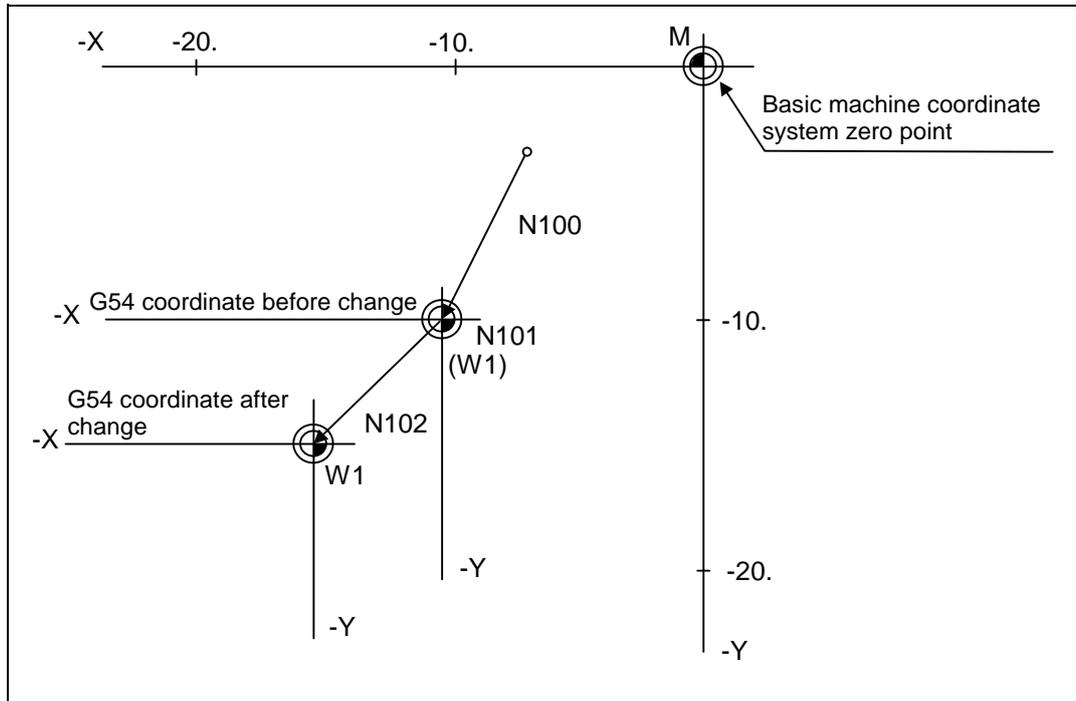

(Note 1) Changes of workpiece position display at N101
 At N101, the G54 workpiece position display data will change before and after the workpiece coordinate system is changed with G10.

$$\begin{array}{l} X = 0 \quad X = +5.000 \\ \rightarrow \\ Y = 0 \quad Y = +5.000 \end{array}$$

When workpiece coordinate system offset amount is set in G54 to G59


G90 G10 L2 P1 X-10.000 Y-10.000 ;
G90 G10 L2 P2 X-20.000 Y-20.000 ;
G90 G10 L2 P3 X-30.000 Y-30.000 ;
G90 G10 L2 P4 X-40.000 Y-40.000 ;
G90 G10 L2 P5 X-50.000 Y-50.000 ;
G90 G10 L2 P6 X-60.000 Y-60.000 ;

12. Tool Offset Functions

12.4 Programmed offset input

- (4) When using one workpiece coordinate system as multiple workpiece coordinate systems

Main program	#1 = -50. #2 = 10. ;
	M98 P200 L5 ;
	M02 ;
	%
Subprogram O200	N1 G90 G54 G10 L2 P1 X#1 Y#1 ;
	N2 G00 X0 Y0 ;
	N3 X-5. F100 ;
	N4 X0 Y-5. ;
	N5 Y0 ;
	N6 #1 = #1 + #2 ;
	N7 M99 ;
	%

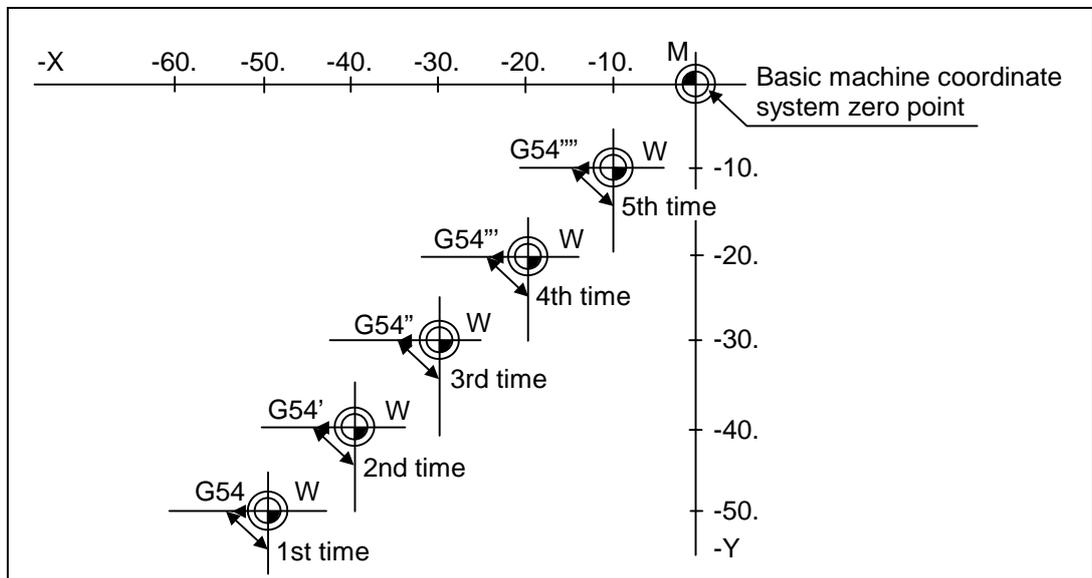

Precautions

- (1) Even if this command is displayed on the screen, the offset No. and variable details will not be updated until actually executed.


N1 G90 G10 L10 P10R-100 ;

N2 G43 Z-10000 H10 ;

N3 G0 X-10000 Y-10000 ;

N4 G90 G10 L10 P10 R-200 ; .. The H10 offset amount is updated when the N4 block is executed.

12.5 Tool position offset; G45 to G48

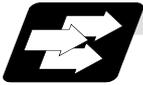

Function and purpose

Using the G45 to G46 commands, the movement distance of the axes specified in the same block can be extended or reduced by a preset offset length. Furthermore, the offset amount can be similarly doubled ($\times 2$ expansion) or halved ($\times 2$ reduction) with commands G47 and G48. The number of sets for the offset differ according to machine specification. Refer to Specifications Manual.

D01 to Dn

(The numbers given are the total number of sets for tool length offset, tool position offset and cutter compensation.)

G45 command	G46 command	G47 command	G48 command
Expansion by offset amount only	Reduction by offset amount only	$\times 2$ expansion by offset amount	$\times 2$ reduction by offset amount
Start point End point	Start point End point	Start point End point	Start point End point

$$\begin{array}{c}
 \text{Hatched Arrow} \quad \pm \quad \text{White Arrow} \quad = \quad \text{Dotted Arrow} \\
 \text{(Program command value)} \quad \quad \quad \text{(Offset amount)} \quad \quad \quad \text{(Movement amount after offset)}
 \end{array}$$



Command format

- G45 Xx Dd ; Expansion of movement amount by offset amount set in offset memory**
- G46 Xx Dd ; Reduction of movement amount by offset amount set in offset memory**
- G47 Xx Dd ; Expansion of movement amount by double the offset amount set in offset memory**
- G48 Xx Dd ; Reduction of movement amount by double the offset amount set in offset memory**




Detailed description

Details for incremental values are given below.

Command	Movement amount of equivalent command (assigned offset amount = I)	Example (when X = 1000)
G45Xx Dd	$X(x + I)$	I = 10 X = 1010 I = -10 X = 990
G45X-x Dd	$X - (x + I)$	I = 10 X = -1010 I = -10 X = -990
G46Xx Dd	$X(x - I)$	I = 10 X = 990 I = -10 X = 1010
G46X-x Dd	$X - (x - I)$	I = 10 X = -990 I = -10 X = -1010
G47Xx Dd	$X(x + 2 * I)$	I = 10 X = 1020 I = -10 X = 980
G47X-x Dd	$X - (x + 2 * I)$	I = 10 X = -1020 I = -10 X = -980
G48Xx Dd	$X(x - 2 * I)$	I = 10 X = 980 I = -10 X = 1020
G48X-x Dd	$X - (x - 2 * I)$	I = 10 X = -980 I = -10 X = -1020

Checkpoints for G45 to G48 use

- (1) These commands should be used when operation is not in a canned cycle mode. (They are ignored even if they are assigned during a canned cycle.)
- (2) As a result of the internal arithmetic processing based on the expansion or reduction, the tool will proceed to move in the opposite direction when the command direction is reversed.

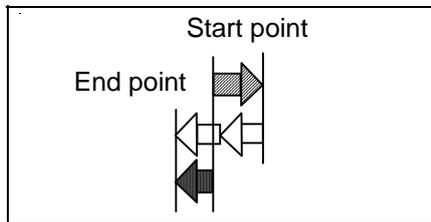

Programmed command G48X20.000D01;
 Offset Offset amount = +15.000
 Tool movement Actual movement = X - 10.000

When a zero movement amount has been specified in the incremental value command (G91) mode, the result is as follows.

Offset number : D01

Offset amount corresponding to D01: 1234


NC command	G45X0 D01;	G45X - 0 D01;	G46X0 D01;	G46X - 0 D01;
Equivalent command	X1234;	X - 1234;	X - 1234;	X1234;

When a zero movement amount has been specified with an absolute value command, the operation is completed immediately and the tool does not move for the offset amount.


In the case of circular interpolation, cutter compensation is possible using the G45 to G48 commands only for one quadrant, two quadrants (semisphere) or three quadrants when the start and end points are on the axis.

The commands are assigned as follows depending on whether the compensation is applied for outside or inside the arc programmed path.

However, in this case, offset must already be provided in the desired direction at the arc start point. (If an offset command is assigned for the arc independently, the arc start point and end point radii will shift by an amount equivalent to the offset amount.)

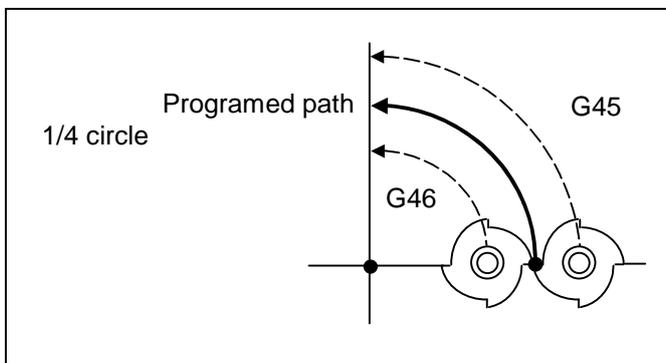


G45 for compensation outside the circle
 G46 for compensation inside the circle

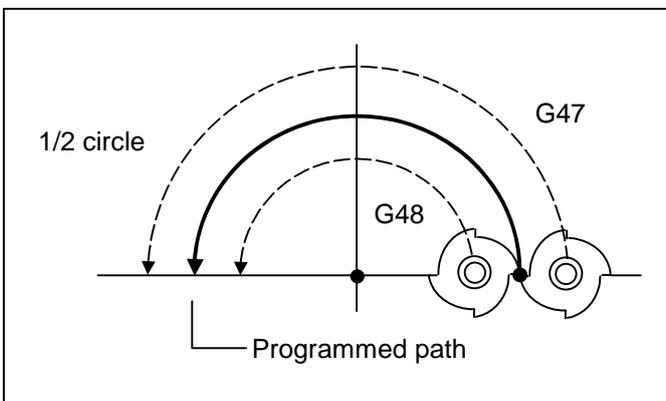

G47 for compensation outside the circle
 G48 for compensation inside the circle

12. Tool Offset Functions

12.5 Tool position offset

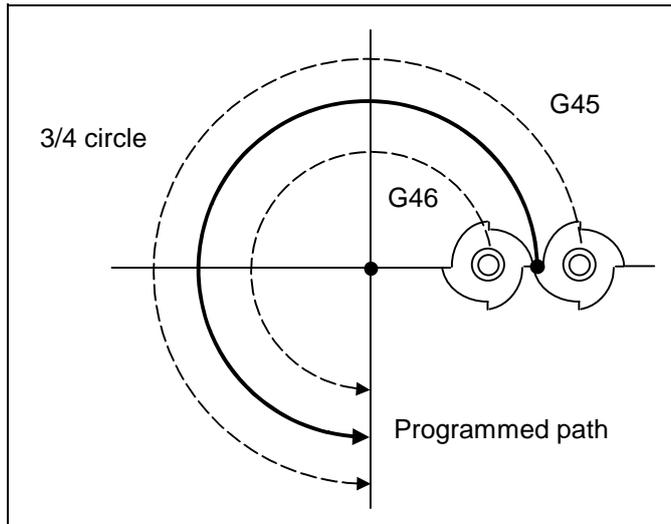


G45 for compensation outside the circle
G46 for compensation inside the circle



Example of program

(Example 1)

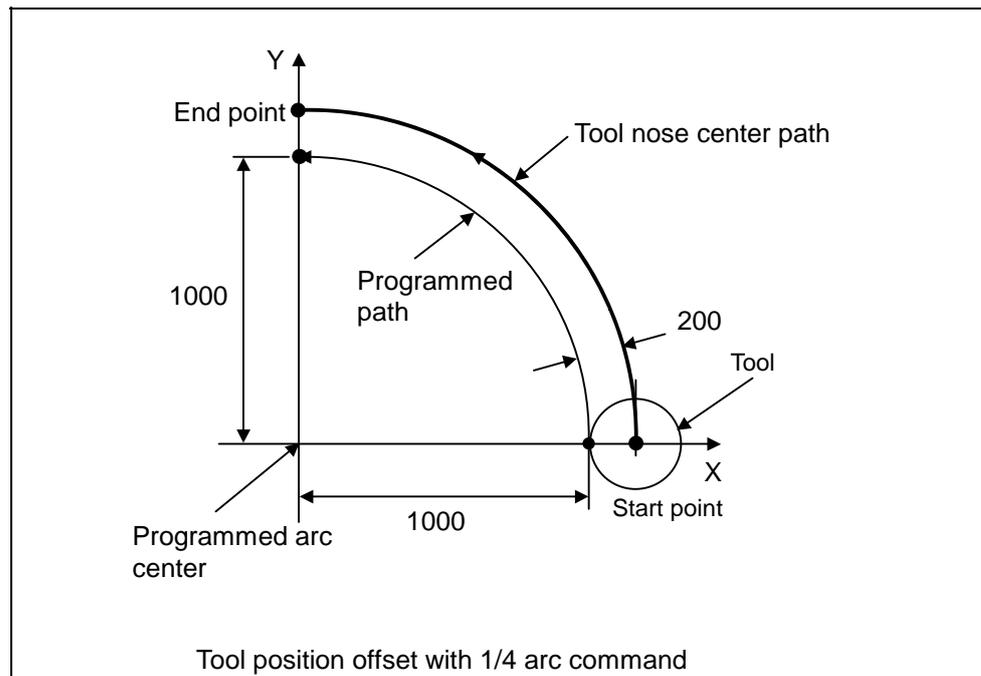

It is assumed that offset has already been provided in the + X direction by $D01 = 200$.

```
G91 G45 G03 X-1000 Y1000 I-1000 F1000 D01;
```

Even if the offset numbers are not assigned in the same block as the G45 to G48 commands, offset is provided with the tool position offset number previously stored in the memory.

Program error "P170" results when the specified offset number has exceeded the specification range.

These G codes are unmodal and are effective only in the command block.


Even with an absolute value command, the amount of the movement is extended or reduced for each axis with respect to the direction of movement from the end point of the preceding block to the position assigned by the G45 to G48 block.

In other words, even for an absolute value command, offset can be applied to movement amounts (incremental values) in the same block.



12. Tool Offset Functions

12.5 Tool position offset


When a command for "n" number of simultaneous axes is given, the same offset will be applied to all axes. It is valid even for the additional axes (but it must be within the range of the number of axes which can be controlled simultaneously.)

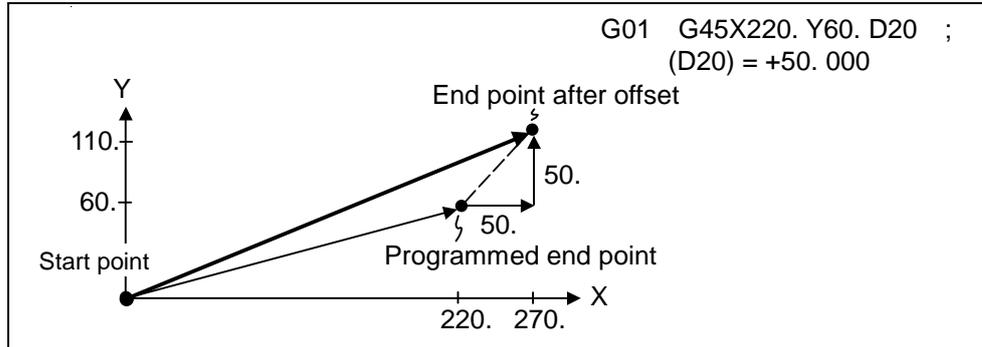

(Note 1) If offset is applied to two axes, over-cutting or under-cutting will result, as shown in the figures below. In cases like this, use the cutter compensation commands (G40 to G42).

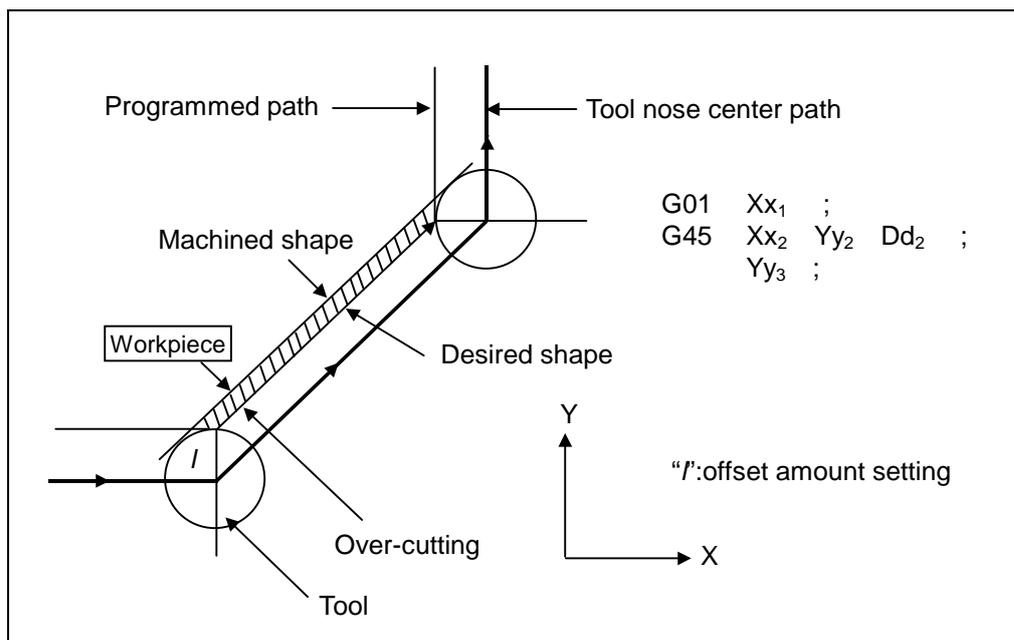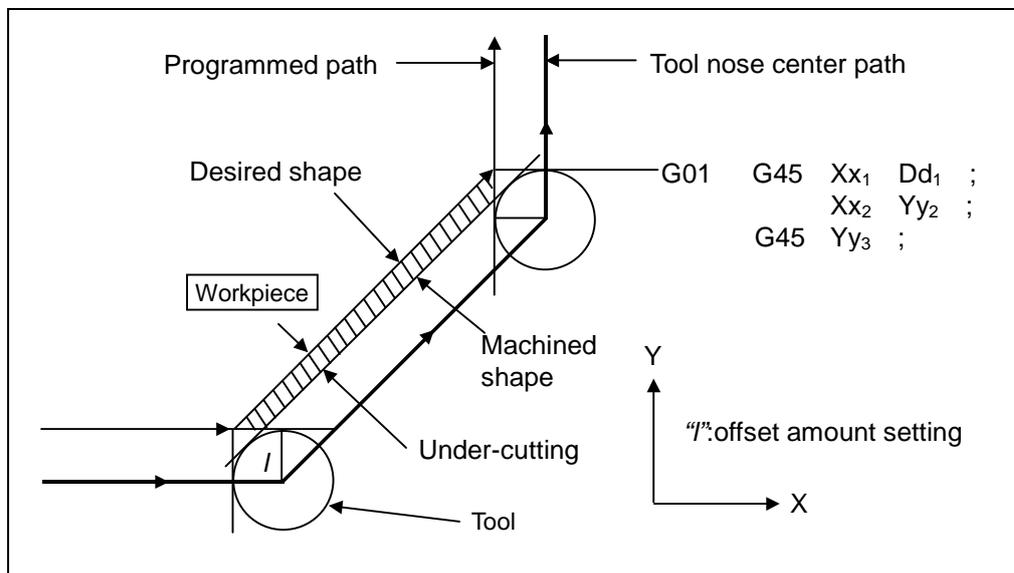


(Example 2)

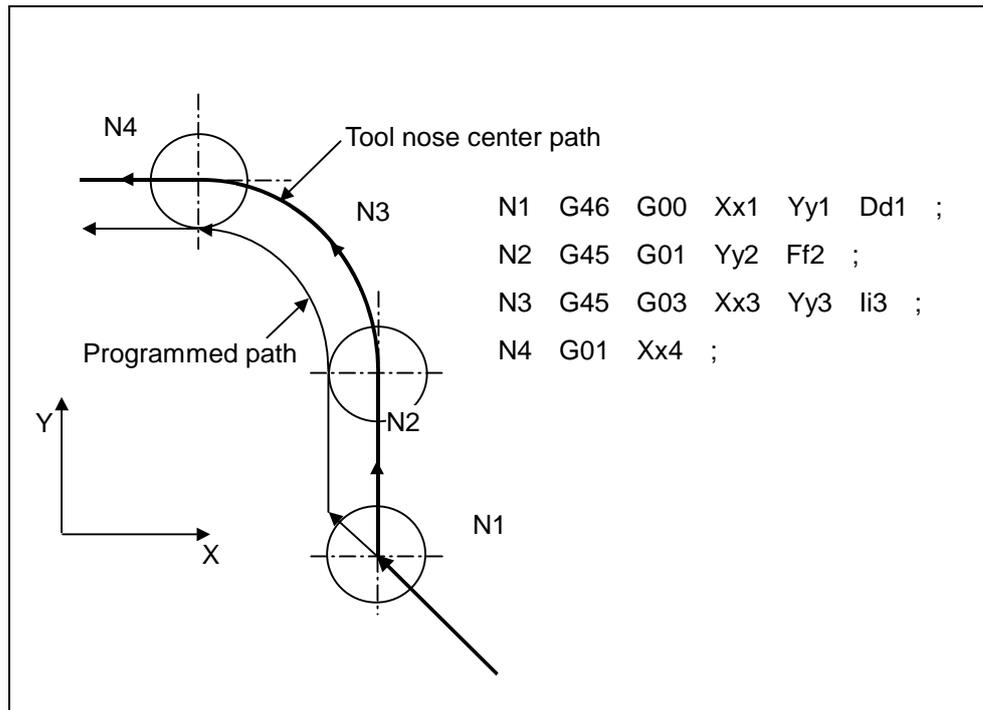

(Example 3)

When the G45 to G48 command is assigned, the offset amount for each pass is the amount assigned by the offset number, and the tool does not move for the difference from the previous offset as it would do with the tool length offset command (G43).

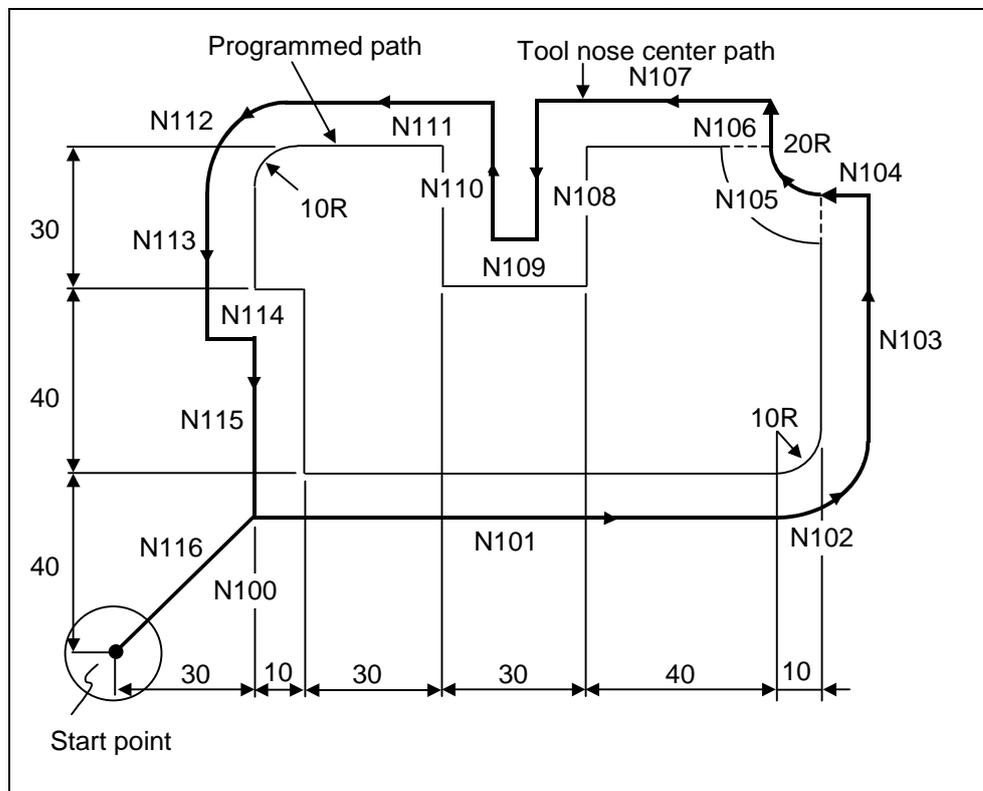

12. Tool Offset Functions

12.5 Tool position offset


Offset amount D01 = 10.000mm (Offset amount of tool radius)

```
N100 G91 G46 G00 X40.0 Y40.0 D01 ;
N101 G45 G01 X100.0 F200 ;
N102 G45 G03 X10.0 Y10.0 J10.0 ;
N103 G45 G01 Y40.0 ;
N104 G46 X0 ;
N105 G46 G02 X-20.0 Y20.0 J20.0 ;
N106 G45 G01 Y0 ;
N107 G47 X-30.0 ;
N108 Y-30.0 ;
N109 G48 X-30.0 ;
N110 Y 30.0 ;
N111 G45 X-30.0 ;
N112 G45 G03 X-10.0 Y-10.0 J-10.0 ;
N113 G45 G01 Y-20.0 ;
N114 X10.0 ;
N115 Y-40.0 ;
N116 G46 X-40.0 Y-40.0 ;
N117 M02 ;
%
```

12. Tool Offset Functions

12.6 Inputting the tool life management data

12.6 Inputting the tool life management data

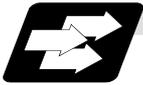

Function and purpose

Using the G10 command, the tool life management data can be registered, changed and added to, and preregistered groups can be deleted.



Command format

(1) Registering data

G10 L3 ;	Start of life management data registration	
P_L_Q_;	Registration of the group No., the life, the control method	} First group
T_H_D_;	Registration of the tool No., the length compensation No., the radius compensation No.	
T_H_D_;		} Next group
P_L_Q_;	Registration of next group No., the life, the control method	
T_H_D_;	Registration of the tool No., the length compensation No., the radius compensation No.	
G11 ;	End of life management data registration	
P	: Group No.	
L	: Life	
Q	: Control method	
T	: Tool No., The spare tools are selected in the order of the tool numbers registered here.	
H	: Length compensation No.	
D	: Radius compensation No.	

(2) Changing and adding groups

G10 L3 P1;	Start of life management data change or addition	
P_L_Q_;	Change or addition of the group No., the life, the control method	} First group
T_H_D_;	Change or addition of the tool No., the length compensation No., the radius compensation No.	
T_H_D_;		} Next group
P_L_Q_;	Change or addition of next group No., the life, the control method	
T_H_D_;	Change or addition of the tool No., the length compensation No., the radius compensation No.	
G11 ;	End of life management data change or addition	
P	: Group No.	
L	: Life	
Q	: Control method	
T	: Tool No.	
H	: Length compensation No.	
D	: Radius compensation No.	

(3) Deleting a group

G10 L3 P2;	Start of life management data deletion
P_;	Delete the group No.
P_;	Delete next group No.
G11 ;	End life management data deletion
P	: Group No.

12. Tool Offset Functions

12.6 Inputting the tool life management data



Example of operation

	Program example	Operation
Data registration	G10 L3 ; P10 L10 Q1 ; T10 H10 D10 ; G11 ; M02 ;	<ol style="list-style-type: none"> 1. After deleting all group data, the registration starts. 2. Group No. 10 is registered. 3. Tool No. 10 is registered in group No. 10. 4. The registration ends. 5. The program ends.
Group change, addition	G10 L3 P1 ; P10 L10 Q1 ; T10 H10 D10 ; G11 ; M02 ;	<ol style="list-style-type: none"> 1. Changing and addition of the group and tool starts. 2. The change and addition operation takes place in the following manner. <ol style="list-style-type: none"> (1) When group No. 10 has not been registered. <ol style="list-style-type: none"> 1) Group No. 10 is additionally registered. 2) Tool No. 10 is registered in group No. 10. (2) When group No. 10 has been registered, but tool No. 10 has not been registered. <ol style="list-style-type: none"> 1) Tool No. 10 is additionally registered in group No. 10. (3) When group No. 10 and tool No. 10 have been both registered. <ol style="list-style-type: none"> 1) The tool No. 10 data is changed. 3. The group and tool change and addition ends. 4. The program ends.
Group deletion	G10 L3 P2 ; P10 ; G11 ; M02 ;	<ol style="list-style-type: none"> 1. The group deletion starts. 2. The group No. 10 data is deleted. 3. The group deletion ends. 4. The program ends.



Command range

Item		Command range
Group No.	(Pn)	1 to 99999999
Life	(Ln)	0 to 9999 times (No. of times control method) 0 to 4000 minutes (time control method)
Control method	(Qn)	1 to 3 1: Number of mounts control 2: Time control 3: Number of cutting times control
Tool No.	(Tn)	1 to 99999999
Length compensation No.	(Hn)	0 to 200
Radius compensation No.	(Dn)	0 to 200




Precautions

- (1) The tool life data is registered, changed, added to or deleted by executing the program in the memory or MDI mode.
- (2) The group No. and tool No. cannot be commanded in duplicate.
- (3) When two or more addresses are commanded in one block, the latter address will be valid.
- (4) If the life data (L_) is omitted, the life data for that group will be "0".
- (5) If the control method (Q_) is omitted, the control method for that group will follow the base specification parameter "#1106 Tcount".
Note that when carrying out the No. of cutting times control method, command the method from the program.
- (6) If the length compensation No. (H_) is omitted, the length compensation No. for that group will be "0".
- (7) If the radius compensation No. (D_) is omitted, the radius compensation No. for that group will be "0".
- (8) Programming with a sequence No. is not possible between G10 L3 and G11.
- (9) If the usage data count valid signal (Y2CA) is ON, G10 L3 cannot be commanded.
- (10) The registered data is held even if the power is turned OFF.
- (11) When G10 L3 is commanded, the commanded group and tool will be registered after all of the registered data is erased.
- (12) The change and addition conditions in the G10L3P1 command are as follows.
 - (a) Change conditions
 - 1) Both the commanded group No. and tool No. are registered.
→Change the commanded tool No. data.
 - (b) Additional conditions
 - 1) Neither the commanded group No. nor tool No. is registered.
→Additionally register the commanded group No. and tool No. data.
 - 2) The commanded group No. is registered, but the commanded tool No. is not registered.
→Additionally register the commanded tool No. data to the commanded group No.

13. Program Support Functions

13.1 Canned cycles

13.1.1 Standard canned cycles; G80 to G89, G73, G74, G76

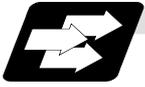

Function and purpose

These standard canned cycles are used for predetermined sequences of machining operations such as positioning, hole drilling, boring, tapping, etc. which are specified in a block. The various sequences in the table below are provided for the standard canned cycles.

By editing the standard canned cycle subprogram, the canned cycle sequence can be changed by the user. The user can also register and edit an original canned cycle program. For the standard canned cycle subprogram, refer to the list of the canned cycle subprogram in the appendix of the operation manual. The list of canned cycle functions for this control unit is shown below.

G code	Hole machining start (-Z direction)	Operation at hole bottom		Return operation (+Z direction)	Application
		Dwell	Spindle		
G80	—	—	—	—	Cancel
G81	Cutting feed	—	—	Rapid feed	Drill, spot drilling cycle
G82	Cutting feed	Yes	—	Rapid feed	Drill, counter boring cycle
G83	Intermittent feed	—	—	Rapid feed	Deep hole drilling cycle
G84	Cutting feed	Yes	Reverse rotation	Cutting feed	Tapping cycle
G85	Cutting feed	—	—	Cutting feed	Boring cycle
G86	Cutting feed	Yes	Stop	Rapid feed	Boring cycle
G87	Cutting feed	—	Forward rotation	Cutting feed	Back boring cycle
G88	Rapid traverse	Yes	Stop	Rapid feed	Boring cycle
G89	Cutting feed	Yes	—	Cutting feed	Boring cycle
G73	Cutting feed	Yes	—	Rapid feed	Stepping cycle
G74	Intermittent feed	Yes	Forward rotation	Cutting feed	Reverse tapping cycle
G76	Cutting feed	—	Oriented spindle stop	Rapid feed	Fine boring cycle

A canned cycle mode is canceled when the G80 or any G command in (G00, G01, G02, G03) is issued. The various data will also be cleared simultaneously to zero.



Command format

```
G8Δ (G7Δ) X_ Y_ Z_ R_ Q_ P_ F_ L_ S_ , S_ , I_ , J_ ;
```

```
G8Δ (G7Δ) X_ Y_ Z_ R_ Q_ P_ F_ L_ S_ , R_ , I_ , J_ ;
```

G8Δ (G7Δ)	: Hole machining mode
X_ Y_	: Hole positioning data
Z_ R_ Q_ P_ F_	: Hole machining data
L_	: Number of repetitions
S_	: Spindle rotation speed
, S_	: Spindle rotation speed during return
, R_	: Synchronization changeover
, I_	: Positioning axis in-position width
, J_	: Drilling axis in-position width


As shown above, the format is divided into the hole machining mode, hole positioning data, hole machining data, No. of repetitions, spindle rotation speed, synchronization changeover (or spindle rotation speed during return), positioning axis in-position width and drilling axis in-position width.



Detailed description

- (1) Outline of data and corresponding addresses
 - (a) Hole machining mode: Canned cycle modes such as drilling, counter boring, tapping and boring.
 - (b) Hole position data: Data used to position the X and Y axes. (Unmodal)
 - (c) Hole machining data: Actual machining data used for machining. (Modal)
 - (d) Number of repetitions: Number of times to carry out hole machining. (Unmodal)
 - (e) Synchronization changeover: Synchronous/asynchronous tapping selection command is issued during G84/G74 tapping. (Modal)
- (2) If M00 or M01 is commanded in the same block as the canned cycle or during the canned cycle mode, the canned cycle will be ignored. Instead, M00 and M01 will be output after positioning. The canned cycle will be executed if X, Y, Z or R is commanded.

(3) There are 7 actual operations which are each described in turn below.

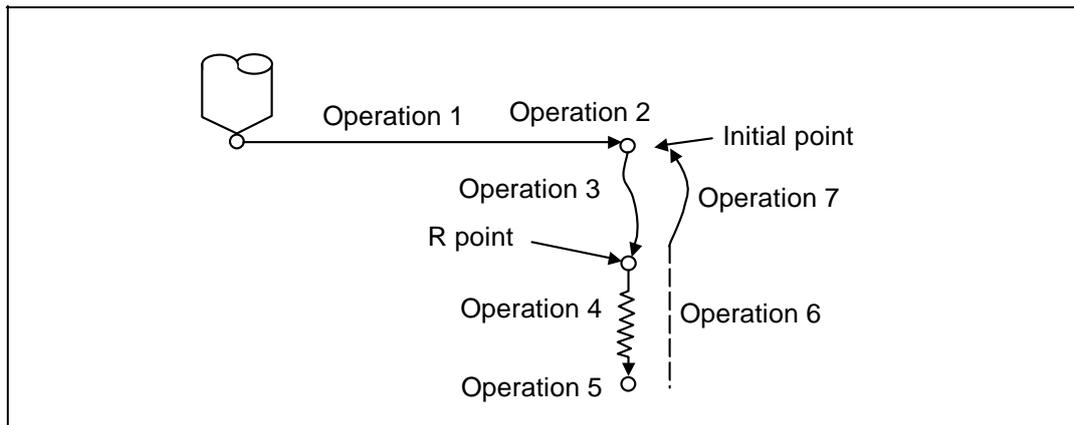

Operation 1 : This indicates the X and Y axes positioning, and executes positioning with G00.

Operation 2 : This is an operation done after positioning is completed (at the initial hole), and when G87 is commanded, the M10 command is output from the control unit to the machine. When this M command is executed and the finish signal (FIN) is received by the control unit, the next operation will start. If the single block stop switch is ON, the block will stop after positioning.

Operation 3 : The tool is positioned to the R point by rapid traverse.

Operation 4 : Hole machining is conducted by cutting feed.

Operation 5 : This operation takes place at the hole bottom position and it differs according to the canned cycle mode. Possible actions include spindle stop (M05) spindle reverse rotation (M04), spindle forward rotation (M03), dwell and tool shift.

Operation 6 : The tool is retracted to the R point.

Operation 7 : The tool is returned to the initial pint at the rapid traverse rate.

Whether the canned cycle is to be completed at operation 6 or 7 can be selected by the following G commands.

G98 Initial level return

G99 R point level return

These are modal commands, and for example, if G98 is commanded once, the G98 mode will be entered until G99 is designated. The initial state when the NC is ready is the G98 mode.

The hole machining data will be ignored if X, Y, Z or R is not commanded. This function is mainly used with the special canned cycled.


(4) Canned cycle addresses and meanings

Address	Significance
G	Selection of hole machining cycle sequence (G80 to G89, G73, G74, G76)
X	Designation of hole drilling position (absolute value or incremental value)
Y	Designation of hole drilling position (absolute value or incremental value)
Z	Designation of hole bottom position (absolute value or incremental value)
P	Designation of dwell time at hole bottom position (decimal points will be ignored)
Q	Designation of cut amount for each cutting pass with G73 or G83, or designation of the shift amount at G76 or G87 (incremental value)
R	Designation of R point position (absolute value or incremental value)
F	Designation of feed rate for cutting feed
L	Designation of number of repetitions. 0 to 9999
I, J, K	Designation of shift amount at G76 or G87 (incremental value) (The shift amount is designated with the Q address depending on the parameter setting.)
S	Spindle rotation speed command
, S	Spindle rotation speed designation for synchronous tap return
, R	Synchronous/asynchronous tap cycle selection

13. Program Support Functions

13.1 Canned cycles

(5) Difference between absolute value command and incremental value command

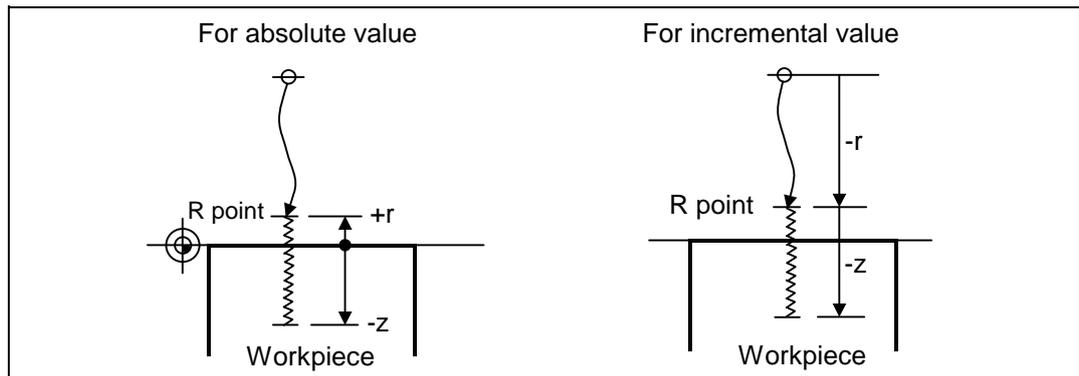

(6) Feed rate for tapping cycle and tapping return

The feed rates for the tapping cycle and tapping return are as shown below.

(a) Selection of synchronous tapping cycle/asynchronous tapping cycle

Program G84xxx, Rxx	Control parameter Synchronous tapping	Synchronous/asynchronous
, R00	—	Asynchronous
, Rxx	OFF	
No designation	ON	Synchronous
, R01	—	

— is irrelevant to the setting

(b) Selection of asynchronous tapping cycle feed rate

G94/G95	Control parameter F1-digit value	F command value	Feed designation
G94	OFF	F designation	Per-minute feed
	ON	Other than F0 to F8	
			F0 to F8 (no decimal point)
G95	—	F designation	Per-revolution feed

— is irrelevant to the setting

(c) Spindle rotation speed during return of synchronous tapping cycle

Address	Meaning of address	Command range (unit)	Remarks
,S	Spindle rotation speed during return	0 to 99999 (r/min)	The data is held as modal information. If the value is smaller than the speed rotation speed, the speed rotation speed value will be valid even during return. If the spindle rotation speed is not 0 during return, the tap return override value will be invalid.



Positioning plane and hole drilling axis

The canned cycle has basic control elements for the positioning plane and hole drilling axis. The positioning plane is determined by the G17, G18 and G19 plane selection command, and the hole drilling axis is the axis perpendicular (X, Y, Z or parallel axis) to the above plane.

Plane selection	Positioning plane	Hole drilling axis
G17 (X – Y)	Xp – Yp	Zp
G18 (Z – X)	Zp – Xp	Yp
G19 (Y – Z)	Yp – Zp	Xp

Xp, Yp and Zp indicate the basic axes X, Y and Z or an axis parallel to the basic axis.

A random axis other than the hole drilling axis can be commanded for positioning.

The hole drilling axis is determined by the axis address of the hole drilling axis commanded in the same block as G81 to G89, G73, G74 or G76. The basic axis will be the hole drilling axis if there is no designation.

(Example 1) When G17 (XY plane) is selected, and the axis parallel to the Z axis is set as the W axis.

G81 ... W__ ; The W axis is used as the hole drilling axis.

G81 ... Z __ ; The Z axis is used as the hole drilling axis.

G81 ... ; (No Z or W) The Z axis is used as the hole drilling axis.

(Note 1) The hole drilling axis can be fixed to the Z axis with parameter #1080 Dril_Z.

(Note 2) Change over the hole drilling axis in the canned cycle canceled state.

In the following explanations on the movement in each canned cycle mode, the XY plane is used for the positioning plane and the Z axis for the hole drilling axis.

Note that all command values will be incremental values, the positioning plane will be the XY plane and the hole drilling axis will be the Z axis.



Programmable in-position width command in fixed cycle

This command commands the in-position width for the fixed cycle from the machining program.

The commanded in-position width is valid only in the G81 (drill, spot drill), G82 (drill, counter boring), G83 (deep drill cycle), G84 (tap cycle), G85 (boring), G89 (boring), G73 (step cycle) and G74 (reverse tap cycle) fixed cycles. The ",I" address is commanded in respect to the positioning axis, and the ",J" address is commanded in respect to the drilling axis.


Address	Meaning of address	Command range (unit)	Remarks
,I	In-position width (position error amount)	0.001 to 999.999 (mm)	When a value exceeding the command range is issued, a program error will occur. (P35 CMD-VALUE OVER)
,J	In-position width for drilling axis in fixed cycle (position error amount)		



In-position check in fixed cycle

When the number of repetitions L is designated as two or more times in the fixed cycle, the commanded in-position width will be valid in the repetition block (operation 5 to operation 8).

```
G81 X-50. Z-50. R-50. L2 F2000, I0.2, J0.3 ;
```

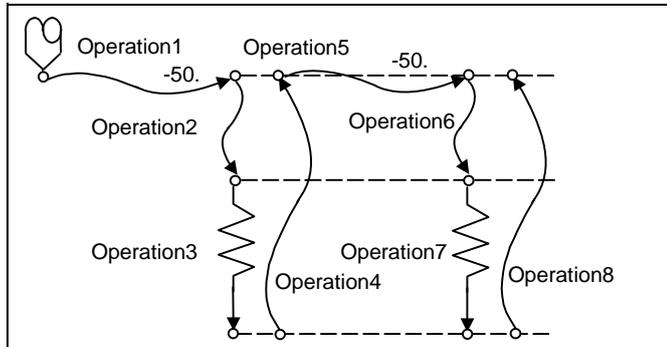


Operation pattern	,I	,J
Operation 1	Valid	-
Operation 2	-	Invalid
Operation 3	-	Invalid
Operation 4	-	Valid
Operation 5	Valid	-
Operation 6	-	Invalid
Operation 7	-	Invalid
Operation 8	-	Valid

Fig. 1 Operation when number of repetitions L is designated

In the following machining program, the commanded in-position width is valid for the Fig. 2 block. In the (B) block, the in-position width (, I) commanded for positioning in the previous block (A) is invalid (operation 5). However, when returning from the hole bottom, the in-position width (, J) commanded in the previous block (A) is valid (operation 8).

To validate the in-position width for positioning, command again as shown in block (C) (Operation 9).

```
G81 X-50. Z-50. R-50. F2000, I0.2, J0.3 ;.....(A)
X-10. ; .....(B)
X-10., I0.2 ; .....(C)
```

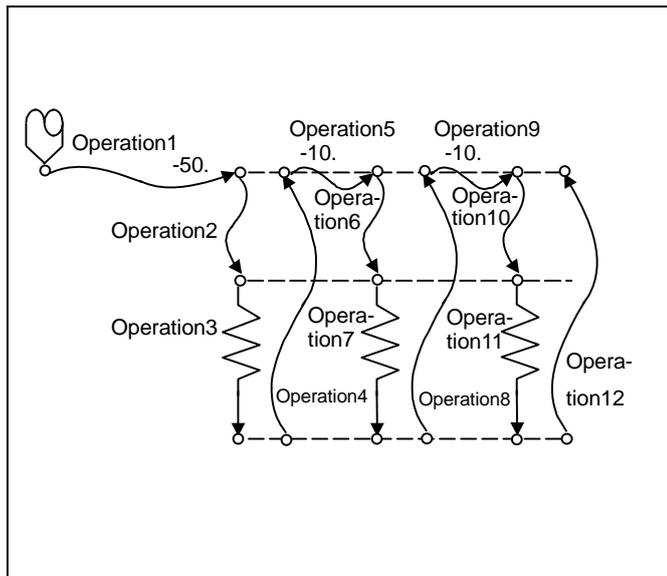

Operation pattern	,I	,J
Operation 1	Valid	-
Operation 2	-	Invalid
Operation 3	-	Invalid
Operation 4	-	Valid
Operation 5	Invalid	-
Operation 6	-	Invalid
Operation 7	-	Invalid
Operation 8	-	Valid
Operation 9	Valid	-
Operation 10	-	Invalid
Operation 11	-	Invalid
Operation 12	-	Valid

Fig. 2 Operation in fixed cycle modal

13. Program Support Functions

13.1 Canned cycles



Setting values of synchronous tap in-position check parameters and tap axis movement


(1) Synchronous tap in-position check settings

Synchronous tap improvement	Hole bottom in-position check	R point in-position check	I point → R point in-position check	"P" designation of G84/G74 command	In-position check during synchronous tap
'0'	—	—	—	—	Carry out in-position check at I point → R point/R point/hole bottom.
'1'	—	—	—	No "P" designation Example: G84 F1. Z-5. S1000 R-5.	Hole bottom: Do not carry out in-position check. R point: Do not carry out in-position check. I point → R point: Do not carry out in-position check.
'1'	Valid	Valid	Valid	"P" designation Example: G84 F1. Z-5. S1000 R-5.	Hole bottom: Carry out in-position check by tap in-position width. R point: Carry out in-position check. I point → R point: Carry out in-position check.
'1'	Valid	Invalid	Valid	"P" designation Example: G84 F1. Z-5. S1000 R-5.	Hole bottom: Carry out in-position check by tap in-position width. R point: Do not carry out in-position check. I point → R point: Carry out in-position check.
'1'	Invalid	Valid	Valid	"P" designation Example: G84 F1. Z-5. S1000 R-5.	Hole bottom: Do not carry out in-position check. R point: Carry out in-position check. I point → R point: Carry out in-position check.
'1'	Invalid	Invalid	Valid	"P" designation Example: G84 F1. Z-5. S1000 R-5.	Hole bottom: Do not carry out in-position check. R point: Do not carry out in-position check. I point → R point: Carry out in-position check.
'1'	Valid	Valid	Invalid	"P" designation Example: G84 F1. Z-5. S1000 R-5.	Hole bottom: Carry out in-position check by tap in-position width. R point: Carry out in-position check. I point → R point: Do not carry out in-position check.
'1'	Valid	Invalid	Invalid	"P" designation Example: G84 F1. Z-5. S1000 R-5.	Hole bottom: Carry out in-position check by tap in-position width. R point: Do not carry out in-position check. I point → R point: Do not carry out in-position check.
'1'	Invalid	Valid	Invalid	"P" designation Example: G84 F1. Z-5. S1000 R-5.	Hole bottom: Do not carry out in-position check. R point: Carry out in-position check. I point → R point: Do not carry out in-position check.
'1'	Invalid	Invalid	Invalid	"P" designation Example: G84 F1. Z-5. S1000 R-5.	Hole bottom: Do not carry out in-position check. R point: Do not carry out in-position check. I point → R point: Do not carry out in-position check.

(Note 1) The I point refers to the initial point.

(Note 2) "Synchronous tap improvement" in the above table corresponds to #1223 aux07/bit3 Synchronous tap in-position check improvement, "Hole bottom in-position check" corresponds to #1223 aux07/bit4 Synchronous tap hole bottom in-position check, and "R point in-position check" corresponds to #1223 aux07/bit5 Synchronous tap R-point in-position check 2.

(2) Relation between the in-position width and tap axis movement for a synchronous tap in-position check

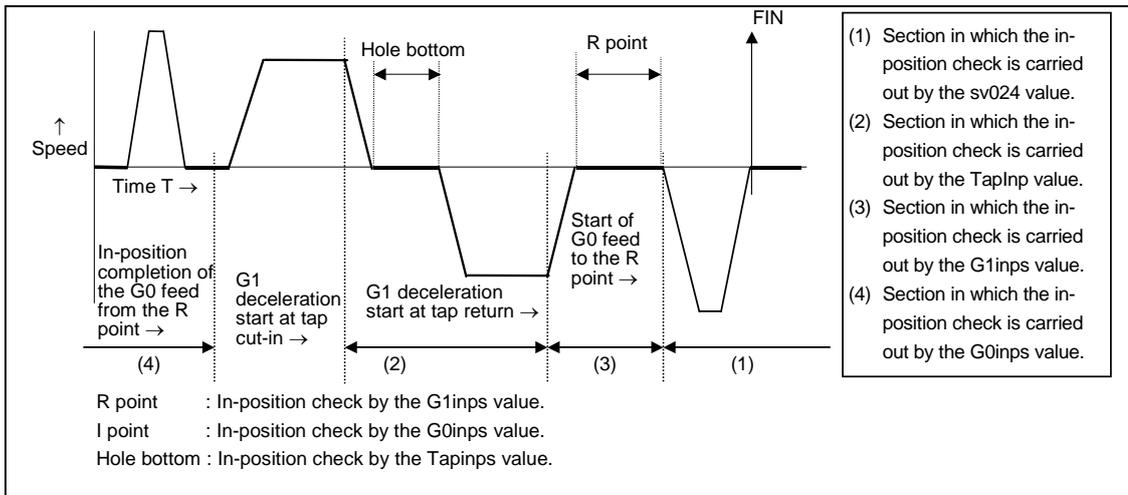

13. Program Support Functions

13.1 Canned cycles

(3) Relation between the parameter setting values and tap axis movement for a synchronous tap in-position check

Synchronous tap improvement	In-position check at hole bottom	In-position check at R point	In-position check at I point → R point	Hole bottom wait time	Operation at hole bottom	Operation at R point	Operation at I point → R point
'0'	—	—	—	Time designated by "P". Processing time is several 10ms when no "P".	Operation determined by setting of inpos (#1193) and aux 07 (#1223): bit 1 parameters.	Operation determined by setting of inpos (#1193) and aux 07 (#1223): bit 1 parameters.	Operation determined by setting of inpos (#1193) and aux 07 (#1223): bit 1 parameters.
'1'	Not executed	Not executed	Executed	Larger value of "P" and TapDwl (#1313) is valid. No dwell executed if both values are 0.	Wait until time in left column has elapsed.		Wait until completion of in-position check by G0inps value.
'1'	Not executed	Executed	Executed	Larger value of "P" and TapDwl (#1313) is valid. No dwell executed if both values are 0.	Wait until time in left column has elapsed.	Wait until completion of in-position check by G1inps value.	Wait until completion of in-position check by G0inps value.
'1'	Executed	Not executed	Executed	Larger value of "P" and TapDwl (#1313) is valid. No dwell executed if both values are 0.	Wait until dwell time in left column has elapsed after completion of in-position check.		Wait until completion of in-position check by G0inps value.
'1'	Executed	Executed	Executed	Larger value of "P" and TapDwl (#1313) is valid. Processing time is several 10ms if both values are 0.	Wait until dwell time in left column has elapsed after completion of in-position check.	Wait until completion of in-position check by G1inps value.	Wait until completion of in-position check by G0inps value.
'1'	Not executed	Not executed	Not executed	Larger value of "P" and TapDwl (#1313) is valid. No dwell executed if both values are 0.	Wait until time in left column has elapsed.		
'1'	Not executed	Executed	Not executed	Larger value of "P" and TapDwl (#1313) is valid. No dwell executed if both values are 0.	Wait until time in left column has elapsed.	Wait until completion of in-position check by G1inps value.	
'1'	Executed	Not executed	Not executed	Larger value of "P" and TapDwl (#1313) is valid. No dwell executed if both values are 0.	Wait until dwell time in left column has elapsed after completion of in-position check.		
'1'	Executed	Executed	Not executed	Larger value of "P" and TapDwl (#1313) is valid. Processing time is several 10ms if both values are 0.	Wait until dwell time in left column has elapsed after completion of in-position check.	Wait until completion of in-position check by G1inps value.	

Remarks: The processing time is several 10ms when an in-position check is not carried out at the hole bottom.

The processing time is between 0 to 14.2ms when an in-position check is not carried out at the R point.

The processing time is the spindle gain changeover time when an in-position check is not carried out at I point → R point.


(Note 1) The I point refers to the initial point.

(Note 2) "Synchronous tap improvement" in the above table corresponds to #1223 aux07/bit3 Synchronous tap in-position check improvement, "Hole bottom in-position check" corresponds to #1223 aux07/bit4 Synchronous tap hole bottom in-position check, and "R point in-position check" corresponds to #1223 aux07/bit5 Synchronous tap R-point in-position check 2.

13. Program Support Functions

13.1 Canned cycles


- (a) G81 (Drilling, spot drilling)
 Program
 G81 Xx1 Yy1 Zz1 Rr1 Ff1 ,li1 ,Jj1;

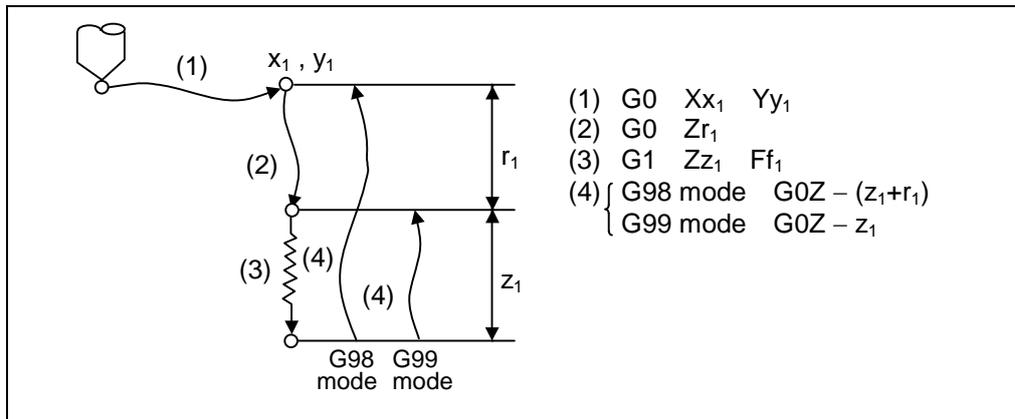

The operation stops at after the (1), (2) and (4) commands during single block operation.

Operation pattern	i1	j1
(1)	Valid	-
(2)	-	Invalid
(3)	-	Invalid
(4)	-	Valid

- (b) G82 (Drilling, counter boring)
 Program
 G82 Xx1 Yy1 Zz1 Rf1 Ff1 Pp1 ,li1 ,Jj1;
 P : Dwell designation

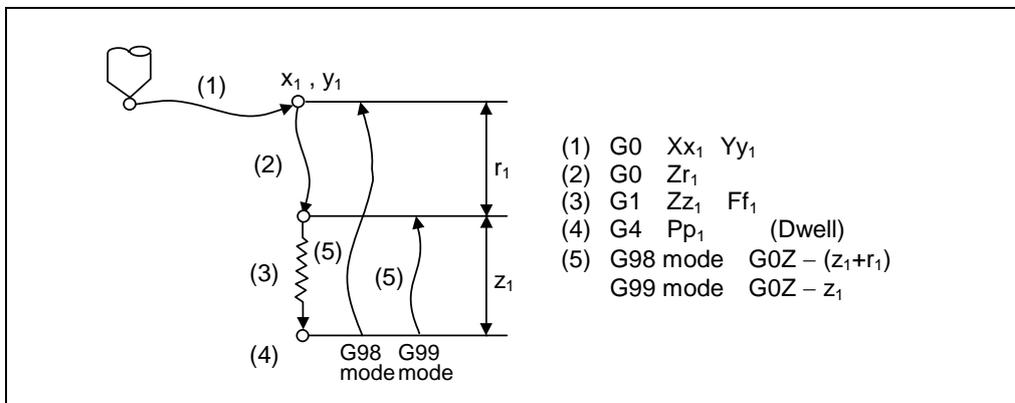

Operation pattern	i1	j1
(1)	Valid	-
(2)	-	Invalid
(3)	-	Invalid
(4)	-	-
(5)	-	Valid


The operation stops at after the (1), (2) and (5) commands during single block operation.

(c) G83 (Deep hole drilling cycle)

Program

G83 Xx₁ Yy₁ Zz₁ Rr₁ Qq₁ Ff₁ ,li₁ ,Jj₁;

Q : This designates the cutting amount per pass, and is always designated with an incremental value.

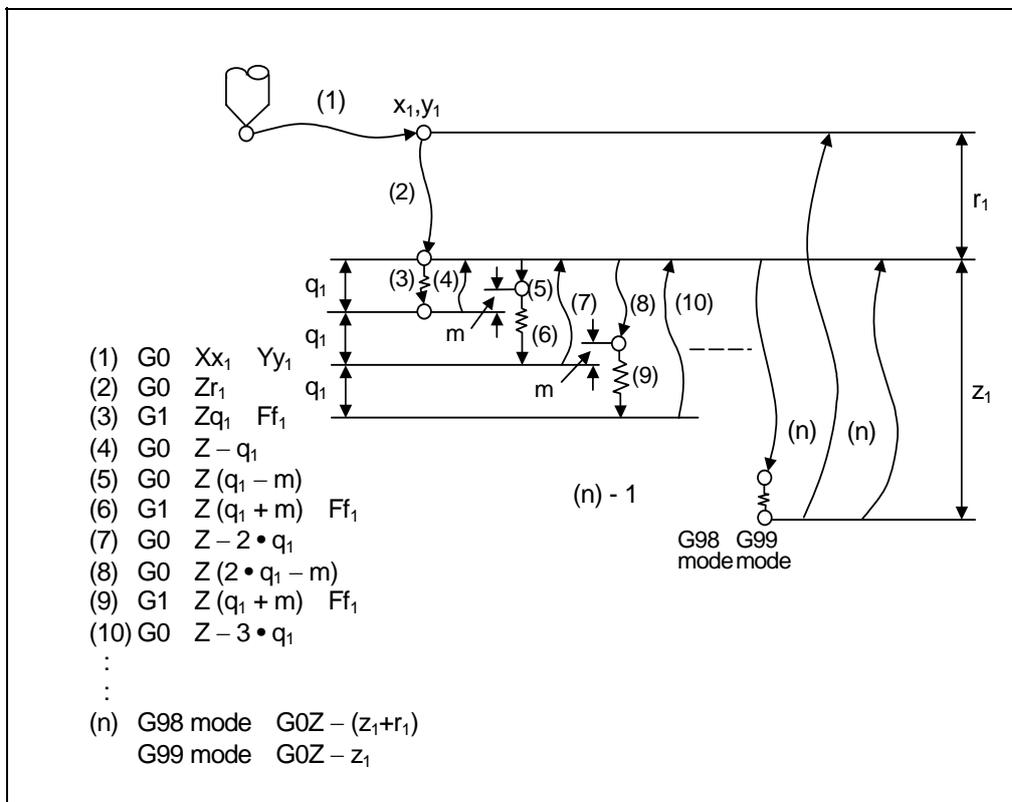

Operation pattern	i1	j1
(1)	Valid	-
(2)	-	Invalid
(3)	-	Invalid
(4)	-	Invalid
(5)	-	Invalid
(6)	-	Invalid
(7)	-	Invalid
(8)	-	Invalid
(9)	-	Invalid
(10)	-	Invalid

⋮
⋮

n-1	-	Invalid
n	-	Valid

When executing a second and following cutting in the G83 as shown above, the movement will change from rapid traverse to cutting feed several mm before the position machined last. When the hole bottom is reached, the axis will return according to the G98 or G99 mode.

m will differ according to the parameter "#8013 G83 return". Program so that q₁>m.


The operation stops at after the (1), (2) and n commands during single block operation.

(d) G84 (Tapping cycle)

Program

G84 $Xx_1 Yy_1 Zz_1 Rr_1 Ff_1 Pp_1 Rr_2$ (or S_1, S_2), li_1, Jj_1 ;

P : Dwell designation

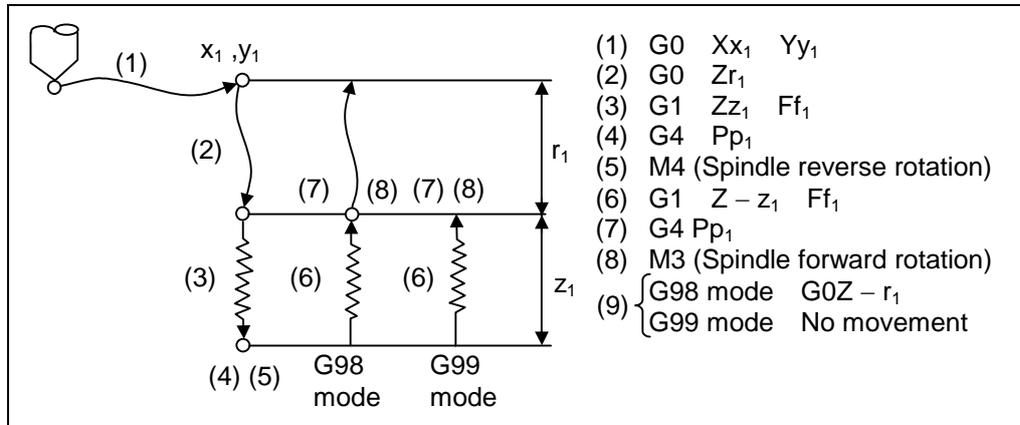


Operation pattern	i1	j1
(1)	Valid	-
(2)	-	Invalid
(3)	-	Invalid
(4)	-	-
(5)	-	-
(6)	-	Invalid
(7)	-	-
(8)	-	-
(9)	-	Valid

- When $r_2 = 1$, the synchronous tapping mode will be entered, and when $r_2 = 0$, the asynchronous tapping mode will be entered.
- When G84 is executed, the override will be canceled and the override will automatically be set to 100%.
- Dry run is valid when the control parameter "G00 DRY RUN" is on and is valid for the positioning command. If the feed hold button is pressed during G84 execution, and the sequence is at (3) to (6), the movement will not stop immediately, and instead will stop after (6). During the rapid traverse in sequence (1), (2) and (9), the movement will stop immediately.
- The operation stops at after the (1), (2) and (9) commands during single block operation.
- During the G84 modal, the "Tapping" NC output signal will be output.
- During the G84 synchronous tapping modal, the M3, M4, M5 and S code will not be output.


This function allows spindle acceleration/deceleration pattern to be approached to the speed loop acceleration/deceleration pattern by dividing the spindle and drilling axis acceleration/deceleration pattern into up to three stages during synchronous tapping. The acceleration/deceleration pattern can be set up to three stages for each gear. When returning from the hole bottom, rapid return is possible depending on the spindle rotation speed during return. The spindle rotation speed during return is held as modal information.

- (i) When tap rotation speed < spindle rotation speed during return ≤ synchronous tap changeover spindle rotation speed 2

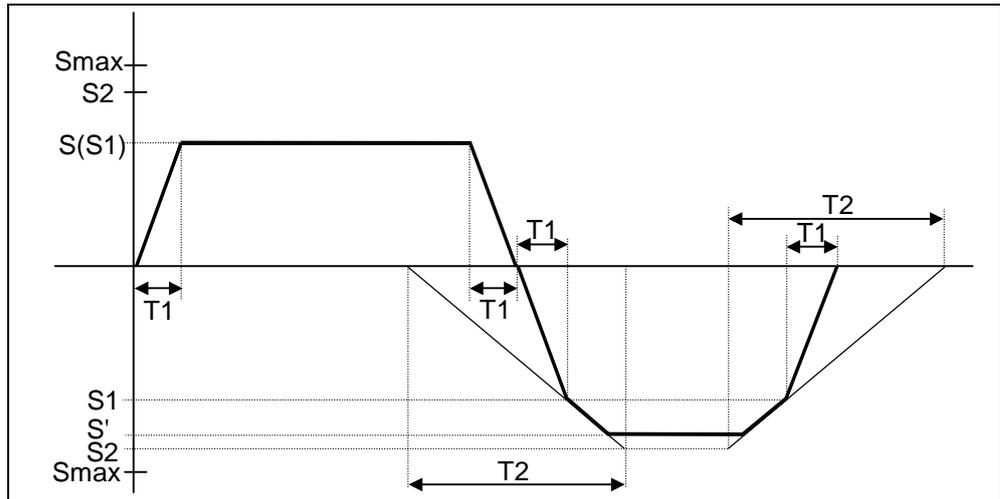


S	: Command spindle rotation speed
S'	: Spindle rotation speed during return
S1	: Tap rotation speed (spindle base specification parameters #3013 to #3016)
S2	: Synchronous tap changeover spindle rotation speed 2 (spindle base specification parameters #3037 to #3040)
Smax	: Maximum rotation speed (spindle base specification parameters #3005 to #3008)
T1	: Tap time constant (spindle base specification parameters #3017 to #3020)
T2	: Synchronous tap changeover time constant 2 (spindle base specification parameters #3041 to #3044)

(ii) When synchronous tap changeover spindle rotation speed 2 < spindle rotation speed during return

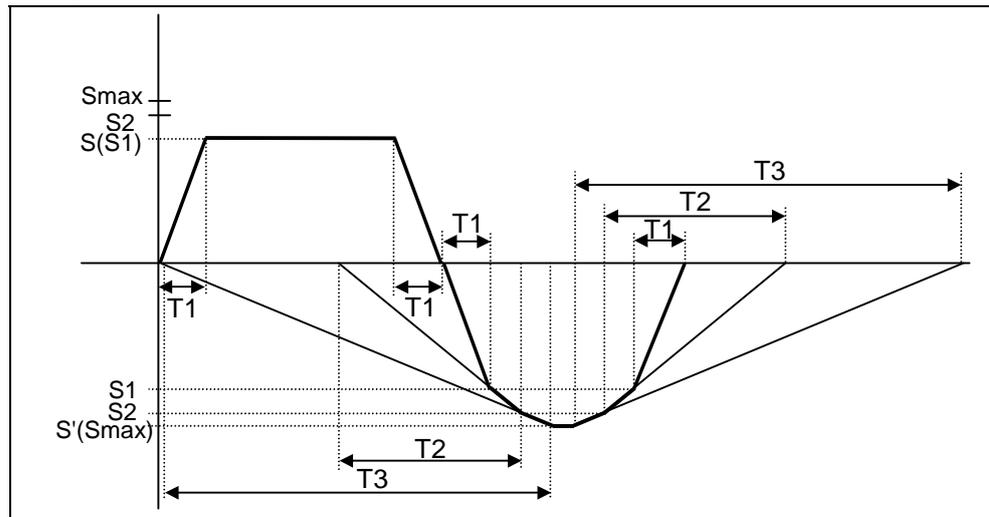

S	: Command spindle rotation speed
S'	: Spindle rotation speed during return
S1	: Tap rotation speed (spindle base specification parameters #3013 to #3016)
S2	: Synchronous tap changeover spindle rotation speed 2 (spindle base specification parameters #3037 to #3040)
Smax	: Maximum rotation speed (spindle base specification parameters #3005 to #3008)
T1	: Tap time constant (spindle base specification parameters #3017 to #3020)
T2	: Synchronous tap changeover time constant 2 (spindle base specification parameters #3041 to #3044)
T3	: Synchronous tap changeover time constant 3 (spindle base specification parameters #3045 to #3048)


- (e) G85 (Boring)
 Program
 G85 $Xx_1 Yy_1 Zz_1 Rr_1 Ff_1, li_1, Jj_1;$

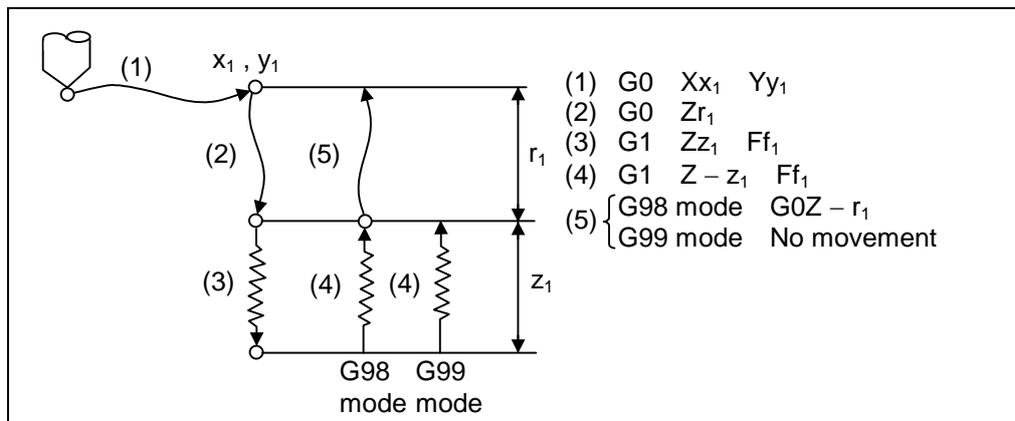

Operation pattern	i1	j1
(1)	Valid	-
(2)	-	Invalid
(3)	-	Invalid
(4)	-	Invalid
(5)	-	Valid

The operation stops at after the (1), (2), and (4) or (5) commands during single block operation.

- (f) G86 (Boring)
 Program
 G86 $Xx_1 Yy_1 Zz_1 Rr_1 Ff_1 Pp_1;$

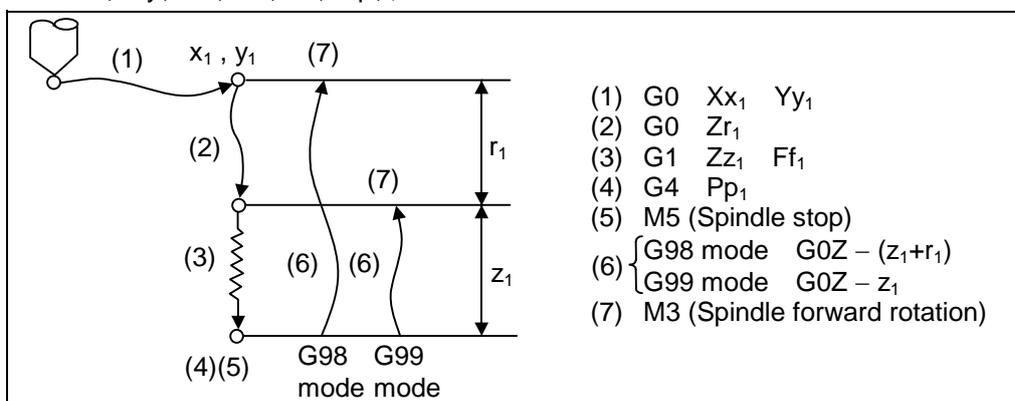


The operation stops at after the (1), (2) and (7) commands during single block operation.

(g) G87 (Back boring)

Program

G87 $Xx_1 Yy_1 Zz_1 Rr_1 Iq_1 Jq_2 Ff_1$;

(Note) Take care to the z_1 and r_1 designations.
 (The z_1 and r_1 symbols are reversed).
 There is no R point return.

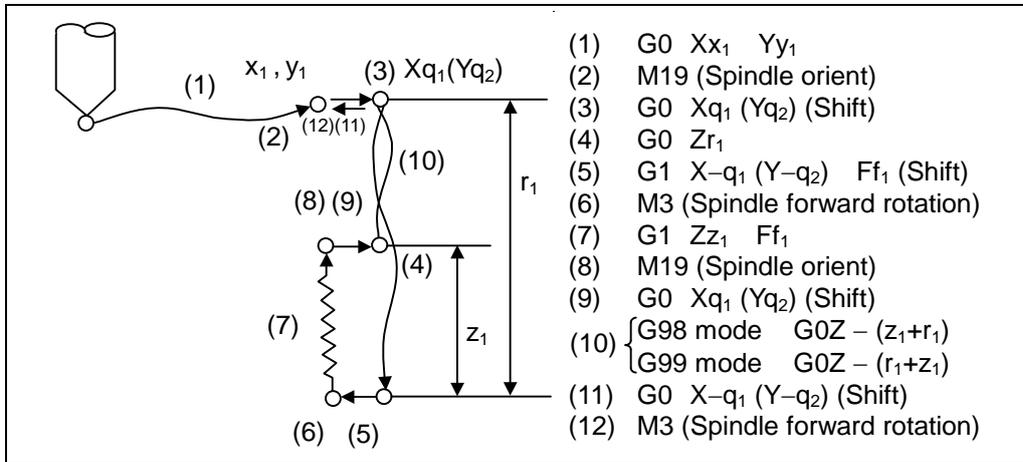


The operation stops at after the (1), (4), (6) and (11) commands during single block operation.

When this command is used, high precision drilling machining that does not scratch the machining surface can be done.

(Positioning to the hole bottom and the escape (return) after cutting is executed in the state shifted to the direction opposite of the cutter.)

The shift amount is designated as shown below with addresses I, J and K.

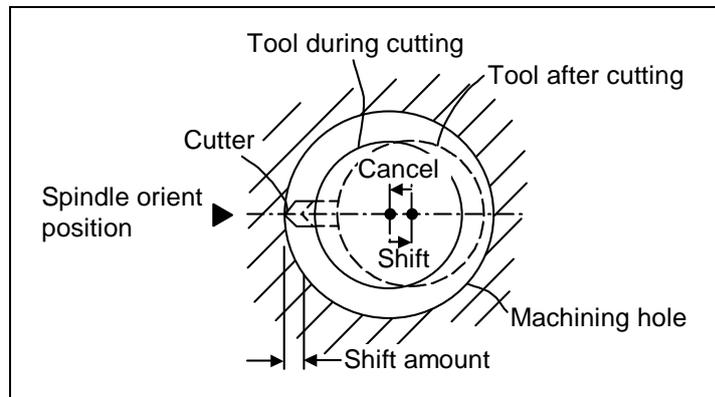

For G17 : I, J
 For G18 : K, I
 For G19 : J, K

The shift amount is executed with linear interpolation, and the feed rate follows the F command.

Command I, J, and K with incremental values in the same block as the hole position data.

I, J and K will be handled as modals during the canned cycle.


(Note) If the parameter "#1080 Dril_Z" which fixes the hole drilling axis to the Z axis is set, the shift amount can be designated with address Q instead of I and j. In this case, whether to shift or not and the shift direction are set with parameter "#8207 G76/87 No shift" and "#8208 G76/87 Shift (-)". The symbol for the Q value is ignored and the value is handled as a positive value.

The Q value is a modal during the canned cycle, and will also be used as the G83, G73 and G76 cutting amount.

(h) G88 (Boring)

Program

G88 Xx₁ Yy₁ Zz₁ Rr₁ Ff₁ Pp₁ ;

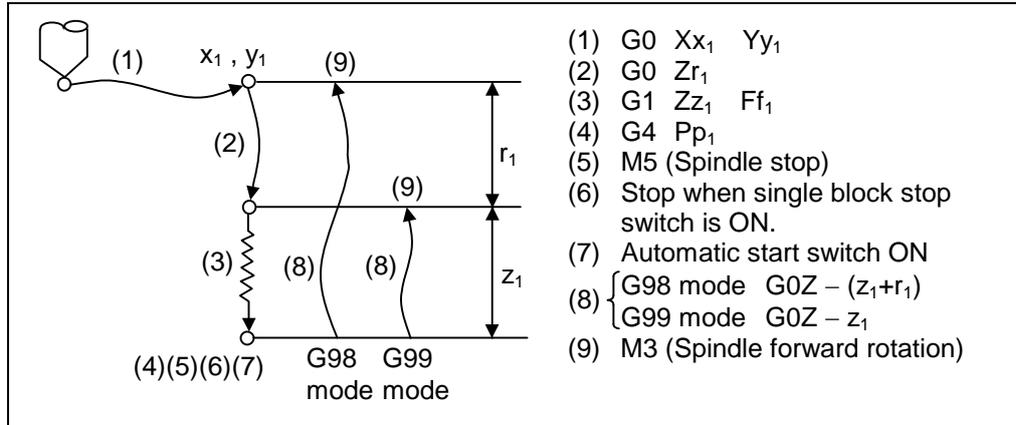


The operation stops at after the (1), (2), (6) and (9) commands during single block operation.

(i) G89 (Boring)

Program


G89 Xx₁ Yy₁ Zz₁ Rr₁ Ff₁ Pp₁, li₁, Jj₁;

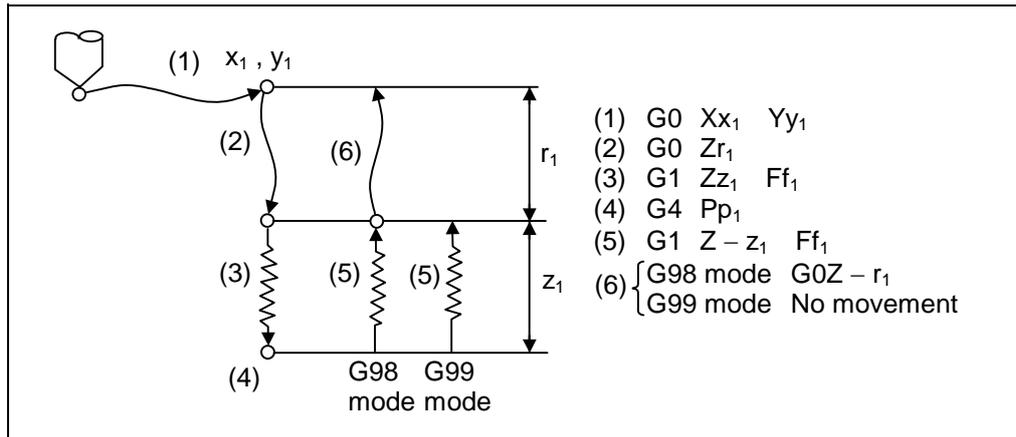

Operation pattern	i1	j1
(1)	Valid	-
(2)	-	Invalid
(3)	-	Invalid
(4)	-	-
(5)	-	Invalid
(6)	-	Valid

The operation stops at after the (1), (2) and (5) or (6) commands during single block operation.

- (j) G73 (Step cycle)
 Program
 G73 Xx_1 Yy_1 Zz_1 Qq_1 Rr_1 Ff_1 Pp_1 , li_1 , Jj_1 ;
 P : Dwell designation

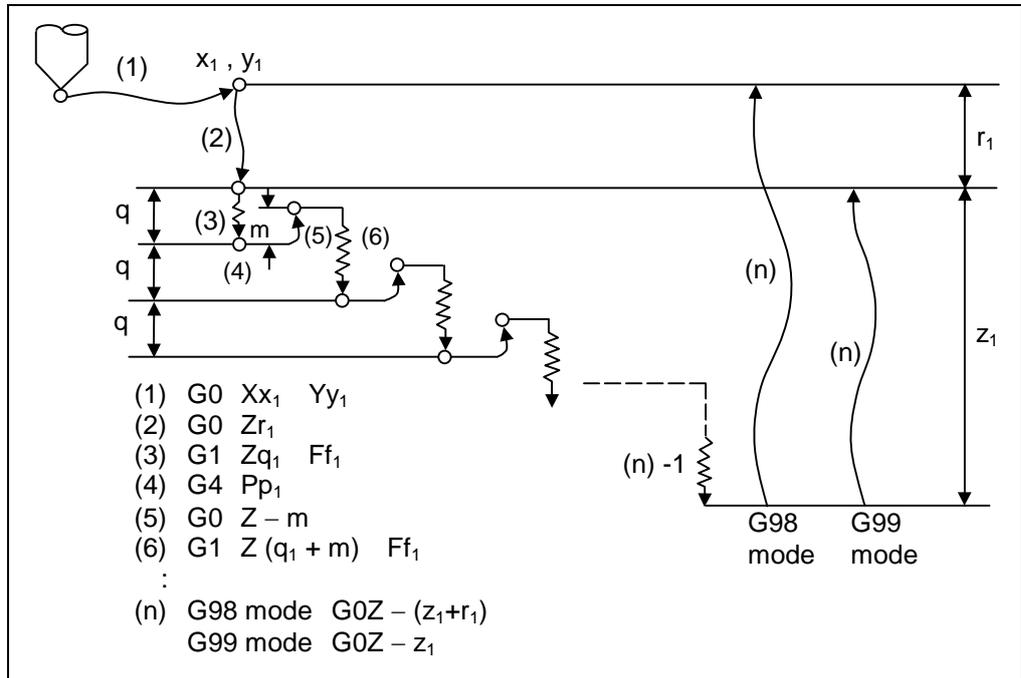

Operation pattern	i1	j1
(1)	Valid	-
(2)	-	Invalid
(3)	-	Invalid
(4)	-	-
(5)	-	Invalid
(6)	-	Invalid

:
 :

(n) -1	-	Invalid
(n)	-	Valid

When executing a second and following cutting in the G73 as shown above, the movement will return several m mm with rapid traverse and then will change to cutting feed.

The return amount m will differ according to the parameter "#8012 G73 return".


The operation stops at after the (1), (2) and (n) commands during single block operation.

(k) G74 (Reverse tapping cycle)

Program

G74 Xx₁ Yy₁ Zz₁ Rr₁ Pp₁ Rr₂(or S₁,S₂) ,li₁ ,Jj₁;

P : Dwell designation

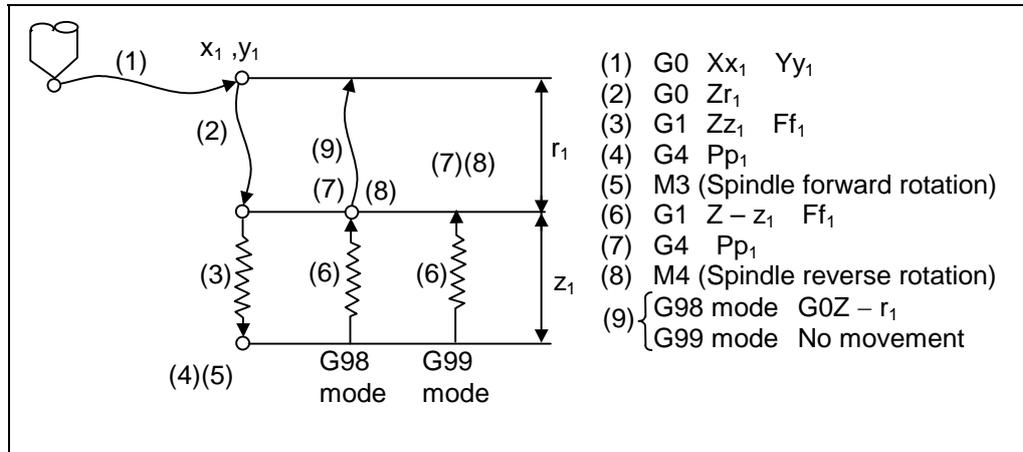

Operation pattern	i1	j1
(1)	Valid	-
(2)	-	Invalid
(3)	-	Invalid
(4)	-	-
(5)	-	-
(6)	-	Invalid
(7)	-	-
(8)	-	-
(9)	-	Valid

When $r_2 = 1$, the synchronous tapping mode will be entered, and when $r_2 = 0$, the asynchronous tapping mode will be entered.

When G74 is executed, the override will be canceled and the override will automatically be set to 100%. Dry run is valid when the control parameter "#1085 G00Drn" is set to "1" and is valid for the positioning command. If the feed hold button is pressed during G74 execution, and the sequence is at (3) to (6), the movement will not stop immediately, and instead will stop after (6). During the rapid traverse in sequence (1), (2) and (9), the movement will stop immediately.


The operation stops at after the (1), (2) and (9) commands during single block operation.

During the G74 and G84 modal, the "Tapping" NC output signal will be output.

During the G74 synchronous tapping modal, the M3, M4, M5 and S code will not be output.


This function allows spindle acceleration/deceleration pattern to be approached to the speed loop acceleration/deceleration pattern by dividing the spindle and drilling axis acceleration/deceleration pattern into up to three stages during synchronous tapping. The acceleration/deceleration pattern can be set up to three stages for each gear. When returning from the hole bottom, rapid return is possible depending on the spindle rotation speed during return. The spindle rotation speed during return is held as modal information.

- (i) When tap rotation speed < spindle rotation speed during return ≤ synchronous tap changeover spindle rotation speed 2

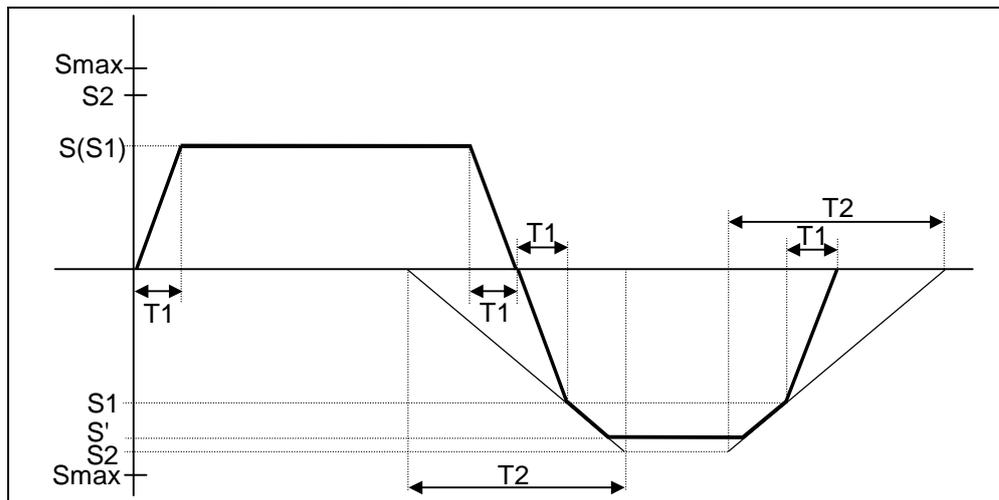

- S : Command spindle rotation speed
- S' : Spindle rotation speed during return
- S1 : Tap rotation speed (spindle base specification parameters #3013 to #3016)
- S2 : Synchronous tap changeover spindle rotation speed 2
(spindle base specification parameters #3037 to #3040)
- Smax : Maximum rotation speed (spindle base specification parameters #3005 to #3008)
- T1 : Tap time constant (spindle base specification parameters #3017 to #3020)
- T2 : Synchronous tap changeover time constant 2
(spindle base specification parameters #3041 to #3044)

(ii) When synchronous tap changeover spindle rotation speed 2 < spindle rotation speed during return

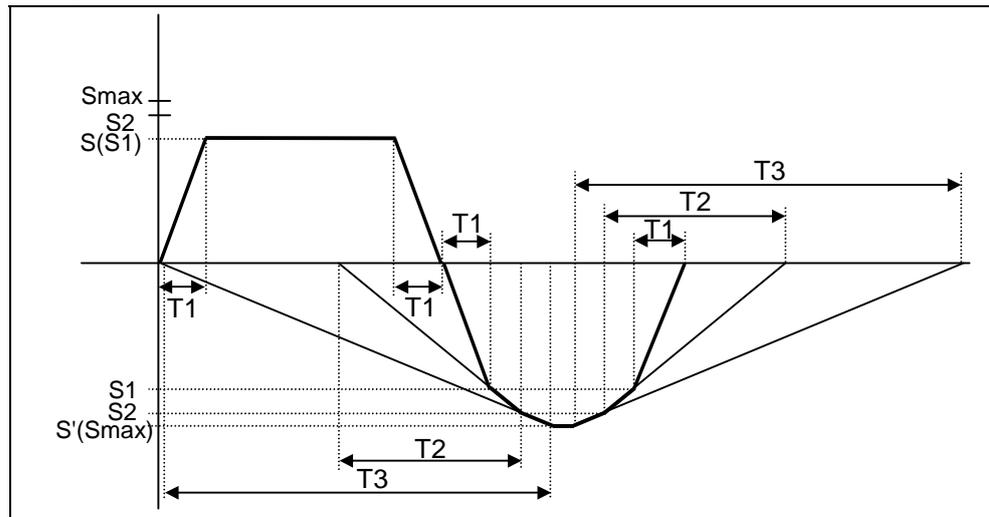

- S : Command spindle rotation speed
- S' : Spindle rotation speed during return
- S1 : Tap rotation speed (spindle base specification parameters #3013 to #3016)
- S2 : Synchronous tap changeover spindle rotation speed 2
(spindle base specification parameters #3037 to #3040)
- Smax : Maximum rotation speed (spindle base specification parameters #3005 to #3008)
- T1 : Tap time constant (spindle base specification parameters #3017 to #3020)
- T2 : Synchronous tap changeover time constant 2
(spindle base specification parameters #3041 to #3044)
- T3 : Synchronous tap changeover time constant 3
(spindle base specification parameters #3045 to #3048)



Precautions for using canned cycle

- (1) Before the canned cycle is commanded, the spindle must be rotating in a specific direction with an M command (M3 ; or M4 ;).
Note that for the G87 (back boring) command, the spindle rotation command is included in the canned cycle so only the rotation speed command needs to be commanded beforehand.
- (2) If there is a basic axis, additional axis or R data in the block during the canned cycle mode, the hole drilling operation will be executed. If there is not data, the hole will not be drilled.
Note that in the X axis data, if the data is a dwell (G04) time command, the hole will not be drilled.
- (3) Command the hole machining data (Q, P, I, J, K) in a block where hole drilling is executed. (Block containing a basic axis, additional axis or R data.)
- (4) The canned cycle can be canceled by the G00 to G03 or G33 command besides the G80 command. If these are designated in the same block as the canned cycle, the following will occur.

(Where, 00 to 03 and 33 are m, and the canned cycle code is n)

G _m	G _n	X	Y	Z	R	Q	P	L	F	;
Execute	Ignore	Execute			Ignore				Record	
G _m	G _n	X	Y	Z	R	Q	P	L	F	;
Ignore		Execute			Ignore				Record	


Note that for the G02 and G03 commands, R will be handled as the arc radius.

- (5) If an M function is commanded in the same block as the canned cycle command, the M code and MF will be output during the initial positioning. The next operation will be moved to with FIN (finish signal).
If there is a No. of times designated, the above control will be executed only on the first time.
- (6) If another control axis (ex., rotary axis, additional axis) is commanded in the same block as the canned cycle control axis, the canned cycle will be executed after the other control axis is moved first.
- (7) If the No. of repetitions L is not designated, L1 will be set. If L0 is designated in the same block as the canned cycle G code command, the hole machining data will be recorded, but the hole machining will not be executed.

(Example) G73X__Y__Z__R__Q__P__F__L0__;
Execute Record only code having an address

- (8) When the canned cycle is executed, only the modal command commanded in the canned cycle program will be valid in the canned cycle subprogram. The modal of the program that called out the canned cycle will not be affected.
- (9) Other subprograms cannot be called from the canned cycle subprogram.
- (10) Decimal points in the movement command will be ignored during the canned cycle subprogram.
- (11) If the No. of repetitions L is 2 or more during the incremental value mode, the positioning will also be incremented each time.

(Example) G91G81X10. Z-50.R-20.F100.L3 ;

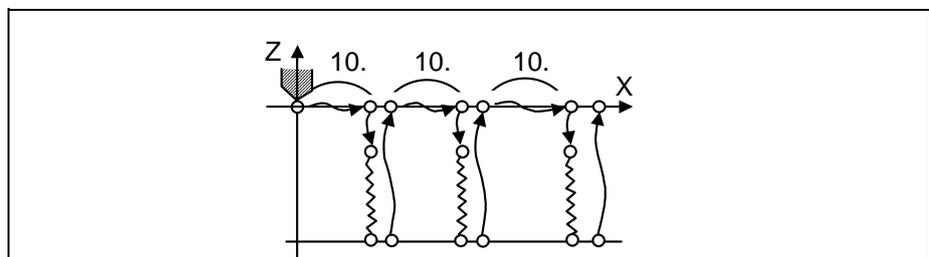

13. Program Support Functions

13.1 Canned cycles

- (12) If the spindle rotation speed value during return is smaller than the spindle speed, the spindle rotation speed value is valid even during return.
- (13) If the 2nd and 3rd acceleration/deceleration stage inclinations following the spindle rotation speed and time constants set in the parameters are each steeper than the previous stage's inclination, the previous stage's inclination will be valid.
- (14) If the values set in the spindle base specification parameter "stap1-4" (tap rotation speed) and "taps21-24" (synchronous tap changeover spindle rotation speed 2) exceed the maximum rotation speed, the spindle rotation speed will be clamped at the maximum rotation speed.
- (15) If the spindle rotation speed during return is not 0, the tap return override value will be invalid.
- (16) In a block where the movement direction of any axis reverses as shown below, the servo system load will greatly increase so do not command the in-position width in the machining program.
 G0 X100., I10.0 ;
 X-200. ;
- (17) If the in-position width commanded with the programmable in-position width command is increased, the positioning time and linear interpolation time can be reduced. However, the position error amount of the previous block will also increase before the next block starts, so the actual machining could be obstructed.
- (18) The in-position width and the position error amount are compared at a set time, so the position error amount at the point to be judged as in-position will be smaller than the commanded in-position width.
- (19) If the in-position width commanded with the programmable in-position command is small, the commanded deceleration check or in-position check following the parameters may be carried out first.
- (20) Synchronous and asynchronous tap can be selected with the M function.

Base specifications parameters

#	Items		Details	Setting range
1272 (PR)	ext08	bit1	M-function synchronous tap cycle valid.	0:Invalid 1:Valid

Synchronous tap cannot be selected with the M function when this parameter is OFF.

Base specifications parameters

#	Items	Details	Setting range
1513	stapM	M code for synchronous tap selection	0 to 99999999

The synchronous tap mode is selected with the miscellaneous function code set with this parameter.

The M function can be commanded in the same block before the tap command.

The synchronous and asynchronous tap will follow the combination shown below.

Program command (,R0/1)	Combination											
	0	0	0	0	1	1	1	1	No command			
#1229 (bit4) (Synchronous tap valid)	0	0	1	1	0	0	1	1	0	0	1	1
M function code (M**)	×	○	×	○	×	○	×	○	×	○	×	○
Synchronous/ asynchronous selection	A	A	A	A	S	S	S	S	A	S	S	S

× : Does not command A : Asynchronous tap
 ○ : Commands S : Synchronous tap


(Note1) Do not use M00, 01, 02, 30, 98 or 99.

(Note2) Depending on the model, selection with the M function may not be possible.

13. Program Support Functions

13.1 Canned cycles

13.1.2 Initial point and R point level return; G98, G99

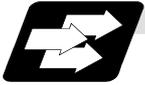

Function and purpose

Whether to use R point or initial level for the return level in the final sequence of the canned cycle can be selected.



Command format

G98 ;
 G99 ;
 G98 ; Initial level return
 G99 ; R point level return



Detailed description

The relation of the G98/G99 mode and No. of repetition designation is as shown below.

No. of hole drilling	Program example	G98 At power ON, at cancel with M02, M30, and reset button	G99
Only one execution	G81X100. Y100. Z-50. R25. F1000;	 Initial level return is executed.	 R point level return is executed.
Second and following executions	G81X100. Y100. Z-50. R25. L5F1000;	 Initial level return is executed for all times.	 R point level return is executed for all times.



Example of program

(Example 1)

G82 Zz ₁ Rr ₁ Pp ₁ Ff ₁ L0 ;	Record only the hold machining data (Do not execute)
Xx ₁ Yy ₁ ;	Execute hole drilling operation with G82 mode

The No. of canned cycle repetitions is designated with L. If L1 is designated or L not designated, the canned cycle will be executed once. The setting range is 1 to 9999.


If L0 is commanded, only the hole machining data will be recorded.

G8Δ (7Δ) Xx₁ Yy₁ Zz₁ Rr₁ Pp₁ Qq₁ Ff₁ Ll₁ ;


13. Program Support Functions

13.1 Canned cycles

The ideology of the data differs between the absolute value mode (G90) and incremental value mode (G91) as shown below.

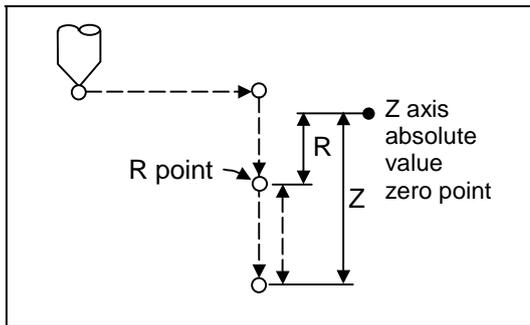

Absolute value mode (G90)

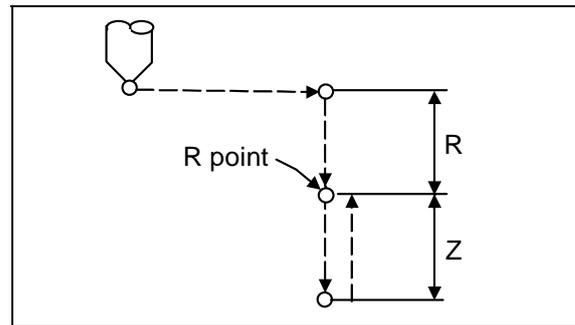

Incremental value mode (G91)

Designate a command value with a symbol for X, Y and Z. R indicates the coordinate value from the zero point in the absolute value mode, so a symbol must always be added. However, in the incremental value the symbol will be ignored and will be viewed as the same symbol as for Z. Note that the symbols will be viewed in reverse for G87.

The hole machining data is held as shown below in the canned cycle. The hole machining data is canceled when the G80 command or G commands (G00, G01, G02, G03, G2.1, G3.1, G33) in the 01 group are reached.

(Example 2)

N001 G81 Xx ₁ Yy ₁ Zz ₁ Rr ₁ Ff ₁ ;	
N002 G81 ;	Only selection of canned cycle sequence
N003 Xx ₂ Yy ₂ ;	Change of positioning point, and execution of canned cycle
N004 M22 ;	Execution of only M22
N005 G04 Xx ₃ ;	Execution of only dwell
N006 G92 Xx ₄ Yy ₄ ;	Execution of only coordinate system setting
N007 G28 (G30) Z0 ;	Execution of only reference point (zero point) return
N008 ;	No work
N009 G99 Zz ₂ Rr ₂ Ff ₂ L0 ;	Execution of only hole machining data recording
N010 Xx ₅ Yy ₅ Ll ₅ ;	Change of positioning point, and execution of R point return canned cycle for l ₅ times
N011 G98 Xx ₆ Yy ₆ Zz ₆ Rr ₆ ;	Change of positioning point, and execution of canned cycle
N012 Ww ₁ ;	Execute W axis according to 01 group modal before N001, and then execute canned cycle

13.1.3 Setting of workpiece coordinates in canned cycle mode

The designated axis moves with the workpiece coordinate system set for the axis. The Z axis is valid after the R point positioning after positioning or from Z axis movement.

(Note) When the workpiece coordinates are changed over for address Z and R, re-program even if the values are the same.

(Example)

G54 Xx ₁ Yy ₁ Zz ₁ ;	
G81 Xx ₂ Yy ₂ Zz ₂ Rr ₂ ;	
G55 Xx ₃ Yy ₃ Zz ₂ Rr ₂ ;	Re-command even if Z and R are the same as the previous value.
Xx ₄ Yy ₄ ;	
Xx ₅ Yy ₅ ;	

13.2 Special canned cycle; G34, G35, G36, G37.1



Function and purpose

The special canned cycle is used with the standard canned cycle. Before using the special canned cycle, program the canned cycle sequence selection G code and hole machining data to record the hole machining data. (If there is no positioning data, the canned cycle will not be executed, and only the data will be recorded.)

The axis is positioned to the hole machining position when the special canned cycle is executed. The hole machining operation is executed with the canned cycle for hole machining.

Even after the special canned cycle is executed, the recorded standard canned cycle will be held until canceled.

If the special canned cycle is designated when not in the canned cycle mode, only positioning will be executed, and the hole drilling operation will not be done.

If the special canned cycle is commanded without commanding the canned cycle for hole machining, positioning will be executed following the current 01 group modal G code.



Bolt hole circle (G34)

G34 X x₁ Y y₁ I r J θ K n ;

X, Y :Positioning of bolt hole cycle center. This will be affected by G90/G91.

I :Radius r of the circle. The unit follows the input setting unit, and is given with a positive number.

J :Angle θ of the point to be drilled first. The CCW direction is positive.
(The decimal point position will be the degree class. If there is no decimal point, the unit will be 0.001°.)

K :No. of holes n to be drilled. 1 to 9999 can be designated, but 0 cannot be designated. When the value is positive, positioning will take place in the CCW direction, and when negative, will take place in the CW direction. If 0 is designated, the alarm P221 Special Canned Holes Zero will occur.


Drilling of n obtained by dividing the circumference by n will start at point created by the Z axis and angle θ. The circumference is that of the radius R centering on the coordinates designated with XX and Y. The hole drilling operation at each hole will hold the drilling data for the standard canned cycle such as G81.

The movement between hole positions will all be done in the G00 mode. G34 will not hold the data even when the command is completed.

(Example)

When input setting unit is 0.001mm

```
N001 G91 ;
N002 G81 Z -10000 R5000 L0 F200 ;
N003 G90 G34 X200000 Y100000 I100000 J20000 K6 ;
N004 G80 ; ..... (Cancel of G81)
N005 G90 G0 X500000 Y100000 ;
```

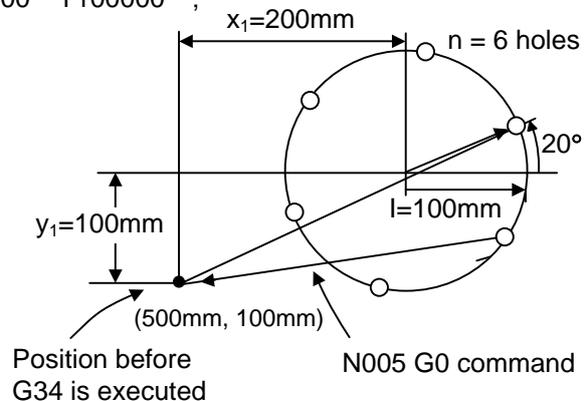

As shown in the example, the tool position after the G34 command is completed is over the final hole. When moving to the next position, the coordinate value must be calculated to issue the command with an incremental value. Thus, use of the absolute value mode is handy.

(Note 1) If an address other than the selected plane's vertical axis, horizontal axis, G, N, I, J, K, H, O, P, F, M, S or 2nd auxiliary function is issued in the same block as the G34 command, a program error (P32) will occur.



Line at angle (G35)

G35 X x1 Y y1 I d J θ K n ;


- X, Y :Designation of start point coordinates. This will be affected by G90/G91.
 I :Interval d. The unit follows the input setting unit. If d is negative, the drilling will take place in the direction symmetrical to the point that is the center of the start point.
 J :Angle θ . The CCW direction is positive.
 (The decimal point position will be the degree class. If there is no decimal point, the unit will be 0.001°.)
 K :No. of holes n to be drilled. 1 to 9999 can be designated, and the start point is included.

Using the position designated by X and Y as the start point, the Zn holes will be drilled with interval d in the direction created by X axis and angle θ . The hole drilling operation at each hole position will be determined by the standard canned cycle, so the hole drilling data (hole machining mode and hole machining data) must be held beforehand. The movement between hole positions will all be done in the G00 mode. G35 will not hold the data even when the command is completed.

(Example)

When input setting unit is 0.001mm

```
G91 ;
G81 Z - 10000 R5000 L0 F100 ;
G35 X200000 Y100000 I100000 J30000 K5 ;
```

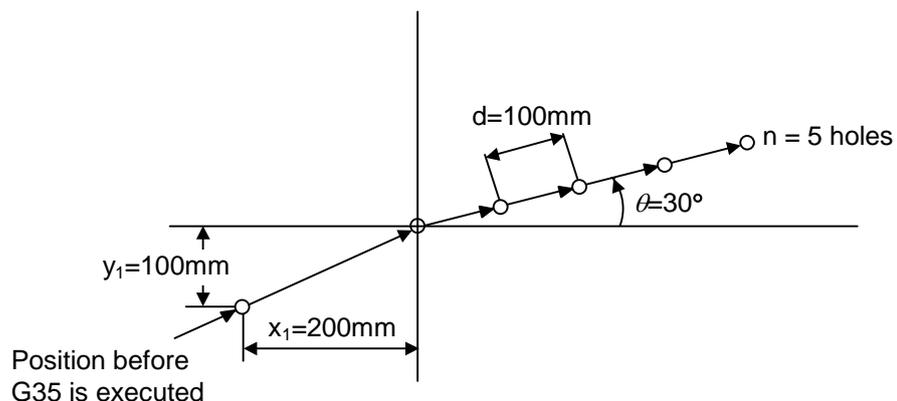

(Note 1) If the K command is K0 or if there is no K command, the program error (P221) will occur.

(Note 2) If the K value is more than four digits, the last four digits will be valid.

(Note 3) If an address other than the selected plane's vertical axis, horizontal axis, G, N, I, J, K, H, O, P, F, M, S or 2nd auxiliary function is issued in the same block as the G35 command, a program error (P32) will occur.

(Note 4) If a group 0 G command is issued in the same block as the G35 command, the command issued later is the priority.

(Example) G35 G28 Xx1 Yy1 Ii1 Jj1 Kk1 ;

G35 is ignored G 28 is executed as Xx1 Yy1

(Note 5) If there is a G72 to G89 command in the same block as the G35 command, the canned cycle will be ignored, and the G35 command will be executed.



Arc (G36)

G36 X x1 Y y1 I r J θ P $\Delta\theta$ K n ;

- X, Y :Center coordinates of arc. This will be affected by G90/G91.
- I :Radius r of arc. The unit follows the input setting unit, and is given with a positive No.
- J :Angle θ of the point to be drilled first. The CCW direction is positive. (The decimal point position will be the degree class. If there is no decimal point, the unit will be 0.001°.)
- P :Angle interval $\Delta\theta$. When the value is positive, the drilling will take place in the CCW direction, and in the CW direction when negative. (The decimal point position will be the degree class. If there is no decimal point, the unit will be 0.001°.)
- K :No. of holes n to be drilled. 1 to 9999 can be designated.


The n holes aligned at the angle interval $\Delta\theta$ will be drilled starting at point created by the X axis and angle θ . The circumference is that of the radius R centering on the coordinates designated with XX and Y. As with the bolt hole circle, the hole drilling operation at each hole will depend on the standard canned cycle.

The movement between hole positions will all be done in the G00 mode. G36 will not hold the data even when the command is completed.

(Example)

When input setting unit is 0.001mm

```
N001 G91 ;
N002 G81 Z - 10000 R5000 F100 ;
N003 G36 X300000 Y100000 I300000 J10000 P15000 K6 ;
```

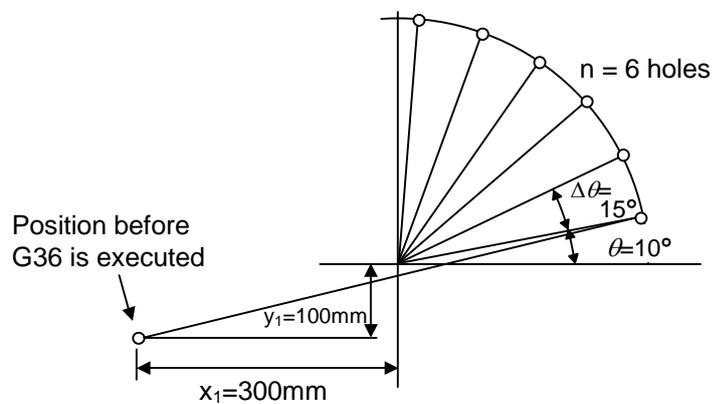

(Note 1) If an address other than the selected plane's vertical axis, horizontal axis, G, N, I, J, K, H, O, P, F, M, S or 2nd auxiliary function is issued in the same block as the G36 command, a program error (P32) will occur.



Grid (G37.1)


G37.1 X x1 Y y1 I Dx P nx J Dy K ny ;

X, Y	:Designation of start point coordinates. This will be affected by G90/G91.
I	:Interval Dx of the X axis. The unit will follow the input setting unit. If Dx is positive, the interval will be in the forward direction looking from the start point, and when negative, will be in the reverse direction looking from the start point.
P	:No. of holes nx in the X axis direction. The setting range is 1 to 9999.
J	:Interval Dy of the Y axis. The unit will follow the input setting unit. If Dy is positive, the interval will be in the forward direction looking from the start point, and when negative, will be in the reverse direction looking from the start point.
K	:No. of holes ny in the Y axis direction. The setting range is 1 to 9999.

The nx points on a grid are drilled with an interval Δx parallel to the X axis, starting at the position designated with X, Y. The drilling operation at each hole position will depend on the standard canned cycle, so the hole drilling data (hole machining mode and hole machining data) must be held beforehand.

The movement between hole positions will all be done in the G00 mode. G37.1 will not hold the data even when the command is completed.

(Example)

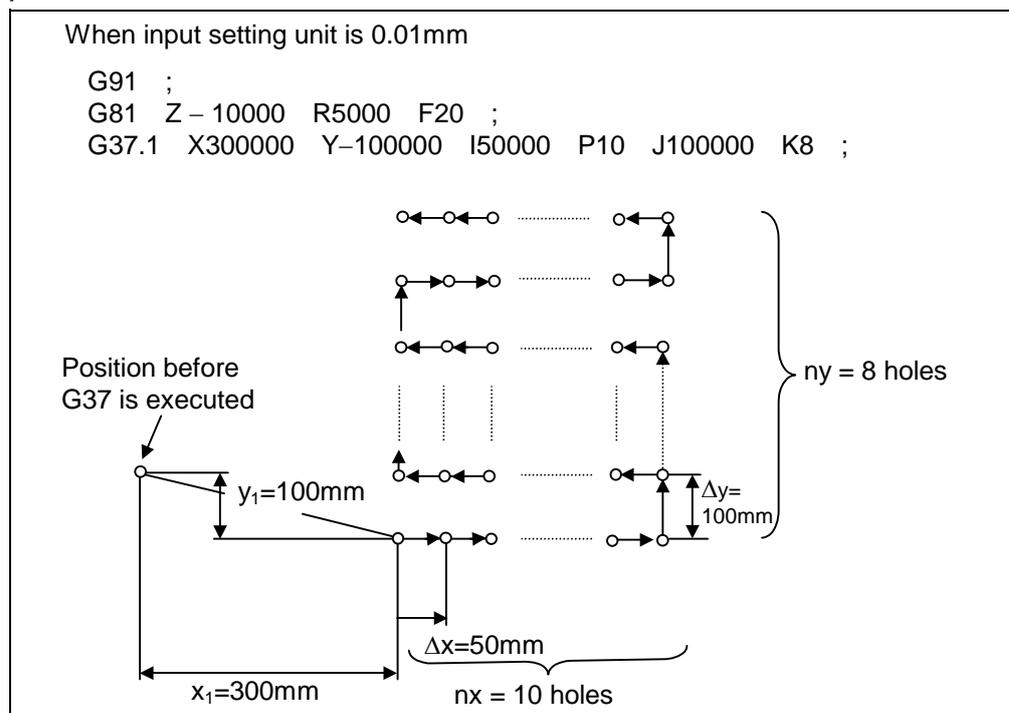

(Note 1) If the P and K commands are P0 or K0, or if there is no P or K command, the program error (P221) will occur.

If the P or K value is more than four digits, the last four digits will be valid.

(Note 2) If an address other than the selected plane's vertical axis, horizontal axis, G, N, I, J, K, H, O, P, F, M, S or 2nd auxiliary function is issued in the same block as the G37.1 command, a program error (P32) will occur.


(Note 3) If a group 0 G command is issued in the same block as the G37.1 command, the command issued later is the priority.

(Note 4) If there is a G72 to G89 command in the same block as the G37.1 command, the canned cycle will be ignored, and the G37.1 command will be executed.

(Note 5) If the G22/G23 command is programmed in the same block as the G37.1 command, the G22/G23 command will be ignored, and the G37.1 command will be executed.


13.3 Subprogram control; M98, M99, M198

13.3.1 Calling subprogram with M98 and M99 commands

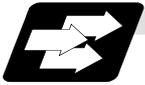

Function and purpose

Fixed sequences or repeatedly used patterns can be stored in the memory as subprograms which can then be called from the main program when required. M98 serves to call subprograms and M99 serves to return operation from the subprogram to the main program. Furthermore, it is possible to call other subprograms from particular subprograms and the nesting depth can include as many as 8 levels.

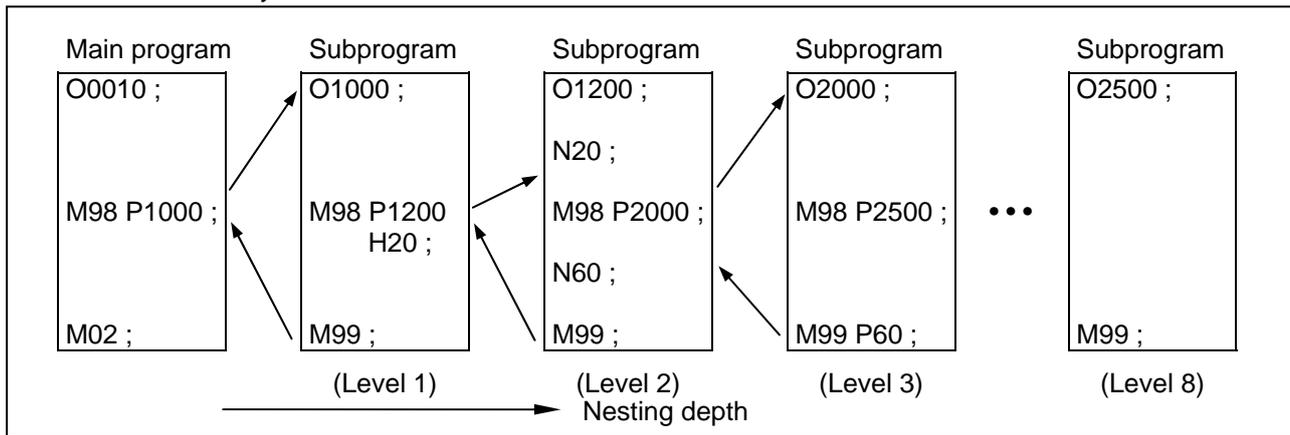

The table below shows the functions which can be executed by adding and combining the tape storing and editing functions, subprogram control functions and canned cycle functions.

	Case 1	Case 2	Case 3	Case 4
1. Tape storing and editing	Yes	Yes	Yes	Yes
2. Subprogram control	No	Yes	Yes	No
3. Canned cycles	No	No	Yes	Yes
Function				
1. Memory operation	○	○	○	○
2. Tape editing (main memory)	○	○	○	○
3. Subprogram call	×	○	○	×
4. Subprogram variable designation (Note 2)	×	○	○	×
5. Subprogram nesting level call (Note 3)	×	○	○	×
6. Canned cycles	×	×	○	○
7. Canned cycle subprogram editing	×	×	○	○

(Note 1) "○" denotes function which can be used and "×" a function which cannot be used.

(Note 2) Variables cannot be transferred with the M98 command but variable commands in subprograms can be used provided that the variable command specifications are available.

(Note 3) A maximum of 8 nesting levels can be possible.



Command format

Subprogram call

M98 P_ H_ L_ ;

P :Program number of subprogram to be called (own program if omitted)
P can only be omitted during memory operation and MDI operation.
(Numerical value with up to 8 digits)

H :Sequence number in subprogram to be called (head block if omitted)
(Numerical value with up to 5 digits)

L :Number of subprogram repetitions (When omitted, this is interpreted at
L1, and is not executed when L0)
(1 to 9999 with numerical value up to 4 digits)

For instance

M98 P1 L3 ; is equivalent to the following:

M98 P1 ;

M98 P1 ;

M98 P1 ;

Return to main program from subprogram

M99 P__ ;

P__ : Sequence number of return destination (returned to block following
block to be called if omitted)



Creating and entering subprograms

Subprograms have the same format as machining programs for normal memory operation except that the subprogram completion instruction M99 (P__) is entered as an independent block at the last block.

O△△△△△△△△ ; ; ; : ; : ; ; M99 ; % (EOR)) Program number as subprogram ; Main body of subprogram ; Subprogram return command) Entry completion code
--	---

(1) The above program is entered by editing operations at the setting and display unit. For further details, refer to the section on program editing in the Control Instructions.

- (2) Only those subprogram numbers ranging from 1 through 99999999 designated by the optional specifications can be used. When there are no program numbers on the tape, they are entered as the setting number for "program input."
- (3) Up to 4 nesting levels can be used for calling subprograms, and program error (P230) results if this number is exceeded.
- (4) No distinction between main programs and subprograms is made since they are entered in the sequence in which they were read. This means that main programs and subprograms should not be given the same numbers. (If they are, error "E11" appears during entry.)

Registration example

<pre> ; O○○○○ ; ; : M99 ; %</pre>	}	Subprogram A
---	---	--------------

<pre> O△△△△ ; ; : M99 ; %</pre>	}	Subprogram B
---------------------------------------	---	--------------


<pre> O**** ; ; : M99 ; %</pre>	}	Subprogram C
---------------------------------------	---	--------------

- (5) Main programs can be entered during memory, tape, MDI or BTR operation but subprograms must be entered in the memory.
- (6) Besides the M98 command, subprogram nesting is subject to the following commands:
 - G65 Macro call
 - G66 Modal call
 - G66.1 Modal call
 - G code call
 - Miscellaneous function call (M, S, T, etc.)
 - Macro interrupt
 - MDI interrupt
 - Automatic tool length measurement
 - Multi-stage skip function
- (7) Subprogram nesting is not subject to the following commands which can be called even beyond the 4th nesting level.
 - Canned cycles
- (8) To repeatedly use the subprogram, it can be repeated l1 times by programming M98 Pp₁ Ll₁;



Example of program

When there are 3 subprogram calls (known as 3 nesting levels)

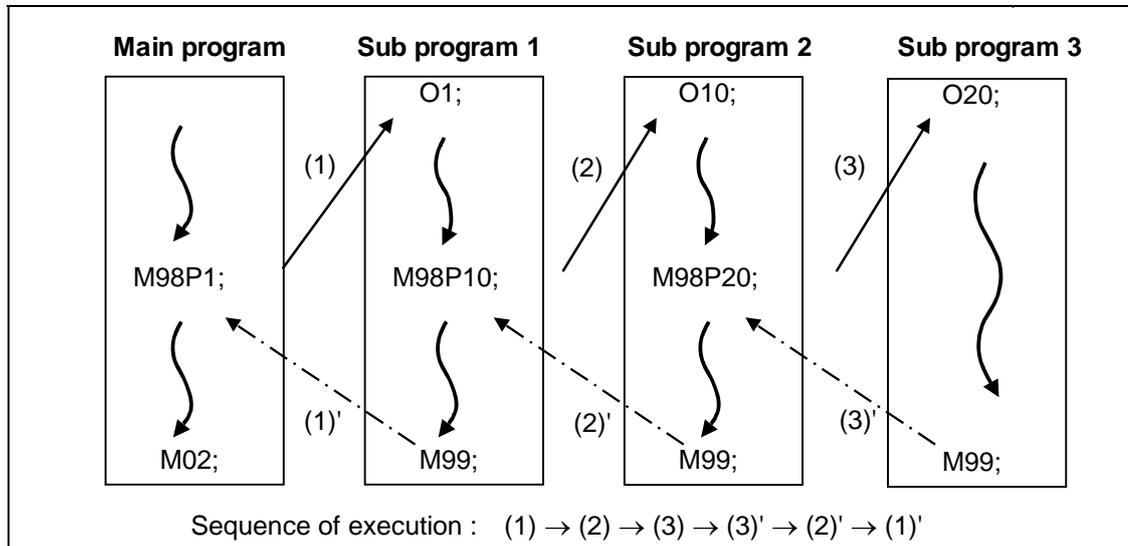


- (1) For nesting, the M98 and M99 commands should always be paired off on a 1:1 basis, (1)' for (1), (2)' for (2), etc.
- (2) Modal information can be rewritten according to the execution sequence without distinction between main programs and subprograms. This means that after calling a subprogram, attention must be paid to the modal data status when programming.



Example of program 2


The M98H__; M99P__; commands designate the sequence numbers in a program with a call instruction.

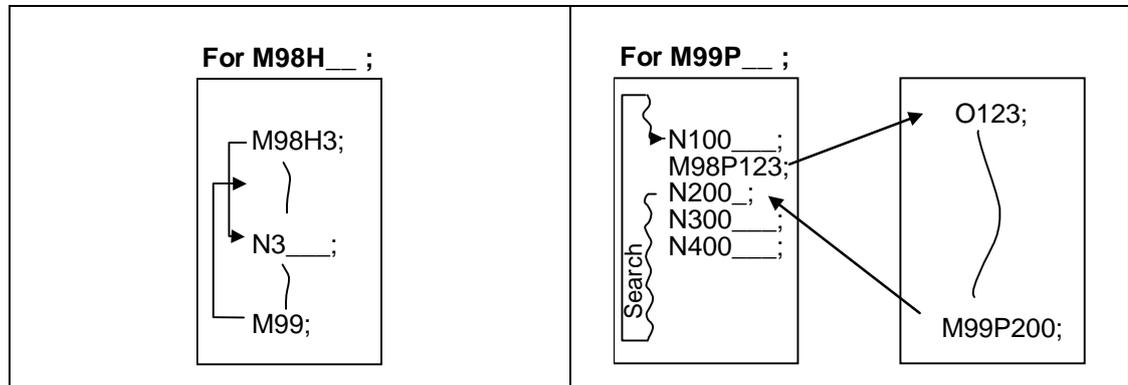

Other cautions

- (1) Program error (P232) results when the designated program number (P) is not located.
- (2) Single block stop does not occur with the M98P__; M99; block. If any address except O, N, P, L or H is used, single block stop can be executed. (With X100. M98 P100;, operation branches to O100 after X100. Is executed.)
- (3) When M99 is commanded by the main program, operation returns to the head. (This is same for MDI.)
- (4) Operation can branch from tape or BTR operation to a subprogram by M98P__ but the sequence number of the return destination cannot be designated with M99P__;; (P__ is ignored.)
- (5) Bear in mind that the search operation will take time when the sequence number is designated by M99P__; .

13.3.2 Calling subprogram with M198 commands

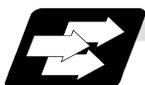

Function and purpose

Programs saved in the IC card can be called as subprograms. To call a program in the IC card as a subprogram, command in the main program as shown below.



Command format

M198 P_ H_ L_ ;

P :Number of program in IC card to be called as subprogram. (Max. 8 digits)

H :Sequence number in subprogram to be called out (head block when omitted).
(Max. 5 digits)

L :Number of subprogram repetitions. (Max. 4 digits)

This can be omitted. (In this case, the subprogram will be called once.)

When "L0" is designated, the subprogram call will not be executed.




Detailed description

The subprograms that can be called from the main program are shown below. The subprogram can be called with the M198 command once in the subprogram nest.

Operation mode	Sub		Memory	IC card	Tape
	Main				
Memory and MDI mode	Memory		○	○	×
Tape mode	IC card		○	×	×
	Tape		○	×	×

(Note1) This command functions only with the M65/M66.

13.4 Variable commands

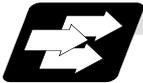

Function and purpose

Programming can be endowed with flexibility and general-purpose capabilities by designating variables, instead of giving direct numerical values to particular addresses in a program, and by assigning the values of those variables as required when executing a program.



Command format

$\Delta\Delta\Delta$ = $\circ\circ\circ\circ\circ\circ\circ\circ$ or # $\Delta\Delta\Delta$ = [formula]



Detailed description

(1) Variable expressions

		Example
(a) #m	m = value consisting of 0 to 9	#100
(b) # [f]	f = one of the following in the formula	# [-#120]
	Numerical value m	123
	Variable	#543
	Formula operator formula	#110+#119
	- (minus) formula	-#120
	[Formula]	[#119]
	function [formula]	SIN [#110]

(Note 1) The 4 standard operators are +, -, * and /.

(Note 2) Functions cannot be used unless the user macro specifications are available.

(Note 3) Error "P241" results when a variable number is negative.

(Note 4) Examples of incorrect variable expressions are given below.

Incorrect	→	Correct
#6/2	→	#[6/2] (Note that expression such as "#6/2" is regarded as "[#6]/2")
#- -5	→	#[- [-5]]
#- [#1]	→	#[-#1]

(2) Type of variables

The following table gives the types of variables.

Type of variable		Number		Function
Common variables		Common variables 1	Common variables 2	Can be used in common throughout main, sub and macro programs.
System 1	100 sets	500 to 549	100 to 149	
	200 sets	500 to 599	100 to 199	
	300 sets	500 to 699	100 to 199	
	600 sets	500 to 999	100 to 199	
	700 sets	400 to 999	100 to 199	
System 2	50 + 50 sets	500 to 549	100 to 149 *2	
	100 + 100 sets	500 to 599	100 to 199 *2	
	400 + 100 sets	500 to 899	100 to 199 *2	
	500 + 100 sets	500 to 999	100 to 199 *2	
Local variables		1 to 33		Can be used for local variables in macro programs.
System variables		1000 to		Application is fixed by system.
Canned cycle variables		1 to 32		Local variables in canned cycle programs.

(Note 1) All common variables are retained even when the power is switched off.

(Note 2) When the power is turned off or reset, the common variables can be set to <null> by setting the parameter “#1128 RstVC1”, “#1129 PwrVC1”.

(Note 3) The common variables are divided into the following two types.

Common variables 1 : Used in common through all systems

Common variables 2 : Used in common in the programs of the system

(3) Variable quotations

Variables can be used for all addresses except O, N and / (slash).

(a) When the variable value is used directly:

X#1 Value of #1 is used as the X value.

(b) When the complement of the variable value is used:

X - #2 Value with the #2 sign changed is used as the X value.

(c) When defining variables:

#3 = #5 Variable #3 uses the equivalent value of variable #5.

#1 = 1000 Variable #1 uses the equivalent value 1000 (which is treated as 1000.)

(d) When defining variables:

#1 = #3 + #2 - 100 The value of the arithmetic result of #3 + #2 - 100. Is used as the #1 value.

X[#1 + #3 + 1000] The value of the arithmetic result of #1 + #3 + 1000. Is used as the X value.

(Note 1) A variable cannot be defined in the same block as an address. It must be defined in a separate block.

Incorrect		Correct
X#1 = #3 + 100;	→	#1 = #3 + 100; X#1;

(Note 2) Up to five sets of square parentheses [] may be used.


#543 = - [[[[[#120] / 2 + 15 .] * 3 - #100] / #520 + #125 + #128] * #130 + #132]

(Note 3) There are no restrictions on the number of characters and number of variables for variable definition.

- (Note 4)** The variable values should be within a range from 0 to ± 99999999 .
If this range is exceeded, the arithmetic operations may not be conducted properly.
- (Note 5)** The variable definitions are valid from the moment that the variables are actually defined.
- #1 = 100 ; #1 = 100 Valid from the next command
#1 = 200 #2 = #1 + 200 ; #1 = 200, #2 = 400 Valid from the next command
#3 = #1 + 300 ; #3 = 500 Valid from the next command
- (Note 6)** Variable quotations are always regarded as having a decimal point at the end.
When #100 = 10, then X#100 ; is treated as X10.


13.5 User macro specifications

13.5.1 User macro commands; G65, G66, G66.1, G67

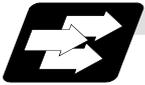

Function and purpose

By combining the user macros with variable commands, it is possible to use macro program call, arithmetic operation, data input/output with PLC, control, decision, branch and many other instructions for measurement and other such applications.

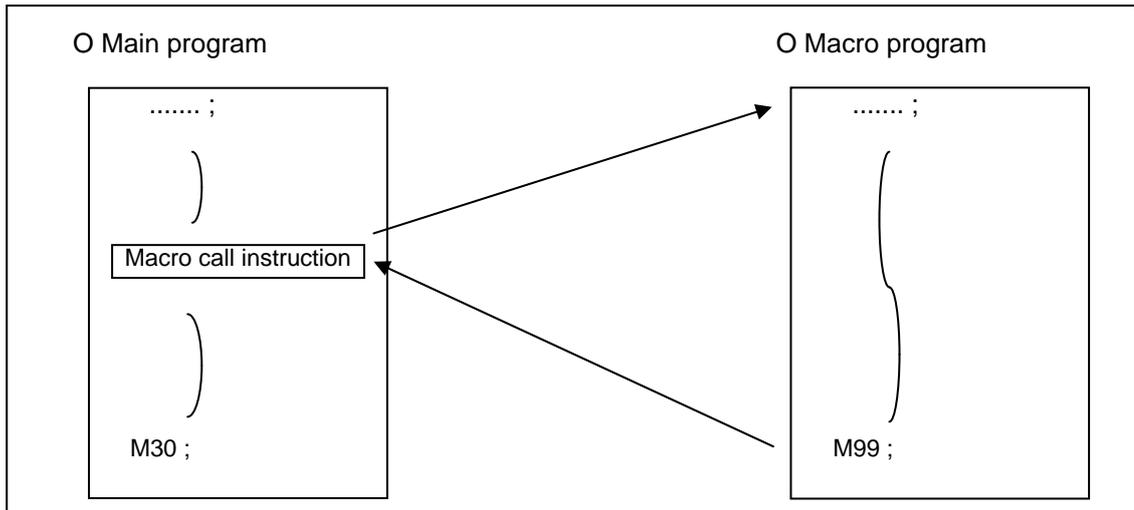

Macro programs use variables, arithmetic instructions and control instructions to create subprograms which function to provide special-purpose control.

These special-purpose control functions (macro programs) are called by the macro call instructions exactly when required from the main program.

The following G codes are available for the macro call commands.


G code	Function
G65	User macro Simple call
G66	User macro Modal call A (Movement command call)
G66.1	User macro Modal call B (Per-block call)
G67	User macro Modal call cancel



Detailed description

- (1) When the G66 (or 66.1) command is entered, the specified user macro subprogram will be called after each block has been executed (or after the movement command in the block) with the movement commands has been executed until the G67 (cancel) command is entered.
- (2) The G66 (or G66.1) and G67 commands must be paired in the same program.

13.5.2 Macro call instruction

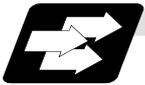


Function and purpose

Included among the macro call commands are the simple calls which apply only to the instructed block and also modal calls (types A and B) which apply to each block in the call modal.



Simple macro calls

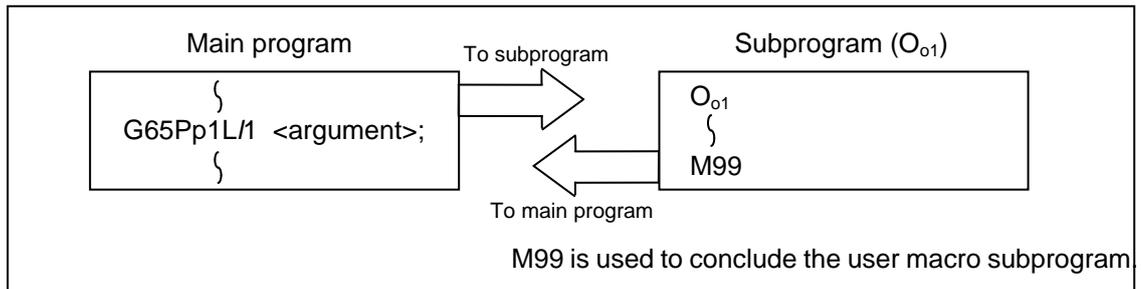

Format

```

G65 P__ L__ <argument> ;

P__          : Program No.
L__          : No. of repetitions
  
```

When the <argument> must be transferred as a local variable to a user macro subprogram, the actual value should be designated after the address.

Regardless of the address, a sign and decimal point can be used in the argument. There are 2 ways in which arguments are designated.

(1) Argument designation I

Format : A__ B__ C__ X__ Y__ Z__

Detailed description

- (a) Arguments can be designated using any address except G, L, N, O and P.
- (b) Except for I, J and K, there is no need for designation in alphabetical order.
- (c) I, J and K must be designated in alphabetical order.
 I__ J__ K__ Correct
 J__ I__ K__ Incorrect
- (d) Address which do not need to be designated can be omitted.
- (e) The following table shows the correspondence between the addresses which can be designated by argument designation I and the variable numbers in the user macro main body.

Address and variable number correspondence		Call instructions and usable address	
Argument designation I address	Variable in macro	G65, G66	G66.1
A	#1	○	○
B	#2	○	○
C	#3	○	○
D	#7	○	○
E	#8	○	○
F	#9	○	○
G	#10	×	×*
H	#11	○	○
I	#4	○	○
J	#5	○	○
K	#6	○	○
L	#12	×	×*
M	#13	○	○
N	#14	×	×*
O	#15	×	×
P	#16	×	×*
Q	#17	○	○
R	#18	○	○
S	#19	○	○
T	#20	○	○
U	#21	○	○
V	#22	○	○
W	#23	○	○
X	#24	○	○
Y	#25	○	○
Z	#26	○	○

○ : Can be used.

× : Cannot be used.

* : Can be used while G66.1 command is modal.

13. Program Support Functions

13.5 User macro specifications

(2) Argument designation II

Format : A__ B__ C__ I__ J__ K__ I__ J__ K__ ••••

Detailed description

- (a) In addition to address A, B and C, up to 10 groups of arguments with I, J, K serving as 1 group can be designated.
- (b) When the same address is duplicated, designate the addresses in the specified order.
- (c) Addresses which do not need to be designated can be omitted.
- (d) The following table shows the correspondence between the addresses which can be designated by argument designation II and the variable numbers in the user macro main body.

Argument designation II address	Variable within macro
A	# 1
B	# 2
C	# 3
I1	# 4
J1	# 5
K1	# 6
I2	# 7
J2	# 8
K2	# 9
I3	#10
J3	#11
K3	#12
I4	#13
J4	#14
K4	#15
I5	#16


Argument designation II address	Variable within macro
J5	#17
K5	#18
I6	#19
J6	#20
K6	#21
I7	#22
J7	#23
K7	#24
I8	#25
J8	#26
K8	#27
I9	#28
J9	#29
K9	#30
I10	#31
J10	#32
K10	#33

(Note 1) The numbers 1 through 10 accompanying I, J and K denote the sequence of the commanded groups and they are not required for the actual instructions.

(3) Using arguments designations I and II together

If addresses corresponding to the same variable are commanded when both types I and II are used to designate arguments, the latter address is valid.


(Example 1)

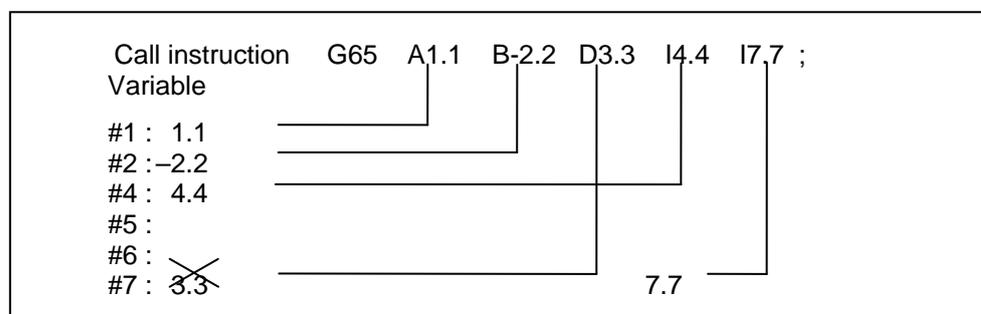

In the above example, the last I7.7 argument is valid when both arguments D3.3 and I7.7 are commanded for the #7 variable.



Modal call A (movement command call)

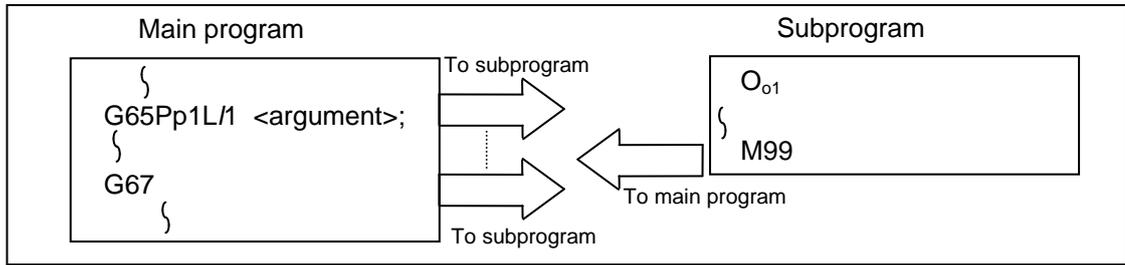

When the block with a movement command is commanded between G66 and G67, the movement command is first executed and then the designated user macro subprogram is executed. The number of times the subprogram is executed is λ 1 times with each call. The <argument> is the same as for a simple call.


Format

G66 P__ L__ <argument> ;
 P__ : Program No.
 L__ : No. of repetitions

Detailed description

- (1) When the G66 command is entered, the specified user macro subprogram will be called after the movement command in the block with the movement commands has been executed until the G67 (cancel) command is entered.
- (2) The G66 and G67 commands must be paired in the same program. A program error will result when G67 is issued without the G66 command.

(Example) Drill cycle

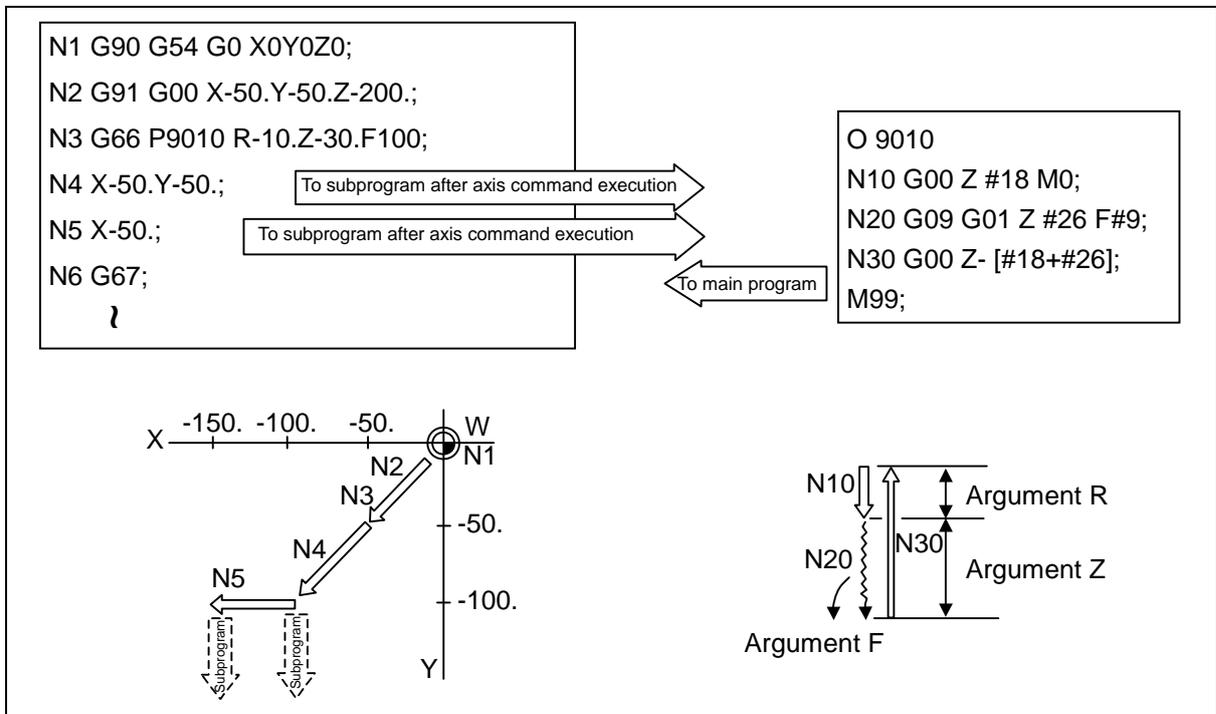

(Note 1) After the axis command is executed in the main program, the subprogram is executed.

(Note 2) The subprogram is not executed in the blocks following G67.



Modal call B (for each block)

The specified user macro subprogram is called unconditionally for each command block which is assigned between G66.1 and G67 and the subprogram is executed the specified number of times.

Format

G66.1 P__ L__ <argument> ; P__ : Program No. L__ : No. of repetitions
--

Detailed description

- (1) In the G66.1 mode, everything except the O, N and G codes in the various command blocks which are read are handled as the argument without being executed. Any G code designated last or any N code commanded after anything except O and N will function as the argument.
- (2) The same applies as when G65P__ is assigned at the head of a block for all significant blocks in the G66.1 mode.

(Example 1)

N100 G01 G90 X100. Y200. F400 R1000; in the G66.1 P1000; mode is the same as: N100 G65 P1000 G01 G90 X100. Y200. F400 R1000;

(Note 1)

The Call is performed even in the G66.1 command block in the G66.1 mode and the correspondence between the argument address and the variable number is the same as for G65 (simple call).

- (3) The range of the G and N command values which can be used anew as variables in the G66.1 mode is subject to the restrictions applying to values as normal NC command values.
- (4) Program number O, sequence numbers N and modal G codes are updated as modal information.



G code macro call

User macro subprogram with prescribed program numbers can be called merely by issuing the G code command.

Format

G×× <argument> ; G×× :G code for macro call

Detailed description

- (1) The above instruction functions in the same way as the instructions below, and parameters are set for each G code to determine the correspondence with the instructions.
 - a. M98P△△△△ ;
 - b. G65P△△△△△ <argument> ;
 - c. G66P △△△△△ <argument> ;
 - d. G66.1P△△△△△ <argument> ;

When the parameters corresponding to c and d above are set, issue the cancel command (G67) either in the user macro or after the call code has been commanded so as to cancel the modal call.

13. Program Support Functions

13.5 User macro specifications

- (4) Even if the miscellaneous command entered above is issued during a user macro subprogram called by the M code, macro call will not result and it will be handled as an ordinary miscellaneous command.
- (5) All S, T and B codes call the subprograms in the prescribed program numbers of the corresponding S, T and B functions.
- (6) A maximum of 10 M codes can be set. However when not setting all 10. Set the parameters as shown below.

[MACRO]			
	<Code>	<Type>	<Program No.>
M [01]	20	0	8000
M [02]	21	0	8001
M [03]	9999	0	19999999
M [04]	9999	0	19999999
M [05]	9999	0	19999999
	⋮	⋮	⋮
	⋮	⋮	⋮
M [10]	9999	0	19999999

Setting to call O8000 with type 0 (M98 type) during M20 command

Setting to call O8001 with type 0 (M98 type) during M21 command

Set parameters not being used as shown on left.



Differences between M98 and G65 commands

- (1) The argument can be designated for G65 but not for M98.
- (2) The sequence number can be designated for M98 but no for G65, G66 and G66.1.
- (3) M98 executes a subprogram after all the commands except M, P, H and L in the M98 block have been executed, but G65 branches to the subprogram without any further operation.
- (4) When any address except O, N, P, H or L is included in the M98 block, single block stop results. This is not the case with G65.
- (5) The level of the M98 local variables is fixed but it can be varied in accordance with the nesting depth for G65. (#1, for instance, has the same significance either before or after M98 but a different significance in each case with G65.)
- (6) The M98 nesting depth extends up to 8 levels in combination with G65, G66 and G66.1. The G65 nesting depth extends up to only 4 levels in combination with G66 and G66.1.




Macro call command nesting depth

Up to 4 nesting levels are available for macro subprogram calls based on simple call or modal call. The argument with a macro call instruction is valid only on the called macro level. Since the nesting depth for macro calls extends up to 4 levels, the argument can be used as a local variable for the program with each respective macro call.

(Note 1) When a G65, G66, G66.1 G code macro call or miscellaneous command macro call is conducted, this is regarded as nesting level 1 and the level of the local variables is also incremented by one.

(Note 2) The designated user macro subprogram is called every time the movement command is executed with modal call A. However, when the G66 command has been duplicated, the next user macro subprogram is called every time an axis is moved even with movement commands in the macro. User macro subprograms are called in sequence from the subprogram commanded last.

(Example 1)

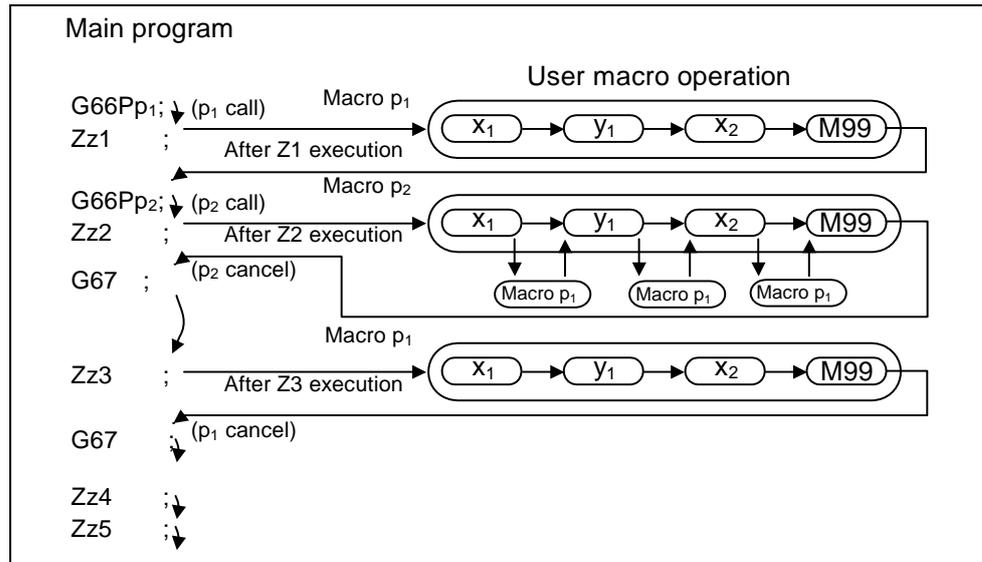

13.5.3 Variables



Function and purpose

Both the variable specifications and user macro specifications are required for the variables which are used with the user macros.

The offset amounts of the local, common and system variables among the variables for this MELDAS NC system except #33 are retained even when the unit's power is switched off. (Common variables can also be cleared by parameter "#1129 PwrVC1".)



Use of multiple variables

When the user macro specifications applied, variable numbers can be turned into variables (multiple use of variables) or replaced by <formula>. Only one of the four basic arithmetic rule (+, -, x, ÷) operations can be conducted with <formula>.

(Example 1) Multiple use of variables

#1 = 10 #10 = 20 #20 = 30 ; #5 = #[#[#1]] ;	} #[#[#1]] = #[#10] from #1 = 10. #[#10] = #20 from #10 = 20. Therefore, #5 = #20 or #5 = 30.
--	---

#1 = 20 #10 = 20 #20 = 30 #5 = 1000 ; #[#[#1]] = #5 ;	} #[#[#1]] = #[#10] from #1 = 10. #[#10] = #20 from #10 = 20. Therefore, #20 = #5 or #20 = 1000.
---	--

(Example 2) Example of multiple designation of variables

#10 = 5 In which case ##10 = 100 ; #5 = 100	<Formula>##10 = 100; is handled in the same manner as # [#10] = 100.
---	---

(Example 3) Replacing variable numbers with <formula>

#10 = 5 ; #[#10 + 1] = 1000 ; #[#10 - 1] = -1000 ; #[#10*3] = 100 ; #[#10/2] = -100 ;	In which case, #6 = 1000. In which case, #4 = -1000. In which case, #15 = 100. In which case, #3 = -100. (Rounded off.)
---	--



Undefined variables

Variables applying with the user macro specifications such as variables which have not been used even once after the power was switched on or local variables not quoted by the G65, G66 or G66.1 commands can be used as <vacant>. Also, variables can forcibly be set to <vacant>. Variable #0 is always used as the <vacant> variable and cannot be defined in the left-side member.

(1) Arithmetic expressions

- #1 = #0 ;..... #1 = <vacant>
- #2 = #0 + 1 ;..... #2 = 1
- #3 = 1 + #0 ;..... #3 = 1
- #4 = #0*10 ;..... #4 = 0
- #5 = #0 + #0 ;..... #5 = 0

It should be borne in mind that <vacant> in an arithmetic expression is handled in the same way as 0.

<Vacant> + <Vacant> = 0
 <Vacant> + <Constant> = Constant
 <Constant> + <Vacant> = Constant

(2) Variable quotations

When undefined variables only are quoted, they are ignored up to the address.
 When #1 = <Vacant>
 G0 X#1 Y1000 ; Equivalent to G0 Y1000 ;
 G0 X#1 + 10 Y1000 ; Equivalent to G0 X10 Y1000 ;

(3) Conditional expressions

<Vacant> and 0 are not equivalent for EQ and NE only. (#0 means <vacant>.)

When #101 = <Vacant>	When #101 = 0
#101 EQ #0 <Vacant> = <Vacant> established	#101 EQ #0 0 = <Vacant> not established
#101 NE 0 <Vacant> ≠ 0 established	#101 NE 0 0 ≠ 0 not established
#101 GE #0 <Vacant> ≥ <Vacant> established	#101 GE #0 0 ≥ <Vacant> established
#101 GT 0 <Vacant> > 0 not established	#101 GT 0 0 > 0 not established
#101 LE #0 <Vacant> ≤ <Vacant> established	#101 LE #0 0 ≤ <Vacant> established
#101 LT 0 <Vacant> < 0 not established	#101 LT 0 0 < 0 not established

(Note 1) EQ and NE should be used only for integers. For comparison of numeric values with decimals, GE, GT, LE, and LT should be used.

13.5.4 Types of variables



Common variables

Common variables can be used commonly from any position. Number of the common variables sets depends on the specifications. Refer to "13.4 Variable commands" for details.



Local variables (#1 to #33)

These can be defined as an <argument> when a macro subprogram is called or used locally within main programs and subprograms. They can be duplicated regardless of the relationship existing between macros (up to 4 levels).

G65 P_{p₁} L_{l₁} <argument> ;
 P₁ : Program number
 l₁ : Number of repetitions

The <argument> is assumed to be Aa1 Bb1 Cc1 Zz1.

The following table shows the correspondences between the addresses designated by <argument> and the local variable numbers used in the user macro main bodies.

[Argument specification I]

Call command		Argument address	Local variable number
G65 G66	G66.1		
○	○	A	#1
○	○	B	#2
○	○	C	#3
○	○	D	#7
○	○	E	#8
○	○	F	#9
×	×*	G	#10
○	○	H	#11
○	○	I	#4
○	○	J	#5
○	○	K	#6
×	×*	L	#12
○	○	M	#13
×	×*	N	#14
×	×	O	#15
×	×*	P	#16

Call command		Argument address	Local variable number
G65 G66	G66.1		
○	○	Q	#17
○	○	R	#18
○	○	S	#19
○	○	T	#20
○	○	U	#21
○	○	V	#22
○	○	W	#23
○	○	X	#24
○	○	Y	#25
○	○	Z	#26
		–	#27
		–	#28
		–	#29
		–	#30
		–	#31
		–	#32
		–	#33

"×" in the above table denotes an argument address which cannot be used. However, provided that the G66.1 mode has been established, an argument address denoted by the asterisk can be added for use.

"–" denotes that a corresponding address is not available.


[Argument specification II]

Argument specification II address	Variable in macro
A	# 1
B	# 2
C	# 3
I1	# 4
J1	# 5
K1	# 6
I2	# 7
J2	# 8
K2	# 9
I3	#10
J3	#11
K3	#12
I4	#13
J4	#14
K4	#15
I5	#16
J5	#17
K5	#18

Argument specification II address	Variable in macro
I6	#19
J6	#20
K6	#21
I7	#22
J7	#23
K7	#24
I8	#25
J8	#26
K8	#27
I9	#28
J9	#29
K9	#30
I10	#31
J10	#32
K10	#33

(Note 1) Subscripts 1 to 10 for I, J, and K indicate the order of the specified command sets. They are not required to specify instructions.


(1) Local variables in subprograms can be defined by means of the <argument> designation during macro call.

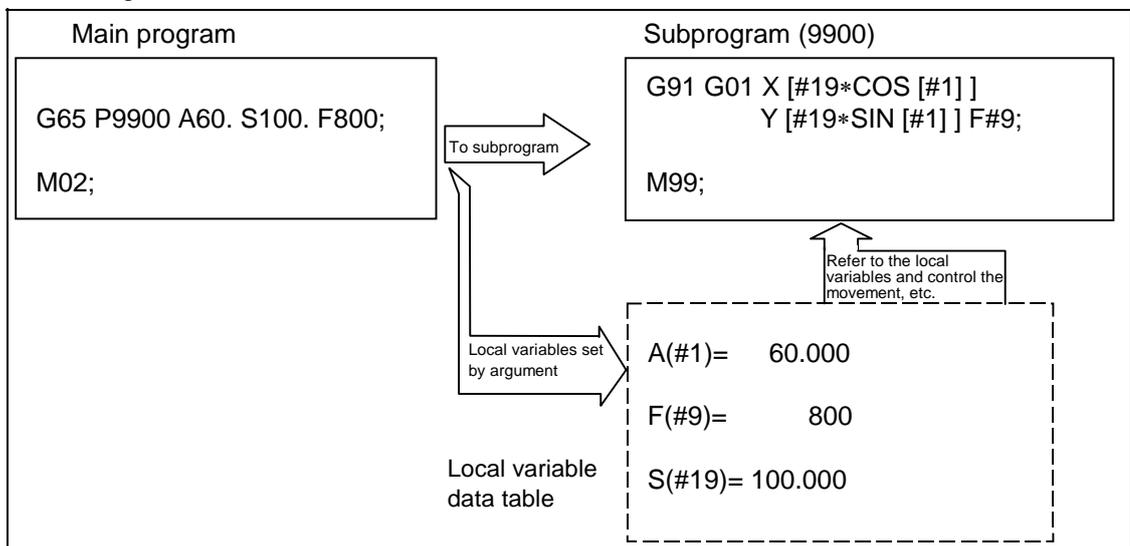

13. Program Support Functions

13.5 User macro specifications

(2) The local variables can be used freely in that subprogram.

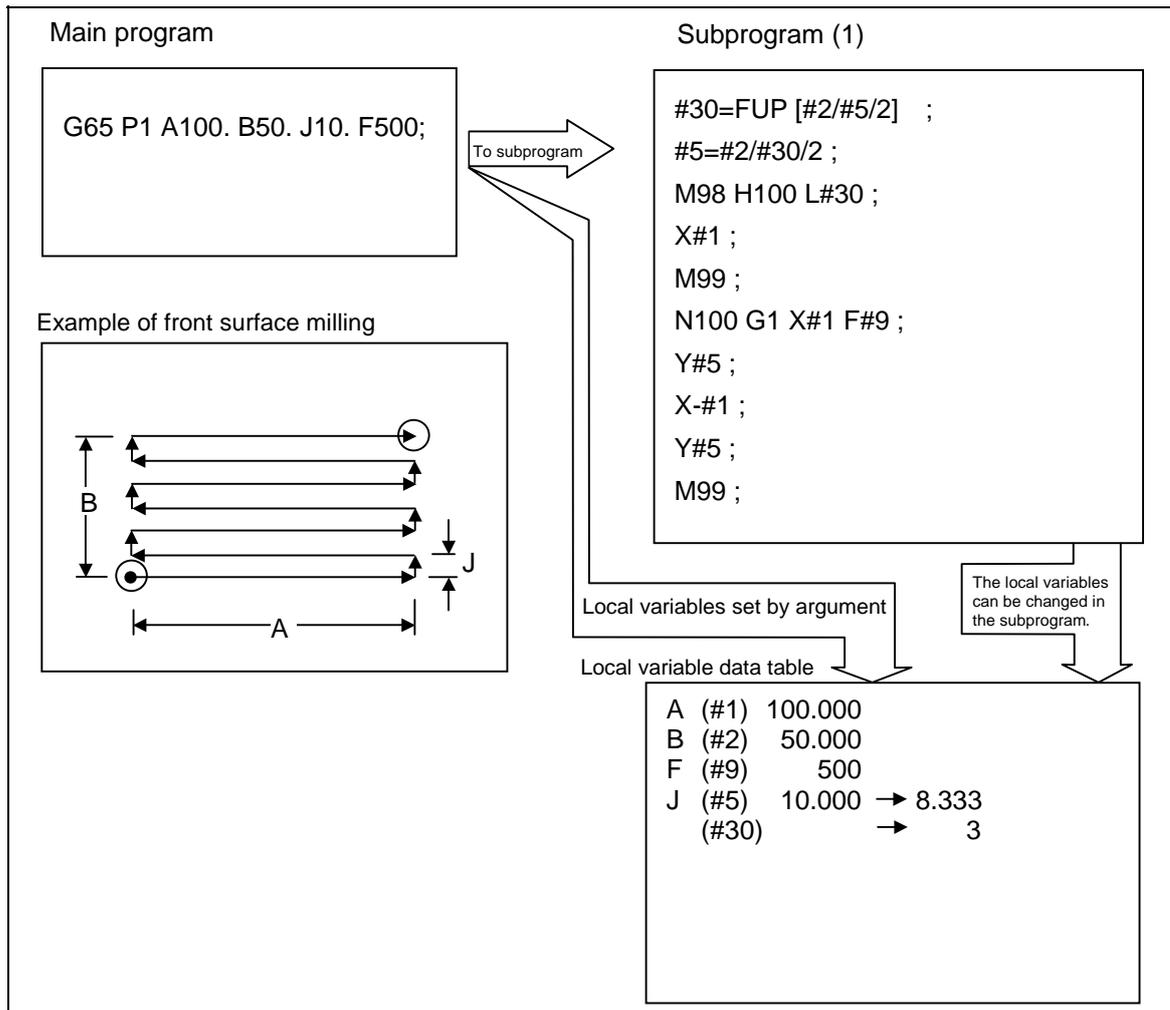


In the front surface milling example, argument J is programmed as the milling pitch 10.mm. However, this is changed to 8.333mm to create an equal interval pitch. The results of the No. of reciprocation data calculation is set in local variable #30.

13. Program Support Functions

13.5 User macro specifications

- (3) Local variables can be used independently on each of the macro call levels (4 levels). Local variables are also provided independently for the main program (macro level 0). Arguments cannot be used for the level 0 local variables.

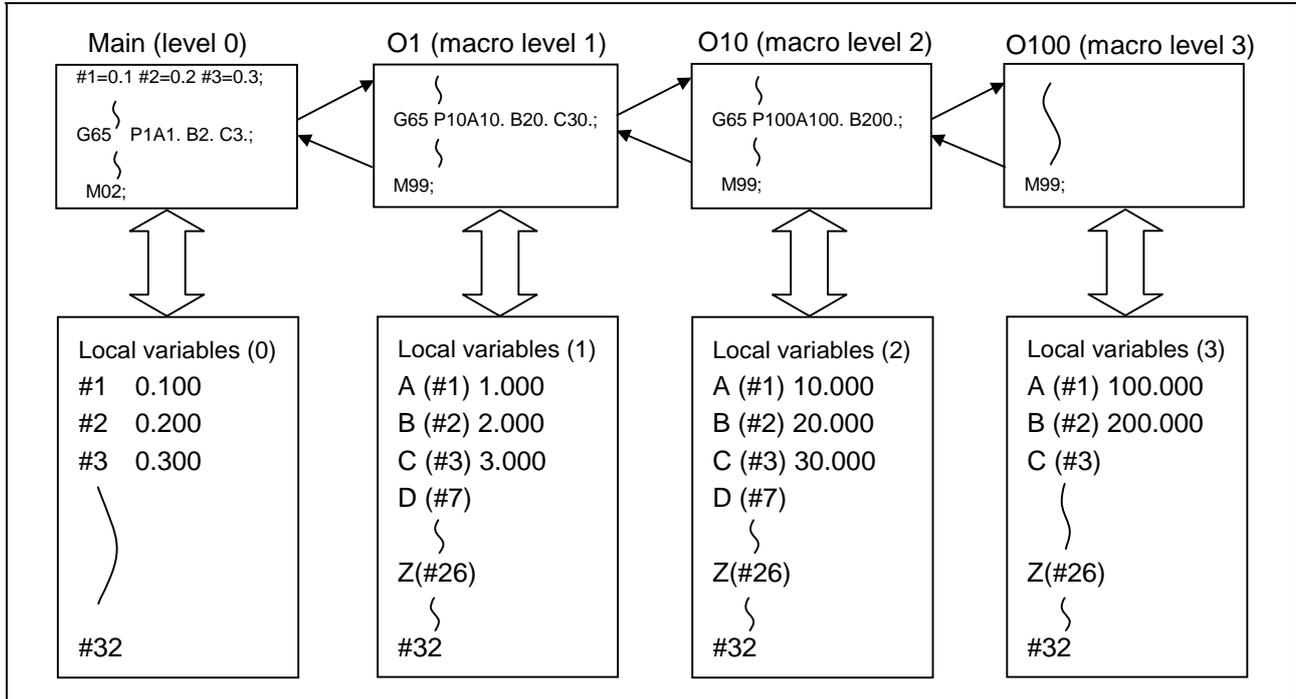

The status of the local variables appear on the setting and display unit. Refer to the Operation Manual for details.



Macro interface inputs (#1000 to #1035, #1200 to #1295)

The status of the interface input signals can be ascertained by reading out the values of variable numbers #1000 to #1035, #1200 to #1295. A variable value which has been read out can be only one of 2 values: 1 or 0 (1: contact closed, 0: contact open). All the input signals from #1000 to #1031 can be read at once by reading out the value of variable number #1032.

Similarly, the input signals #1200 to #1231, #1232 to #1263, and #1264 to #1295 can be read by reading the values of the variable numbers #1033 to #1035.

Variable numbers #1000 to #1035, #1200 to #1295 are for readout only, and cannot be placed in the left side member of their arithmetic formula. Input here refers to input to the control unit.

System variable	No. of points	Interface input signal	System variable	No. of points	Interface input signal
#1000	1	Register R72 bit 0	#1016	1	Register R73 bit 0
#1001	1	Register R72 bit 1	#1017	1	Register R73 bit 1
#1002	1	Register R72 bit 2	#1018	1	Register R73 bit 2
#1003	1	Register R72 bit 3	#1019	1	Register R73 bit 3
#1004	1	Register R72 bit 4	#1020	1	Register R73 bit 4
#1005	1	Register R72 bit 5	#1021	1	Register R73 bit 5
#1006	1	Register R72 bit 6	#1022	1	Register R73 bit 6
#1007	1	Register R72 bit 7	#1023	1	Register R73 bit 7
#1008	1	Register R72 bit 8	#1024	1	Register R73 bit 8
#1009	1	Register R72 bit 9	#1025	1	Register R73 bit 9
#1010	1	Register R72 bit 10	#1026	1	Register R73 bit 10
#1011	1	Register R72 bit 11	#1027	1	Register R73 bit 11
#1012	1	Register R72 bit 12	#1028	1	Register R73 bit 12
#1013	1	Register R72 bit 13	#1029	1	Register R73 bit 13
#1014	1	Register R72 bit 14	#1030	1	Register R73 bit 14
#1015	1	Register R72 bit 15	#1031	1	Register R73 bit 15

System variable	No. of points	Interface input signal
#1032	32	Register R72, R73
#1033	32	Register R74, R75
#1034	32	Register R76, R77
#1035	32	Register R78, R79

13. Program Support Functions

13.5 User macro specifications

System variable	No. of points	Interface input signal	System variable	No. of points	Interface input signal
#1200	1	Register R74 bit 0	#1216	1	Register R75 bit 0
#1201	1	Register R74 bit 1	#1217	1	Register R75 bit 1
#1202	1	Register R74 bit 2	#1218	1	Register R75 bit 2
#1203	1	Register R74 bit 3	#1219	1	Register R75 bit 3
#1204	1	Register R74 bit 4	#1220	1	Register R75 bit 4
#1205	1	Register R74 bit 5	#1221	1	Register R75 bit 5
#1206	1	Register R74 bit 6	#1222	1	Register R75 bit 6
#1207	1	Register R74 bit 7	#1223	1	Register R75 bit 7
#1208	1	Register R74 bit 8	#1224	1	Register R75 bit 8
#1209	1	Register R74 bit 9	#1225	1	Register R75 bit 9
#1210	1	Register R74 bit 10	#1226	1	Register R75 bit 10
#1211	1	Register R74 bit 11	#1227	1	Register R75 bit 11
#1212	1	Register R74 bit 12	#1228	1	Register R75 bit 12
#1213	1	Register R74 bit 13	#1229	1	Register R75 bit 13
#1214	1	Register R74 bit 14	#1230	1	Register R75 bit 14
#1215	1	Register R74 bit 15	#1231	1	Register R75 bit 15

System variable	No. of points	Interface input signal	System variable	No. of points	Interface input signal
#1232	1	Register R76 bit 0	#1248	1	Register R77 bit 0
#1233	1	Register R76 bit 1	#1249	1	Register R77 bit 1
#1234	1	Register R76 bit 2	#1250	1	Register R77 bit 2
#1235	1	Register R76 bit 3	#1251	1	Register R77 bit 3
#1236	1	Register R76 bit 4	#1252	1	Register R77 bit 4
#1237	1	Register R76 bit 5	#1253	1	Register R77 bit 5
#1238	1	Register R76 bit 6	#1254	1	Register R77 bit 6
#1239	1	Register R76 bit 7	#1255	1	Register R77 bit 7
#1240	1	Register R76 bit 8	#1256	1	Register R77 bit 8
#1241	1	Register R76 bit 9	#1257	1	Register R77 bit 9
#1242	1	Register R76 bit 10	#1258	1	Register R77 bit 10
#1243	1	Register R76 bit 11	#1259	1	Register R77 bit 11
#1244	1	Register R76 bit 12	#1260	1	Register R77 bit 12
#1245	1	Register R76 bit 13	#1261	1	Register R77 bit 13
#1246	1	Register R76 bit 14	#1262	1	Register R77 bit 14
#1247	1	Register R76 bit 15	#1263	1	Register R77 bit 15

System variable	No. of points	Interface input signal	System variable	No. of points	Interface input signal
#1264	1	Register R78 bit 0	#1280	1	Register R79 bit 0
#1265	1	Register R78 bit 1	#1281	1	Register R79 bit 1
#1266	1	Register R78 bit 2	#1282	1	Register R79 bit 2
#1267	1	Register R78 bit 3	#1283	1	Register R79 bit 3
#1268	1	Register R78 bit 4	#1284	1	Register R79 bit 4
#1269	1	Register R78 bit 5	#1285	1	Register R79 bit 5
#1270	1	Register R78 bit 6	#1286	1	Register R79 bit 6
#1271	1	Register R78 bit 7	#1287	1	Register R79 bit 7
#1272	1	Register R78 bit 8	#1288	1	Register R79 bit 8
#1273	1	Register R78 bit 9	#1289	1	Register R79 bit 9
#1274	1	Register R78 bit 10	#1290	1	Register R79 bit 10
#1275	1	Register R78 bit 11	#1291	1	Register R79 bit 11
#1276	1	Register R78 bit 12	#1292	1	Register R79 bit 12
#1277	1	Register R78 bit 13	#1293	1	Register R79 bit 13
#1278	1	Register R78 bit 14	#1294	1	Register R79 bit 14
#1279	1	Register R78 bit 15	#1295	1	Register R79 bit 15



Macro interface outputs (#1100 to #1135, #1300 to #1395)

The interface output signals can be sent by substituting values in variable numbers #1100 to #1135, #1300 to #1395. An output signal can be only 0 or 1.

All the output signals from #1100 to #1131 can be sent at once by substituting a value in variable number #1132.

Similarly, the output signals #1300 to #1311, #1332 to #1363, and #1364 to #1395 can be sent by assigning values to the variable numbers #1133 to #1135. (2^0 to 2^{31})

The status of the writing and output signals can be read in order to offset the #1100 to #1135, #1300 to #1395 output signals. Output here refers to the output from the NC side.

System variable	No. of points	Interface output signal	System variable	No. of points	Interface output signal
#1100	1	Register R172 bit 0	#1116	1	Register R173 bit 0
#1101	1	Register R172 bit 1	#1117	1	Register R173 bit 1
#1102	1	Register R172 bit 2	#1118	1	Register R173 bit 2
#1103	1	Register R172 bit 3	#1119	1	Register R173 bit 3
#1104	1	Register R172 bit 4	#1120	1	Register R173 bit 4
#1105	1	Register R172 bit 5	#1121	1	Register R173 bit 5
#1106	1	Register R172 bit 6	#1122	1	Register R173 bit 6
#1107	1	Register R172 bit 7	#1123	1	Register R173 bit 7
#1108	1	Register R172 bit 8	#1124	1	Register R173 bit 8
#1109	1	Register R172 bit 9	#1125	1	Register R173 bit 9
#1110	1	Register R172 bit 10	#1126	1	Register R173 bit 10
#1111	1	Register R172 bit 11	#1127	1	Register R173 bit 11
#1112	1	Register R172 bit 12	#1128	1	Register R173 bit 12
#1113	1	Register R172 bit 13	#1129	1	Register R173 bit 13
#1114	1	Register R172 bit 14	#1130	1	Register R173 bit 14
#1115	1	Register R172 bit 15	#1131	1	Register R173 bit 15

13. Program Support Functions

13.5 User macro specifications

System variable	No. of points	Interface output signal
#1132	32	Register R172, R173
#1133	32	Register R174, R175
#1134	32	Register R176, R177
#1135	32	Register R178, R179

System variable	No. of points	Interface output signal	System variable	No. of points	Interface output signal
#1300	1	Register R174 bit 0	#1316	1	Register R175 bit 0
#1301	1	Register R174 bit 1	#1317	1	Register R175 bit 1
#1302	1	Register R174 bit 2	#1318	1	Register R175 bit 2
#1303	1	Register R174 bit 3	#1319	1	Register R175 bit 3
#1304	1	Register R174 bit 4	#1320	1	Register R175 bit 4
#1305	1	Register R174 bit 5	#1321	1	Register R175 bit 5
#1306	1	Register R174 bit 6	#1322	1	Register R175 bit 6
#1307	1	Register R174 bit 7	#1323	1	Register R175 bit 7
#1308	1	Register R174 bit 8	#1324	1	Register R175 bit 8
#1309	1	Register R174 bit 9	#1325	1	Register R175 bit 9
#1310	1	Register R174 bit 10	#1326	1	Register R175 bit 10
#1311	1	Register R174 bit 11	#1327	1	Register R175 bit 11
#1312	1	Register R174 bit 12	#1328	1	Register R175 bit 12
#1313	1	Register R174 bit 13	#1329	1	Register R175 bit 13
#1314	1	Register R174 bit 14	#1330	1	Register R175 bit 14
#1315	1	Register R174 bit 15	#1331	1	Register R175 bit 15

System variable	No. of points	Interface output signal	System variable	No. of points	Interface output signal
#1332	1	Register R176 bit 0	#1348	1	Register R177 bit 0
#1333	1	Register R176 bit 1	#1349	1	Register R177 bit 1
#1334	1	Register R176 bit 2	#1350	1	Register R177 bit 2
#1335	1	Register R176 bit 3	#1351	1	Register R177 bit 3
#1336	1	Register R176 bit 4	#1352	1	Register R177 bit 4
#1337	1	Register R176 bit 5	#1353	1	Register R177 bit 5
#1338	1	Register R176 bit 6	#1354	1	Register R177 bit 6
#1339	1	Register R176 bit 7	#1355	1	Register R177 bit 7
#1340	1	Register R176 bit 8	#1356	1	Register R177 bit 8
#1341	1	Register R176 bit 9	#1357	1	Register R177 bit 9
#1342	1	Register R176 bit 10	#1358	1	Register R177 bit 10
#1343	1	Register R176 bit 11	#1359	1	Register R177 bit 11
#1344	1	Register R176 bit 12	#1360	1	Register R177 bit 12
#1345	1	Register R176 bit 13	#1361	1	Register R177 bit 13
#1346	1	Register R176 bit 14	#1362	1	Register R177 bit 14
#1347	1	Register R176 bit 15	#1363	1	Register R177 bit 15

System variable	No. of points	Interface output signal	System variable	No. of points	Interface output signal
#1364	1	Register R178 bit 0	#1380	1	Register R179 bit 0
#1365	1	Register R178 bit 1	#1381	1	Register R179 bit 1
#1366	1	Register R178 bit 2	#1382	1	Register R179 bit 2
#1367	1	Register R178 bit 3	#1383	1	Register R179 bit 3
#1368	1	Register R178 bit 4	#1384	1	Register R179 bit 4
#1369	1	Register R178 bit 5	#1385	1	Register R179 bit 5
#1370	1	Register R178 bit 6	#1386	1	Register R179 bit 6
#1371	1	Register R178 bit 7	#1387	1	Register R179 bit 7
#1372	1	Register R178 bit 8	#1388	1	Register R179 bit 8
#1373	1	Register R178 bit 9	#1389	1	Register R179 bit 9
#1374	1	Register R178 bit 10	#1390	1	Register R179 bit 10
#1375	1	Register R178 bit 11	#1391	1	Register R179 bit 11
#1376	1	Register R178 bit 12	#1392	1	Register R179 bit 12
#1377	1	Register R178 bit 13	#1393	1	Register R179 bit 13
#1378	1	Register R178 bit 14	#1394	1	Register R179 bit 14
#1379	1	Register R178 bit 15	#1395	1	Register R179 bit 15


(Note 1) The last values of the system variables #1100 to #1135, #1300 to #1395 sent are retained as 1 or 0. (They are not cleared even with resetting.)

(Note 2) The following applies when any number except 1 or 0 is substituted into #1100 to #1131, #1300 to #1395.

<Vacant> is treated as 0.

Any number except 0 and <vacant> is treated as 1.

Any value less than 0.00000001 is indefinite.

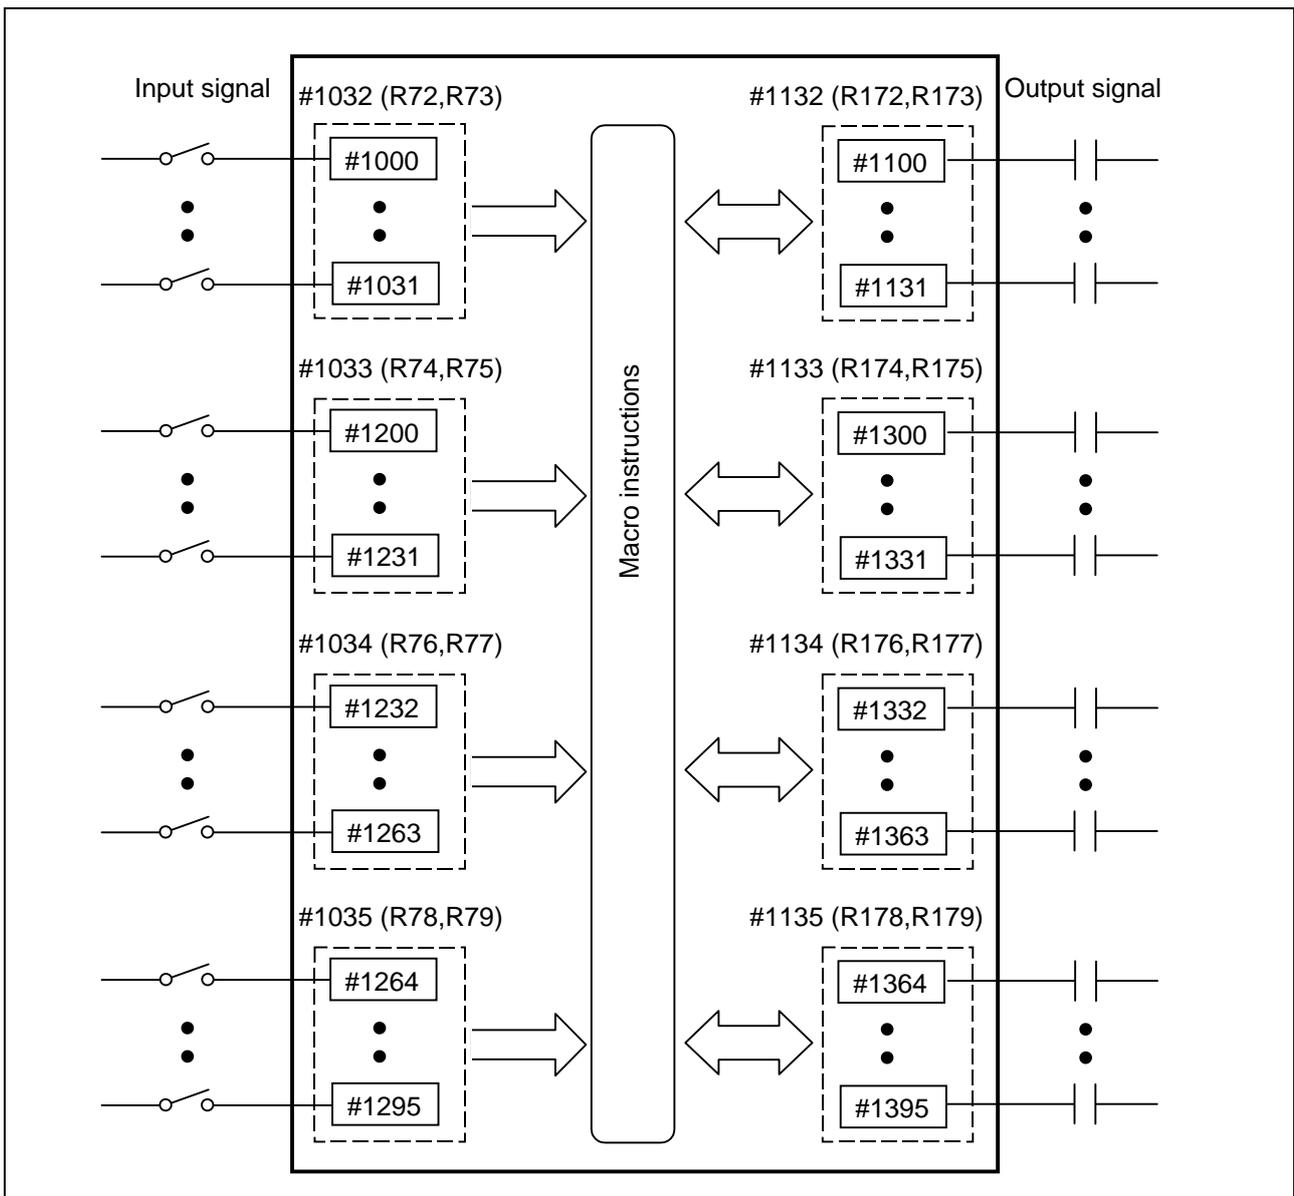



Tool offset

Variable number range		Type 1	Type 2
#10001 to #10000 + n	#2001 to #2000 + n	○	○ (Length dimension)
#11001 to #11000 + n	#2201 to #2200 + n	×	○ (Length wear)
#16001 to #16000 + n	#2401 to #2400 + n	×	○ (Radius dimension)
#17001 to #17000 + n	#2601 to #2600 + n	×	○ (Radius wear)

Tool data can be read and values substituted using the variable numbers.


Either the numbers in the #10000 order or #2000 order can be used.

The last 3 digits of the variable numbers correspond to the tool offset number.


n corresponds to the No. of tool offset sets.

If there are 400 tool offset sets and type 2 is being used, avoid variable Nos. in the #2000 order, and instead use the #10000 order.

The tool offset data are configured as data with a decimal point in the same way as for other variables. Consequently, this decimal point must be commanded when data below the decimal point is to be entered.

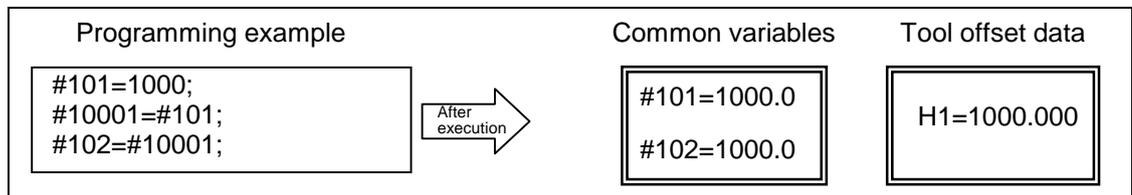

(Example 1) Calculation and tool offset data setting

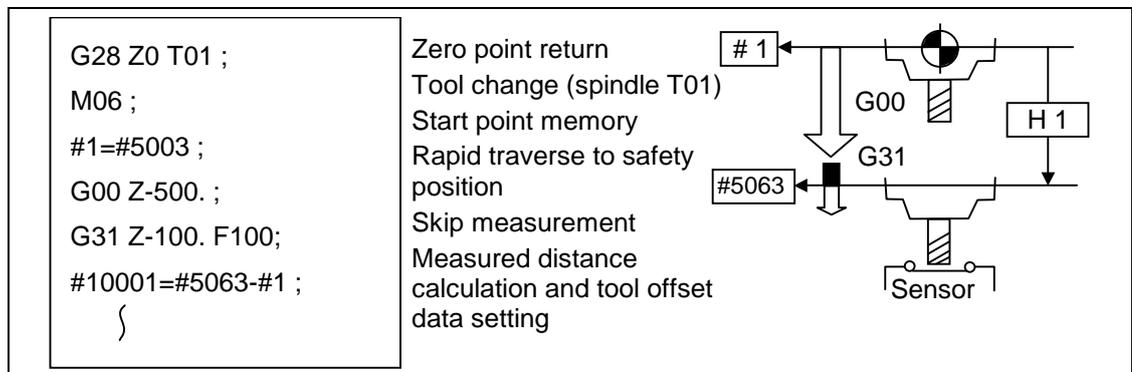

(Note) In this example, no consideration is given to the delay in the skip sensor signal. #5003 is the Z-axis start point position and #5063 is the Z-axis skip coordinates, and indicated is the position at which the skip signal is input while G31 is being executed.



Work coordinate system offset

By using variable numbers #5201 to #532n, it is possible to read out the work coordinate system offset data or to substitute values.

(Note) The number of axes which can be controlled differs according to the specifications.
The last digit of the variable No. corresponds to the control axis No.


Axis No. Axis name	Axis 1	Axis 2	Axis 3	Axis 4	..	Axis n	Remarks
External work offset	#5201	#5202	#5203	#5204	..	#520n	External workpiece offset specifications are required.
G54	#5221	#5222	#5223	#5224	..	#522n	
G55	#5241	#5242	#5243	#5244	..	#524n	
G56	#5261	#5262	#5263	#5264	..	#526n	
G57	#5281	#5282	#5283	#5284	..	#528n	
G58	#5301	#5302	#5303	#5304	..	#530n	
G59	#5321	#5322	#5323	#5324	..	#532n	

(Example 1)

```
N1 G28 X0 Y0 Z0 ;
N2 #5221=-20. #5222=-20. ;
N3 G90 G00 G54 X0 Y0 ;
```

```
N10 #5221=-90. #5222=-10. ;
N11 G90 G00 G54 X0 Y0 ;
```

```
M02 ;
```

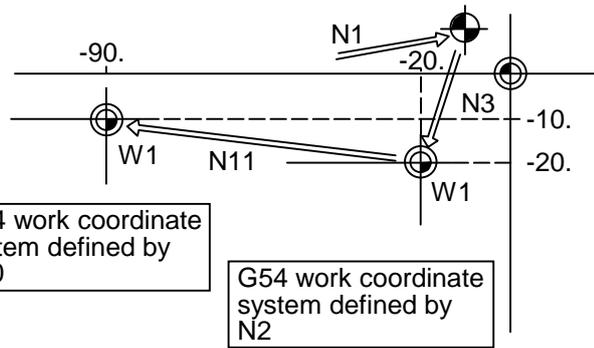


(Example 2)

```
N100 #5221=#5221+#5201 ;
#5222=#5222+#5202 ;
#5241=#5241+#5201 ;
#5242=#5242+#5202 ;
#5201=0 #5202=0;
```

Coordinate system before change

Coordinate system after change

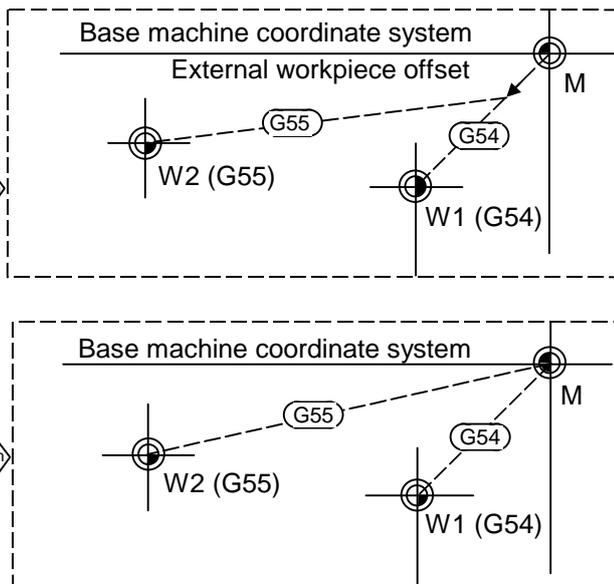

This is an example where the external workpiece offset values are added to the work coordinate (G54, G55) system offset values without changing the position of the work coordinate systems.



Alarm (#3000)

The NC system can be forcibly set to the alarm state by using variable number #3000.


Format

#3000 = 70 (CALL#PROGRAMMER#TEL#530) :
 70 : Alarm number
 CALL#PROGRAMMER#TEL#530 : Alarm message

Any alarm number from 1 to 9999 can be specified.

The alarm message must be less than 31 characters long.

The "P277" user macro alarm message appears in the <alarm> column on diagnosis screen 1 while the alarm number and alarm message CALL #PROGRAMMER #TEL#530 is indicated in the <operator message>.

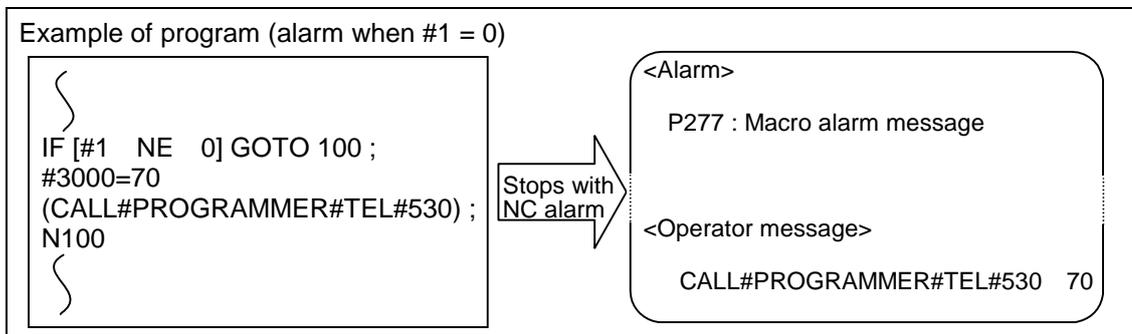

(Note 1) Alarm number 0 is not displayed and any number exceeding 9999 cannot be indicated.

(Note 2) The characters following the first alphabet letter in the right member is treated as the alarm message. Therefore, a number cannot be designated as the first character of an alarm message. It is recommended that the alarm messages be enclosed in round parentheses.




Integrating (run-out) time (#3001, #3002)

The integrating (run-out) time can be read during automatic operation or automatic start or values can be substituted by using variable numbers #3001 and #3002.

Type	Variable number	Unit	Contents when power is switched on	Initialization of contents	Count condition
Integrating (run-out) time 1	3001	ms	Same as when power is switched off	Value substituted for variable	At all times while power is ON
Integrating (run-out) time 2	3002				In-automatic start

The integrating run time returns to zero in about 2.44×10^{11} ms (approximately 7.7 years).

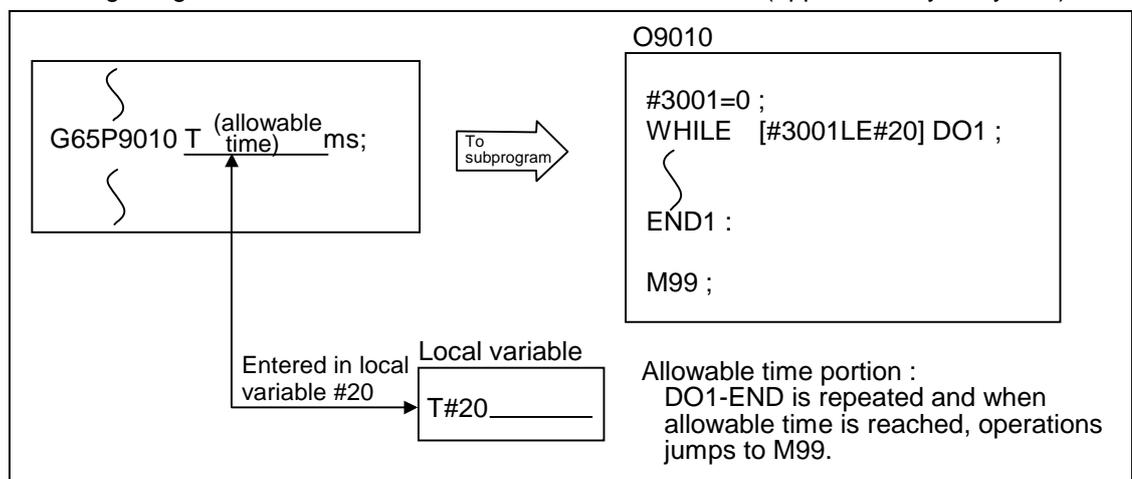

Suppression of single block stop and miscellaneous function finish signal waiting

By substituting the values below in variable number #3003, it is possible to suppress single block stop in the subsequent blocks or to advance to the next block without waiting for the miscellaneous function (M, S, T, B) finish (FIN) signal.

#3003	Single block stop	Miscellaneous function finish signal
0	Not suppressed	Awaited
1	Suppressed	Awaited
2	Not suppressed	Not awaited
3	Suppressed	Not awaited

(Note 1) #3003 is cleared to zero by NC reset.



Feed hold, feedrate override, G09 valid/invalid

By substituting the values below in variable number #3004, it is possible to make the feed hold, feedrate override and G09 functions either valid or invalid in the subsequent blocks.

Contents (value) \ #3004	Bit 0	Bit 1	Bit 2
	Feed hold	Feedrate override	G09 check
0	Valid	Valid	Valid
1	Invalid	Valid	Valid
2	Valid	Invalid	Valid
3	Invalid	Invalid	Valid
4	Valid	Valid	Invalid
5	Invalid	Valid	Invalid
6	Valid	Invalid	Invalid
7	Invalid	Invalid	Invalid

(Note 1) Variable number #3004 is set to zero by NC reset.

(Note 2) The functions are valid when the above bits are 0 and invalid when they are 1.



Message display and stop

By using variable number #3006, the execution is stopped after the previous block has been executed and, if message display data have been commanded, then the corresponding message will be indicated.

Format

#3006 = 1 (TAKE FIVE) :
TAKE FIVE Message

The message should not be longer than 31 characters and it should be enclosed within round () parentheses.



Mirror image

By reading variable number #3007, it is possible to ascertain the status of mirror image at a particular point in time for each axis.

The axes correspond to the bits of #3007.

When the bits are 0, it means that the mirror image function is not valid; when they are 1, it means that it is valid.

#3007

Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
nth axis											6	5	4	3	2	1



G command modals

Using variable numbers #4001 to #4021, it is possible to read the G modal commands which have been issued up to the block immediately before.

Similarly, it is possible to read the modals in the block being executed with variable numbers #4201 to #4221.

Variable number		Function
Pre-read block	Execution block	
#4001	#4201	Interpolation mode : G00:0, G01:1, G02:2, G03:3, G33:33
#4002	#4202	Plane selection : G17:17, G18:18, G19:19
#4003	#4203	Absolute/incremental : G90:90, G91:91
#4004	#4204	No variable No.
#4005	#4205	Feed designation : G94:94, G95:95
#4006	#4206	Inch/metric : G20:20, G21:21
#4007	#4207	Tool nose R compensation : : G40:40, G41:41, G42:42
#4008	#4208	Tool length offset : G43:43, G44:44, G49:49
#4009	#4209	Canned cycle : G80:80, G73 to 74, G76:76, G81 to G89:81 to 89
#4010	#4210	Return level : G98:98, G99:99
#4011	#4211	
#4012	#4212	Work coordinate system : G54 to G59:54 to 59
#4013	#4213	Acceleration/deceleration : G61 to G64:61 to 64, G61.1:61.1
#4014	#4214	Macro modal call : G66:66, G66.1:66.1, G67:67
#4015	#4215	
#4016	#4216	
#4017	#4217	Constant surface speed control : G96:96, G97:97
#4018	#4218	No variable No.
#4019	#4219	Mirror image : G50.1:50.1, G51.1:51.1
#4020	#4220	
#4021	#4221	No variable No.

(Example)

```

G28 X0 Y0 Z0 ;
G90 G1 X100. F1000;
G91 G65 P300 X100. Y100.;
M02;
O300;
#1 = #4003;    → Group 3G modal (pre-read) #1 = 91.0
#2 = #4203;    → Group 3G modal (now being executed) #2 = 90.0
G#1 X#24 Y#25;
M99;
%
```



Other modals

Using variable numbers #4101 to #4120, it is possible to read the modal commands assigned up to the block immediately before.

Similarly, it is possible to read the modals in the block being executed with variable numbers #4301 to #4320.

Variable number		Modal information	Variable number		Modal information
Pre-read	Execution		Pre-read	Execution	
#4101	#4301		#4111	#4311	Tool length offset No. H
#4102	#4302		#4112	#4312	
#4103	#4303		#4113	#4313	Miscellaneous function M
#4104	#4304		#4114	#4314	Sequence number N
#4105	#4305		#4115	#4315	Program number O
#4106	#4306		#4116	#4316	
#4107	#4307	Tool radius compensation No. D	#4117	#4317	
#4108	#4308		#4118	#4318	
#4109	#4309	Feedrate F	#4119	#4319	Spindle function S
#4110	#4310		#4120	#4320	Tool function T




Position information

Using variable numbers #5001 to #5104, it is possible to read the servo deviation amounts, tool position offset amount, skip coordinates, work coordinates, machine coordinates and end point coordinates in the block immediately before.


Position information / Axis No.	End point coordinate of block immediately before	Machine coordinate	Work coordinate	Skip coordinate	Tool position offset amount	Servo deviation amount
1	#5001	#5021	#5041	#5061	#5081	#5101
2	#5002	#5022	#5042	#5062	#5082	#5102
3	#5003	#5023	#5043	#5063	#5083	#5103
4	#5004	#5024	#5044	#5064	#5084	#5104
:	:	:	:	:	:	:
n	#5000+n	#5020+n	#5040+n	#5060+n	#5080+n	#5100+n
Remarks (reading during movement)	Yes	No	No	Yes	No	Yes

(Note 1) The number of axes which can be controlled differs according to the specifications.


(Note 2) The last digit of the variable No. corresponds to the control axis No.

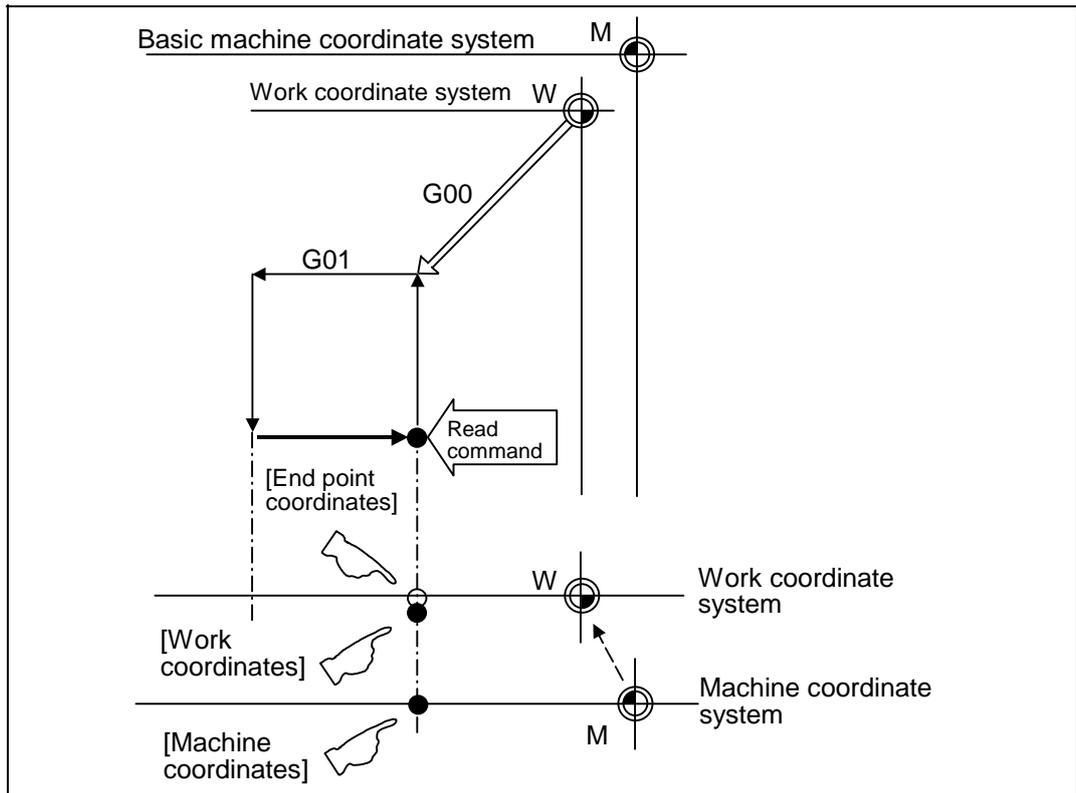

- (1) The positions of the end point coordinates and skip coordinates are positions in the work coordinate system.
- (2) The end point coordinates, skip coordinates and servo deviation amounts can be read even during movement. However, it must first be checked that movement has stopped before reading the machine coordinates and the work coordinates.
- (3) The position where the skip signal is turned ON in the G31 block is indicated for the skip coordinates. The end point position is indicated when the skip signal has not been turned ON. (For further details, refer to the section on tool length measurement.)

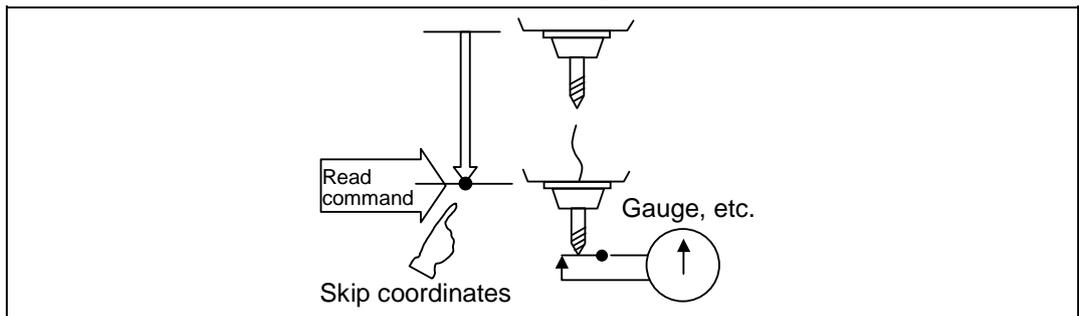

- (4) The tool nose position where the tool offset and other such factors are not considered is indicated as the end point position. The tool reference point position with consideration given to tool offset is indicated for the machine coordinates, work coordinates and skip coordinates.

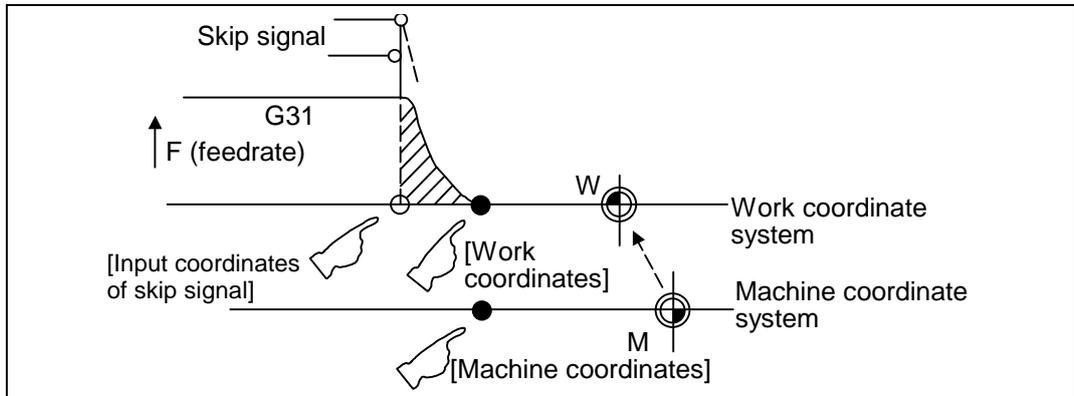

For "●", check stop and then proceed to read.
 For "○", reading is possible during movement.


The position of the skip signal input coordinates is the position in the work coordinate system. The coordinates in variable numbers #5061 to #5064 memorize the moments when the skip input signal during movement was input and so they can be read at any subsequent time. For further details, reference should be made to the section on the skip function.

13. Program Support Functions

13.5 User macro specifications


(Example 1) Example of workpiece position measurement

An example to measure the distance from the measured reference point to the workpiece edge is shown below.

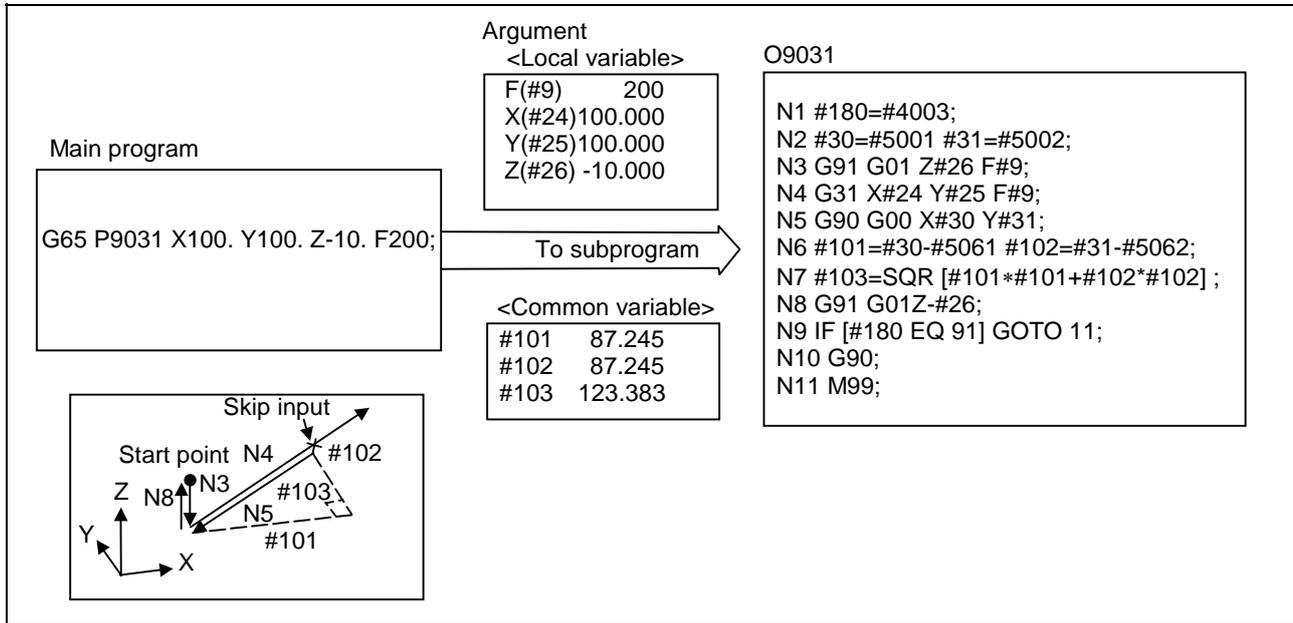

- | | | | |
|-------|-----------------------------------|---------|--|
| #101 | X axis measurement amount | N1 | G90/G91 modal recording |
| #102 | X axis measurement amount | N2 | X, Y start point recording |
| #103 | Measurement linear segment amount | N3 | Z axis entry amount |
| #5001 | X axis measurement start point | N4 | X, Y measurement (Stop at skip input) |
| #5002 | Y axis measurement start point | N5 | Return to X, Y start point |
| | | N6 | X, Y measurement incremental value calculation |
| | | N7 | Measurement linear segment calculation |
| | | N8 | Z axis escape |
| #5061 | X axis skip input point | N9, N10 | G90/G91 modal return |
| #5062 | Y axis skip input point | N11 | Subprogram return |

(Example 2) Reading of skip input coordinates

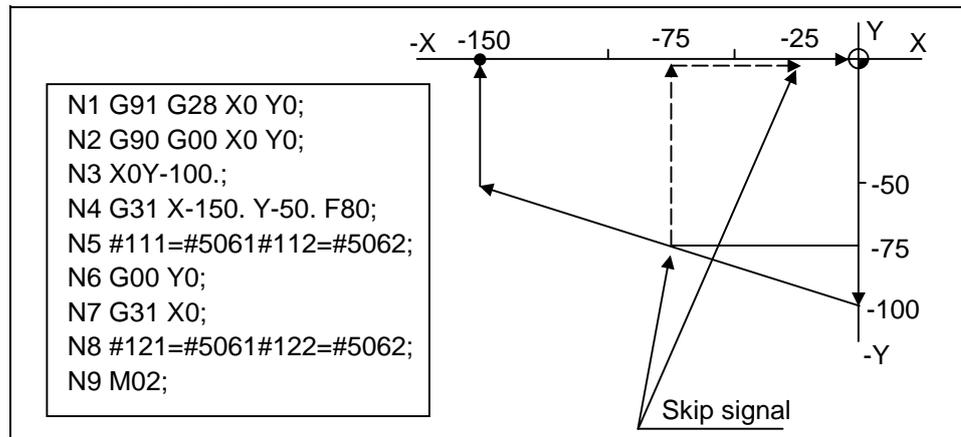

$$\#111 = -75. + \epsilon \quad \#112 = -75. + \epsilon$$

$$\#121 = -25. + \epsilon \quad \#122 = -75. + \epsilon$$

ϵ is the error caused by response delay.

(Refer to the section on the skip function for details.)

#122 is the N4 skip signal input coordinates as there is no Y command at N7.



Variable name setting and quotation

Any name (variable name) can be given to common variables #500 to #519. It must be composed of not more than 7 alphanumeric characters and it must begin with a letter. Do not use "#" in variable names. It causes an alarm when the program is executed.

Format

SETVN n [NAME1, NAME2,] :	
n	: Head number of variable to be named
NAME1	: #n name (variable name)
NAME2	: #n + 1 name (variable name)

Variable names are separated by a comma (,).

Detailed description

- (1) Once variable names have been set, they will not be cleared even when the power is switched off.
- (2) Variables in programs can be quoted by their variable names. In cases like this, the variables should be enclosed in square parentheses.
(Example 1) G01X [#POINT1];
 [#NUMBER] = 25 ;
- (3) The variable numbers, data and variable names appear on the screen of the setting and display unit.

(Example 2)

Program SETVN500 [A234567, DIST, TOOL25] ;

[Common variables]		
#500	-12345.678	A234567
#501	5670.000	DIST
#502	-156.500	TOOL25
~~~~~		
#518	10.000	NUMBER
Common variable	#(502) Data (-156.5)	Name (TOOL25)

**(Note)** At the head of the variable name, do not use the characters determined by the NC for use in arithmetic commands, etc. (e.g. SIN, COS).



### Workpiece coordinate shift amount

The workpiece coordinate system shift amount can be read using variables #2501 and #2601. By substituting a value in these variables, the workpiece coordinate system shift amount can be changed.

Axis No.	Workpiece coordinate system shift amount
1	#2501
2	#2601



### Number of workpiece machining times

The number of workpiece machining times can be read using variables #3901 and #3902. By substituting a value in these variables, the number of workpiece machining times can be changed.

Type	Variable No.	Data setting range
Number of workpiece machining times	#3901	0 to 999999
Maximum workpiece value	#3902	

**(Note)** Always substitute a positive value for the number of workpiece machining times.




### Tool life management

#### (1) Definition of variable numbers

- (a) Designation of group No.  
#60000

The tool life management data group No. to be read with #60001 to #64700 is designated by substituting a value in this variable. If a group No. is not designated, the data of the group registered first is read. This is valid until reset.

- (b) Tool life management system variable No. (Read)  
#60001 to #64700

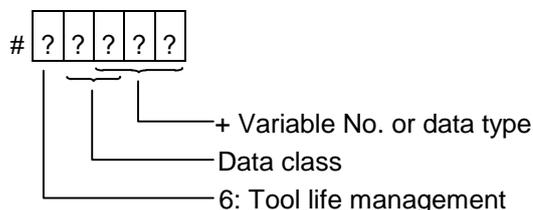

- (c) Details of data classification

Data class	M System	L System	Remarks
00	For control	For control	Refer to following types
05	Group No.	Group No.	Refer to registration No.
10	Tool No.	Tool No.	Refer to registration No.
15	Tool data flag	Method	Refer to registration No.
20	Tool status	Status	Refer to registration No.
25	Life data	Life time/No. of times	Refer to registration No.
30	Usage data	Usage time/No. of times	Refer to registration No.
35	Tool length compensation data	—	Refer to registration No.
40	Tool radius compensation data	—	Refer to registration No.
45	Auxiliary data	—	Refer to registration No.

The group No., L System method, and life data are common for the group.

## 13. Program Support Functions

### 13.5 User macro specifications

(d) Registration No.

M system	1 to 200
L system	1 to 16

(e) Data type

Type	M System	L System	Remarks
1	Number of registered tools	Number of registered tools	
2	Life current value	Life current value	
3	Tool selected No.	Tool selected No.	
4	Number of remaining registered tools	Number of remaining registered tools	
5	Signal being executed	Signal being executed	
6	Cutting time cumulative value (minute)	Cutting time cumulative value (minute)	
7	Life end signal	Life end signal	
8	Life prediction signal	Life prediction signal	

Variable No.	Item	Type	Details	Data range
60001	Number of registered tools	Common to system	Total number of tools registered in each group.	0 to 200
60002	Life current value	For each group (Designate group No. #60000)	Usage time/No. of uses of tool being used. Spindle tool usage data or usage data for tool in use (#60003).	0 to 4000 minutes 0 to 9999 times
60003	Tool selected No.		Registration No. of tool being used. Spindle tool registration No. (If spindle tool is not data of the designated group, ST:1 first tool, or if ST:1 is not used, the first tool of ST:0. When all tools have reached their lives, the last tool.)	0 to 200
60004	Number of remaining registered tools		No. of first registered tool that has not reached its life.	0 to 200
60005	Signal being executed		"1" when this group is used in program being executed. "1" when spindle tool data group No. and designated group No. match.	0/1
60006	Cutting time cumulative value (minute)		Indicates the time that this group is used in the program being executed.	
60007	Life end signal		"1" when lives of all tools in this group have been reached. "1" when all tools registered in designated group reach lives.	0/1
60008	Life prediction signal		"1" when new tool is selected with next command in this group. "1" when there is a tool for which ST is "0: Not used" in the designated group, and there are no tools for which ST is "1: Tools in use".	0/1

## 13. Program Support Functions

### 13.5 User macro specifications

Variable No.	Item	Type	Details	Data range
60500 +***	Group No.	Each group/ registration No.	This group's No.	1 to 99999999
61000 +***	Tool No.	(Designate the group No. #60000 and registration No. ***.)  Note the group No., method and life are common for the groups.	Tool No.	1 to 99999999
61500 +***	Tool data flag		Usage data count method, length compensation method, radius compensation method, etc., parameters.  bit 0, 1 : Tool length compensation data format bit 2, 3 : Tool radius compensation data format 0: Compensation No. method 1: Incremental value compensation amount method 2: Absolute value compensation amount method  bit 4, 5 : Tool life management method 0: Usage time 1: No. of mounts 2: No. of usages	0 to FF (H)
62000 +***	Tool status		Tool usage state  0: Not used tool 1: Tool being used 2: Normal life tool 3: Tool error 1 4: Tool error 2	0 to 4
62500 +***	Life data		Life time or No. of lives for each tool	0 to 4000 minutes 0 to 9999 times
63000 +***	Usage data		Usage time or No. of uses for each tool	0 to 4000 minutes 0 to 9999 times
63500 +***	Tool length compen-sation data		Length compensation data set as compensation No., absolute value compensation amount or increment value compensation amount method.	Compensation No.: 0 to No. of tool compensation sets  Absolute value compensation amount ±99999.999  Increment value compensation amount ±99999.999

Variable No.	Item	Type	Details	Data range
64000 +***	Tool radius compensation data		Radius compensation data set as compensation No., absolute value compensation amount or increment value compensation amount method.	Compensation No.: 0 to No. of tool compensation sets  Absolute value compensation amount ±99999.999  Increment value compensation amount ±99999.999
64500 +***	Auxiliary data		Spare data	0 to 65535



### Example of program for tool life management

#### (1) Normal commands

#101 = #60001 ; ..... Reads the number of registered tools.  
 #102 = #60002 ; ..... Reads the life current value.  
 #103 = #60003 ; ..... Reads the tool selection No.  
 #60000 = 10 ; ..... Designates the group No. of the life data to be read.  
 #104 = #60004 ; ..... Reads the remaining number of registered tools in group 10.  
 #105 = #60005 ; ..... Reads the signal being executed in group 10.  
 #111 = #61001 ; ..... Reads the group 10, #1 tool No.  
 #112 = #62001 ; ..... Reads the group 10, #1 status.  
 #113 = #61002 ; ..... Reads the group 10, #2 status.  
 %

} Designated program No. is valid until reset.

#### (2) When group No. is not designated.

#104 = #60004 ; ..... Reads the remaining number of registered tools in the group registered first.  
 #111 = #61001 ; ..... Reads the #1 tool No. in the group registered first.  
 %

#### (3) When non-registered group No. is designated. (Group 9999 does not exist.)

#60000 = 9999 ; ..... Designates the group No.  
 #104 = #60004 ; ..... #104 = -1.

#### (4) When registration No. not used is designated. (Group 10 has 15 tools)

#60000 = 10 ; ..... Designates the group No.  
 #111 = #61016 ; ..... #101 = -1.

#### (5) When registration No. out of the specifications is designated.

#60000 = 10 ;  
 #111 = #61017 ; ..... Program error (P241)

**(6) When tool life management data is registered with G10 command after group No. is designated.**

#60000 = 10 ; .....	Designates the group No.	}	The group 10 life data is registered.
G10 L3 ; .....	Starts the life management data registration.		
P10 LLn NNn ; .....	10 is the group No., Ln is the life per tool, Nn is the method.		
TTn ; .....	Tn is the tool No.		
:			
G11 ; .....	Registers the group 10 data with the G10 command.	}	The life data other than group 10 is registered.
#111 = #61001 ; .....	Reads the group 10, #1 tool No.		
G10 L3 ; .....	Starts the life management data registration.		
P1 LLn NNn ; .....	1 is the group No., Ln is the life per tool, Nn is the method.		
TTn ; .....	Tn is the tool No.		
:			
G11 ; .....	Registers the life data with the G10 command. (The registered data is deleted.)		
#111 = 61001 ; .....	Group 10 does not exist. #201 = -1.		



### Precautions for tool life management

- (1) If the tool life management system variable is commanded without designating a group No., the data of the group registered at the head of the registered data will be read.
- (2) If a non-registered group No. is designated and the tool life management system variable is commanded, "-1" will be read as the data.
- (3) If an unused registration No. tool life management system variable is commanded, "-1" will be read as the data.
- (4) Once commanded, the group No. is valid until NC reset.



### Reading the parameters

System data can be read in with the system variables.

**(Note)** These can be used only with some models.

Variable No.	Application
#100000	Parameter # designation
#100001	System No. designation
#100002	Axis No./spindle No. designation
#100010	Parameter value read

The parameter values are read in with the following four blocks using these four system variables.

#100000 = 1001 ; .....Designates the parameter #.

#100001 = 1 ; .....Designates the system No.

#100002 = 1 ; .....Designates the axis No./spindle No.

#100 = #100010 ; .....Reads the parameter value.

#### (1) Parameter # designation (#100000)

The parameter to be read in is designated by substituting the parameter # in this system variable.

If the parameters are read without designating this number, the parameters will be read in the same manner as if the minimum parameter # (#1) is designated. Once designated, the setting is held until the parameter # is designated again or until it is reset.

A program error (P39) will occur if a parameter # that does not exist is set.

#### (2) System No. designation (#100001)

Always set "0".

When using the PLC axis, set "10".

#### (3) Axis/spindle No. designation (#100002)

(a) System variable for axis/spindle No. designation

The axis No./spindle No. of the parameter to be read in is designated by substituting an index value in this system variable. This designation will be ignored when reading in parameters that are not for a specific axis or spindle.

If the parameters are read without designating this number, the parameters will be read in the same manner as if the index value 1 (1st axis/1st spindle) is designated. Once designated, the setting is held until the index value is designated again or until it is reset. A program error (P39) will occur if an axis/spindle No. that does not exist is set.

(b) Index values

Index values	Axis parameter	Spindle parameter
1	1st axis	1st spindle
2	2nd axis	2nd spindle
3	3rd axis	—
4	4th axis	—
5	5th axis	—
6	6th axis	—

### (4) Parameter read (#100010)

The designated parameter data is read with this system variable.  
The following data is read according to the parameter type.

Type	Read data
Value	The values displayed on the Parameter screen are output.
Text	ASCII codes are converted into decimal values.



### Example of programs for reading parameters

#### (1) To read the parameter [#1002 axisno Number of axes]

#100000 = 1002 ; .....Designates [#1002].  
 #100001 = 0 ;  
 #101 = #100010 ; .....Reads the number of axes.  
 #100001 = 5 ; .....Designates [5th system]. (Program error (P39) occurs.)  
 #100001 = 10 ; .....Designates [PLC axis].  
 #110 = #100010 ; .....Reads the number of PLC axes.

#### (2) To read the parameter [#2037 G53ofs #1 reference point]

[Conditions]

	<1st axis>	<2nd axis>
#2037 G53ofs	1000.000	200.000

#100002 = 1 ; .....Designates [1st axis].  
 #100000 = 2037 ; .....Designates [#2037].  
 #101 = #100010 ; .....Reads the [#1 reference point] for the 1st axis.  
 (#101 = 100.000.)  
 #100002 = 2 ; .....Designates [2nd axis].  
 #102 = #100010 ; .....Reads the [#1 reference point] for the 2nd axis.  
 (#102 = 200.000.)

#### (3) To read each parameter for each axis and spindle

#100002 = 1 ; .....Designates [1st spindle].  
 #100000 = 3001 ; .....Designates [#3001].  
 #101 = #100010 ; .....Reads the [#3001 slimt1 Number of limit rotation gears 00]  
 for 1st spindle.  
 #100000 = 3002 ; .....Designates [#3002].  
 #102 = #100010 ; .....Reads the [#3002 slimt2 Number of limit rotation gears 01]  
 for 1st spindle.  
 #100002 = 2 ; .....Designates [2nd spindle].  
 #100000 = 3001 ; .....Designates [#3001].  
 #201 = #100010 ; .....Reads the [#3001 slimt1 Number of limit rotation gears 00]  
 for 2nd spindle.  
 #100000 = 3002 ; .....Designates [#3002].  
 #202 = #100010 ; .....Reads the [#3002 slimt2 Number of limit rotation gears 01]  
 for 2nd spindle



### Example of parameter read macro program

#### <Macro specifications>

Q341 A_ Q_ . ;  
 A_..... Storage common variable      Designates the common variable No. for storing the data read in.  
 Q_..... Parameter # designation      For an axis/spindle parameter, designates the axis/spindle No. with one digit after the decimal point.

#### <Macro contents>

#100000 = FIX [#17] ;	.....	Designates parameter #.
#100002 = FIX [#17*10] MOD 10 ;	.....	Designates axis/spindle No.
#[#1] = #100010 ;	.....	Reads parameter data.
M99 ;		



### Precautions for reading parameters

- (1) The number of axes and spindles is the maximum number in the specifications determined by the model.
- (2) The inch/metric changeover function for the setting and display is valid even for the data read in.



### Reading PLC data

PLC data can be read in with the system variables.

**(Note 1)** These can be used only with some models.

**(Note 2)** The read devices are limited.

Variable No.	Application
#100100	Device type designation
#100101	Device No. designation
#100102	Number of read bytes designation
#100103	Read bit designation
#100110	PLC data read

The PLC data is read in with the following five blocks using these five system variables.

#100100 = 1 ; ..... Designates the device type.

#100101 = 0 ; ..... Designates the device No.

#100102 = 1 ; ..... Designates the number of bytes.

#100103 = 2 ; ..... Designates the bit. (Valid only when reading word device bits.)

#100 = #100110 ; ..... Reads in the PLC data.

#### (1) Device designation (#100100)

- (a) System variable for device designation

The type of device to be read in can be designated by substituting the device designation value in this system variable.

If the data is read without designating this number, the data will be read in the same manner as if the minimum device designation value (0: M device) is designated. Once designated, the setting is held until the device is designated again or until it is reset.

A program error (P39) will occur if a device that does not exist is set.

- (b) Device designation values

Device designation value	Device			Device designation value	Device		
	Device	Unit	Device No.		Device	Unit	Device No.
0	M	Bit	M0 to M5503	10	F	Bit	F0 to F255
1	D	Word	D0 to D1023	11	I *	Bit	I0 to I3FF
2	C	Bit	C0 to C23	12	J *	Bit	J0 to J63F
3	G	Bit	G0 to G3071	13	L	Bit	L0 to L255
4	X *	Bit	X0 to X4BF	14	Q	Bit	Q0 to Q151
5	Y *	Bit	Y0 to Y53F	15	S *	Bit	S0 to S13F
6	R	Word	R0 to R8191	16	U *	Bit	U0 to U17F
7	T	Bit	T0 to T103	17	W *	Bit	W0 to W1FF
8	B	Bit	B0 to B103				
9	E	Bit	E0 to E127				

The unit is the amount of data per device No. "Word" has 16 bits, and "Bit" has one bit.

* is a device that expresses the device No. as a hexadecimal.

### (2) Device No. designation (#100101)

The device to be read in is designated by substituting the device No. in this system variable. Convert a device expressed as a hexadecimal into a decimal when designating. If the data is read without designating this number, the data will be read in the same manner as if the minimum device No. (0) is designated. Once designated, the setting is held until the device No. is designated again or until it is reset. A program error (P39) will occur if a device No. that does not exist is set.

### (3) Number of bytes designation (#100102)

#### (a) System variable for number of bytes designation

The reading size is designated by substituting the number of bytes designation value in this system variable.

If the data is read without designating this number, the data will be read in the same manner as if the minimum number of bytes designation value (0: bit designation) is designated. Once designated, the setting is held until the number of bytes is designated again or until it is reset.

A program error (P39) will occur if a number of bytes that does not exist in the specifications is set.

#### (b) Number of bytes designation value

Number of bytes designation value	Read in data			Operation	
	Size	Sign	Range	Word device	Bit device
0	1 bit	–	0 to 1	The number of bits designated is read in.	The bits for the designated device No. are read in.
1	1 byte	No	0 to 255	The low-order byte is read in.	8 bits are read in from the designated device No.
101		Yes	–128 to 127		
2	2 bytes	No	0 to 65535	Two bytes are read in.	16 bits are read in from the designated device No.
102		Yes	–32768 to 32767		
4	4 bytes	No	0 to 4294967295	The designated device (L) and next device (H) are read in.	32 bits are read in from the designated device No.
104		Yes	–2147483648 to 2147483647		

0 to 4 are designated without a sign, and 101 to 104 are designated with a sign.

#### (4) Bit designation (#100103)

##### (a) System variable for bit designation

The bit to be read in is designated by substituting the bit designation value in this system variable.

This designation is valid only when reading the bits for a 16-bit device, and is invalid in all other cases.

If the data is read without designating this number, the data will be read in the same manner as if the minimum bit designation value (0: bit 0) is designated. Once designated, the setting is held until the bit is designated again or until it is reset.

A program error (P39) will occur if a bit that does not exist is set.

##### (b) Bit designation values

Bit designation value	Read in bit
0	Bit 0
1	Bit 1
:	:
15	Bit 15

#### (5) PLC data read (#100110)

The data for the designated device is read in with this system variable.

Refer to the table for number of bytes designation for details on the range of data read in.

**(1) To read a bit device**

#100100 = 0 ; ..... Designates [M device].  
 #100101 = 0 ; ..... Designates [Device No. 0].  
 #100102 = 0 ; ..... Designates [Bit].  
 #100 = #100110 ; ..... Reads M0 (one bit).  
 #100102 = 1 ; ..... Designates [1 byte].  
 #101 = #100110 ; ..... Reads M0 to M7 (eight bits).  
 (If M7 to M0 is 0001 0010, this will be #102 = 18 (0x12).)  
 #100102 = 102 ; ..... Designates [Signed two bytes].  
 #102 = #100110 ; ..... Reads M0 to M15 (16 bits).  
 (If M15 to M0 is 1111 1110 1101 1100, this will be  
 #102 = -292 (0xFEDC).)  
 #100102 = 4 ; ..... Designates [4 bytes].  
 #104 = #100110 ; ..... Reads M0 to M31 (32 bits).  
 (If M31 to M0 is 0001 0010 0011 0100 0101 0110 0111 1000,  
 this will be #104 = 305419896 (0x12345678).)

**(2) To read a word device**

#100100 = 1 ; ..... Designates [D device].  
 #100101 = 0 ; ..... Designates [Device No. 0].  
 #100102 = 0 ; ..... Designates [Bit].  
 #100103 = 1 ; ..... Designates [Bit 1].  
 #100 = #100110 ; ..... Reads the D0 bit 1.  
 (If D0 = 0x0102, this will be #101 =1.)  
 #100102 = 1 ; ..... Designates [1 byte].  
 #101 = #100110 ; ..... Reads the low-order byte of D0.  
 (If D0 = 0x0102, this will be #101 =2.)  
 #100102 = 2 ; ..... Designates [2 bytes].  
 #102 = #100110 ; ..... Reads D0. (If D0 = 0x0102, this will be #102 =258.)  
 #100102 = 104 ; ..... Designates [Signed four bytes].  
 #104 = #100110 ; ..... Reads D0 and D1.  
 (If D0 = 0xFFFFE and D1 = 0xFFFF, this will be #104 =-2.)



### Examples of using macro program for reading PLC data

#### <Macro specifications>

G340 F_ A_ Q_ H_ ;

F_ .....Number of bytes designation

A_ .....Device designation

Q_ .....Device No. designation

H_ ..... Storage common variable

F0 ..... Designates bit.

F1 ..... Designates one byte.

F2 ..... Designates two bytes.

A0 ..... Designates M.

A1 ..... Designates D.

A2 ..... Designates C.

A3 ..... Designates G.

A4 ..... Designates X.

A5 ..... Designates Y.

A6 ..... Designates R.

A7 ..... Designates T.

For a bit, designates the bit with two digits after the decimal point.

For a byte, a decimal value is not designated.

Designates the common variable No. for storing the read data.

#### <Macro contents>

#100100 = #1 ;

#100101 = FIX [#17] ;

#100102 = #9 ;

#100103 = FIX [#17*100] MOD 100 ;

#[#11] = #100110 ;

M99 ;

..... Designates device.

..... Designates device No.

..... Designates number of bytes.

..... Designates bit.

..... Reads PLC data.



### Precautions for reading PLC data

- (1) As the PLC data is read asynchronously from the ladder execution, the data is not necessarily from the running program. Take care when reading devices that change.
- (2) If reading of a device that does not exist is attempted by designating the device No. and number of bytes, the 0 value will be read in only for the sections that do not exist.



### Time reading variables

The following operations can be carried out using the system variable extension for the user macro time.

- (1) By adding time information system variable #3011 and #3012, the current date (#3011) and current time (#3012) can be read and written.
- (2) By adding parameter #1273/bit1, the unit (millisecond unit/hour unit) of the cumulative time during system variable #3002 automatic start can be changed.

Variable No.	Details
#3001	The cumulative time during power ON can be read and the value can be substituted. The unit is a millisecond unit.
#3002	The cumulative time during automatic start can be read and the value can be substituted. The unit can be changed between millisecond and hour with parameter #1273/bit1.
#3011	The current date can be read and written. YYYY/MM/DD is read as a YYYYMMDD value. When a YYYYMMDD value is written in, it will be set as YY/MM/DD (the last two digits of the year are displayed). Command range for year/month/date setting Year (YYYY) : 2000 to 2099 Month (MM) : 1 to 12 Date (DD) : 1 to maximum number of days in month
#3012	The current time can be read and written. HH/MM/SS is read as a HHMMSS value. When an HHMMSS value is written in, it will be set as HH/MM/DD. Command range for hour/minute/second setting Hour (HH) : 0 to 23 (24-hour system) Minute (MM) : 0 to 59 Second (SS) : 0 to 59

- (3) The cumulative time returns to 0 at approx.  $2.44 \times 10^{11}$  milliseconds (approx. 7.7 years).
- (4) If a negative value or a value exceeding 244335917226 milliseconds (67871.08811851 hours for #3002 time designation) is set for the cumulative time, a program error (P35) will occur.
- (5) If a value exceeding the command range is set for the date or time, a program error (P35) will occur.
- (6) Always set the month/date/hour/minute/second as a two-digit value when setting the date and time.  
If the value only has one digit, always add 0. (February 14, 2001  $\Rightarrow$  #3001= 20010214 ;, etc.)



## Examples of using time reading variable

- (Example 1)** To read the current date (February 14, 2001) in common variable #100  
 #100 = #3011 ; (20010214 is inserted in #100)
- (Example 2)** To write current time (18 hours, 13 minutes, 6 seconds) into system variable #3012  
 #3012 = 181306 ; (The command value cumulative time #2: time is set to 18:13:06.)
- (Example 3)** By setting the following type of program, the machining start/end time  
 (year/month/date/hour/minute/second) can be viewed.

```
#100=#3011 ; ⇒ Machining start year/month/date
#101=#3012 ; ⇒ Machining start hour/minute/second
G28 X0 Y0 Z0 ;
G92 ;
G0 X50. ;
.
.
.
#102=#3011 ; ⇒ Machining end year/month/date
#103=#3012 ; ⇒ Machining end hour/minute/second
M30 ;
```



## Limits and precautions for using time reading variable

- (1) #3011 reads the date as an eight-digit value, so the difference of the two dates read in will not be the difference of days.
- (2) #3012 reads the time as a six-digit value, so the difference of the two times read in will not be the difference of hours.

### 13.5.5 Arithmetic commands

A variety of arithmetic operations can be performed between variables.



#### Command format

**#i = <formula>**


<Formula> is a combination of constants, variables, functions and operators. Constants can be used instead of #j and #k below.

(1) Definition and substitution of variables	#i = #j	Definition, substitution
(2) Addition arithmetic	#i = #j + #k	Addition
	#i = #j - #k	Subtraction
	#i = #j OR #k	Logical sum (at every bit of 32 bits)
	#i = #j XOR #k	Exclusive OR (at every bit of 32 bits)
(3) Multiplication arithmetic	#i = #j * #k	Multiplication
	#i = #j / #k	Division
	#i = #j MOD #k	Remainder
	#i = #j AND #k	Logical product (at every bit of 32 bits)
(4) Functions	#i = SIN [#k]	Sine
	#i = COS [#k]	Cosine
	#i = TAN [#k]	Tangent (sin/cos used for tan)
	#i = ASIN [#k]	Arcsine
	#i = ATAN [#j]	Arctangent (ATAN or ATN may be used)
	#i = ACOS [#j]	Arc-cosine
	#i = SQRT [#k]	Square root (SQRT or SQR may be used)
	#i = ABS [#k]	Absolute value
	#i = BIN [#k]	Conversion from BCD to BIN
	#i = BCD [#k]	Conversion from BIN to BCD
	#i = ROUND [#k]	Rounding off (ROUND or RND may be used)
	#i = FIX [#k]	Discard fractions less than 1
	#i = FUP [#k]	Add for fractions less than 1
#i = LN [#k]	Natural logarithm	
#i = EXP [#k]	Exponent with e (=2.718 ..... ) as bottom	

**(Note 1)** A value without a decimal point is basically treated as a value with a decimal point at the end (1 = 1.000).

**(Note 2)** Offset amounts from #10001 and work coordinate system offset values from #5201 are handled as data with a decimal point. Consequently, data with a decimal point will be produced even when data without a decimal point have been defined in the variable numbers.

#### (Example)

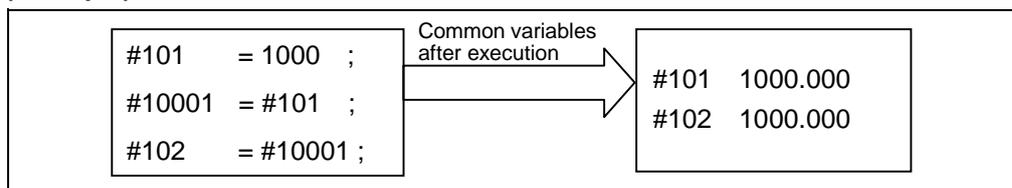

**(Note 3)** The <formula> after a function must be enclosed in the square parentheses.



### Sequence of arithmetic operations

- (1) The sequence of the arithmetic operations (1) through (3) is, respectively, the functions followed by the multiplication arithmetic followed in turn by the addition arithmetic.

$$\#101 = \#111 + \#112 * \text{SIN}[\#113]$$

(1) Function  
 (2) Multiplication arithmetic  
 (3) Addition arithmetic

- (2) The part to be given priority in the operation sequence should be enclosed in square parentheses. Up to 5 pairs of such parentheses including those for the functions may be used.

$$\#101 = \text{SQRT} [ [ [ \#111 = \#112 ] * \text{SIN}[\#113] + \#114 ] * \#15 ] ;$$

First pair of parentheses  
 Second pair of parentheses  
 Third pair of parentheses



### Examples of arithmetic commands

(1) Main program and argument designation	G65 P100 A10 B20. ; #101=100.000 #102=200.000 ;	#1 #2 #101 #102	10.000 20.000 100.000 200.000
(2) Definition and substitution (=)	#1=1000 #2=1000. #3=#101 #4=#102 #5=#10001 (#10001=-10.)	#1 #2 #3 #4 #5	1000.000 1000.000 100.000 200.000 -10.000
(3) Addition and subtraction (+, -)	#11=#1+1000 #12=#2-50. #13=#101+#1 #14=#10001-3. (#10001 = -10.) #15=#10001+#102	#11 #12 #13 #14 #15	2000.000 950.000 1100.000 -13.000 190.000
(4) Multiplication and division (*, /)	#21=100*100 #22=100.*100 #23=100*100 #24=100.*100. #25=100/100 #26=100./100 #27=100/100. #28=100./100. #29=#10001*#101 (#10001 = -10.) #30=#10001/#102	#21 #22 #23 #24 #25 #26 #27 #28 #29 #30	10000.000 10000.000 10000.000 10000.000 1.000 1.000 1.000 1.000 -1000.000 -0.050
(5) Remainder (MOD)	#19=48 #20=9 #31=#19 MOD #20	#19/#20 = 48/9 = 5 with 3 over #31 = 3	

## 13. Program Support Functions

### 13.5 User macro specifications

(6)	Logical sum (OR)	#3=100 #4=#3 OR 14	#3 = 01100100 (binary) 14 = 00001110 (binary) #4 = 01101110 = 110
(7)	Exclusive OR (XOR)	#3=100 #4=#3 XOR 14	#3 = 01100100 (binary) 14 = 00001110 (binary) #4 = 01101010 = 106
(8)	Logical product (AND)	#9=100 #10=#9 AND 15	#9 = 01100100 (binary) 15 = 00001111 (binary) #10 = 00000100 = 4
(9)	Sin (SIN)	#501 = SIN [60] #502 = SIN [60.] #503 = 1000*SIN [60] #504 = 1000*SIN [60.] #505 = 1000.*SIN [60] #506 = 1000.*SIN [60.] <b>(Note)</b> SIN [60] is equivalent to SIN [60.]	#501 0.860 #502 0.860 #503 866.025 #504 866.025 #505 866.025 #506 866.025
(10)	Cosine (COS)	#541 = COS [45] #542 = COS [45.] #543 = 1000*COS [45] #544 = 1000*COS [45.] #545 = 1000.*COS [45] #546 = 1000.*COS [45.] <b>(Note)</b> COS [45] is equivalent to COS [45.]	#541 0.707 #542 0.707 #543 707.107 #544 707.107 #545 707.107 #546 707.107
(11)	Tangent (TAN)	#551 = TAN [60] #552 = TAN [60.] #553 = 1000*TAN [60] #554 = 1000*TAN [60.] #555 = 1000.*TAN [60] #556 = 1000.*TAN [60.] <b>(Note)</b> TAN [60] is equivalent to TAN [60.]	#551 1.732 #552 1.732 #553 1732.051 #554 1732.051 #555 1732.051 #556 1732.051
(12)	Arcsine ASIN	#531 = ASIN [100.500/201.] #532 = ASIN [100.500/201] #533 = ASIN [0.500] #534 = ASIN [-0.500]	#531 30.000 #432 30.000 #533 30.000 #534 -30.000 <b>(Note)</b> When #1273/bit 0 is set to 1, #534 will be 330°.
(13)	Arctangent (ATAN or ATN)	#561 = ATAN [173205/100000] #562 = ATAN [173205/100000.] #563 = ATAN [173.205/100] #564 = ATAN [173.205/100.] #565 = ATAN [1.73205]	#561 60.000 #562 60.000 #563 60.000 #564 60.000 #565 60.000

## 13. Program Support Functions

### 13.5 User macro specifications

(14)	Arccosine (ACOS)	#521 = ACOS [100./141.421] #522 = ACOS [100./141.421]	#521 45.000 #522 45.000
(15)	Square root (SQR or SQRT)	#571 = SQRT [1000] #572 = SQRT [1000.] #573 = SQRT [10. *10. +20. *20.] <b>(Note)</b> In order to increase the accuracy, proceed with the operation inside parentheses.	#571 31.623 #572 31.623 #573 22.360
(16)	Absolute value (ABS)	#576 = -1000 #577 = ABS [#576] #3 = 70. #4 = -50. #580 = ABS [#4 - #3]	#576 -1000.000 #577 1000.000  #580 120.000
(17)	BIN, BCD	#1 = 100 #11 = BIN [#1] #12 = BCD [#1]	#11 64 #12 256
(18)	Rounding off (ROUND or RND)	#21 = ROUND [14/3] #22 = ROUND [14./3] #23 = ROUND [14/3.] #24 = ROUND [14./3.] #25 = ROUND [-14/3] #26 = ROUND [-14./3] #27 = ROUND [-14/3.] #28 = ROUND [-14./3.]	#21 5 #22 5 #23 5 #24 5 #25 -5 #26 -5 #27 -5 #28 -5
(19)	Discarding fractions below decimal point (FIX)	#21 = FIX [14/3] #22 = FIX [14./3] #23 = FIX [14/3.] #24 = FIX [14./3.] #25 = FIX [-14/3] #26 = FIX [-14./3] #27 = FIX [-14/3.] #28 = FIX [-14./3.]	#21 4.000 #22 4.000 #23 4.000 #24 4.000 #25 -4.000 #26 -4.000 #27 -4.000 #28 -4.000
(20)	Adding fractions less than 1 (FUP)	#21 = FUP [14/3] #22 = FUP [14./3] #23 = FUP [14/3.] #24 = FUP [14./3.] #25 = FUP [-14/3] #26 = FUP [-14./3] #27 = FUP [-14/3.] #28 = FUP [-14./3.]	#21 5.000 #22 5.000 #23 5.000 #24 5.000 #25 -5.000 #26 -5.000 #27 -5.000 #28 -5.000
(21)	Natural logarithms (LN)	#101 = LN [5] #102 = LN [0.5] #103 = LN [-5]	#101 1.609 #102 -0.693 Error "P282"
(22)	Exponents (EXP)	#104 = EXP [2] #105 = EXP [1] #106 = EXP [-2]	#104 7.389 #105 2.718 #106 0.135



### Arithmetic accuracy

As shown in the following table, errors will be generated when performing arithmetic operations once and these errors will accumulate by repeating the operations.

Arithmetic format	Average error	Maximum error	Type of error
a = b + c a = b - c	$2.33 \times 10^{-10}$	$5.32 \times 10^{-10}$	Min. $ \varepsilon/b $ , $ \varepsilon/c $
a = b*c	$1.55 \times 10^{-10}$	$4.66 \times 10^{-10}$	Relative error $ \varepsilon/a $
a = b/c	$4.66 \times 10^{-10}$	$1.86 \times 10^{-9}$	
a = $\sqrt{b}$	$1.24 \times 10^{-9}$	$3.73 \times 10^{-9}$	
a = SIN [b] a = COS [b]	$5.0 \times 10^{-9}$	$1.0 \times 10^{-8}$	Absolute error $ \varepsilon ^\circ$
a = ATAN [b/c]	$1.8 \times 10^{-6}$	$3.6 \times 10^{-6}$	

(Note) SIN/COS is calculated for the function TAN.



### Notes on reduced accuracy

#### (1) Addition and subtraction

It should be noted that when absolute values are used subtractively in addition or subtraction, the relative error cannot be kept below  $10^{-8}$ .

For instance, it is assumed that the real values produced as the arithmetic calculation result of #10 and #20 are as follows (these values cannot be substituted directly) :

#10 = 2345678988888.888

#20 = 2345678901234.567

Performing #10 - #20 will not produced #10 - 320 = 87654.321. There are 8 significant digits in the variables and so the values of #10 and #20 will be as follows (strictly speaking, the internal values will differ somewhat from the values below because they are binary numbers) :

#10 = 2345679000000.000

#20 = 2345678900000.000

Consequently, #10 - #20 = 100000.000 will generate a large error.

#### (2) Logical operations

EQ, NE, GT, LT, GE and LE are basically the same as addition and subtraction and so care should be taken with errors. For instance, to determine whether or not #10 and #20 are equal in the above example :

IF [#10EQ#20]

It is not always possible to provide proper evaluation because of the above mentioned error.

Therefore, when the error is evaluated as in the following expression :

IF [ABS [#10 - #20] LT200000]

and the difference between #10 and #20 falls within the designated range error, both values should be considered equal.

#### (3) Trigonometric functions

Absolute errors are guaranteed with trigonometric functions but since the relative error is not under  $10^{-8}$ , care should be taken when dividing or multiplying after having used a trigonometric function.

### 13.5.6 Control commands

The flow of programs can be controlled by IF-GOTO- and WHILE-DO-.



#### Branching

Format

**IF [conditional expression] GOTO n; (n = sequence number in the program)**

When the condition is satisfied, control branches to "n" and when it is not satisfied, the next block is executed.

IF [conditional expression] can be omitted and, when it is, control passes to "n" unconditionally.

The following types of [conditional expressions] are available.


#i EQ #j	=	When #i and #j are equal
#i NE #j	≠	When #i and #j are not equal
#i GT #j	>	When #i is greater than #j
#i LT #j	<	When #i is less than #j
#i GE #j	≥	When #i is #j or more
#i LE #j	≤	When #i is #j or less

"n" of GOTO n must always be in the same program. Program error (P231) will result if it is not. A formula or variable can be used instead of #i, #j and "n".

In the block with sequence number "n" which will be executed after a GOTO n command, the sequence number must always be at the head of the block.

Otherwise, program error (P231) will result.

If "/" is at the head of the block and Nn follows, control can be branched to the sequence number.

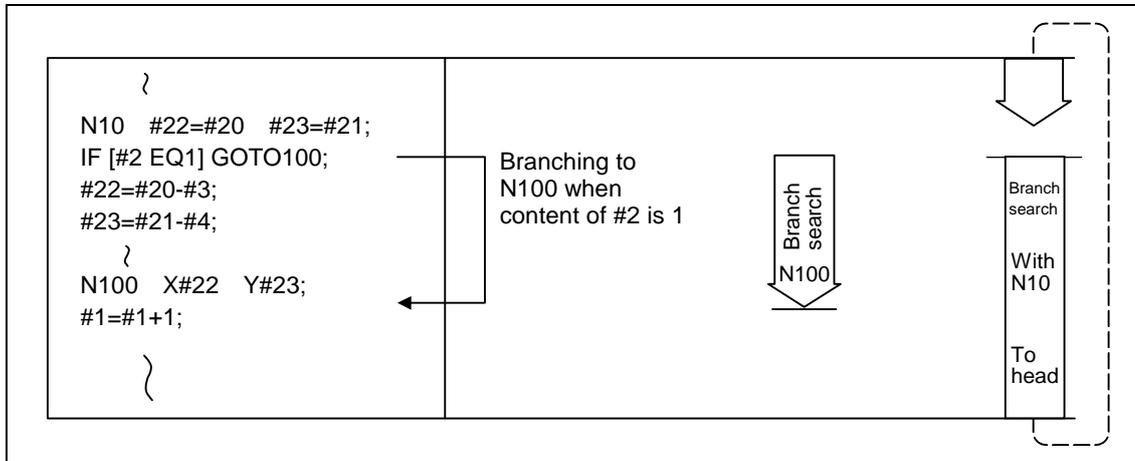

**(Note 1)** When the sequence number of the branch destination is searched, the search is conducted up to the end of the program (% code) from the block following IF.....; and if it is not found, it is then conducted from the top of the program to the block before IF.....;. Therefore, branch searches in the opposite direction to the program flow will take longer to execute compared with branch searches in the forward direction.

**(Note 2)** EQ and NE should be used only for integers. For comparison of numeric values with decimals, GE, GT, LE, and LT should be used.



### Iteration

Format

```









WHILE [conditional expression] DOm ; (m = 1, 2, 3 ..... 127)
    {
    END m ;
    
```

While the conditional expression is established, the blocks from the following block to ENDm are repeatedly executed; when it is not established, execution moves to the block after ENDm. DOm may come before WHILE, WHILE [conditional expression] DOm and ENDm must be used as a pair. IF WHILE [conditional expression] is omitted, these blocks will be repeatedly ad infinitum. The repeating identification numbers range from 1 through 127 (DO1, DO2, DO3, ..... DO127). Up to 27 nesting levels can be used.

<p>(1) Same identifier number can be used any number of times.</p> <p>Possible</p> <pre style="border: 1px solid black; padding: 5px; margin: 10px 0;">         WHILE ~ DO1 ;         {         END1 ;         </pre> <p>Possible</p> <pre style="border: 1px solid black; padding: 5px; margin: 10px 0;">         WHILE ~ DO1 ;         {         END1 ;         </pre>	<p>(2) Any number may be used for the WHILE –DOm identifier number.</p> <pre style="border: 1px solid black; padding: 5px; margin: 10px 0;">         WHILE ~ DO1 ;         {         END1 ;         }         WHILE ~ DO3 ;         {         END3 ;         }     </pre> <p>Possible</p> <pre style="border: 1px solid black; padding: 5px; margin: 10px 0;">         {         WHILE ~ DO2 ;         {         END2 ;         }         }         WHILE ~ DO1 ;         {         END1 ;         }     </pre>
<p>(3) Up to 27 nesting levels for WHILE– DOm. "m" is any number from 1 to 127 for the nesting depth.</p> <p>Possible</p> <p>(Note) :With nesting, "m" which has been used once cannot be used.</p>	<p>(4) The number of WHILE – DOm nesting levels cannot exceed 27.</p> <p>Not possible</p>


# 13. Program Support Functions

## 13.5 User macro specifications
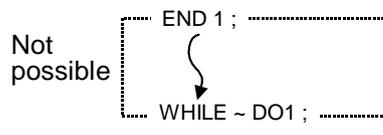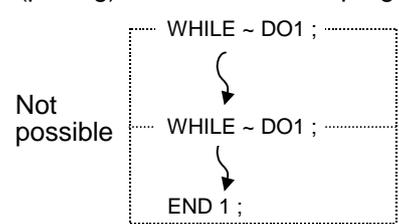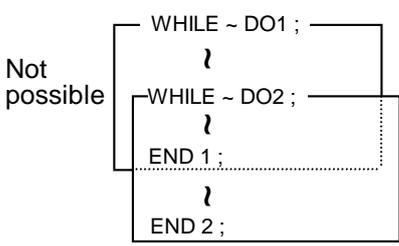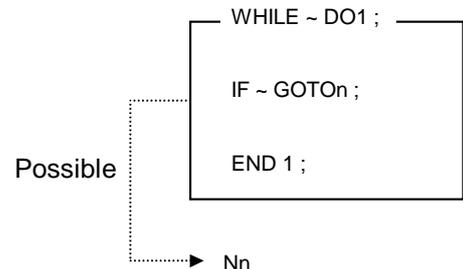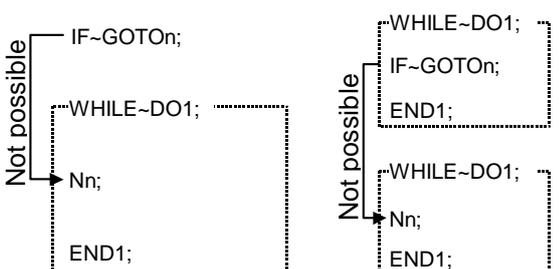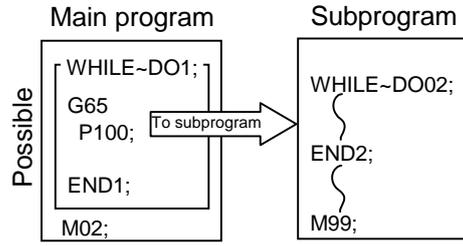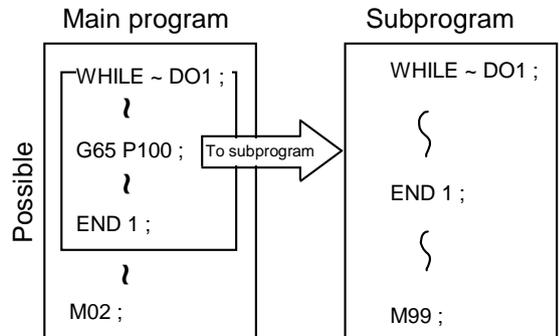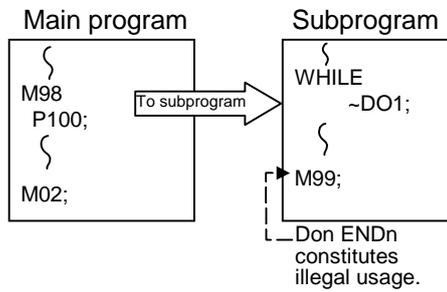
<p>(5) WHILE – DOn must be designated first and ENDM last.</p> 	<p>(6) WHILE – DOn and ENDM must correspond on a 1:1 (pairing) basis in the same program.</p> 
<p>(7) Two WHILE – DOn's must not overlap.</p> 	<p>(8) Branching externally is possible from the WHILE – DOn range.</p> 
<p>(9) No branching is possible inside WHILE – DOn.</p> 	<p>(10) Subprograms can be called by M98, G65 or G66 between WHILE – DOn's.</p> 
<p>(11) Calls can be initiated by G65 or G66 between WHILE – DOn's and commands can be issued again from 1. Up to 27 nesting levels are possible for the main program and subprograms.</p> 	<p>(12) A program error will occur at M99 if WHILE and END are not paired in the subprogram (including macro subprogram).</p> 

**(Note)** As the canned cycles G73 and G83 and the special canned cycle G34 use WHILE, these will be added multiple times.

### 13.5.7 External output commands

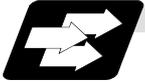

#### Function and purpose


Besides the standard user macro commands, the following macro instructions are also available as external output commands. They are designed to output the variable values or characters via the RS-232C interface.



#### Command format

<b>POPEN</b>	For preparing the processing of data outputs
<b>PCLOS</b>	For terminating the processing of data outputs
<b>BPRNT</b>	For character output and variable value binary output
<b>DPRNT</b>	For character output and digit-by-digit variable numerical output

#### Command sequence

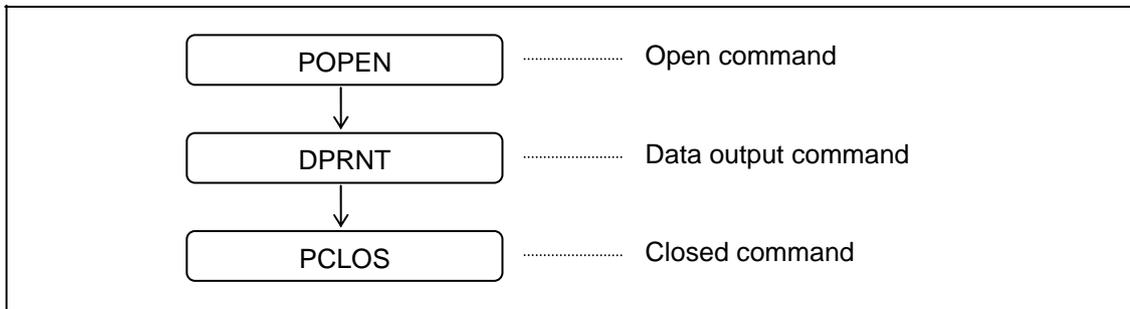

#### Open command : POPEN

- (1) The command is issued before the series of data output commands.
- (2) The DC2 control code and % code are output from the NC system to the external output device.
- (3) Once POPEN; has been issued, it will remain valid until PCLOS; is issued.



#### Close command : PCLOS

- (1) This command is issued when all the data outputs are completed.
- (2) The DC4 control code and % code are output from the NC unit to the external output device.
- (3) This command is used together with the open command and it should not be issued unless the open mode has been established.
- (4) Issue the close command at the end of the program even when operation has been suspended by resetting or some other operation during data output.



Data output command : DPRNT

**DPRNT [ /1 # v1 [ d1 c1 ] /2 # v2 [ d2 c2 ] ..... ]**

l1	: Character string	
v1	: Variable number	
d1	: Significant digits above decimal point	} c + d ≤ 8
c1	: Significant digits below decimal point	

- (1) The character output and decimal output of the variable values are done with ISO codes.
- (2) The commanded character string is output as is by the ISO code.  
Alphanumerics (A to Z, 0 to 9) and special characters (+, -, *, /) can be used.
- (3) The required significant digits above and below the decimal point in the variable values are commanded within square parentheses. As a result, the variable values equivalent to the commanded number of digits including the decimal point are output in ISO code in decimal notation from the high-order digits. Trailing zeroes are not omitted.
- (4) Leading zeroes are suppressed.  
The leading zeroes can also be replaced by blank if so specified with a parameter. This can justify printed data on the last column.

**(Note)** A data output command can be issued even in dual-system mode. In this case, however, note that the output channel is shared for both systems. So, take care not to execute data output in both systems simultaneously.

### 13.5.8 Precautions




#### Precautions

When the user macro commands are employed, it is possible to use the M, S, T and other NC control commands together with the arithmetic, decision, branching and other macro commands for preparing the machining programs. When the former commands are made into executable statements and the latter commands into macro statements, the macro statement processing should be accomplished as quickly as possible in order to minimize the machining time, because such processing is not directly related to machine control.

As a result, the parameter "#8101 macro single" can be set and the macro statements can be processed in parallel with the execution of the executable statement.

(The parameter can be set OFF during normal machining to process all the macro statements together or set ON during a program check to execute the macro statements block by block. This enables the setting to be made in accordance with the intended objective in mind.)

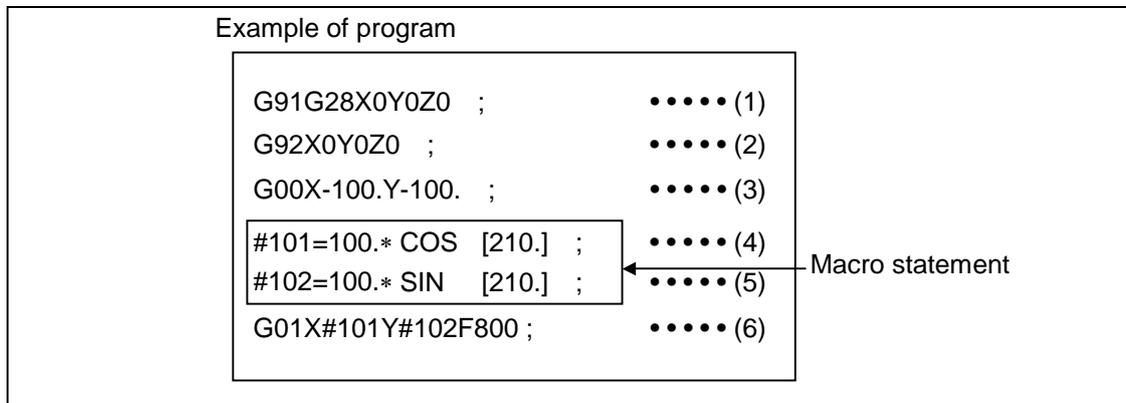


Macro statements are:

- (1) Arithmetic commands (block including =)
- (2) Control commands (block including GOTO, DO-END, etc.)
- (3) Macro call commands (including macro calls based on G codes and cancel commands (G65, G66, G66.1, G67))

Executable statements indicate statements other than macro statements.

Flow of processing

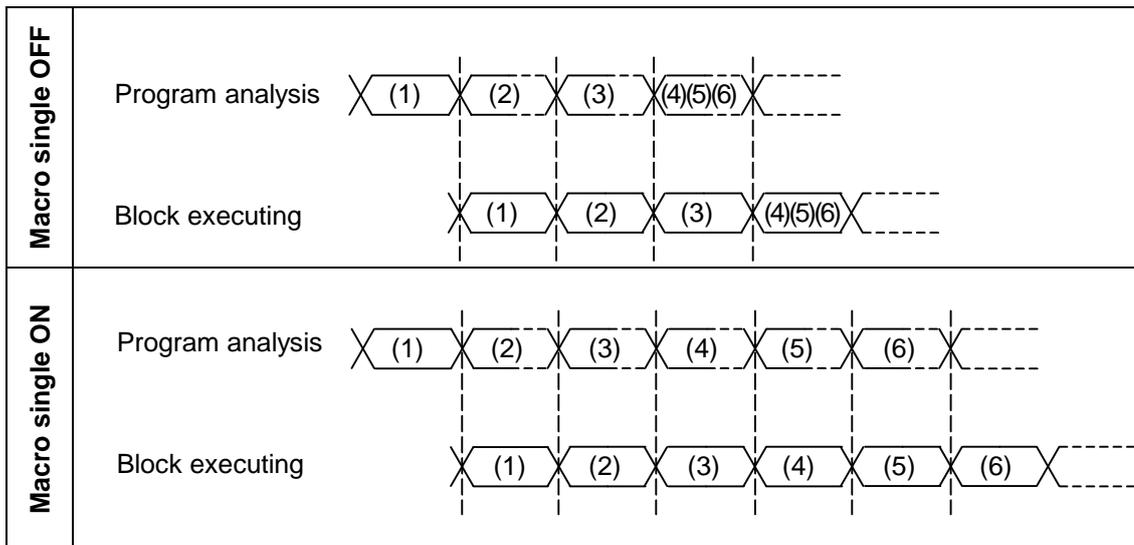

### Machining program display

<b>Macro single ON</b>	<p>[In execution] N3 G00 X-100. Y-100. ; [Next command]N6 G01 X#101 Y#102 F800 ;</p>	<p>N4, N5 and N6 are processed in parallel with the control of the executable statement of N3, N6 is an executable statement and so it is displayed as the next command. If the N4, N5 and N6 analysis is in time during N3 control, the machine movement will be continuously controlled.</p>
<b>Macro single OFF</b>	<p>[In execution] N3 G00 X-100. Y-100. ; [Next command] N4 #101=100. *COS [210.] ;</p>	<p>N4 is processed in parallel with the control of the NC executable statement of N3, and it is displayed as the next command. N5 and N6 is executed after N3 has finished, and so the machine control is held on standby during the N5 and N6 analysis time.</p>

### 13.5.9 Actual examples of using user macros



The following three examples will be described.

**(Example 1)** SIN curve

**(Example 2)** Bolt hole circle

**(Example 3)** Grid

#### (Example 1) SIN curve

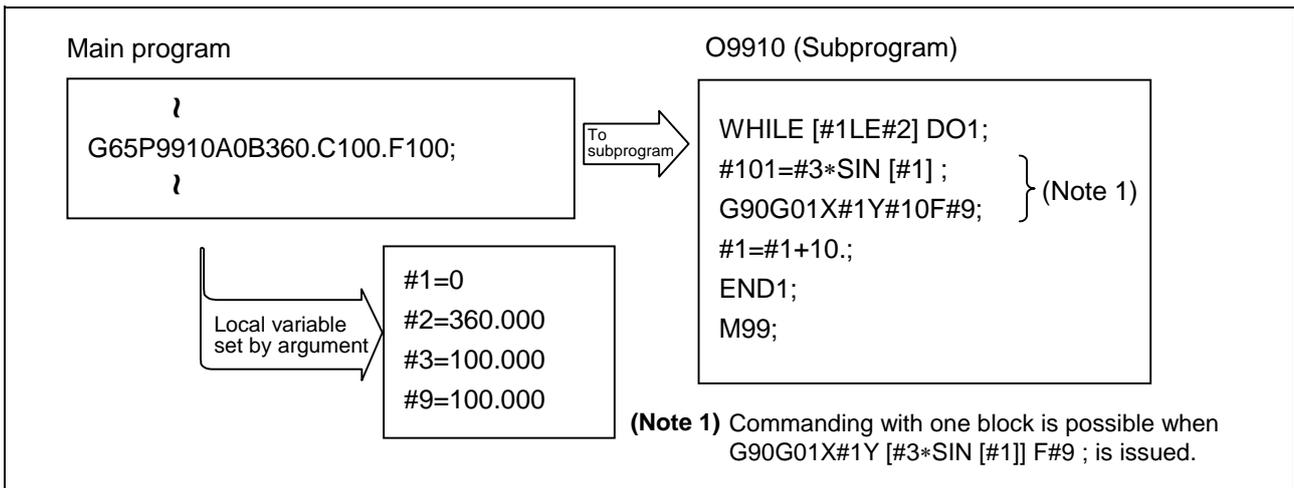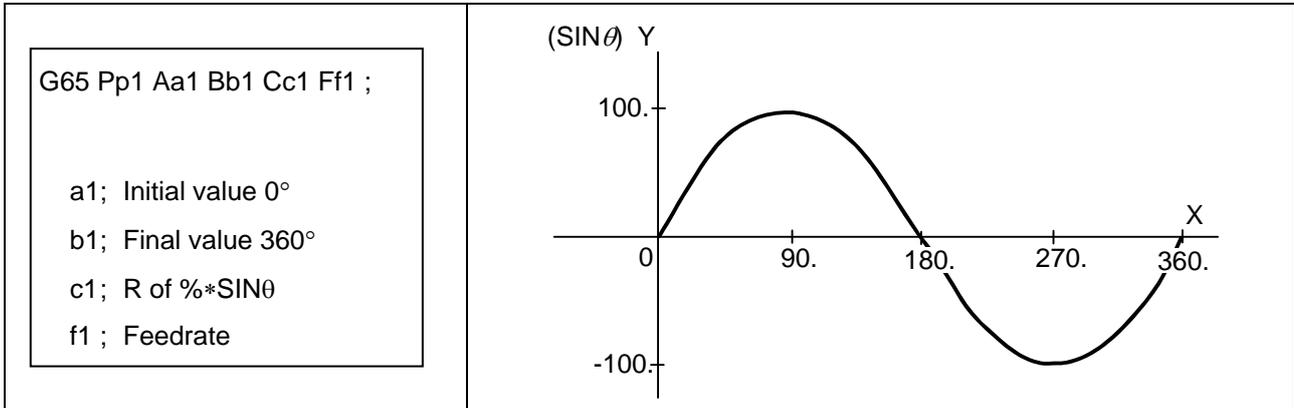


# 13. Program Support Functions

## 13.5 User macro specifications


### (Example 2) Bolt hole circle

After defining the hole data with canned cycle (G72 to G89), the macro command is issued as the hole position command.

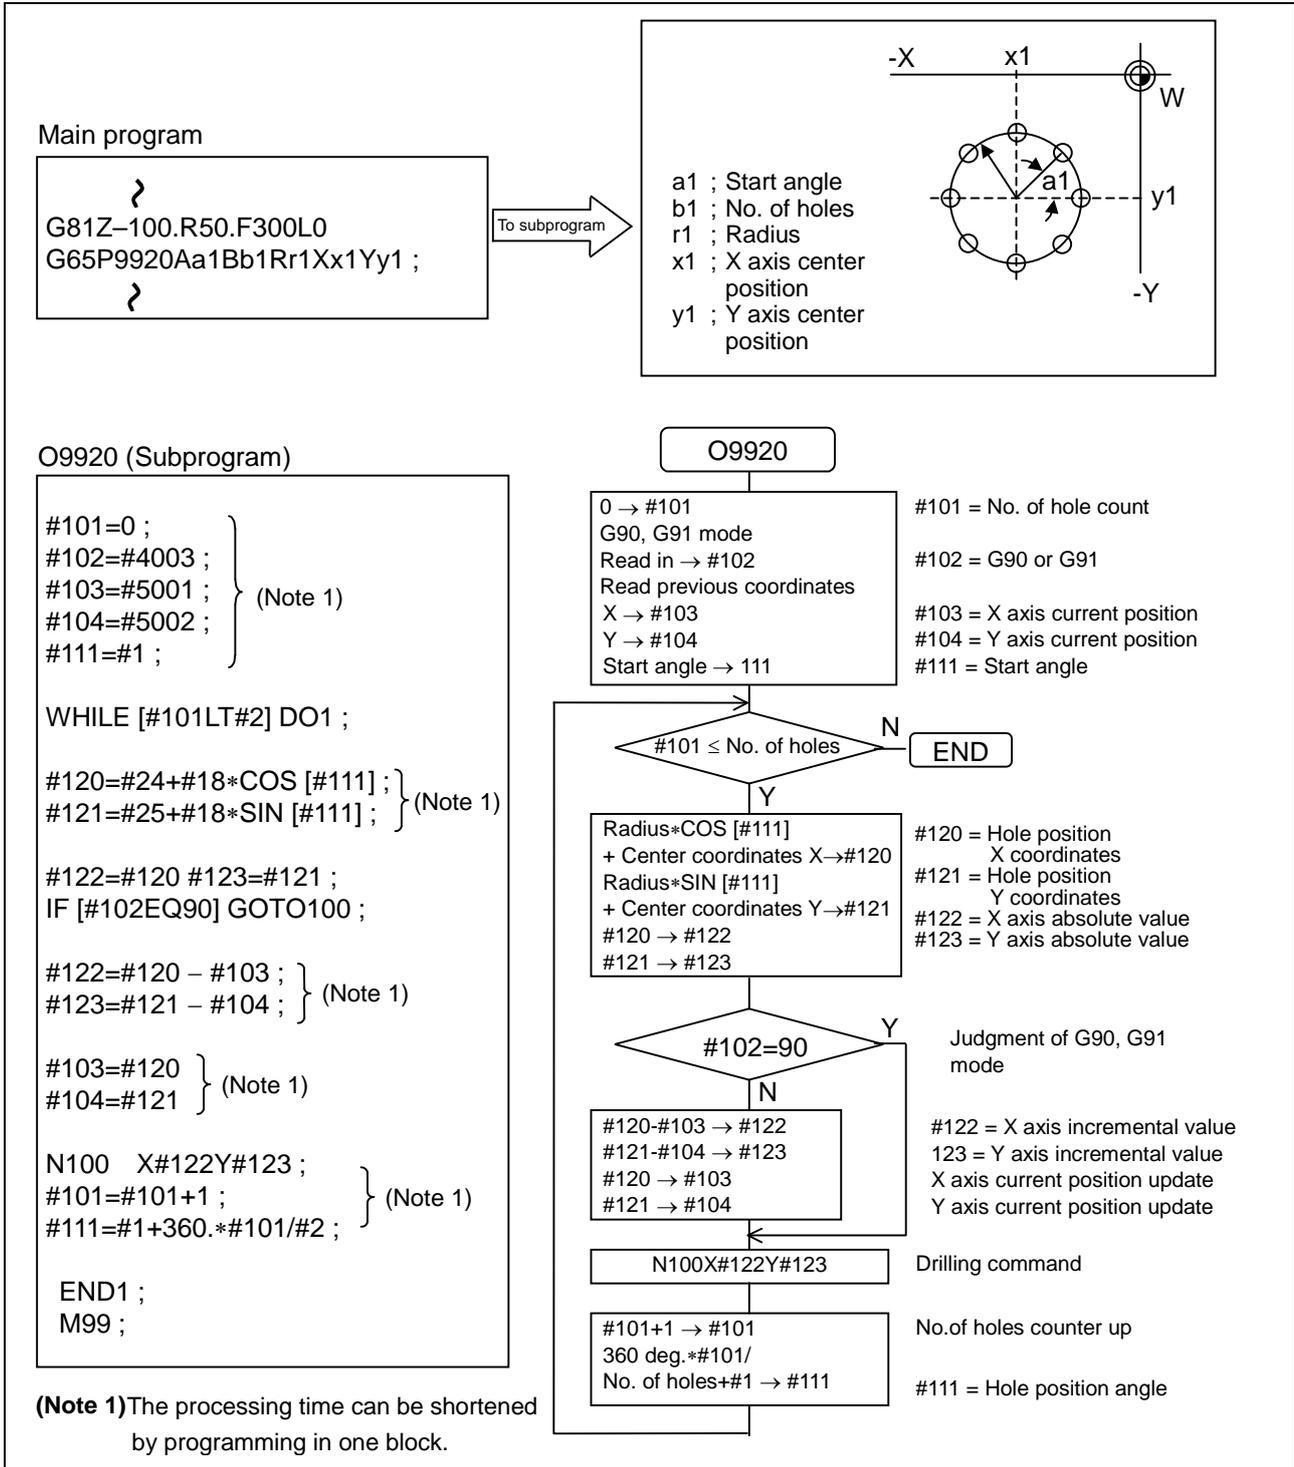



# 13. Program Support Functions

## 13.5 User macro specifications

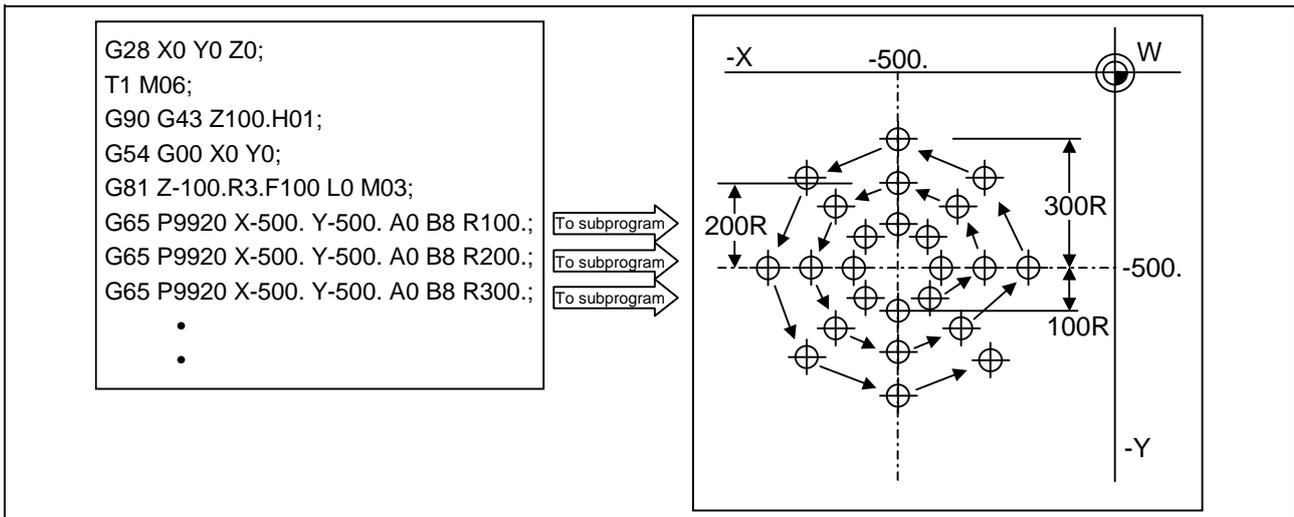

### (Example 3) Grid

After defining the hole data with the canned cycle (G72 to G89), macro call is commanded as a hole position command.

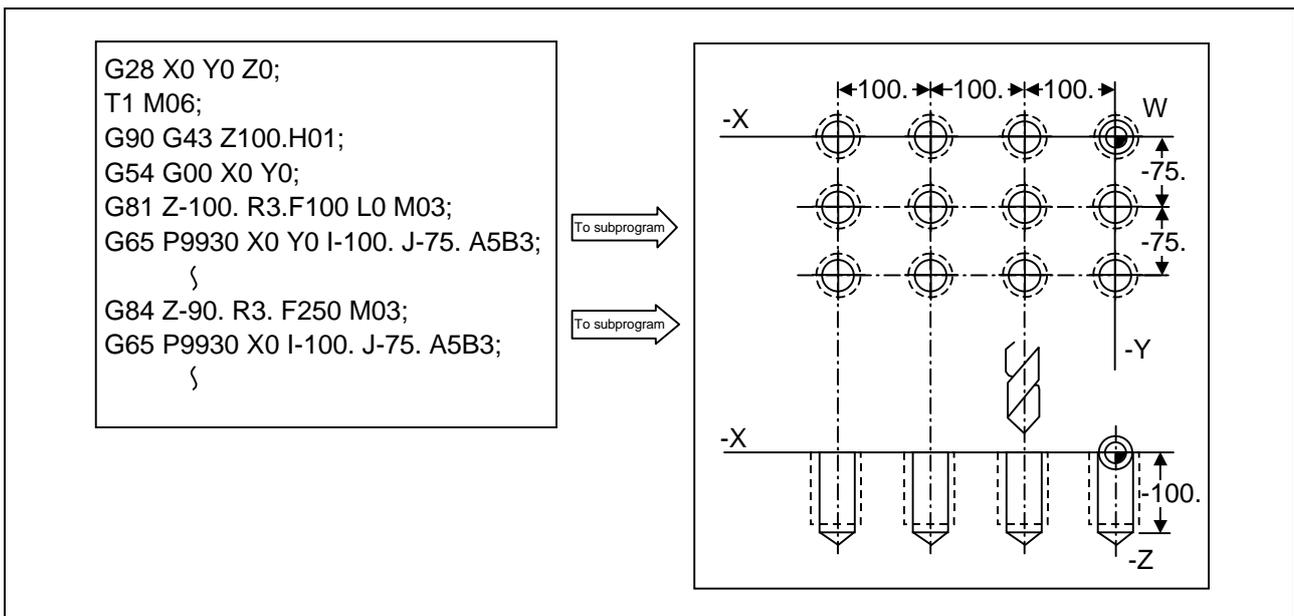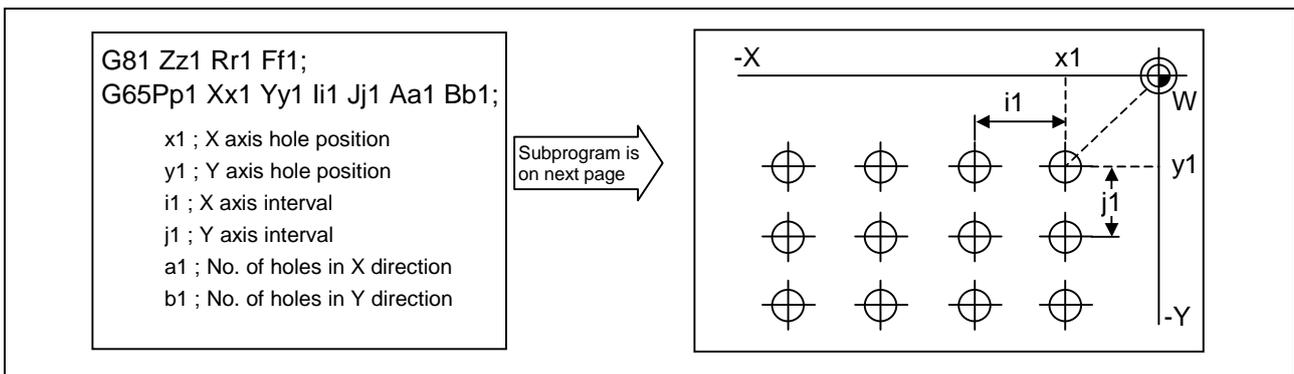

# 13. Program Support Functions

## 13.5 User macro specifications

O9930 (Subprogram)

O9930

```

#101=#24 ;
#102=#25 ;

#103=#4 ;
#104=#5 ;

#106=#2 ;

WHILE [#106GT0] DO1 ;

#105=#1 ;

WHILE [#105GT0] DO2 ;

G90 X#101 Y#102 ;

#101=#101+#103 ;
#105=#105-1 ;

END2 ;

#101=#101-#103 ;
#102=#102+#104 ;

#103=-#103 ;
#106=#106-1 ;


END1 ;

M99 ;
    
```

(Note 1)


(Note 1)

(Note 1)

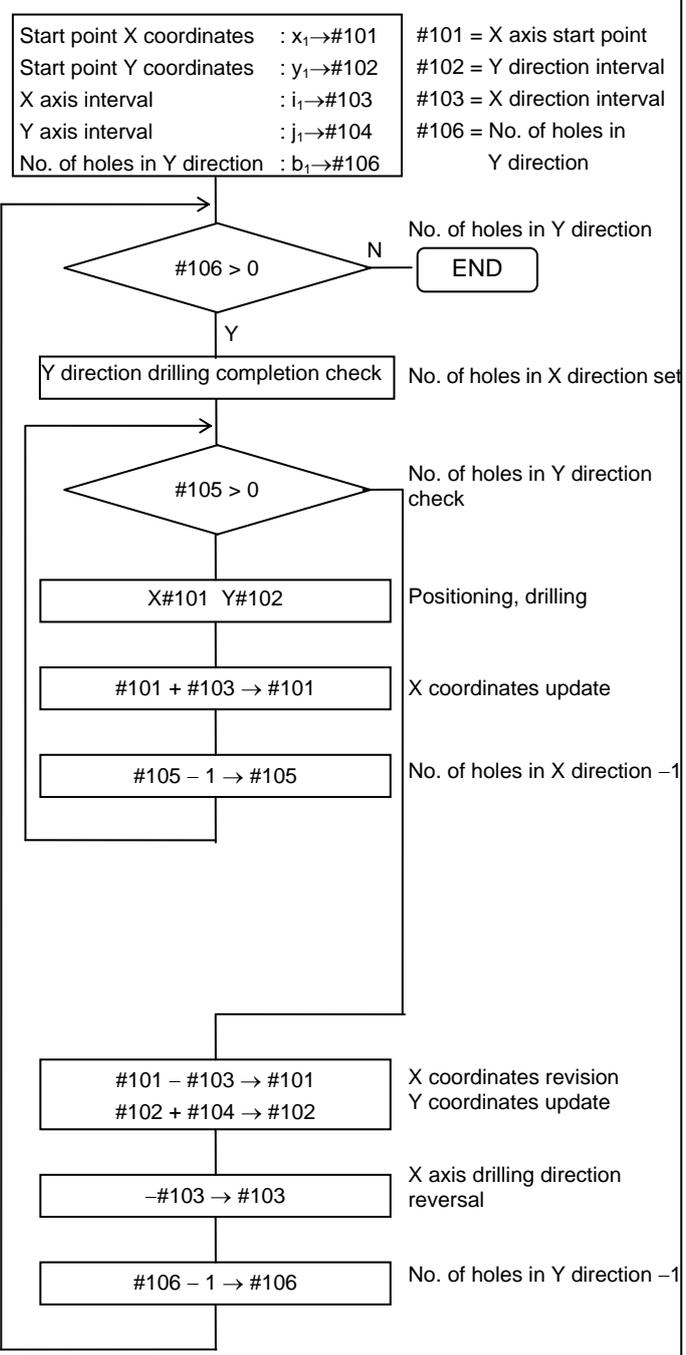

**(Note 1)** The processing time can be shortened by programming in one block.


## 13.6 G command mirror image; G50.1, G51.1

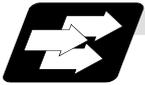

## Function and purpose

When cutting a shape that is symmetrical on the left and right, programming time can be shortened by machining the one side and then using the same program to machine the other side. The mirror image function is effective for this.

For example, when using a program as shown below to machine the shape on the left side, a symmetrical shape can be machined on the right side by applying mirror image and executing the program.

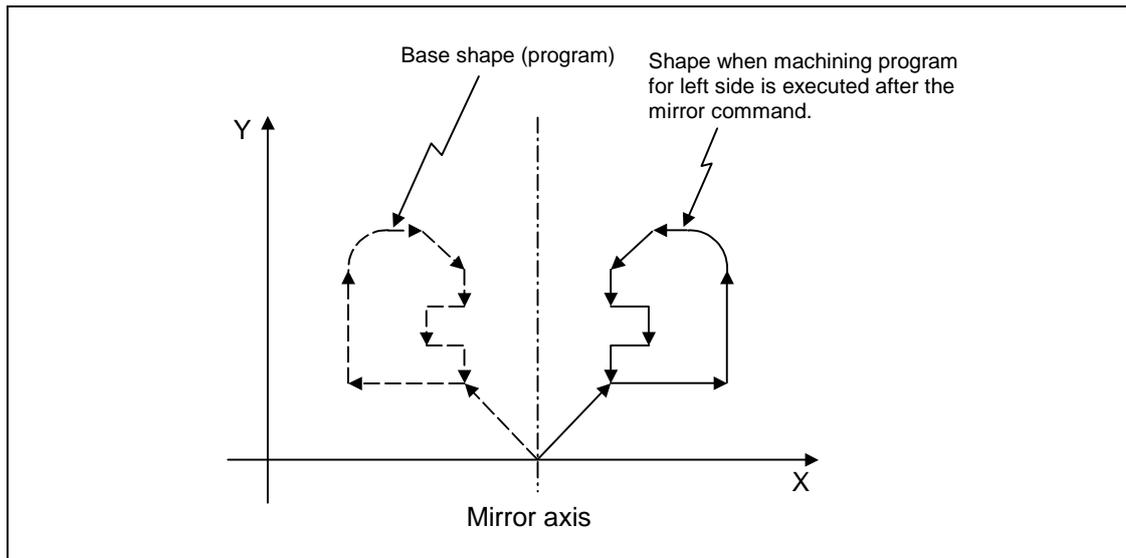

## Command format


<b>G51.1</b>	<b>Xx₁</b>	<b>Yy₁</b>	<b>Zz₁</b>	<b>;</b>	<b>(Mirror image ON)</b>
<b>G50.1</b>	<b>Xx₂</b>	<b>Yy₂</b>	<b>Zz₂</b>	<b>;</b>	<b>(Mirror image OFF)</b>
	Xx/Yy/Zz				: Mirror image command axis



## Detailed description

- (1) The coordinate word for G51.1 is commanded with the mirror image command axis, and the coordinate value commands the mirror image center coordinate with an absolute value or incremental value.
- (2) The coordinate word in G50.1 expresses the axis for which mirror image is to be turned OFF, and the coordinate value is ignored.
- (3) If mirror image is applied on only one axis in the designated plane, the rotation direction and compensation direction will be reversed for the arc or tool diameter compensation and coordinate rotation, etc.
- (4) This function is processed on the local coordinate system, so the center of the mirror image will change when the counter is preset or when the workpiece coordinates are changed.

- (5) Reference point return during mirror image  
 If the reference point return command (G28, G30) is executed during the mirror image, the mirror image will be valid during the movement to the intermediate point, but will not be applied on the movement to the reference point after the intermediate point.

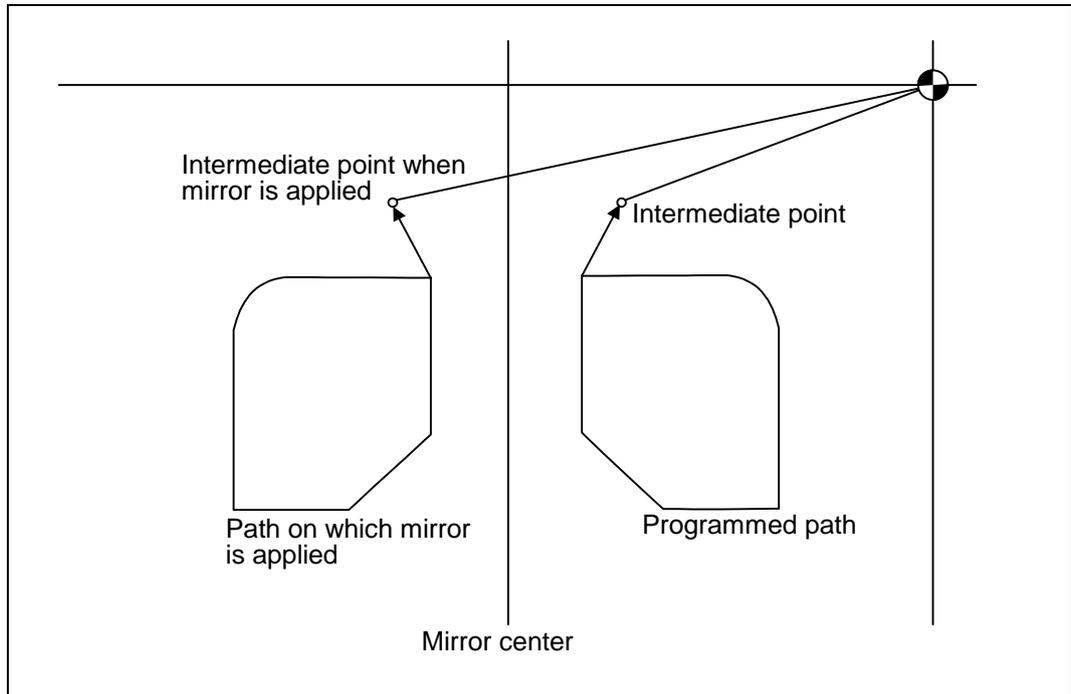

- (6) Return from zero point during mirror image  
 If the return command (G29) from the zero point is commanded during the mirror image, the mirror will be applied on the intermediate point.
- (7) The mirror image will not be applied on the G53 command.




### Precautions

#### ⚠ CAUTION

⚠ Turn the mirror image ON and OFF at the mirror image center.

If mirror image is canceled at a point other than the mirror center, the absolute value and machine position will deviate as shown below. (In this state, execute the absolute value command (positioning with G90 mode), or execute reference point return with G28 or G30 to continue the operation.) The mirror center is set with an absolute value, so if the mirror center is commanded again in this state, the center may be set to an unpredictable position.


Cancel the mirror at the mirror center or position with the absolute value command after canceling.

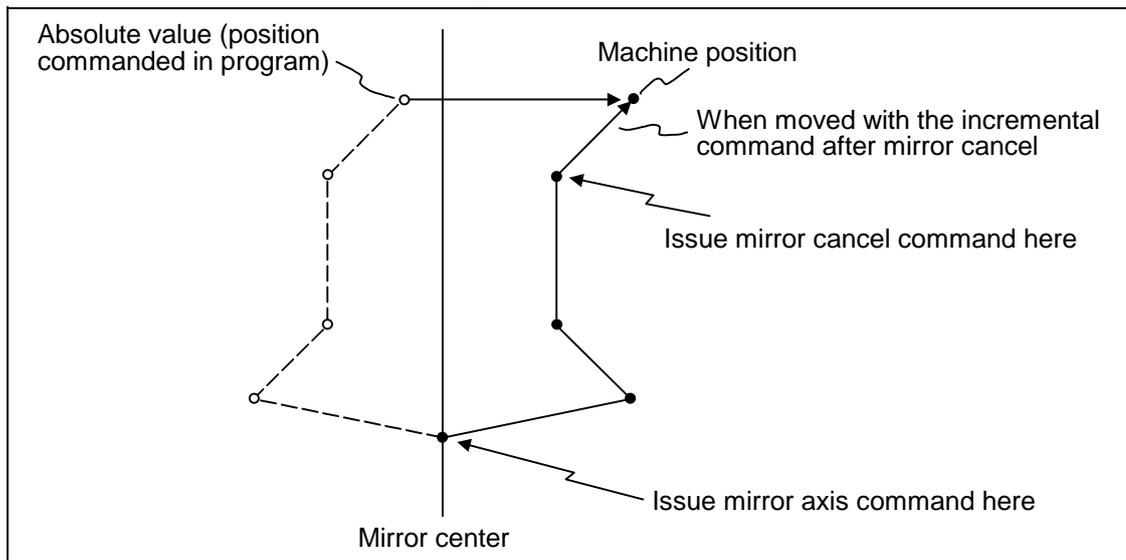

### Combination with other functions

#### (1) Combination with diameter compensation

The mirror image (G51.1) will be processed after the diameter compensation (G41, G42) is applied, so the following type of cutting will take place.

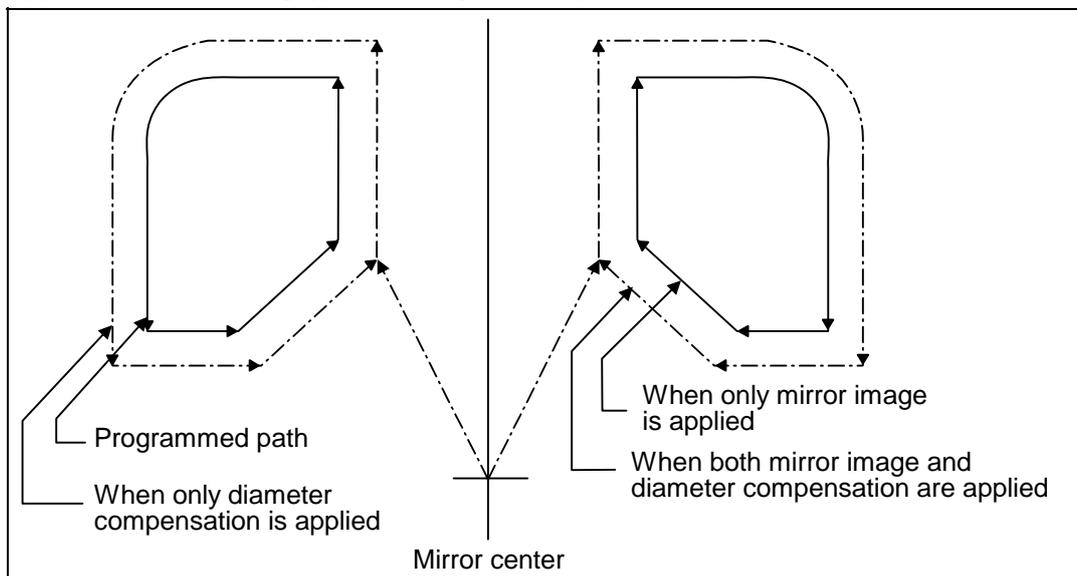

## 13. Program Support Functions

### 13.7 Corner chamfering, corner rounding

#### 13.7 Corner chamfering, corner rounding

Chamfering at any angle or corner rounding is performed automatically by adding “,C_” or “,R_” to the end of the block to be commanded first among those command blocks which shape the corner with lines only.

##### 13.7.1 Corner chamfering “,C_”



#### Function and purpose

The corner is chamfered in such a way that the positions produced by subtracting the lengths commanded by “,C_” from the imaginary starting and final corners which would apply if no chamfering were to be performed, are connected.



#### Command format

```
N100 G01 X_ Y_ ,C_ ;
```

```
N200 G01 X_ Y_ ;
```

,C_ : Length up to chamfering starting point or end point from imaginary corner


Chamfering is performed at the point where N100 and N200 intersect.



#### Example of program

```
(1) G91 G01 X100., C10. ;
```

```
(2) X100. Y100. ;
```

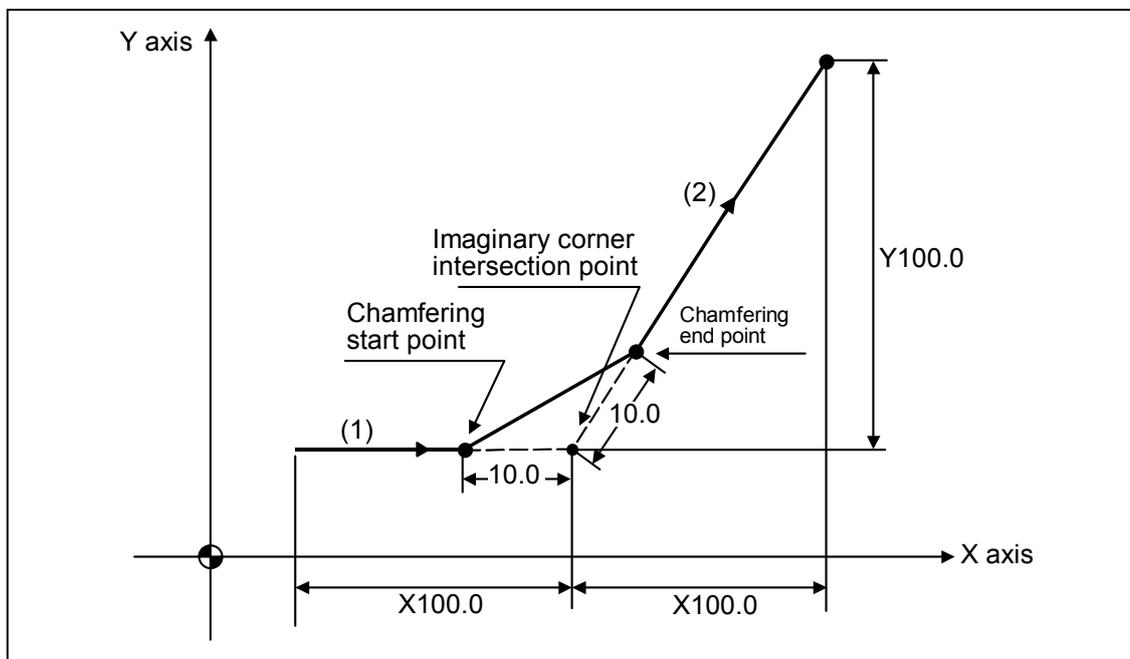

## 13. Program Support Functions

### 13.7 Corner chamfering, corner rounding




#### Detailed description

- (1) The start point of the block following the corner chamfering serves as the imaginary corner intersection point.
- (2) When the comma in ",C" is not present, it is handled as a C command.
- (3) When both the corner chamfer and corner rounding commands exist in the same block, the latter command is valid.
- (4) Tool offset is calculated for the shape which has already been subjected to corner chamfering.
- (5) When scaling is commanded, scaling will also be applied to the commanded corner chamfer amount.
- (6) Program error (P381) results when there is an arc command in the block following the corner chamfering block.
- (7) Program error (P382) results when the block following the corner chamfering block does not have a linear command.
- (8) Program error (P383) results when the movement amount in the corner chamfering block is less than the chamfering amount.
- (9) Program error (P384) results when the movement amount in the block following the corner chamfering block is less than the chamfering amount.

## 13. Program Support Functions

### 13.7 Corner chamfering, corner rounding

#### 13.7.2 Corner rounding ",R_"

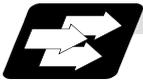

##### Function and purpose

The imaginary corner, which would exist if the corner were not to be rounded, is rounded with the arc having the radius which is commanded by ",R_" only when configured of linear lines.



##### Command format

```
N100 G01 X_ Y_ , R_ ;
```

```
N200 G02 X_ Y_ ;
```

,R_ : Arc radius of corner rounding


Corner rounding is performed at the point where N100 and N200 intersect.



##### Example of program

```
(1) G91 G01 X100., R10. ;
```


```
(2) X100. Y100. ;
```

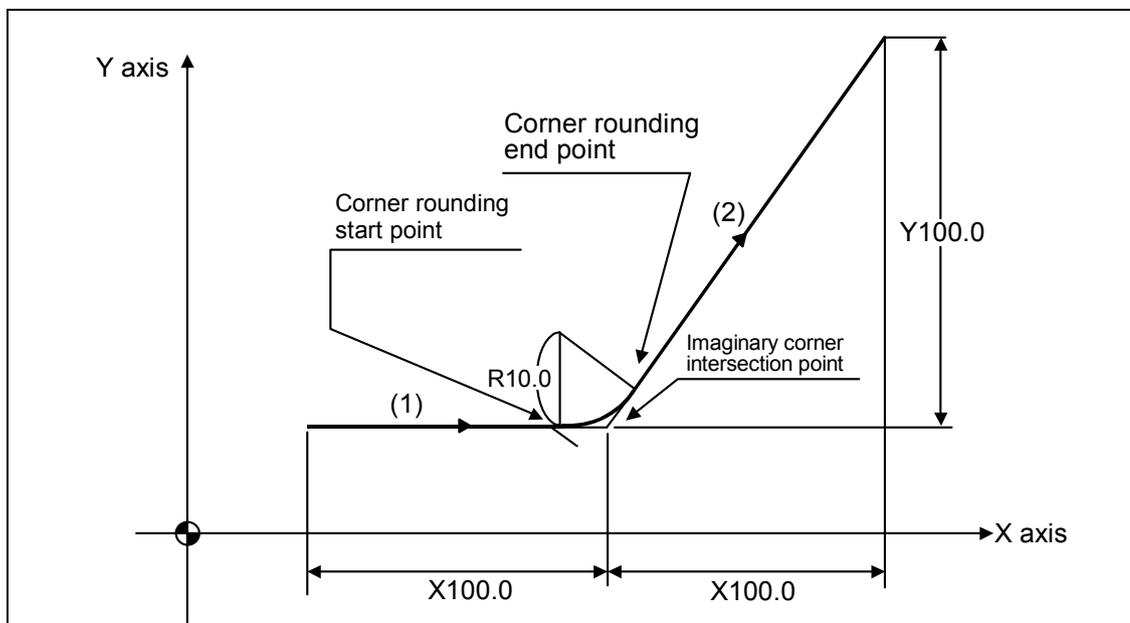

##### Detailed description

- (1) The start point of the block following the corner R serves as the imaginary corner intersection point.
- (2) When the comma in ",R" is not present, it is handled as an R command.
- (3) When both the corner chamfer and corner rounding commands exist in the same block, the latter command is valid.
- (4) Tool offset is calculated for the shape which has already been subjected to corner rounding.
- (5) Program error (P381) results when there is an arc command in the block following the corner rounding block.
- (6) Program error (P382) results when the block following the corner rounding block does not have a linear command.
- (7) Program error (P383) results when the movement amount in the corner rounding block is less than the R value.
- (8) Program error (P384) results when the movement amount in the block following the corner rounding block is less than the R value.

## 13.8 Linear angle command

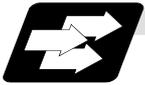

## Function and purpose

The end point coordinates are calculated automatically by commanding the linear angle and one of the end point coordinate axes.




## Command format

**N1 G01 Xx₁ (Yy₁) Aa₁;**  
**N1 G01 Xx₂ (Yy₂) A-a₂; (A-a₂ can also be set as As₃.)**  
 or  
**N1 G01 Xx₁ (Yy₁) ,Aa₁;**  
**N1 G01 Xx₂ (Yy₂) ,A-a₂;**

This designates the angle and the X or Y axis coordinates.

Select the command plane with G17 to G19.

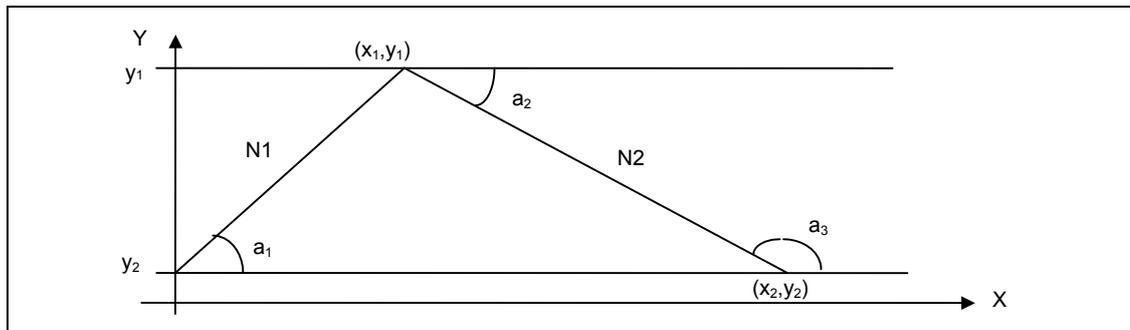


**Detailed description**

- (1) The angle is from the + direction of the horizontal axis on the selected plane. The counter-clockwise (CCW) direction is considered to be + and the clockwise direction (CW) –.
- (2) Either of the axes on the selected plane is commanded for the end point.
- (3) The angle is ignored when the angle and the coordinates of both axes are commanded.
- (4) When only the angle has been commanded, this is treated as a geometric command.
- (5) The angle of either the start point ( $a_1$ ) or end point ( $a_2$ ) may be used.
- (6) This function is valid only for the G01 command; it is not valid for other interpolation or positioning commands.
- (7) The range of slope "a" is  $-360.000 \leq a \leq 360.000$ .  
When a value outside this range is commanded, it will be divided by 360 (degrees) and the remainder will be commanded.  
**(Example)** If 400 is commanded,  $40^\circ$  (remainder of  $400/360$ ) will become the command angle.
- (8) If address A is used for the axis name or 2nd miscellaneous function, use ",A" as the angle.
- (9) If "A" and ",A" are commanded in the same block, ",A" will be interpreted as the angle.

**Restrictions**

A program error (P33) will occur if this function is commanded during the high-speed machining mode III or high-speed high-accuracy II mode.

### 13.9 Circle cutting; G12, G13

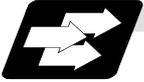

#### Function and purpose

Circle cutting starts the tool from the center of the circle, and cuts the inner circumference of the circle. The tool continues cutting while drawing a circle and returns to the center position.




#### Command format

<b>G12 (G13)</b>	<b>I₁ D_{d1} F_{f1} ;</b>
G12	: Clockwise (CW)
G13	: Counterclockwise (CCW)
I	: Radius of circle (incremental value), the symbol is ignored
D	: Offset No. (The offset No. and offset data are not displayed on the setting and display unit.)
F	: Feedrate



#### Detailed description


- (1) The symbol + for the offset amount indicates reduction, and – indicates enlargement.
- (2) The circle cutting is executed on the plane G17, G18 or G19 currently selected.

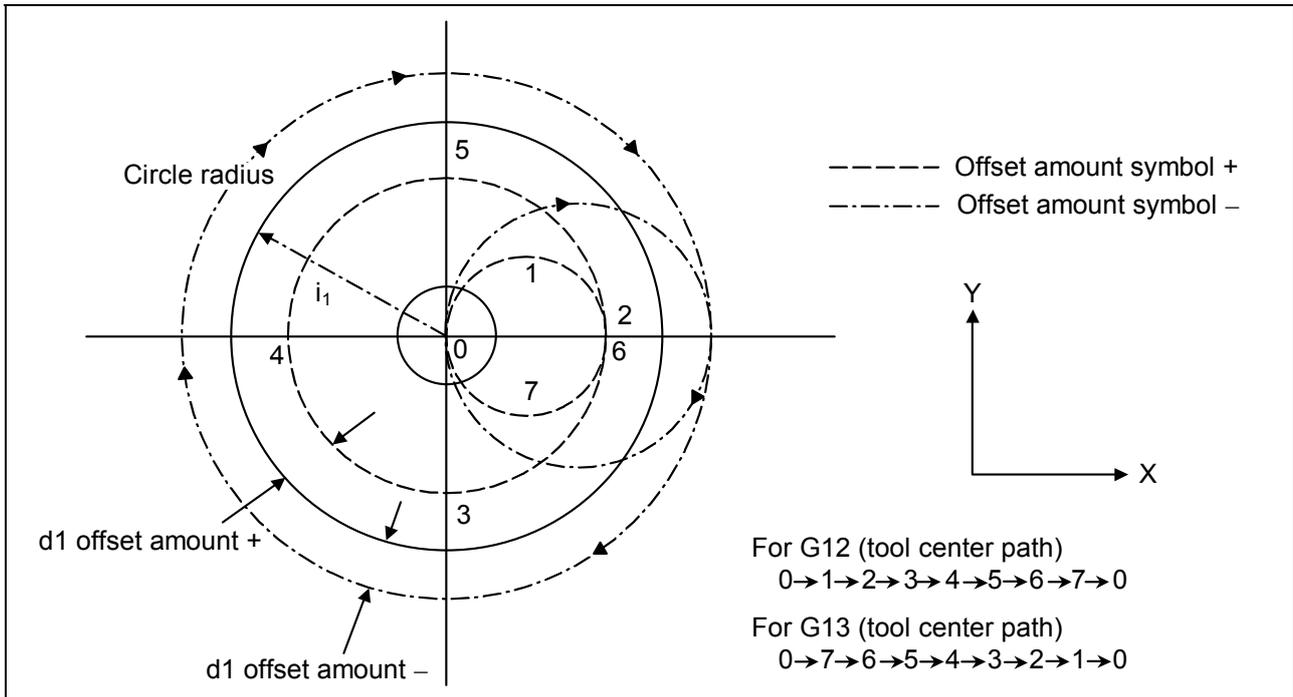



## Example of program


(Example 1) G12 I5000 D01 F100 ; (Input setting unit 0.01)  
When offset amount is +10.00mm

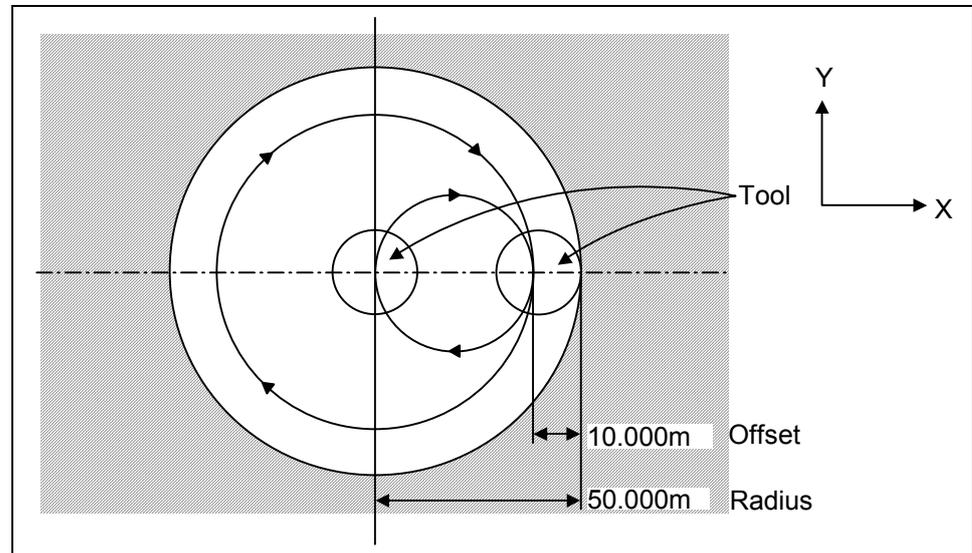

## Precautions

- (1) If the offset No. "D" is not issued or if the offset No. is illegal, the program error (P170) will occur.
- (2) If [Radius (I) = offset amount] is 0 or negative, the program error (P233) will occur.
- (3) If G12 or G13 is commanded during diameter compensation (G41, G42), the diameter compensation will be validated on the path after compensating with the D commanded with G12 or G13.
- (4) If an address, not included in the format, is commanded in the same block as G12 and G13, a program error (P32) will occur.

### 13.10 Program parameter input; G10, G11

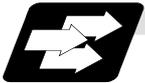

#### Function and purpose

The parameters set from the setting and display unit can be changed in the machining programs. The data format used for the data setting is as follows.



#### Command format

**G10 L50 ; Data setting command**  
**P major classification number N data number H□ bit type data ;**  
**P major classification number A axis number N data number**  
**D byte type data ;**  
**P major classification number A axis number N data number S word type data ;**  
**P major classification number A axis number N data number L 2 word type data ;**

**G11 ; Data setting mode cancel (data setting completed)**

There are 8 types of data formats according to the type of parameter (axis-common and axis-independent) and data type, as listed below.

With axis-common data	
Axis-common bit-type parameter .....	P__ N__ H□_____ ;
Axis-common byte-type parameter .....	P__ N__ D_____ ;
Axis-common word-type parameter .....	P__ N__ S_____ ;
Axis-common 2-word-type parameter .....	P__ N__ L_____ ;
With axis-independent data	
Axis-independent bit-type parameter .....	P__ A__ N__ H□_____ ;
Axis-independent byte-type parameter .....	P__ A__ N__ D_____ ;
Axis-independent word-type parameter .....	P__ A__ N__ S_____ ;
Axis-independent 2-word-type parameter .....	P__ A__ N__ L_____ ;

**(Note 1)** The sequence of addresses in a block must be as shown above.

**(Note 2)** Refer to Appendix Table 1 for the P, N number correspondence table.

**(Note 3)** For a bit type parameter, the data type will be H□ (□ is a value between 0 and 7).

**(Note 4)** The axis number is set in the following manner: 1st axis is 1, 2nd axis is 2, and so forth. When using two systems, the 1st axis in each system is set as 1, the second axis is set as 2, and so forth.

**(Note 5)** Command G10L50, G11 in independent blocks. A program error (P33, P421) will occur if not commanded in independent blocks.




#### Example of program

**(Example)** To turn ON bit 2 of bit selection #6401

```
G10 L50 ;
P8 N1 H21 ;
G11 ;
```

### 13.11 Macro interrupt; M96, M97

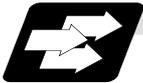

#### Function and purpose

A user macro interrupt signal (UIT) is input from the machine to interrupt the program being currently executed and instead call another program and execute it. This is called the user macro interrupt function.

Use of this function allows the program to operate flexibly enough to meet varying conditions. For setting the parameters of the function, refer to the Operation manual and the machine parameters in Appendix 1.



#### Command format

<b>M96 P__ H__ ;</b>	<b>User macro interrupt enable</b>
<b>M97 ;</b>	<b>User macro interrupt disable</b>
P	:Interrupt program number
H	:Interrupt sequence number

The user macro interrupt function is enabled and disabled by the M96 and M97 commands programmed to make the user macro interrupt signal (UIT) valid or invalid. That is, if an interrupt signal (UIT) is input from the machine side in a user macro interrupt enable period from when M96 is issued to when M97 is issued or the NC is reset, a user macro interrupt is caused to execute the program specified by P__ instead of the one being executed currently.

Another interrupt signal (UIT) is ignored while one user macro interrupt is being in service. It is also ignored in a user macro interrupt disable state such as after an M97 command is issued or the system is reset.

M96 and M97 are processed internally as user macro interrupt control M codes.



#### Interrupt enable conditions

A user macro interrupt is enabled only during execution of a program. The requirements for the user macro interrupt are as follows :


- (1) An automatic operation mode, memory or tape, or MDI has been selected.
- (2) The system is running in automatic mode.
- (3) No other macro interrupt is being processed.

**(Note 1)** A macro interrupt is disabled in manual operation mode (JOG, STEP, HANDLE, etc.)



### Outline of operation

- (1) When a user macro interrupt signal (UIT) is input after an M96Pp1 ; command is issued by the current program, interrupt program Op1 is executed. When an M99 ; command is issued by the interrupt program, control returns to the main program.
- (2) If M99Pp2 ; is specified, the blocks from the one next to the interrupted block to the last one are searched for the block with sequence number Np2 ;. Control thus returns to the block with sequence number Np2 that is found first in the above search.

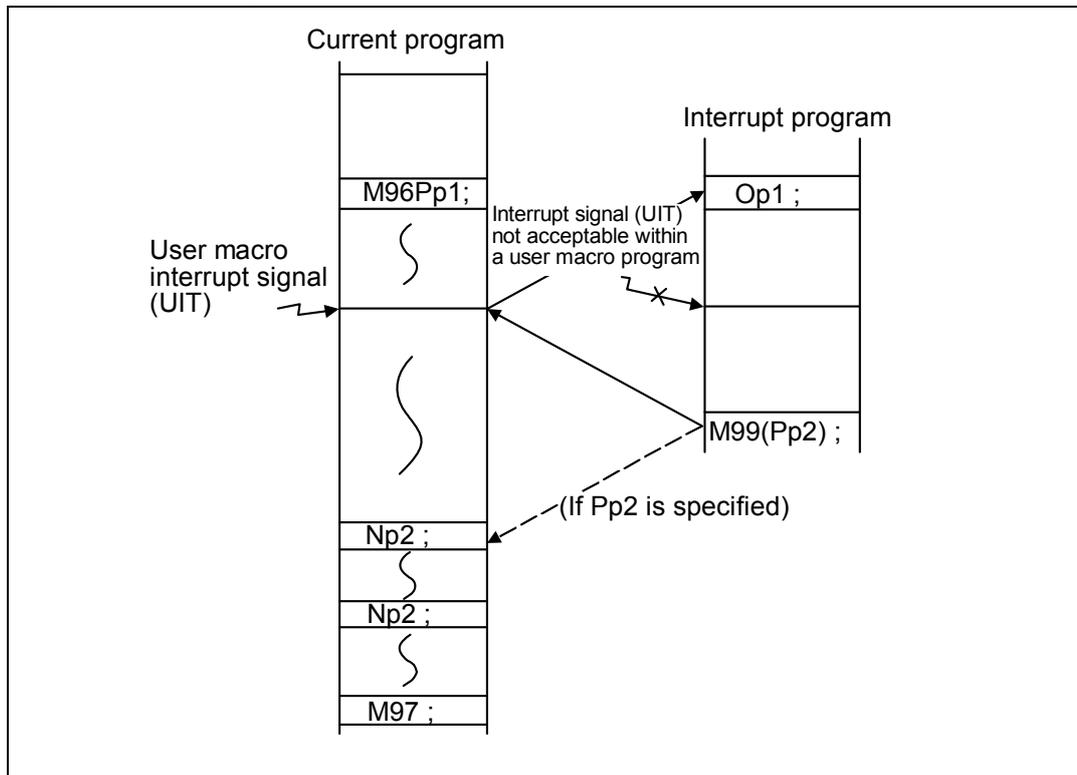



#### Interrupt type

Interrupt types 1 and 2 can be selected by the parameter "#1113 INT_2".

##### [Type 1]

- When an interrupt signal (UIT) is input, the system immediately stops moving the tool and interrupts dwell, then permits the interrupt program to run.
- If the interrupt program contains a move or miscellaneous function (MSTB) command, the commands in the interrupted block are lost. After the interrupt program completes, the main program resumes operation from the block next to the interrupted one.
- If the interrupted program contains no move and miscellaneous (MSTB) commands, it resumes operation, after completion of the interrupt program, from the point in the block where the interrupt was caused.


If an interrupt signal (UIT) is input during execution of a miscellaneous function (MSTB) command, the NC system waits for a completion signal (FIN). The system thus executes a move or miscellaneous function command (MSTB) in the interrupt program only after input of FIN.

##### [Type 2]


- When an interrupt signal (UIT) is input, the program completes the commands in the current block, then transfers control to the interrupt program.
- If the interrupt program contains no move and miscellaneous function (MSTB) commands, the interrupt program is executed without interrupting execution of the current block.

However, if the interrupt program has not ended even after the execution of the original block is completed, the system may stop machining temporarily.

[Type 1]

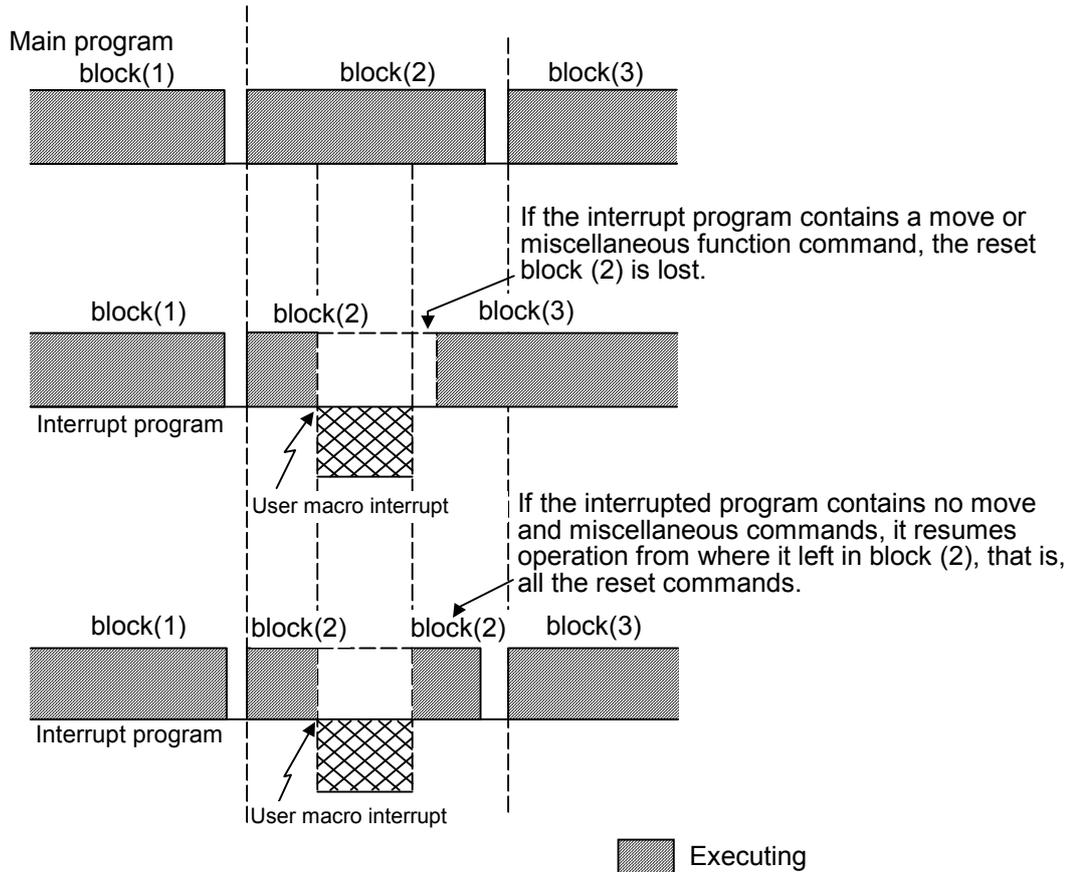

[Type 2]

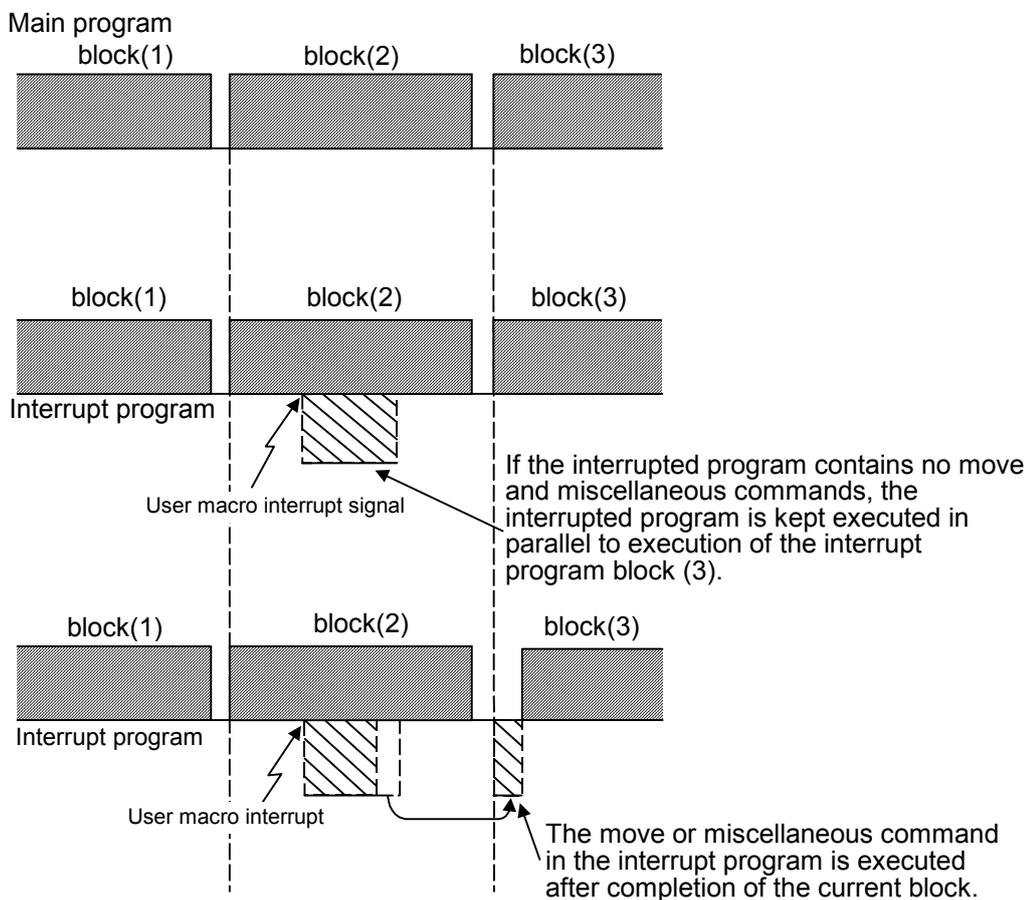



### Calling method

User macro interrupt is classified into the following two types depending on the way an interrupt program is called. These two types of interrupt are selected by parameter "#1229 set01/bit0". Both types of interrupt are included in calculation of the nest level. The subprograms and user macros called in the interrupt program are also included in calculation of the nest level.

- a. Subprogram type interrupt
- b. Macro type interrupt

Subprogram type interrupt	The user macro interrupt program is called as a subprogram. As with calling by M98, the local variable level remains unchanged before and after an interrupt.
Macro type interrupt	The user macro interrupt program is called as a user macro. As with calling by G65, the local variable level changes before and after an interrupt. No arguments in the main program can be passed to the interrupt program.




### Acceptance of user macro interrupt signal (UIT)

A user macro interrupt signal (UIT) is accepted in the following two modes: These two modes are selected by a parameter "#1112 S_TRG".

- a. Status trigger mode
- b. Edge trigger mode

Status trigger mode	The user macro interrupt signal (UIT) is accepted as valid when it is on. If the interrupt signal (UIT) is ON when the user macro interrupt function is enabled by M96, the interrupt program is activated. By keeping the interrupt signal (UIT) ON, the interrupt program can be executed repeatedly.
Edge trigger mode	The user macro interrupt signal (UIT) is accepted as valid at its rising edge, that is, at the instance it turns on. This mode is useful to execute an interrupt program once.

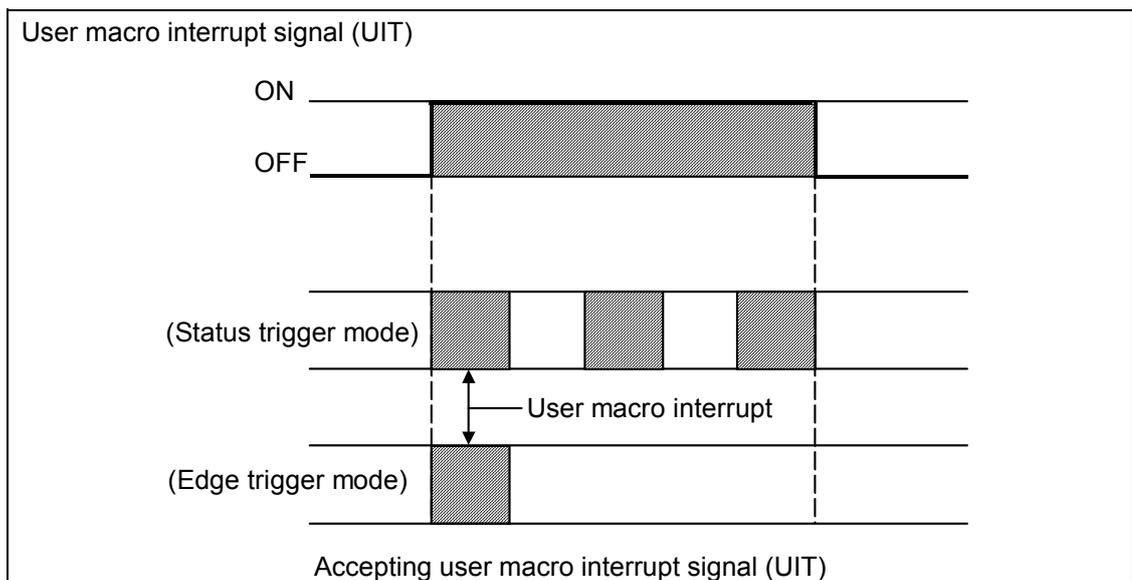



#### Returning from user macro interrupt

M99 (P__);

An M99 command is issued in the interrupt program to return to the main program. Address P is used to specify the sequence number of the return destination in the main program. The blocks from the one next to the interrupted block to the last one in the main program are first searched for the block with sequence number Np2;. If it is not found, all the blocks before the interrupted one are then searched. Control thus returns to the block with sequence number Np2; that is found first in the above search.


(This is equivalent to M99P__ used after M98 calling.)




### Modal information affected by user macro interrupt

If modal information is changed by the interrupt program, it is handled as follows after control returns from the interrupt program to the main program.

Returning with M99;	The change of modal information by the interrupt program is invalidated and the original modal information is not restored. With interrupt type 1, however, if the interrupt program contains a move or miscellaneous function (MSTB) command, the original modal information is not restored.
Returning with M99P__;	The original modal information is updated by the change in the interrupt program even after returning to the main program. This is the same as in returning with M99P__; from a program called by M98.

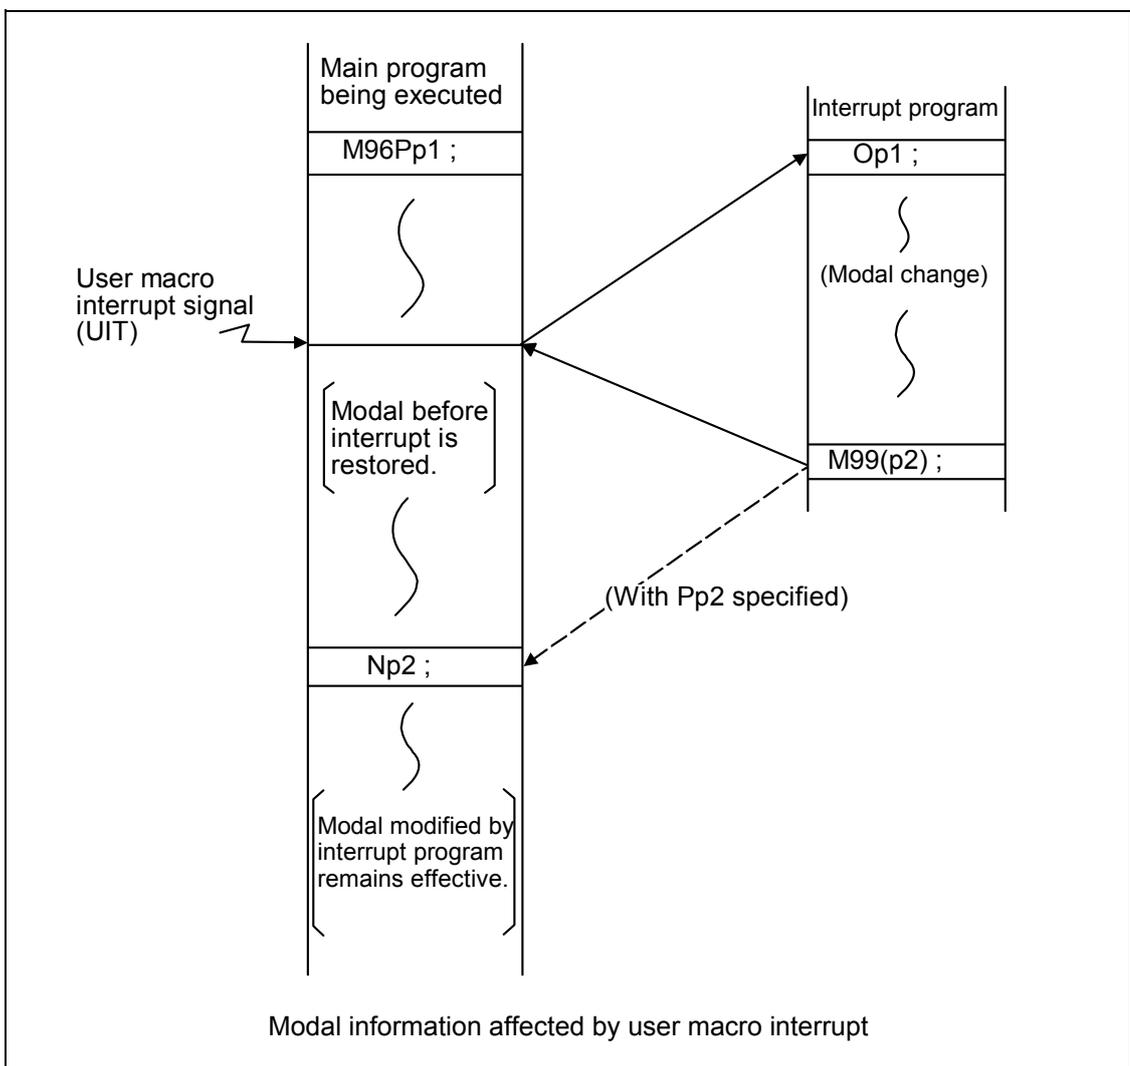

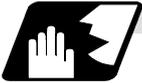**Modal information variables (#4401 to #4520)**

Modal information when control passes to the user macro interrupt program can be known by reading system variables #4401 to #4520.

The unit specified with a command applies.

System variable	Modal information
#4401 to #4421	G code (group 01 to group 21)
#4507	D code
#4509	F code
#4511	H code
#4513	M code
#4514	Sequence number
#4515	Program number
#4519	S code
#4520	T code

} Some groups are not used.

The above system variables are available only in the user macro interrupt program. If they are used in other programs, program error (P241) results.

**M code for control of user macro interrupt**

The user macro interrupt is controlled by M96 and M97. However, these commands may have been used for other operation. To be prepared for such case, these command functions can be assigned to other M codes.


(This invalidates program compatibility.)

User macro interrupt control with alternate M codes is possible by setting the alternate M code in parameters "#1110 M96_M" and "#1111 M97_M" and by validating the setting by selecting parameter "#1109 subs_M".

(M codes 03 to 97 except 30 are available for this purpose.)

If the parameter "#1109 subs_M" used to enable the alternate M codes is not selected, the M96 and M97 codes remain effective for user macro interrupt control.

In either case, the M codes for user macro interrupt control are processed internally and not output to the outside.

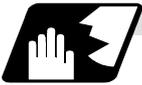

## Parameters

Refer to the Operation Manual for details on the setting methods.


- (1) Subprogram call validity "#1229 set 01/bit 0"
  - 1 : Subprogram type user macro interrupt
  - 0 : Macro type user macro interrupt
- (2) Status trigger mode validity "#1112 S_TRG"
  - 1 : Status trigger mode
  - 0 : Edge trigger mode
- (3) Interrupt type 2 validity "#1113 INT_2"
  - 1 : The executable statements in the interrupt program are executed after completion of execution of the current block. (Type 2)
  - 0 : The executable statements in the interrupt program are executed before completion of execution of the current block. (Type 1)
- (4) Validity of alternate M code for user macro interrupt control "#1109 subs_M"
  - 1 : Valid
  - 0 : Invalid
- (5) Alternate M codes for user macro interrupt
  - Interrupt enable M code (equivalent to M96) "#1110 M96_M"
  - Interrupt disable M code (equivalent to M97) "#1111 M97_M"
  - M codes 03 to 97 except 30 are available.



## Restrictions

- (1) If the user macro interrupt program uses system variables #5001 and after (position information) to read coordinates, the coordinates pre-read in the buffer are used.
- (2) If an interrupt is caused during execution of the tool diameter compensation, a sequence number (M99P__;) must be specified with a command to return from the user macro interrupt program. If no sequence number is specified, control cannot return to the main program normally.

### 13.12 Tool change position return; G30.1 to G30.6

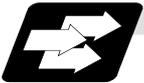

#### Function and purpose

By specifying the tool changing position in a parameter "#8206 TOOL CHG. P" and also specifying a tool changing position return command in a machining program, the tool can be changed at the most appropriate position.

The axes that are going to return to the tool changing position and the order in which the axes begin to return can be changed by commands.



#### Command format

- (1) The format of tool changing position return commands is as follows.

**G30. n;**  
 n = 1 to 6 : Specify the axes that return to the tool changing position and the order in which they return.

For the commands and return order, see next table.

Command	Return order
G30.1	Z axis → X axis • Y axis ( → added axis)
G30.2	Z axis → X axis → Y axis ( → added axis)
G30.3	Z axis → Y axis → X axis ( → added axis)
G30.4	X axis → Y axis • Z axis ( → added axis)
G30.5	Y axis → X axis • Z axis ( → added axis)
G30.6	X axis • Y axis • Z axis ( → added axis)

**(Note 1)** An arrow ( → ) indicates the order of axes that begin to return. An period ( • ) indicates that the axes begin to return simultaneously. (Example : "Z axis → X axis, Y axis" indicate that the Z axis returns to the tool changing position, then the X and Y axes does.)

- (2) The tool changing position return on/off for the added axis can be set with parameter "#1092 Tchg_A" for the added axis.


Note, however, that the added axis always return to the tool changing position only after the standard axes complete returning (see the above table).

The added axis alone cannot return to the tool changing position.



## Example of operates

- (1) The figure below shows an example of how the tool operates during the tool change position return command. (Only operations of X and Y axes in G30.1 to G30.3 are figured.)

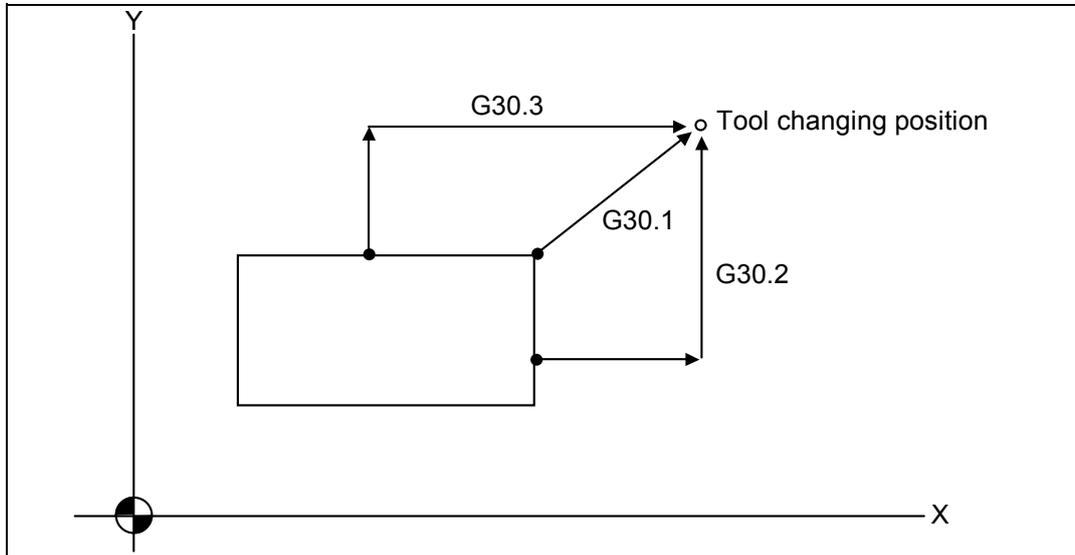


- 1) G30.1 command: The Z axis returns to the tool changing position, then the X and Y axes simultaneously do the same thing. (If tool changing position return is on for an added axis, the added axis also returns to the tool changing position after the X, Y and Z axes reach the tool changing position.)
- 2) G30.2 command: The Z axis returns to the tool changing position, then the X axis does the same thing. After that, the Y axis returns to the tool changing position. (If tool changing position return is on for an added axis, the added axis also returns to the tool changing position after the X, Y and Z axes reach the tool changing position.)
- 3) G30.3 command: The Z axis returns to the tool changing position, then the X axis does the same thing. After that, the X axis returns to the tool changing position. (If tool changing position return is on for an added axis, the added axis also returns to the tool changing position after the X and Z axes reach the tool changing position.)
- 4) G30.4 command: The X axis returns to the tool changing position, then the Y axis and Z axis simultaneously do the same thing. (If tool changing position return is on for an added axis, the added axis also return to the tool changing position after the X, Y and X axes reach the tool changing position.)
- 5) G30.5 command: The Y axis returns to the tool changing position, then the X and Z axes return to the tool changing position simultaneously. (If tool changing position return is on for an added axis, the added axis also returns to the tool changing position after the X, Y and Z axes reach the tool changing position.)
- 6) G30.6 command: The X, Y and Z axes return to the tool changing position simultaneously. (If tool changing position return is on for an added axis, the added axis also returns to the tool changing position after the X, Y and Z axes reach the tool changing position.)

## 13. Program Support Functions

### 13.12 Tool change position return


- (2) After all necessary tool changing position return is completed by a G30.n command, tool changing position return complete signal TCP (X22B) is turned on. When an axis out of those having returned to the tool changing position by a G30.n command leaves the tool changing position, the TCP signal is turned off.

With a G30.1 command, for example, the TCP signal is turned on when the Z axis has reached the tool changing position after the X and Y axes did (supposing tool changing position return for added axes is off). The TCP signal is then turned off when the X or Y axis leaves the position. If tool changing position return for added axes is on with parameter "#1092 Tchg_A", the TCP signal is turned on when the added axis or axes have reached the tool changing position after the standard axes did. It is then turned off when one of the X, Y, Z, and added axes leaves the position.

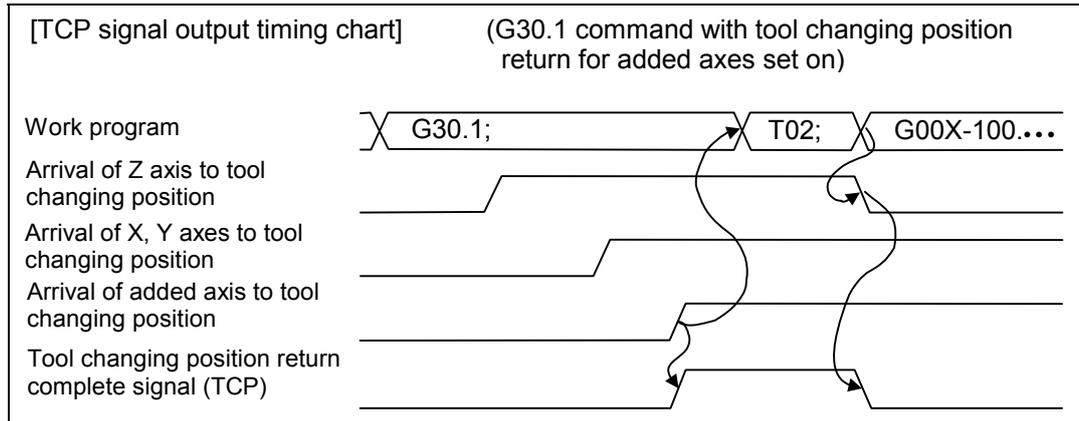

- (3) When a tool changing position return command is issued, tool offset data such as for tool length offset and tool diameter compensation for the axis that moved is canceled.
- (4) This command is executed by dividing blocks for every axis. If this command is issued during single-block operation, therefore, a block stop occurs each time one axis returns to the tool changing position. To make the next axis return to the tool changing position, therefore, a cycle start needs to be specified.


### 13.13 Normal line control; G40.1/G41.1/G42.1

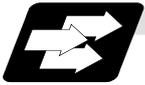


#### Function and purpose

If the C axis is set as the normal line control axis, the C axis (rotation axis) turning will be controlled so that the tool constantly faces the normal line direction control in respect to the XY axis movement command during program operation.

At the block seams, the C axis turning is controlled so that the tool faces the normal line direction control at the next block's start point.

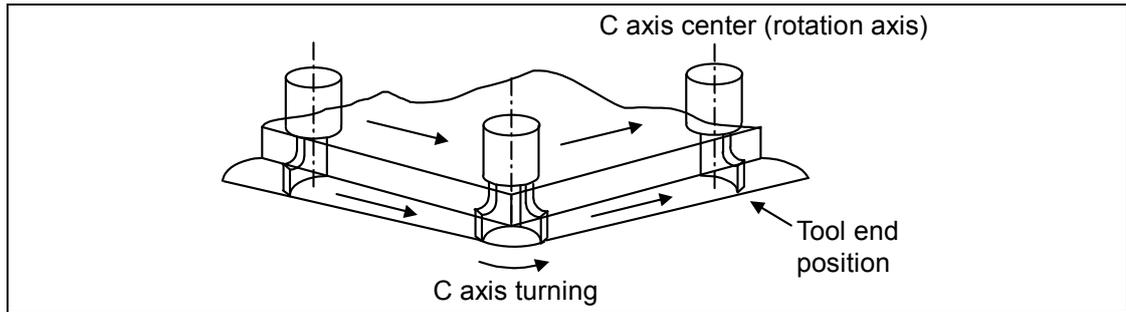

During arc interpolation, the rotation axis turning is controlled in synchronization with the operation of arc interpolation.

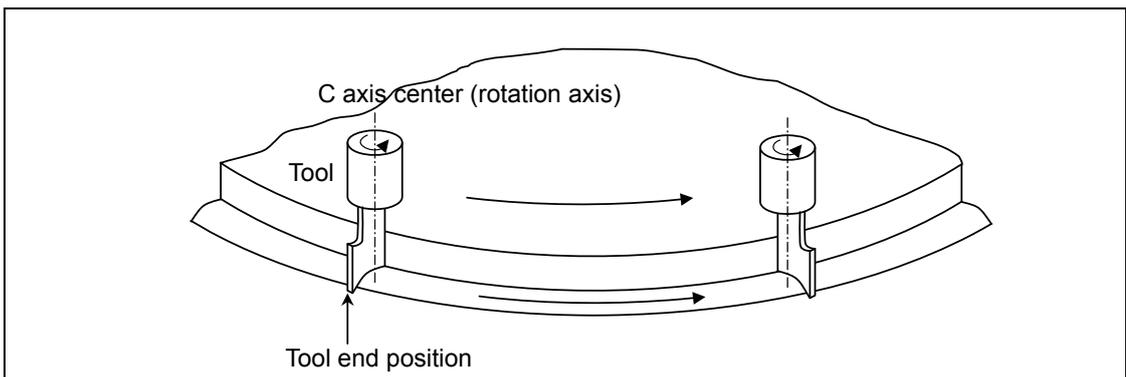

The normal line control I and II can be used according to the C axis turn direction during normal line control. This is set by the parameters.

Normal line control type	Turning direction	Turning speed	Turning speed in arc interpolation
Type I (#1524 C_type=0)	Direction that is 180° or less (shortcut direction)	Parameter speed (#1523 C_feed)	Speed that the program path follows the F command
Type II (#1524 C_type=1)	As a principle, the commanded direction	Feedrate	Speed that the tool nose follows the F command



### Command format

```

G40.1 Xx1 Yy1 Ff1 ;
G41.1 Xx1 Yy1 Ff1 ;
G42.1 Xx1 Yy1 Ff1 ;
G40.1      :Normal line control cancel
G41.1      :Normal line control left ON
G42.1      :Normal line control right ON
x1         : X axis end point coordinates
y1         : Y axis end point coordinates
f1         : Feedrate
    
```

The axis No. for the normal line control axis is designated with the parameter (#1522 C_axis). Normal line control is carried out in respect to the axis movement direction of the selected plane.  
 G17 plane X-Y axes  
 G18 plane Z-X axes  
 G19 plane Y-Z axes



### Detailed description

#### (1) Definition of C axis turning direction

The C axis angle is 0° (degree) when the tool is facing the +X direction.  
 The counterclockwise direction turning is + (plus), and the clockwise direction turning is – (minus).

#### (2) C axis turning operation in respect to movement command

(a) Start up  
 After the normal line control axis turns to a right angle of the advance direction at the start point of the normal line control command block, the axis of the selected plane is moved. Note that the normal line control axis at the start up turns in the direction that is 180° or less (shortcut direction) in both the normal line control type I and II.

(b) During normal line control mode  
 1. Block seam

No tool radius compensation	After the C axis is turned to be at a right angle of the movement of selected plane in the next block, that block is moved.
With tool radius compensation	If tool radius compensation is applied, normal line control is carried out along the path to which the tool radius compensation is applied.

2. During block movement

The C axis angle is kept constant during the linear command, and the C axis does not turn.

During the arc command, the C axis turns in synchronization with the operation of the arc interpolation.

(c) Cancel

The C axis does not turn, and the axis movement of the selected plane by the program command is carried out.




### (3) Normal line control temporally cancel

During normal line control, the turning operation for the normal line control axis is not carried out at the seam of the block that the movement amount is smaller than that set with the parameter (#1535 C_leng) and its previous block.










**(Note)** Since operation fractions are created by calculating the intersection point of two segments, the turning operation may be carried out or not when the parameter (#1535 C_leng) and the segment length are equal.

### (4) Normal line control axis turning direction at block seam













The normal line control axis turning direction at block seam differs according to the normal line control type I or II. The turning angle is limited by the angle  $\varepsilon$  set with the parameter (#1521 C_min).

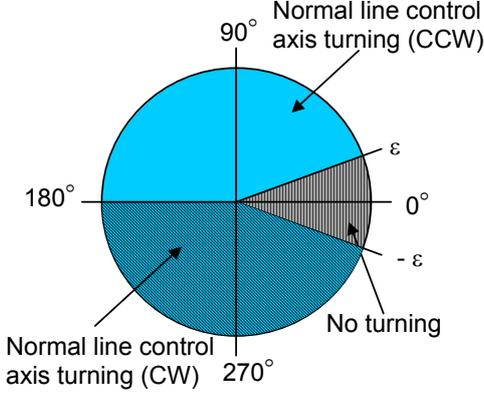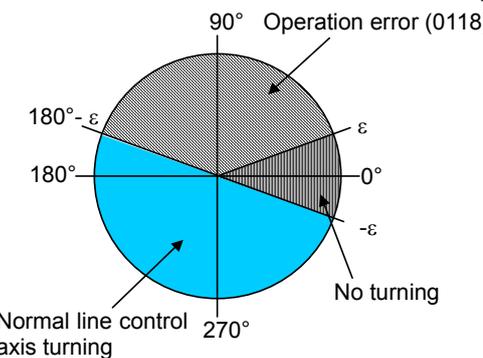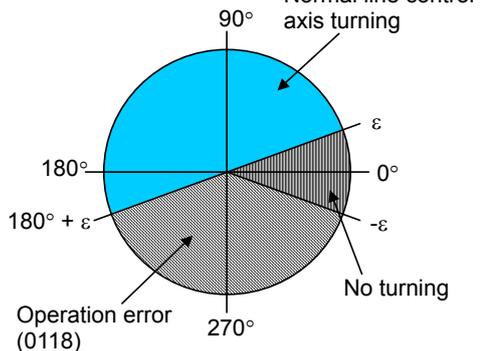Item	Type I	Type II
Normal line control axis turning direction at block seam	Direction that is 180° or less. (shortcut direction)	G41.1 : - direction (CW) G42.1 : + direction (CCW)
Normal line control axis turning angle at block seam	<ul style="list-style-type: none"> <li>when $\theta  &lt; \varepsilon$ is applied, turning is not performed. $\theta$ : Turning angle $\varepsilon$ : Parameter (#1521 C_min)</li> <li>When the turning angle is 180°, the turning direction is indefinite regardless of the command mode.</li> </ul> <p>[G41.1/G42.1 When the normal line control axis is in 0°]</p> 	<ul style="list-style-type: none"> <li>when $\theta  &lt; \varepsilon$ is applied, turning is not performed. $\theta$ : Turning angle $\varepsilon$ : Parameter (#1521 C_min)</li> <li>In the following cases, an operation error (0118) will occur. &lt;For G41.1&gt; $\varepsilon \leq \theta &lt; 180^\circ - \varepsilon$ &lt;For G42.1&gt; $180^\circ + \varepsilon &lt; \theta \leq 360^\circ - \varepsilon$</li> </ul> <p>[G41.1 When the normal line control axis is in 0°]</p>  <p>[G42.1 When the normal line control axis is in 0°]</p> 

(a) Normal line control type I

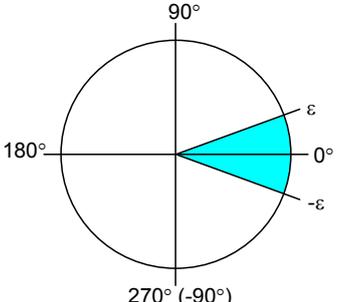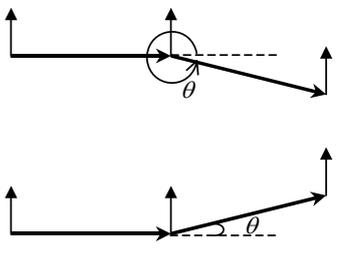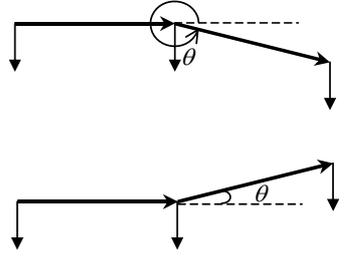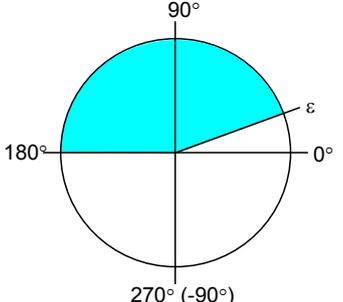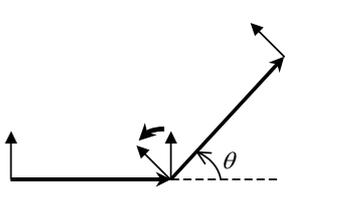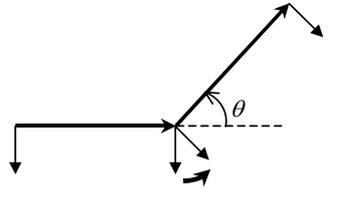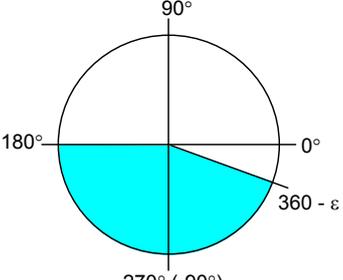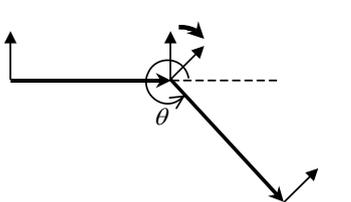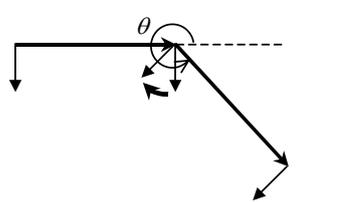Normal line control axis turning angle at block seam: $\theta$	G41.1	G42.1
<p>1. $-\varepsilon &lt; \theta &lt; \varepsilon$</p> 	 <p>No turning</p>	 <p>No turning</p>
<p>2. $\varepsilon \leq \theta &lt; 180^\circ$</p> 		
<p>3. $180^\circ \leq \theta \leq 360^\circ - \varepsilon$</p> 	 <p>Shortcut direction</p>	 <p>Shortcut direction</p>

(b) Normal line control type II

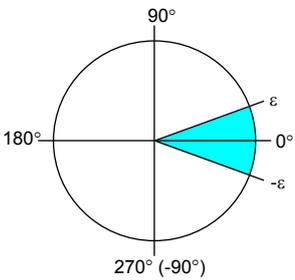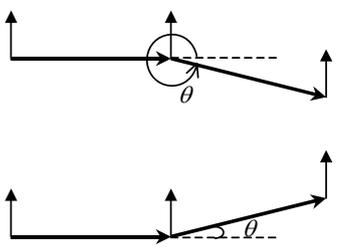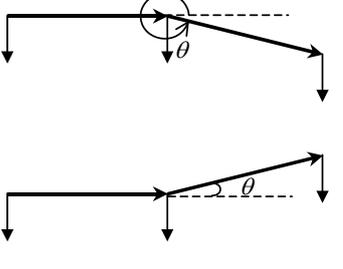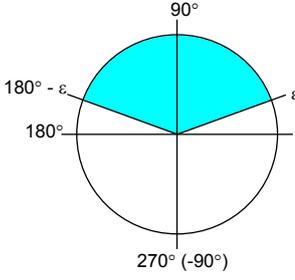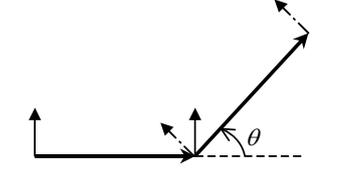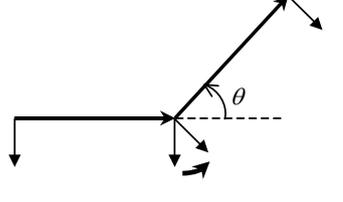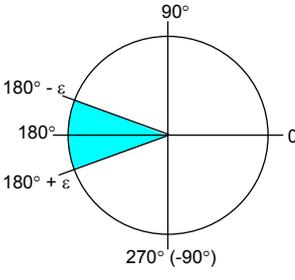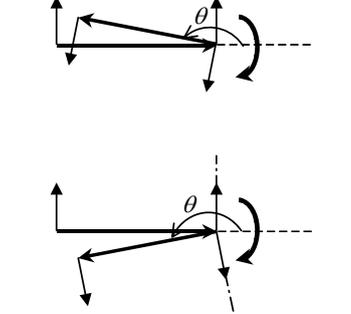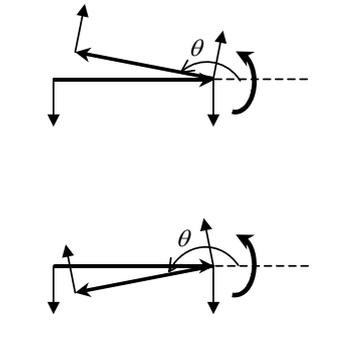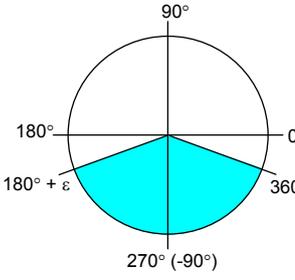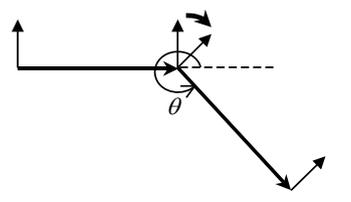
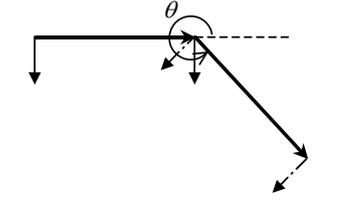
Normal line control axis turning angle at block seam: $\theta$	G41.1	G42.1
<p>1. $-\varepsilon &lt; \theta &lt; \varepsilon$</p> 	 <p>No turning</p>	 <p>No turning</p>
<p>2. $\varepsilon \leq \theta &lt; 180^\circ - \varepsilon$</p> 	 <p>Operation error (0118) (Note)</p>	
<p>3. $180^\circ - \varepsilon \leq \theta \leq 180^\circ + \varepsilon$</p> 		
<p>3. $180^\circ + \varepsilon &lt; \theta \leq 360^\circ - \varepsilon$</p> 		 <p>Operation error (0118) (Note)</p>



**(Note)** Turning operation in the command direction is performed in the inside of the workpiece. Therefore, an operation error will occur.

### (5) C axis turning speed

Turning speed at block seam (select from type 1 or type 2)

Item	Type 1	Type 2
<p>Normal line control axis turning speed at block seam</p>	<p>(a) Rapid traverse</p> <ul style="list-style-type: none"> <li>• Dry run OFF The rapid traverse rate (#2001 rapid) is applied. Normal line control axis turning speed $f$ = Rapid traverse rate * (Rapid traverse override) (°/min)</li> <li>• Dry run ON The manual feedrate is applied. Normal line control axis turning speed $f$ = Manual feedrate * (Cutting feed override) (°/min)</li> </ul> <p>(Note 1) When the manual override valid is ON, the cutting feed override is valid.</p> <p>(Note 2) If the normal line control axis turning speed exceeds the cutting feed clamp speed (#2002 clamp), the speed is applied to the cutting feed clamp speed.</p> <p>(Note 3) When the rapid traverse is ON, the dry run is invalid.</p> <p style="text-align: right;">(Continued to the next page)</p>	<p>(a) Rapid traverse</p> <ul style="list-style-type: none"> <li>• Dry run OFF Normal line control axis turning speed $f$ = $F * 180 / (\pi * R) * (\text{Rapid traverse override})$ (°/min)  For $R=0$, the following expression is applied. Normal line control axis turning speed $f$ = $F * (\text{Rapid traverse override})$ (°/min) F: Rapid traverse rate (#2001 rapid) (mm/min) R: Parameter (#8041 C-rot.R) (mm) (Length from normal line control axis center to tool nose)</li> <li>(Note 1) If the normal line control axis turning speed exceeds the rapid traverse rate (#2001 rapid), the speed is clamped to the rapid traverse rate.</li> <li>• Dry run ON Normal line control axis turning speed $f$ = $F * 180 / (\pi * R) * (\text{Cutting feed override})$ (°/min)  For $R=0$, the following expression is applied. Normal line control axis turning speed $f$ = $F * (\text{Cutting feed override})$ (°/min) F: Manual feedrate (mm/min) R: Parameter (#8041 C-rot.R) (mm) (Length from normal line control axis center to tool nose)</li> <li>(Note 1) When the manual override valid is ON, the cutting feed override is valid.</li> <li>(Note 2) If the normal line control axis turning speed exceeds the rapid traverse rate (#2001 rapid), the speed is applied to the rapid traverse rate.</li> <li>(Note 3) When the rapid traverse is ON, the dry run is invalid.</li> </ul> <p style="text-align: right;">(Continued to the next page)</p>

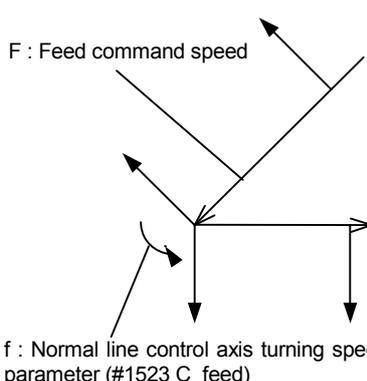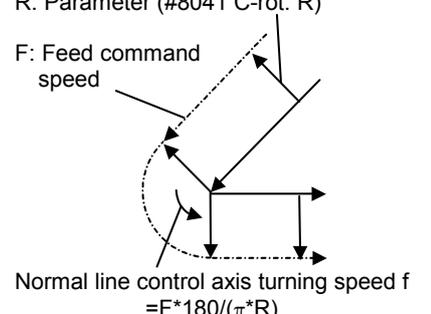Item	Type 1	Type 2
	<p>(b) Cutting feed</p> <ul style="list-style-type: none"> <li>• Dry run OFF The normal line control axis turning speed set with the parameter (#1523 C_feed) is applied. Normal line control axis turning speed $f$ = Parameter (#1523 C_feed) * (Cutting feed override) (°/min)</li> <li>• Dry run ON (Rapid traverse ON) The cutting feed clamp speed (#2002 clamp) is applied. Normal line control axis turning speed $f$ = Cutting feed clamp speed (°/min)</li> <li>• Dry run ON (Rapid traverse OFF) The manual feedrate is applied. Normal line control axis turning speed $f$ = Manual feedrate * (Cutting feed override) (°/min)</li> </ul> <p>(Note 1) When the manual override valid is ON, the cutting feed override is valid.</p> <p>(Note2) If the normal line control axis turning speed exceeds the cutting feed clamp speed (#2002 clamp), the speed is clamped to the cutting feed clamp speed.</p>  <p style="text-align: center;">(Continued to the next page)</p>	<p>(b) Cutting feed</p> <p>The feedrate at the tool nose is the F command. The normal line control axis turning speed is the normal line control axis speed that follows this F command.</p> <p>Normal line control axis turning speed $f$ = $F * 180 / (\pi * R) * (\text{Cutting feed override})$ (°/min)</p> <p>For $R=0$, the following expression is applied. Normal line control axis turning speed $f$ = $F$ (°/min)</p> <p>F: Feedrate command (mm/min) R: Parameter (#8041 C-rot.R) (mm) (Length from normal line control axis center to tool nose)</p> <p>(Note 1) If the normal line control axis turning speed exceeds the cutting feed clamp speed (#2002 clamp), the speed is applied to the cutting feed clamp speed.</p> <p>(Note2) When the dry run is ON, the normal line control axis turning speed is obtained with the same expression as the rapid traverse.</p>  <p style="text-align: center;">(Continued to the next page)</p>

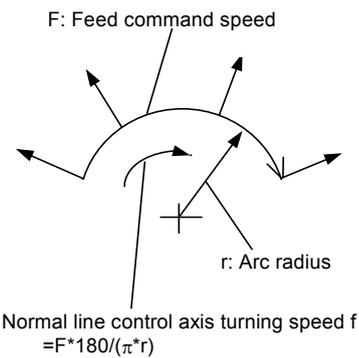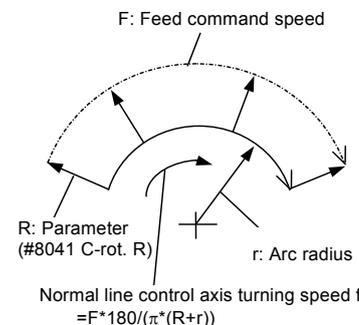
Item	Type 1	Type 2
<p>Normal line control axis turning speed during circular interpolation</p>	<p>The normal line control axis turning speed is the rotation speed obtained by feedrate F.</p> <p>Normal line control axis turning speed $f$  $= F * 180 / (\pi * r)$ (degree/min)                      F : Feed command speed (mm/min)                      r : Arc radius (mm)</p> <p style="text-align: right;"><b>(Note 1)</b></p>  <p>Normal line control axis turning speed $f$  $= F * 180 / (\pi * r)$</p>	<p>The feedrate at the tool nose is the F command. The normal line control axis turning speed is the rotation speed that follows this F command.</p> <p>Normal line control axis turning speed $f$  $= F * 180 / (\pi * (R + r))$ (degree/min)                      F : Feed command speed (mm/min)                      R : Parameter (#8041 C-rot. R) (mm)                      Length from normal line control axis center to tool nose                      r : Arc radius (mm)</p>  <p>Normal line control axis turning speed $f$  $= F * 180 / (\pi * (R + r))$</p>

- (Note 1)** If the normal line control axis turning speed exceeds the cutting feed clamp speed (#2002 clamp), the speed will be as follows;
- Normal line control axis turning speed = Cutting feed clamp speed.
  - Moving speed during arc interpolation = The speed according to the normal line control axis turning speed




### Automatic corner arc insertion function

During normal line control, an arc is automatically inserted into the corner in the axis movement of the plane selection. This function is for the normal line control type I.  
 The radius of the arc to be inserted is set with the parameter (#8042 C-ins.R).  
 This parameter can be read and write using the macro variable #1901.  
 Normal line control is performed also during the interpolation for the arc to be inserted.

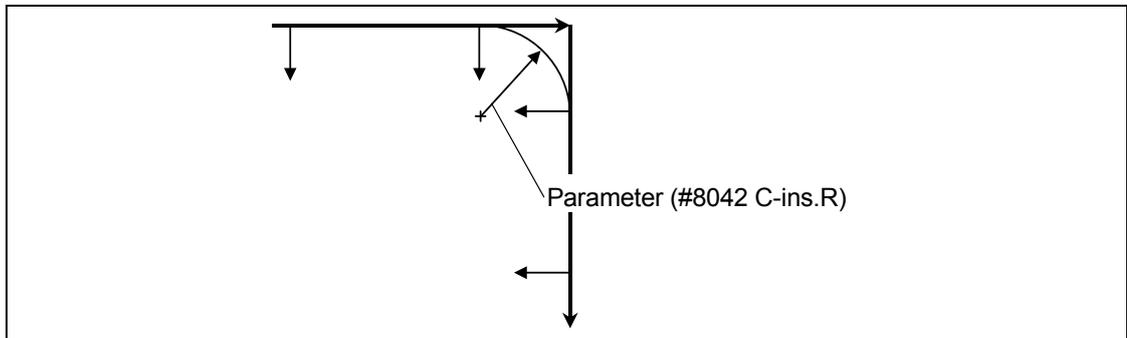


<Supplements>


The corner arc is not inserted into the straight line that is smaller than a linear-arc, arc-arc, linear-block with no movement, block with no movement-linear or radius of the arc to be inserted.

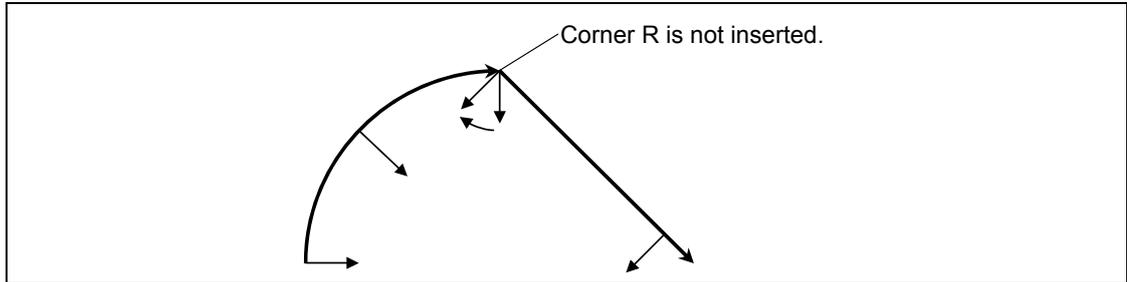


During the radius compensation, the radius compensation is applied to the path that the corner arc is inserted into.

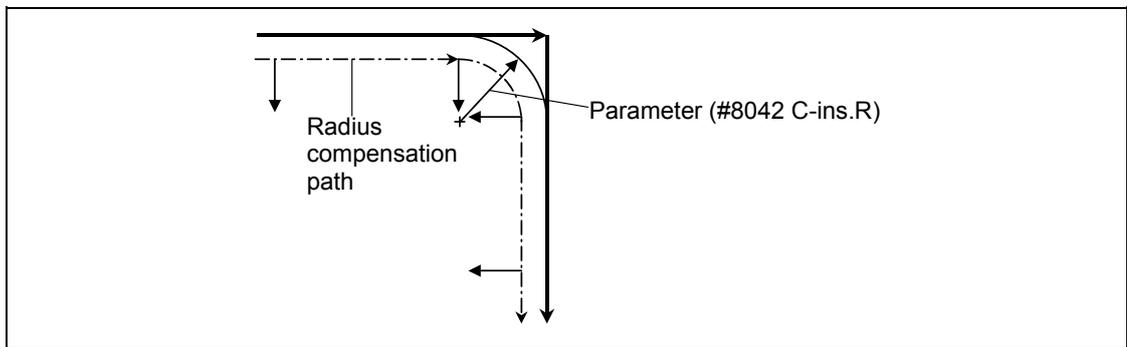

The stop point of the single block and block start interlock is as follows.

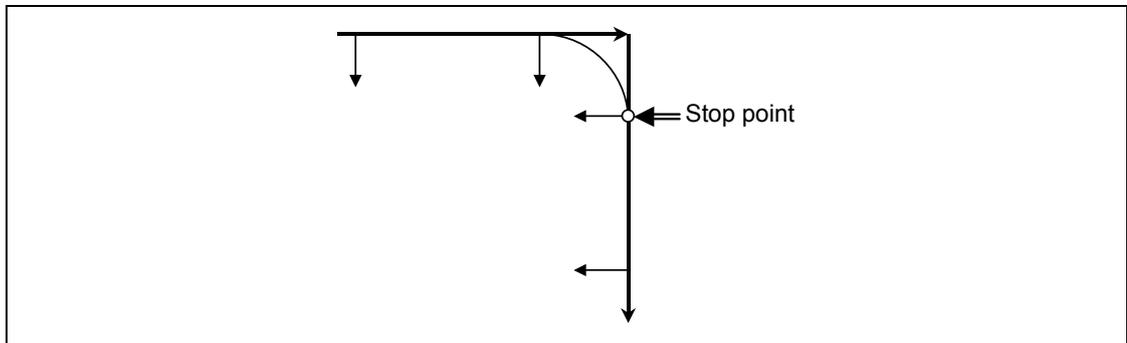

The stop point of the cutting start interlock is as follows.

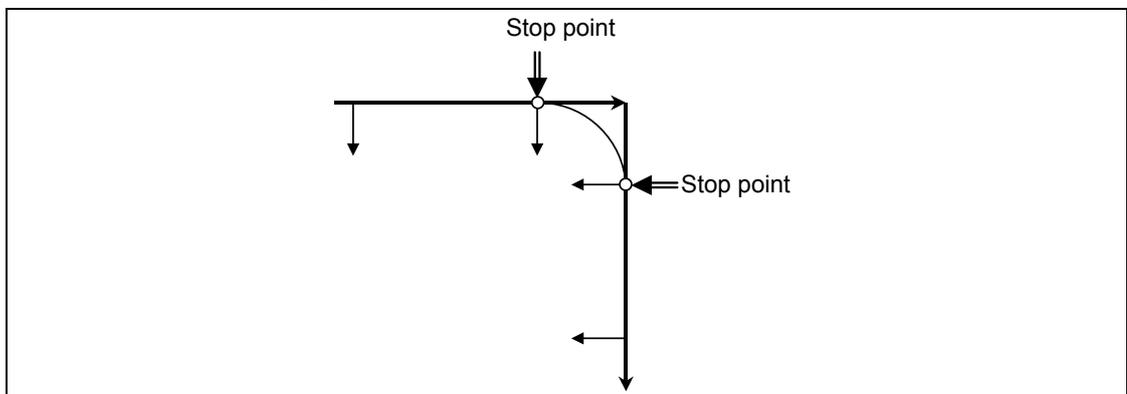



### Precautions

- (1) During normal line control, the program coordinates are updated following the normal line control axis movement.  
Thus, program the normal line control with the program coordinate system.
- (2) The normal line control axis will stop at the turning start position at the single block, cutting block start interlock and block start interlock.
- (3) The C axis movement command is ignored during normal line control.
- (4) During C axis normal line control (during the G41.1 and G42.1 modal), the C axis workpiece offset rewrite command (G92C_;) cannot be issued. The program error (P901) will occur if commanded.
- (5) If mirror image is applied to either the 1-axis or 2-axis, the normal line control direction will be reversed.
- (6) Designate the rotation axis for the normal line control axis (parameter (#1522 C_axis)). Designate so that the axis is not duplicated with the axis on the plane where normal line control is to be carried out.  
If an illegal axis is designated, the program error (P902) will occur when the program (G40.1, G41.1, G42.1) is commanded.  
The program error (P902) will also occur if the parameter (#1522 C_axis) is "0" when these codes are commanded.
- (7) Depending on the model, this function cannot be used.



### Relation with other functions

Function name	Notes
Uni-directional positioning	Normal line control is not applied.
Helical cutting	Normal line control is applied normally.
Spiral interpolation	The start point and end point are not on the same arc, so normal line control is not applied correctly.
Exact stop check	The operation will not decelerate and stop for the turning movement of the normal line control axis.
Error detect	Error detect is not applied on the turning movement of the normal line control axis.
Override	Override is applied on the turning movement by normal line control axis.
Coordinate rotation by program	Normal line control is applied to the shape after coordinate rotation.
Scaling	Normal line control is applied to the shape after scaling.
Mirror image	Normal line control is applied to the shape after mirror image.
Thread cutting	Normal line control is not applied.
Automatic reference point return	Normal line control is not applied.
Start position return	Normal line control is not applied on the movement to the middle point position. If the base specification parameter "#1086 G0Intp" is 0, normal line control is applied to the movement from the middle point to a position designated in the program.

(Continued to the next page)


## 13. Program Support Functions

### 13.13 Normal line control

(Continued from the next page)

Function name	Notes
High-speed machining mode III	This cannot be commanded during normal line control. A program error (P29) will occur. The normal line control command during high-speed machining mode III cannot also be issued. A program error (P29) will occur.
High-accuracy control	This cannot be commanded during normal line control. A program error (P29) will occur. The normal line control command during high-accuracy control cannot also be issued. A program error (P29) will occur.
Spline	This cannot be commanded during normal line control. A program error (P29) will occur. The normal line control command during spline cannot also be issued. A program error (P29) will occur.
High-speed High-accuracy control I/II	This cannot be commanded during normal line control. A program error (P29) will occur. The normal line control command during high-speed High-accuracy control I/II cannot also be issued. A program error (P29) will occur.
Cylindrical interpolation	This cannot be commanded during normal line control. A program error (P486) will occur. The normal line control command during cylindrical interpolation cannot also be issued. A program error (P481) will occur.
Workpiece coordinate system offset	The workpiece coordinate system cannot be changed during normal line control. A program error (P29) will occur. The program parameter input (G10L2) cannot also be commanded. A program error (P29) will occur.
Local coordinate system offset	The local coordinate system cannot be changed during normal line control. A program error (P29) will occur.
Program restart	The program including the normal line control command cannot be restarted. "E98 CAN'T RESEARCH" will occur.
Dry run	The feedrate is changed by the dry run signal even in respect to the turning movement of the normal line control axis.
Chopping	The axis cannot be used as the normal line control axis during the chopping command.
Graphic check	The section turned by normal line control is not drawn.
G00 non-interpolation	Normal line control is not applied.
Pole coordinate interpolation	This cannot be commanded during normal line control. A program error (P486) will occur. The normal line control command during pole coordinate interpolation cannot also be issued. A program error (P481) will occur.
Exponential interpolation	If the normal line control axis is the same as the rotation axis of exponential interpolation, a program error (P612) will occur. If the normal line control axis is different from the rotation axis of exponential interpolation, an error will not occur, however normal line control is not applied.
Plane selection	This cannot be commanded during normal line control. A program error (P903) will occur.
System variable	The block end coordinate (#5001~) for the normal line control axis during normal line control cannot obtain a correct axis position.

### 13.14 High-accuracy control; G61.1

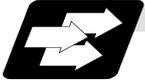


#### Function and purpose

This function aims to improve the error caused by the accuracy of the control system during machine machining. The parameter method and G code command method, which turn initial high-accuracy ON, are used to enter the high-accuracy control mode.

Trouble such as the following occurred when using normal control:

- (1) Corner rounding occurred at linear and linear-connected corners because the following command movement started before the previous command finished. (Refer to Fig. 1)
- (2) When cutting circle commands, an error occurred further inside the commanded path, and the resulting cutting path was smaller than the commanded path. (Refer to Fig. 2)

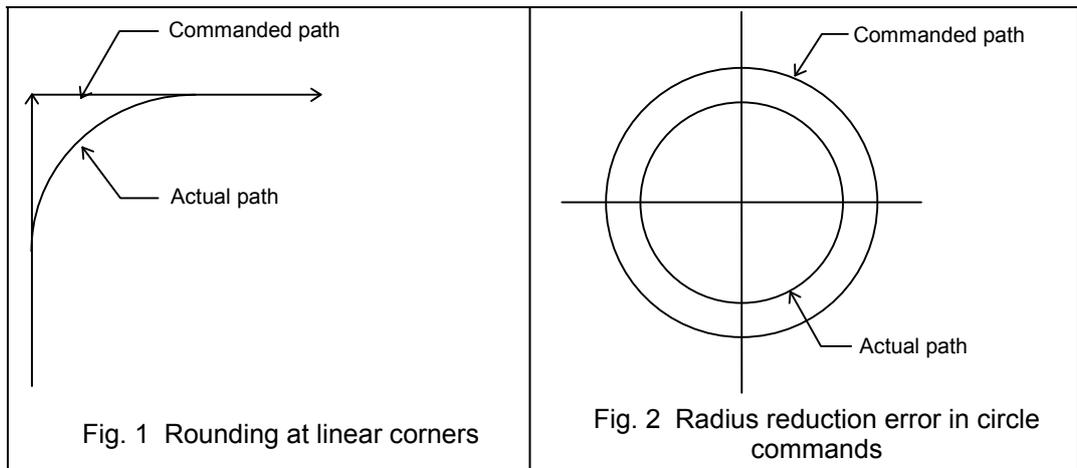

This function uses the following fix functions to minimize the increase in machining time while reducing the shape error.

- (1) Pre-interpolation acceleration/deceleration (linear acceleration/deceleration)
- (2) Optimum speed control
- (3) Vector accuracy interpolation
- (4) Feed forward
- (5) Arc entrance/exit speed control
- (6) S-pattern filter control



### Command format

**G61.1 Ff1 ;**  
 G61.1: High-accuracy control mode  
 Ff1 Feedrate command

The high-accuracy control mode is validated from the block containing the G61.1 command.



The high-accuracy control mode is canceled with one of the following G commands.

- G61 (exact stop check)
- G62 (automatic corner override)
- G63 (tapping mode)
- G64 (cutting mode)

**(Note1)** The feedrate command F is clamped by the rapid traverse rate or maximum cutting feedrate set with the parameters.

[Modal holding information]

The modal holding state of the high-accuracy control mode differs according to the conditions of the base specification parameter "#1151 rstint" (reset initial) and "#1148 I_G611" (initial high-accuracy).

[High-accuracy control mode holding state]

Parameter		Default state	Reset			Block interruption	Block stop	Emergency stop		NC alarm	OT	Emergency stop cancel	
Reset initial	Initial high accuracy	Power ON	Reset 1	Reset 2	Reset & rewind	Mode changeover (automatic/manual) ----- Feed hold	Single block	Emergency stop switch ----- External emergency stop	Servo alarm	H/W OT	Emergency stop switch ----- External emergency stop		
OFF	OFF	C	H	C	C	H	H	H	H	H	H	H	H
OFF	ON	H	*	*	H	H	H	H	H	H	H	H	H
ON	OFF	C	C	C	C	H	H	H	H	H	H	C	C
ON	ON	H	*	*	H	H	H	H	H	H	H	*	H

H (hold): Modal hold (G61.1 → G61.1)  
 C (cancel): Modal cancel (G61.1 → G64)

**(Note2)** The cases marked with an asterisk (*) in the above table indicate that the modal will shift to the high-accuracy control mode (G61.1) even in modes other than the high-accuracy control mode (modes G61 to G64).



### Detailed description

#### (1) Pre-interpolation acceleration/deceleration

Acceleration/deceleration control is carried out for the movement commands to suppress the impact when the machine starts or stops moving. However, with conventional post-interpolation acceleration/deceleration, the corners at the block seams are rounded, and path errors occur regarding the command shape.

In the high-accuracy control function mode, acceleration/deceleration is carried out before interpolation to solve the above problems. This pre-interpolation acceleration/deceleration enables machining on a machining path that more closely follows the command.

The acceleration/deceleration time can be reduced because constant inclination acceleration/deceleration is carried out.

[Basic patterns of acceleration/deceleration control in linear interpolation commands]


	Acceleration/deceleration waveform pattern	
Normal mode		<p>(1) Because of the constant time constant acceleration/deceleration, the rising edge/falling edge of the waveform becomes more gentle as the command speed becomes slower.</p> <p>(2) The acceleration/deceleration time constant can be independently set for each axis. Linear type, exponential function type, or both can be selected. Note that if the time constant of each axis is not set to the same value, an error will occur in the path course.</p> <p>#2002 clamp : G01 clamp speed                      #2007 G1tL : Linear type acceleration/deceleration time constant                      #2008 G1t1 : Exponential type acceleration/deceleration time constant</p>
High-accuracy control mode		<p>(1) Because of the constant inclination type linear acceleration/deceleration, the acceleration/deceleration time is reduced as the command speed becomes slower.</p> <p>(2) The acceleration/deceleration time constant becomes one value (common for each axis) in the system.</p> <p>#2002 clamp : G01 clamp speed                      #1206 G1bF : Target speed                      #1207 G1btL : Acceleration/deceleration time to target speed</p> <p>G1bF and G1btL are values for specifying the inclination of the acceleration/deceleration time; the actual cutting feed maximum speed is clamped by the "#2002 clamp" value.</p>

[Path control in circular interpolation commands]

When commanding circular interpolation with the conventional post-interpolation acceleration/deceleration control method, the path itself that is output from the CNC to the servo runs further inside the commanded path, and the circle radius becomes smaller than that of the commanded circle. This is due to the influence of the smoothing course droop amount for CNC internal acceleration/deceleration.

With the pre-interpolation acceleration/deceleration control method, the path error is eliminated and a circular path faithful to the command results, because interpolation is carried out after the acceleration/deceleration control. Note that the tracking lag due to the position loop control in the servo system is not the target here.

The following shows a comparison of the circle radius reduction error amounts for the conventional post-interpolation acceleration/deceleration control and pre-interpolation acceleration/deceleration control in the high-accuracy control mode.

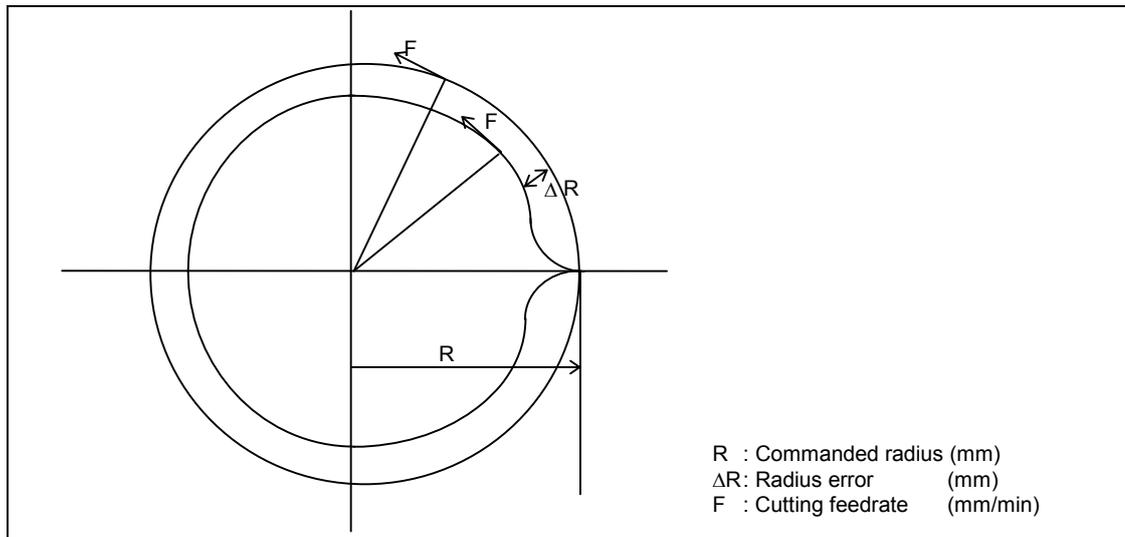

The compensation amount of the circle radius reduction error ( $\Delta R$ ) is theoretically calculated as shown in the following table.

Post-interpolation acceleration/deceleration control (normal mode)	Pre-interpolation acceleration/deceleration control (high-accuracy control mode)
Linear acceleration/deceleration $\Delta R = \frac{1}{2R} \left( \frac{1}{12} T_s^2 + T_p^2 \right) \left( \frac{F}{60} \right)^2$	Linear acceleration/deceleration $\Delta R = \frac{1}{2R} \left\{ T_p^2 (1 - K_f^2) \right\} \left( \frac{F}{60} \right)^2$
Exponential function acceleration/deceleration $\Delta R = \frac{1}{2R} (T_s^2 + T_p^2) \left( \frac{F}{60} \right)^2$	*1 Because the item $T_s$ can be ignored by using the pre-interpolation acceleration/deceleration control method, the radius reduction error amount can be reduced. *2 Item $T_p$ can be negated by making $K_f = 1$ .

$T_s$  : Acceleration/deceleration time constant in the CNC (s)

$T_p$  : Servo system position loop time constant (s)

$K_f$  : Feed forward coefficient


### (2) Optimum speed control

#### (a) Optimum corner deceleration

By calculating the angle of the seam between blocks, and carrying out acceleration/ deceleration control in which the corner is passed at the optimum speed, highly accurate edge machining can be realized.


When the corner is entered, that corner's optimum speed (optimum corner speed) is calculated from the angle with the next block. The machine decelerates to that speed in advance, and then accelerates back to the command speed after the corner is passed. Corner deceleration is not carried out when blocks are smoothly connected. In this case, the criteria for whether the connection is smooth or not can be designated by the machining parameter "#8020 DCC ANGLE".

When the corner angle is larger than the parameter "DCC ANGLE" for a linear-linear connection, or for a circle, etc., the acceleration  $\Delta V$  occurs due to the change in the direction of progress after the corner is passed at a speed  $V$ .

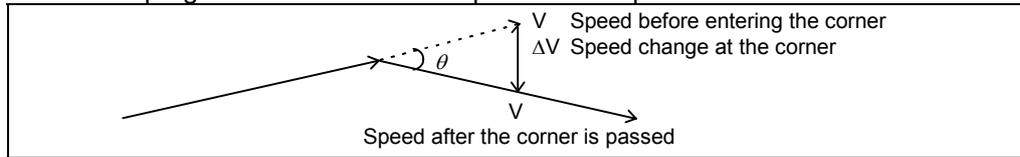

The corner angle  $V$  is controlled so that this  $\Delta V$  value becomes less than the pre-interpolation acceleration/ deceleration tolerable value set in the parameters ("#1206 G1bF", "#1207 G1btL").

In this case the speed pattern is as follows.

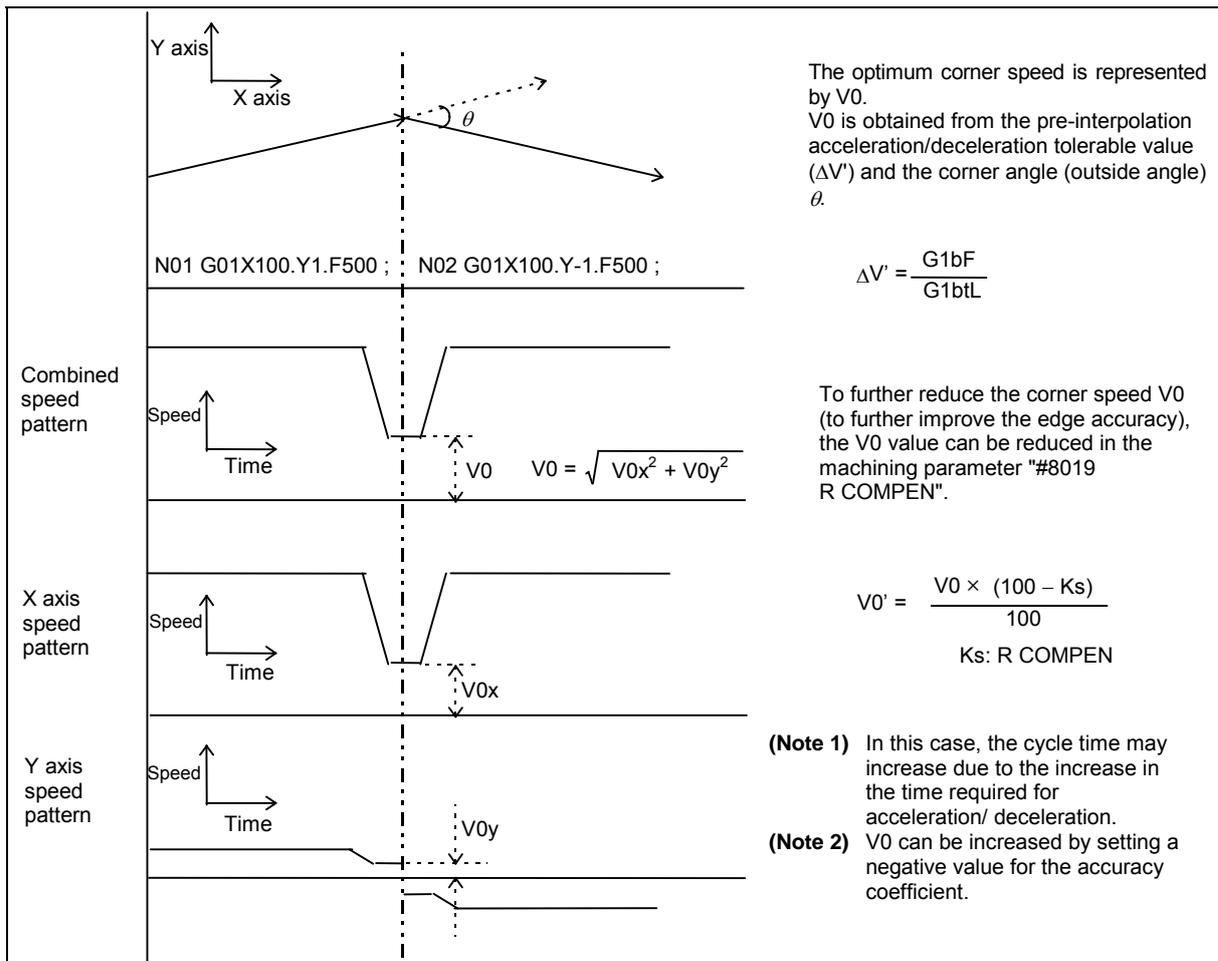

## 13. Program Support Functions


### 13.14 High-accuracy control

The accuracy coefficient differs according to parameter "#8201 COMP CHANGE".

#8201 COMP CHANGE	Accuracy coefficient used
0	#8019 R COMPEN
1	#8022 CORNER COMP

The corner speed  $V_0$  can be maintained at a set speed or more so that the corner speed does not drop too far.

Set "#2096 crncsp" for each axis, and make a composite speed so that the moving axis does not exceed this setting.

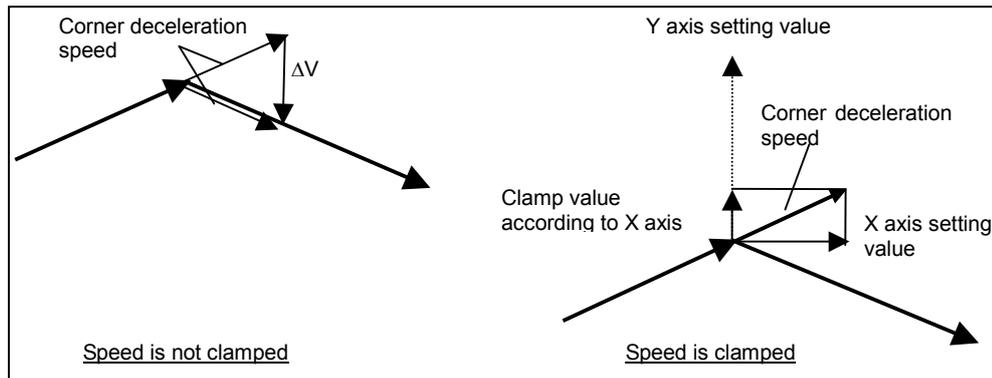


Note that the speed is controlled with the optimum corner deceleration speed in the following cases.

- When the composite corner deceleration speed is less than the optimum corner deceleration speed.
- When the corner deceleration minimum speed parameter setting for the moving axes is set to "0" for even one axis.

(b) Arc speed clamp

During circular interpolation, even when moving at a constant speed, acceleration is generated as the advance direction constantly changes. When the arc radius is large compared to the commanded speed, control is carried out at the commanded speed. However, when the arc radius is relatively small, the speed is clamped so that the generated acceleration does not exceed the tolerable acceleration/deceleration speed before interpolation, calculated with the parameters.

This allows arc cutting to be carried out at an optimum speed for the arc radius.

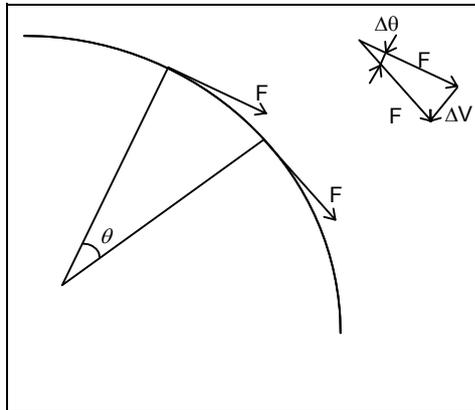

$F$  : Commanded speed (mm/min)  
 $R$  : Commanded arc radius (mm)  
 $\Delta\theta$  : Angle change per interpolation unit  
 $\Delta V$  : Speed change per interpolation unit

The tool is fed with the arc clamp speed  $F$  so that  $\Delta V$  does not exceed the tolerable acceleration/deceleration speed before interpolation  $\Delta V$ .

$$F \leq \sqrt{R \times \Delta V \times 60 \times 1000} \text{ (mm/min)}$$

$$\Delta V = \frac{G1bF \text{ (mm/min)}}{G1btL \text{ (ms)}}$$

When the above  $F'$  expression is substituted in the expression expressing the maximum logical arc radius reduction error amount  $\Delta R$  explained in the section "a) Pre-interpolation acceleration/deceleration", the commanded radius  $R$  is eliminated, and  $\Delta R$  does not rely on  $R$ .

$$\Delta R \leq \frac{1}{2R} \{Tp^2 (1 - Kf^2)\} \left(\frac{F}{60}\right)^2$$

$$\leq \frac{1}{2R} \{Tp^2 (1 - Kf^2)\} \left(\frac{\Delta V' \times 1000}{60}\right)^2$$

$\Delta R$ : Arc radius reduction error amount  
 $Tp$ : Position loop gain time constant of servo system  
 $Kf$ : Feed forward coefficient  
 $F$ : Cutting feedrate


In other words, with the arc command in the high-accuracy control mode, in logical terms regardless of the commanded speed  $F$  or commanded radius  $R$ , machining can be carried out with a radius reduction error amount within a constant value.

To further lower the arc clamp speed (to further improve the roundness), the arc clamp speed can be lowered with the machining parameter "#8019 R COMPEN". In this case, speed control is carried out to improve the maximum arc radius reduction error amount  $\Delta R$  by the set percentage.

$$\Delta R' \leq \frac{\Delta R \times (100 - Ks)}{100} \text{ (mm)}$$

$\Delta R'$  : Maximum arc radius reduction error amount  
 $Ks$  : R COMPEN (%)

After setting the "R COMPEN", the above  $\Delta R'$  will appear on the parameter screen.

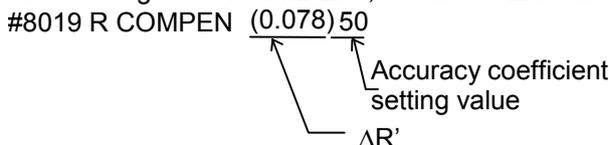

- (Note 1)** The maximum arc radius reduction error amount  $\Delta R$  can be increased by setting a negative value for the "accuracy coefficient".
- (Note 2)** When the "R COMPEN" is set with positive value, the arc clamp speed will drop, so in a machining program with many arc commands, the machining time will take longer.
- (Note 3)** The "R COMPEN" is valid only when the arc speed clamp is applied. To reduce the radius reduction error when not using the arc speed clamp, the commanded speed  $F$  must be lowered.

## 13. Program Support Functions

### 13.14 High-accuracy control


**(Note 4)** If the "accuracy coefficient" is not set (0), arc speed clamping will not be applied.

**(Note 5)** The "accuracy coefficient" differs according to parameter "#8021 COMP CHANGE".

#8201 COMP CHANGE	Accuracy coefficient used
0	#8019 R COMPEN
1	#8023 CURVE COMP

#### (3) Vector accuracy interpolation


When a fine segment is commanded and the angle between the blocks is extremely small (when not using optimum corner deceleration), interpolation can be carried out more smoothly using the vector accuracy interpolation.

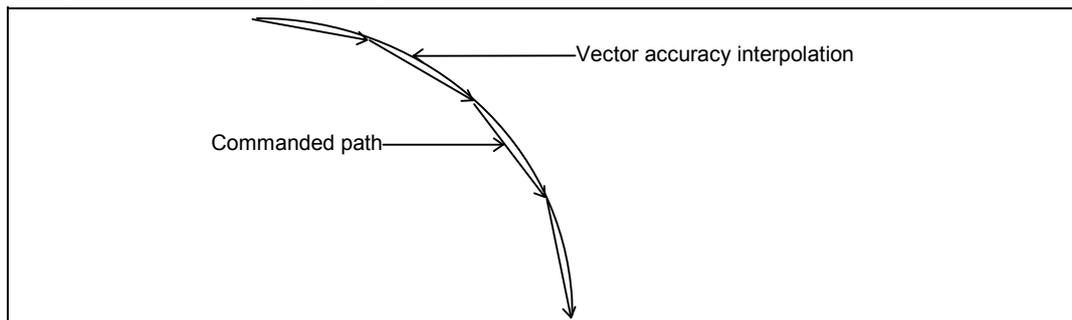

#### (4) Feed forward control

With this function, the constant speed error caused by the position loop control of the servo system can be greatly reduced. However, as machine vibration is induced by the feed forward control, there are cases when the coefficient cannot be increased.

In this case, use this function together with the smooth high gain (SHG) control function and stably compensate the delay by the servo system's position loop to realize a high accuracy. As the response is smoother during acceleration/deceleration, the position loop gain can be increased.

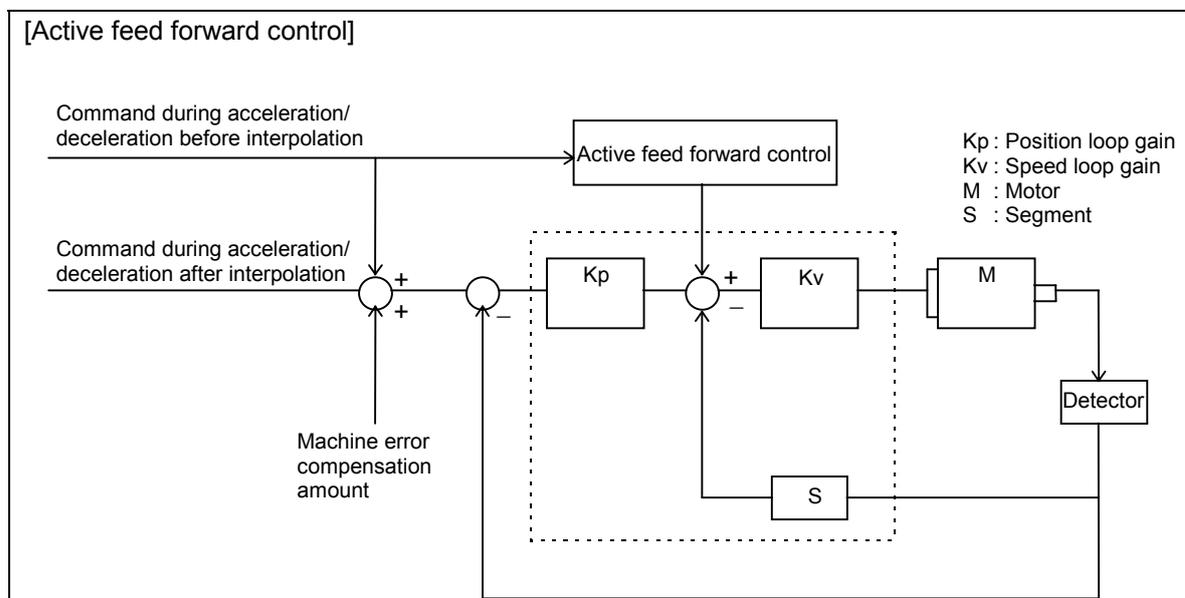

# 13. Program Support Functions

## 13.14 High-accuracy control


[Reduction of arc radius reduction error amount using feed forward control]

With the high-accuracy control, the arc radius reduction error amount can be greatly reduced by combining the pre-interpolation acceleration/deceleration control method above-mentioned and the feed forward control/SHG control.

The logical radius reduction error amount  $\Delta R$  in the high-accuracy control mode is obtained with the following expression.

Feed forward control	SHG control + feed forward control
$\Delta R \leq \frac{1}{2R} \{T_p^2 (1 - K_f^2)\} \left(\frac{F}{60}\right)^2$ <p style="text-align: right;">                     R : Arc radius (mm)                      F : Cutting feedrate (mm/min)                      T_p : Position loop time constant (s)                      K_f : Feed forward coefficient                 </p>	
By setting K _f to the following value, the delay elements caused by the position loop in the servo system can be eliminated, and the logical $\Delta R$ can be set to 0.	
K _f = 1 (Feed forward gain 100%)	The equivalent feed forward gain to set K _f to 1 can be obtained with the following expression. $100 \sqrt{1 - \left\{1 - \left(\frac{\text{fwd_g}}{50}\right)^2\right\} \left\{\frac{\text{PGN1 for conventional control}}{2 \times \text{PGN1 for SHG control}}\right\}^2}$

* The feed forward gain can be set independently for G00 and G01.

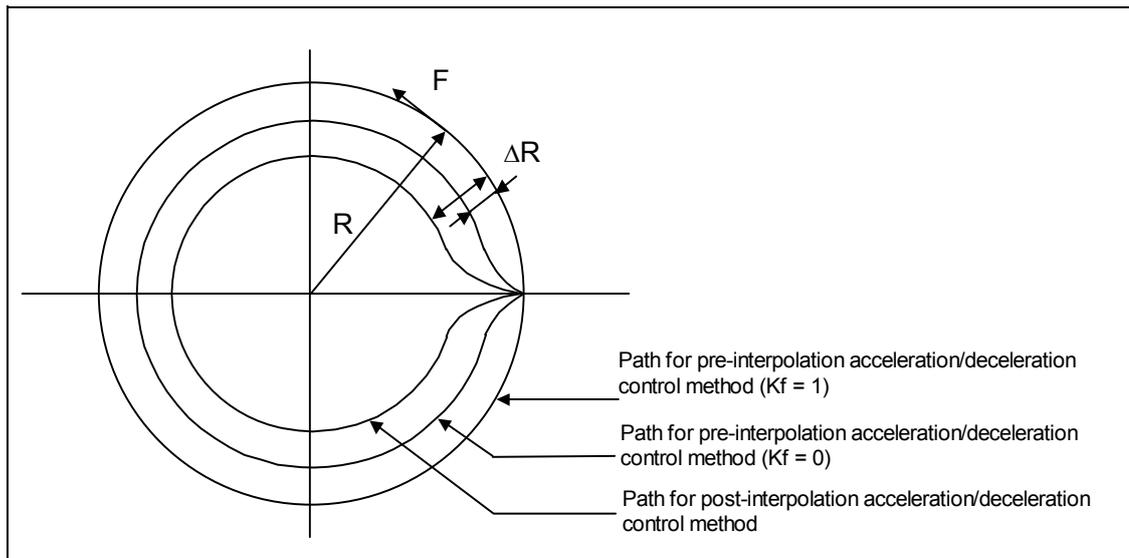

[Restrictions]

If the machine vibrates when K_f is set to 1, K_f must be lowered or the servo system must be adjusted.



### (5) Arc entrance/exit speed control

There are cases when the speed fluctuates and the machine vibrates at the joint from the straight line to arc or from the arc to straight line.



This function decelerates to the deceleration speed before entering the arc and after exiting the arc to reduce the machine vibration. If this is overlapped with corner deceleration, the function with the slower deceleration speed is valid.

The validity of this control can be changed with the base specification parameter "#1149 cireft". The deceleration speed is designated with the base specification parameter "#1209 cirdcc".

#### (Example 1) When not using corner deceleration

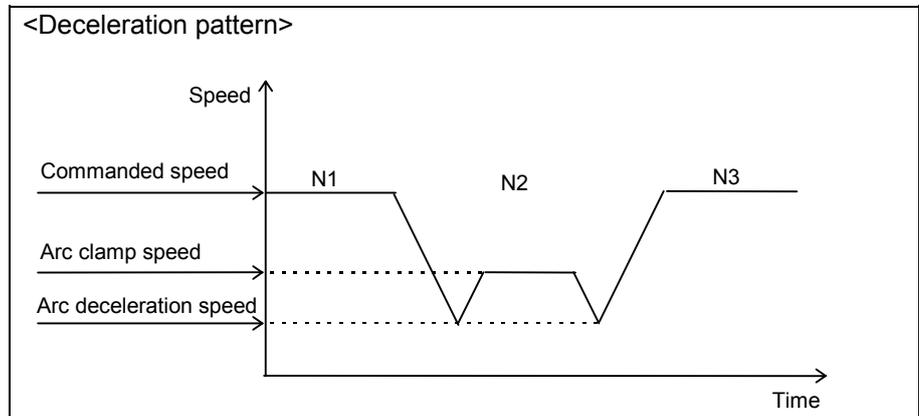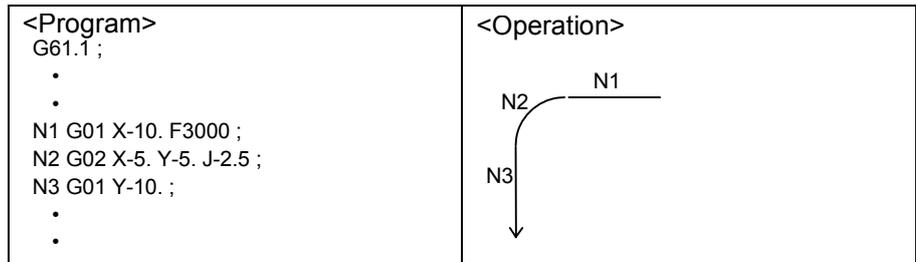


(Example 2) When using corner deceleration

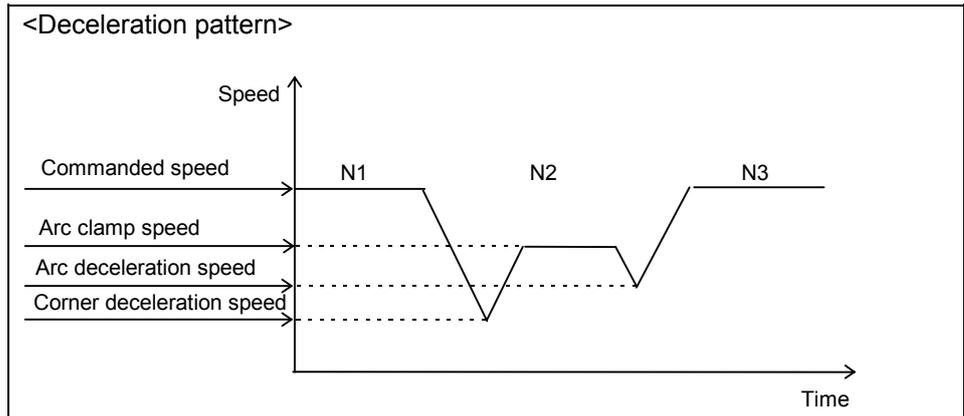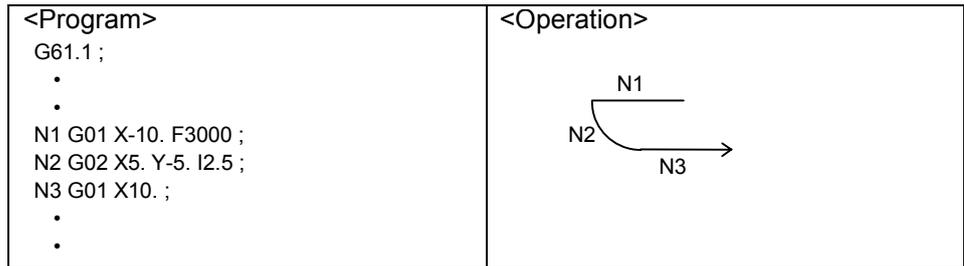

### (6) S-pattern filter control

This control interpolates while smoothing the changes in the segments distributed to each axis element with vector accuracy interpolation. With this, the fluctuation amplified by feed forward control is reduced and the effect onto the machine is reduced.

Both G00 and G01 S-pattern filter are set with the base specification parameter "#1131 Fldcc". The S-pattern filter can be set to 3.5, 7.1, 14.2, 28.4 or 56.8 [ms].

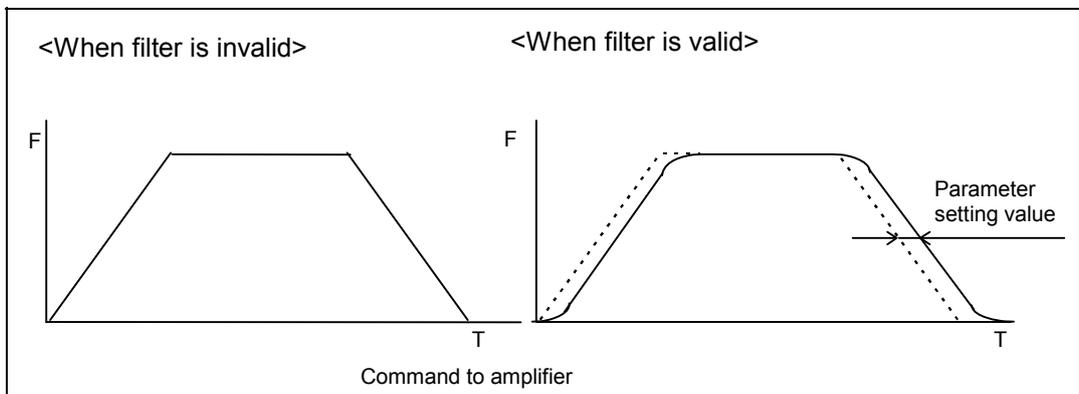


### (7) Each axis arc radius reduction error compensation control

When the roundness at the machine end is, compared to the reference circle, expanded at an axis creating an ellipsis state, compensation is carried out for each axis to make a perfect circle.

The validity of this control can be changed with control parameter "#8108 R COMP Select". Note that "#8108 R COMP Select" is valid only when "#8107 R COMPENSATION" is set to "1".


The compensation coefficient for each axis is designated with the axis specification parameter "#2069 Rcoeff".

#### (a) Compensation in each axis direction of arc

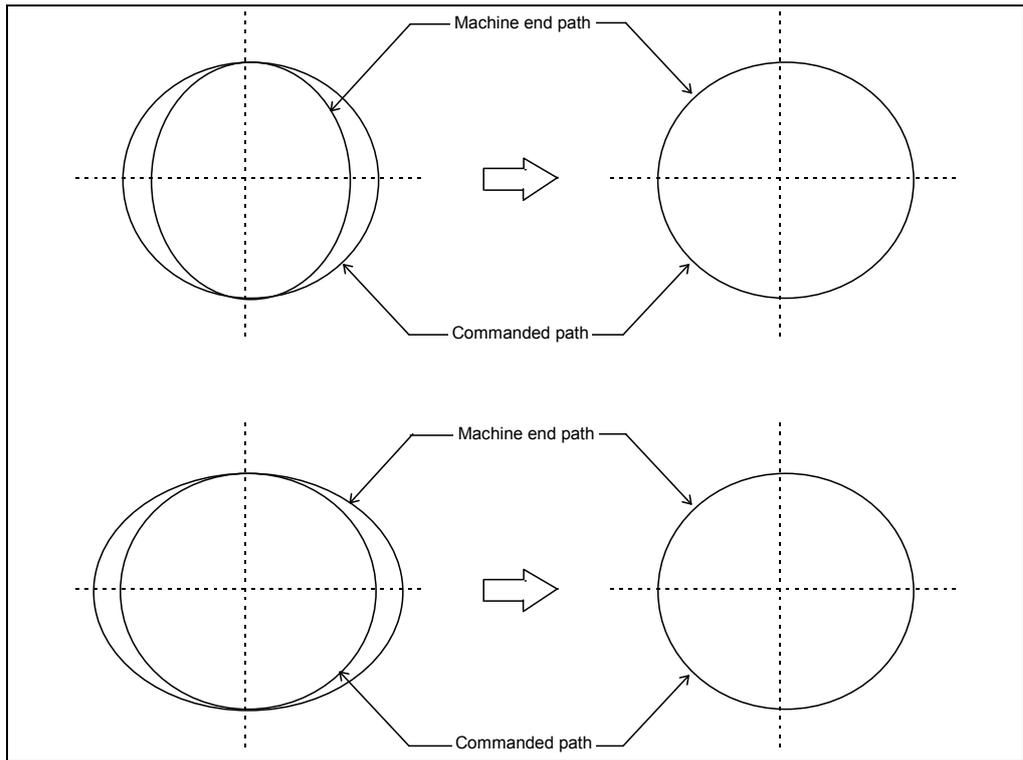

#### (b) Smooth compensation at entrance and exit

The compensation amount is gradually increased from the arc start point to the 90° position, and 100% compensation is reached at the 90° position. The compensation is gradually decreased from 90° before the end point, and 0% compensation is reached at the end point.

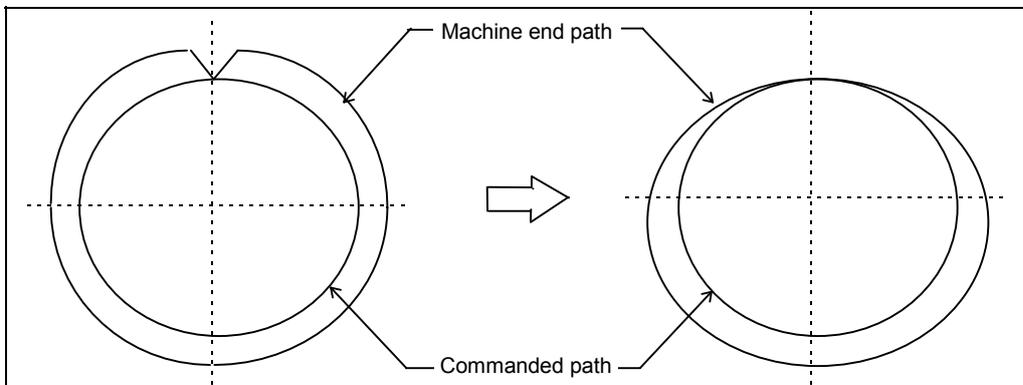




#### Precautions

- (1) The "high-accuracy control" specifications are required to use this function.  
If G61.1 is commanded when there are no specifications, a program error (P123) will occur.
- (2) Command G61.1 in an independent block.
- (3) The G61.1 command can be used when the basic parameter "#1267 ext03/bit0" is set to "0". If G61.1 is commanded when the parameter is set to "1", a program error (P34) will occur.
- (4) Refer to the detailed explanations on the speed clamp during the arc command.
- (5) This function may not be usable depending on the model.
- (6) The #1205 G0bdcc (G0 pre-interpolation) can be used with only one system.  
If the 2nd system is set to the G0 acceleration/deceleration before interpolation, "Y51 parameter error 17" will occur.
- (7) An alarm will occur if high-accuracy control is commanded in the following modes.
  - (a) During milling Program error (P481)
  - (b) During cylindrical interpolation Program error (P481)
  - (c) During pole coordinate interpolation Program error (P481)
  - (d) During normal line control Program error (P29)
- (8) A program error (P29) will occur if the following commands are issued during the mode.
  - (a) Milling
  - (b) Cylindrical interpolation
  - (c) Pole coordinate interpolation
  - (d) Normal line control

## 13. Program Support Functions

### 13.15 High-speed high-accuracy control

#### 13.15 High-speed high-accuracy control

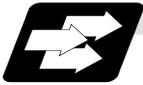

##### Function and purpose

This function runs a machining program that approximates a freely curved surface with fine segments at high speed and high accuracy. This is effective in increasing the speed of machining dies of a freely curved surface.

#### 13.15.1 High-speed high-accuracy control I, II



##### Command format

<b>G05.1 Q1 ;..... High-speed high-accuracy control I ON</b> <b>G05.1 Q0 ;..... High-speed high-accuracy control I OFF</b>
-------------------------------------------------------------------------------------------------------------------------------

<b>G05 P10000 ;... High-speed high-accuracy control II ON</b> <b>G05 P0 ; ..... High-speed high-accuracy control II OFF</b>
--------------------------------------------------------------------------------------------------------------------------------

**(Note 1)** The high-speed high-accuracy mode I and II can not be used at the same time.

**(Note 2)** G05.1 Q1 (high-speed high-accuracy mode I) and G05 P10000 (high-speed high-accuracy mode II) are valid when the parameter "#1297 ext03/bit0" is ON.

## 13. Program Support Functions

### 13.15 High-speed high-accuracy control



#### Detailed description

The modal state must be as shown below when commanding G05.1 Q1 and G05 P10000. Program error (P34) will occur if the conditions are not satisfied.

Function	G code
Tool radius compensation mode	G40
Tool length compensation	G49
Programmable mirror image	G50.1
Mirror image with parameter settings	Cancel
Mirror image with signals	Cancel
Cutting mode	G64
Macro modal call mode	G67
Programmable coordinate rotation mode	G69
Fixed cycle mode	G80
Feed per rotation	G94
Constant surface speed control mode	G97
Interruption type macro mode	M97

← For only mode I

The following data can be commanded while the high-speed high-accuracy control I/II mode is ON. Program error (P34) will occur if other data is commanded.

Function	High-speed high-accuracy mode		G code			
	I	II				
Positioning	○	○	G00			
Cutting feed	○	○	G01	G02	G03	
Helical interpolation	○	○	G02	G03		
Plane selection	○	○	G17	G18	G19	
Tool radius compensation	○	○	G40	G41	G42	
Tool length compensation	○	–	G43	G44	G49	
Programmable mirror image	○	○	G50.1	G51.1		
Mirror image with parameter settings	○	–	–			
Mirror image with signals	○	–	–			
Absolute command	○	○	G90			
Incremental command	○	○	G91			
Workpiece coordinate system setting	○	–	G92			
Workpiece coordinate system selection	○	–	G54 to G59			
Machine coordinate system command	○	–	G53			
Subprogram call	○	○	M98			
External subprogram call	○	○	M198			
Programmable parameter input	○	–	G10 L50			
Programmable offset amount input	○	–	G10 L10			
High-accuracy contour control I cancel	○	–	G05.1 Q0			
High-accuracy contour control II cancel	–	○	G05 P0			

## 13. Program Support Functions

### 13.15 High-speed high-accuracy control

Function	High-speed high-accuracy mode		G code			
	I	II				
Spline control	–	○	G05.1 Q2	G05.1 Q0		
F code command	○	○	Fxxx			
Sequence No. command	○	○	Nxxx			
Comment command	○	○	( )			
Optional block skip	○	○	/			
Miscellaneous function (Note 1)	○	○	Mxxx	Sxxx	Txxx	Bxxx
I/J/K/R command for circular interpolation	○	○	I	J	K	R
Axis movement command	○	○	X	Y	Z	etc.

**(Note 1)** M96 and M97 cannot be used. (High-speed high-accuracy control II only)

- (1) The high-speed high-accuracy control I / II can be used during computer link, tape, MDI, IC card or memory operation.
- (2) The override, maximum cutting speed clamp, single block operation, dry run, handle interrupt and graphic trace are valid even during the high-speed high-accuracy control I / II modal.
- (3) The machining speed may drop depending on the number of characters in one block.
- (4) The high-accuracy control mode automatically turns ON with this function.
- (5) Turn the tool radius compensation command ON and OFF during the high-speed high-accuracy control I / II mode.  
If the high-speed high-accuracy control I / II mode is turned OFF without turning the tool radius compensation OFF, program error (P34) will occur.
- (6) Turn the high-speed high-accuracy control I / II mode OFF before commanding data other than the data listed above.
- (7) When using the high-speed high-accuracy control II mode, set parameter "#1572 Cirorp" to "1" to eliminate the speed fluctuation at the seams of the arc and straight line or arc and arc.


## 13. Program Support Functions

### 13.15 High-speed high-accuracy control




#### Restrictions

- (1) This function is an option.  
If G05.1 Q1 or G05 P10000 is commanded when the option is not provided, the program error (P39) will occur.
- (2) When machining with high-speed high-accuracy control I / II, the program path may differ from the actual path. (Only for G01 command)

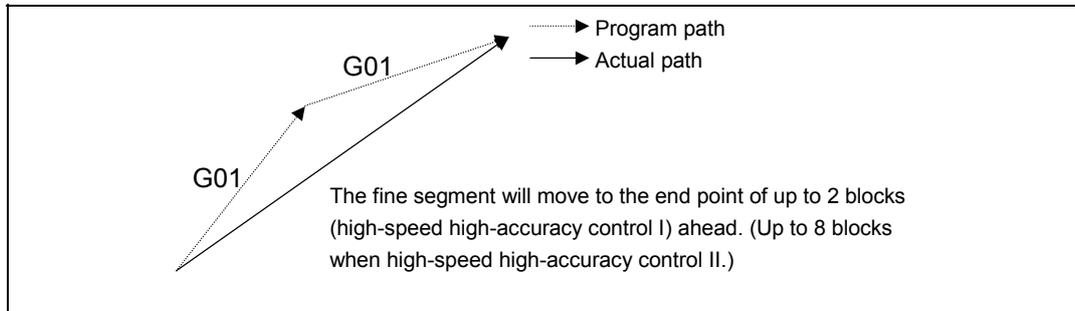


- (3) The automatic operation process has the priority during the high-speed high-accuracy control I / II modal, so the screen display, etc., may lag.
- (4) In the G05.1 Q1, G05.1 Q0 and G05 P10000, G05 P0 command blocks, the speed will decelerate once, so turn these ON and OFF at a place where the tool is separated from the workpiece.
- (5) If an address other than G, Q or N is commanded in the G05.1 Q1, G05.1 Q0 and G05 P10000, G05 P0 command block, a program error (P33) will occur.
- (6) Command G05.1 Q1, G05.1 Q0 and G05 P10000, G05 P0 in independent blocks.
- (7) During high-speed high-accuracy control I / II operation using tape operation, the machining speed may be suppressed depending on the program transmission speed and the number of characters in one block.
- (8) If there is no Q or P command in the G05.1 and G05 command block, a program error (P33) will occur.
- (9) The decimal point is invalid for the Q or P command.
- (10) Program error (P34) will occur if high-speed high-accuracy control I is commanded during the high-speed high-accuracy control II modal.
- (11) Program error (P34) will occur if high-speed high-accuracy control II is commanded during the high-speed high-accuracy control I modal.
- (12) The variable command and user macro cannot be used during the high-speed high-accuracy control II modal.
- (13) If G05.1 Q1 is commanded when the parameter "#1267 ext03/bit0" setting value is "0", a program error (P34) will occur.
- (14) The fairing function is valid for a continuous linear command (G1). Fairing will not be applied in the following type of case.

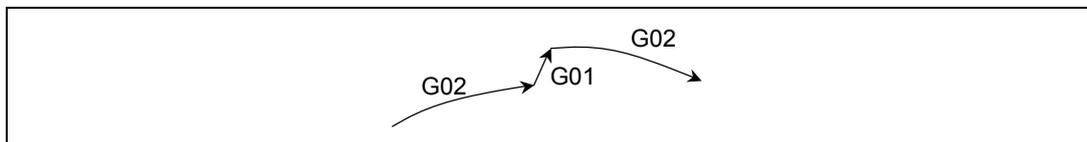

## 13. Program Support Functions

### 13.15 High-speed high-accuracy control


#### 13.15.2 SSS Control

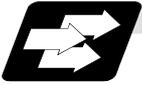

##### Function and purpose

With normal high-accuracy control, the angle between two blocks is compared with the corner deceleration angle to determine whether to execute corner deceleration between the blocks. This can cause the speed to suddenly change between the blocks with an angle close to the corner deceleration angle, resulting in scratches or streaks.

With SSS (Super Smooth Surface) control, the large area path information is used instead of just the angle between the blocks. Thus, optimum speed control that is not excessively affected by minute steps or waviness is possible. This enables machining with fewer scratches and streaks on the cutting surface compared to the normal high-accuracy control function.

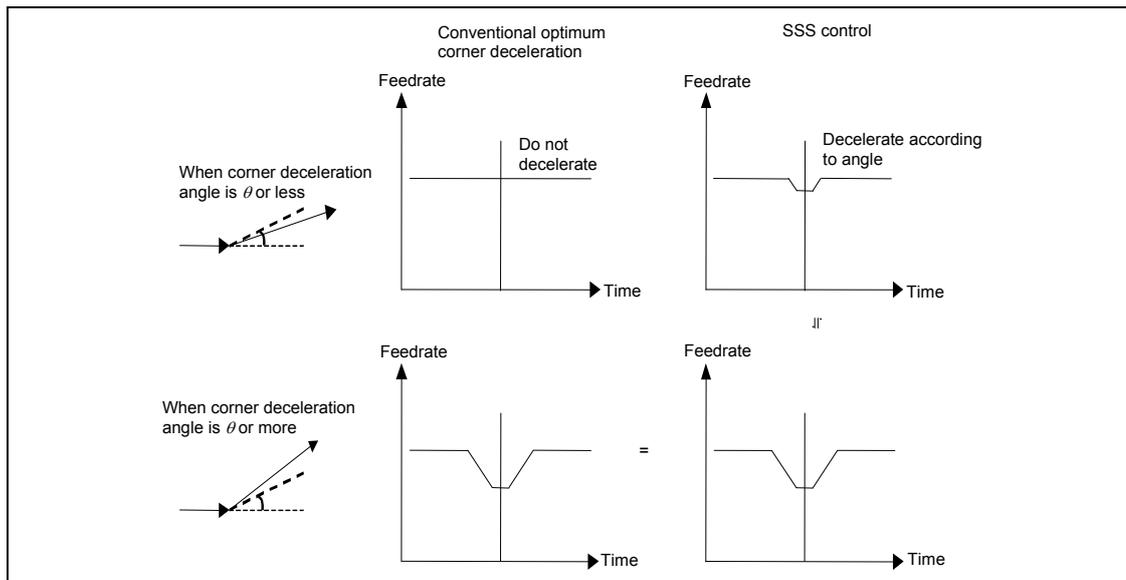

##### [Features of SSS control]

- (1) Speed fluctuation, caused by the effect of the blocks (minute stepping or waviness) and resulting in disturbed machining, is suppressed, and scratches caused by these blocks is reduced.
- (2) This speed control is not easily affected by the steps found in the path.
- (3) If adjacent paths are similar in terms of shape accuracy, the acceleration/deceleration pattern is also similar, and the fluctuation of accuracy caused by a difference in speed is suppressed.
- (4) Even if corner deceleration is not required, the speed is clamped if the predicted acceleration is high.
- (5) The machining time can be reduced in machining applications having many corners.

The length of the path direction recognized with SSS control can be adjusted with the machining parameter "reference length". The range is increased as the setting value increases, and the effect of the error is reduced.

**(Note)** This function is an option. The high-speed high-accuracy control II option is required to use this function.

## 13. Program Support Functions

### 13.15 High-speed high-accuracy control



#### Detailed description

The following procedures are followed to use SSS control.

- (1) Turn the following parameters ON beforehand.  
Basic specification parameter "#1267 ext03/bit0"  
Machining parameter "#8095 SSS ON"
- (2) Command "G05 P10000 ;" (high-speed high-accuracy control II ON).  
→SSS control is valid until "G05 P0 ;" (high-speed high-accuracy control II OFF) is commanded.

The modals must be set as shown below when SSS control starts.  
A program error (P34) will occur if these conditions are not satisfied.

#### Modal state

Function	Mode
Tool diameter compensation mode	G40
Programmable mirror image	G50.1
Cutting mode	G64
Macro modal call mode	G67
Programmable coordinate rotation mode	G69
Canned cycle mode	G80
Per-rotation feed	G94
Constant surface speed control mode	G97
Interrupt type macro mode	M97

#### Status other than modals

Function	Status
Parameter mirror image	OFF
External mirror image	OFF

## 13. Program Support Functions

### 13.15 High-speed high-accuracy control

The following functions can be commanded during the SSS control mode.

A program error will occur if any other function is commanded.

- During G code command: Program error (P34)
- Other cases: Program error (P33)

Function	Command			
Positioning	G00			
Cutting feed	G01	G02	G03	
Helical interpolation	G02	G03		
Plane selection	G17	G18	G19	
Tool diameter compensation	G40	G41	G42	
Programmable mirror image	G50.1	G51.1		
Absolute command	G90			
Incremental command	G91			
Subprogram call	M98			
External subprogram call	M198			
High-accuracy contour control II cancel	G05 P0			
Splin control	G05.1 Q2	G05.1 Q0		
F code command	Fxxx			
Sequence No. command	Nxxx			
Comment command	( )			
Optional block skip	/			
Auxiliary function (Note 1)	Mxxx	Sxxx	Txxx	Bxxx
I, J, K, R command for circular interpolation	I	J	K	R
Axis movement data	X	Y	Z	etc.

**(Note 1)** M96 and M97 cannot be used.

- (1) The F1-digit command function cannot be used.
- (2) SSS control can be used during computer link, tape, MDI, IC card or memory operation.
- (3) The override, maximum cutting speed clamp, signal block operation and graphic trace are valid even during the SS control mode.
- (4) The machining speed may drop depending on the number of characters in one block.
- (5) The tool compensation command should not be used during the SSS control mode.
- (6) Turn the tool diameter compensation command ON and OFF during the SSS control mode. If the SSS control mode is turned OFF before the tool diameter compensation is turned OFF, a program error (P34) will occur.
- (7) To command data other than the valid command data, turn the SSS control mode OFF first.
- (8) The geometric IB command is invalid during SSS control, and will be handled as a normal arc command.

## 13. Program Support Functions

### 13.15 High-speed high-accuracy control



#### Parameter standard values

The standard values of the parameters related to SSS control are shown below.

#### (1) Machining parameters

#	Item	Standard value
8019	R COMP	0
8020	DCC ANGLE	10
8021	COMP CHANGE	1
8022	CORNER COMP	0
8023	CURVE COMP	-20
8029	Fairing L	0
8033	Fairing ON	0
8034	AccClamp ON	0
8036	CordecJudge	0
8037	CorJudgeL	0
8090	SSS ON	1
8091	StdLength	1.000
8092	ClampCoeff	1
8093	StepLeng	0.005
8094	DccWaitAdd	0
8095	Tolerance	0.003

- (Note)** Reference items for adjusting the parameter  
 The relation of each parameter, the accuracy and the speed is shown below.  
 The accuracy and speed required for machining can be adjusted with these settings.  
 When adjusting the parameters, adjust the values within the range that the machine does not vibrate.

Parameter	Adjustment target	Effects
8020	Corner edge	Edge section: Large setting = Accuracy improves, speed drops Curve section: Large setting = Accuracy drops, speed increases  (Note) When used together with "#8095", a large value can be set for the corner deceleration angle while maintaining the accuracy.
8022	Accuracy at corner section	Large setting = Accuracy improves, speed drops
8023	Accuracy at curve section	Large setting = Accuracy increases, speed drops
8092	Accuracy at curve section	Large setting = Accuracy drops, speed increases (Note) Usually use the standard value and adjust with "#8023".
8095	Path error	Small setting = Accuracy improves, speed drops

## 13. Program Support Functions

### 13.15 High-speed high-accuracy control

(2) Basic specification parameters

#	Item		Standard value
1131	Fldcc	Feed forward filter	0
1148	I_G611	Initial high precision	0
1149	Cireft	Arc deceleration sped change	0
1150	Fldc0	G00 feed forward filter	0
1267	ext03/bit0	G code type	1
1571	SSSdis	SSS control adjustment coefficient Fixed value selection	0
1572	Cirorp	Arc command overlap	0


(3) Axis specification parameters

#	Item		Standard value
2010	fwd_g	Feed forward gain	70
2068	G0fwdg	G00 feed forward gain	70
2096	crncsp	Minimum corner deceleration speed	0



#### Restrictions

- (1) When machining with SSS control, the program path may differ from the actual path.

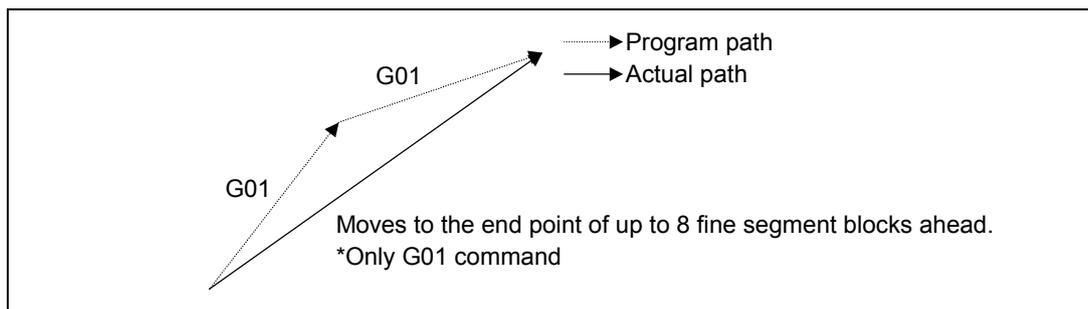


- (2) The automatic operation process has the priority during the SSS control mode, so the screen display, etc., may be delayed.
- (3) The speed will decelerate once at the G05 P10000, P05 P0 command block, so turn ON and OFF when the tool separates from the workpiece.
- (4) Command the G05 P10000, G05 P0 command in an independent block.
- (5) When carrying out SSS control during tape operation, the machining speed may be suppressed depending on the program transmission speed and the number of characters in one block.
- (6) If there is no P command in the G05 command block, a program error (P33) will occur.
- (7) A decimal point cannot be used in the P command.
- (8) A program error (P34) will occur if the high-speed high-accuracy control I command is issued during the SSS control mode.
- (9) Variable commands and user macros cannot be used during the SSS control mode.
- (10) Pre-reading is executed during SSS control, so a program error could occur before the block containing the error is executed.

## 13. Program Support Functions

### 13.15 High-speed high-accuracy control

- (11) If a program error occurs during SSS control, the operation may stop before the command position is reached.
- (12) Do not use external deceleration or dry run during SSS control.
- (13) During SSS control, it may take some time for the operation to stop after the block stop conditions (single block stop, error, etc.) are satisfied.
- (14) Do not correct the buffer during SSS control. The operation will not be guaranteed if the buffer is corrected.
- (15) The reversed position (movement command, sequence No., block No., etc.) of the program display during SSS control, is the final overlapped block, and may differ from the block being executed.
- (16) If automatic/manual simultaneous or automatic handle interrupt are used during SSS control, the machining accuracy will not be guaranteed.
- (17) During SSS control, if override is set to "0" in the single block stop state, the "M01 operation error 0102 override zero" will occur.
- (18) If a fine arc command is issued during SSS control, it may take longer to machine.
- (19) A program error (P33) will occur if external input mirror image is applied during SSS control.
- (20) The same path as single block operation will be used during graphic check.
- (21) The fairing and spline paths may differ when SSS control is valid and invalid.
- (22) If a program stopped during SSS control is restarted with program restart, the path may change because of the pre-reading, etc.

## 13.16 Spline

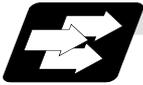

## Function and purpose

This function automatically generates a spline curve that passes through a sequence of points commanded by the fine segment machining program, and interpolates the path along this curve. This allows highly accurate machining at a high speed.

The spline function can be commanded when the machining parameter "#8025 SPLINE ON" is set to 1 in the high-speed high-accuracy control function II mode (between G05P10000 and G05P0). The following explanation is limited to the spline function in the high-speed high-accuracy control function II mode.



## Command format

<b>G05.1Q2X0Y0Z0 ;</b>	<b>Spline mode ON</b>
<b>G05.1Q0 ;</b>	<b>Spline mode OFF</b>



## Example of program

```


:
G91 ;
G05 P10000 ; ..... High-speed high-accuracy control function II mode ON
:
G05.1 Q2 X0 Y0 Z0 ; ..... Spline mode ON
G01 X1000 Z-300 F1000 ;
X1000 Z-200 ;
Y1000 ;
X-1000 Z-50 ;
X-1000 Z-300 ;
G05.1 Q0 ; ..... Spline mode OFF
:
G05 P0 ; ..... High-speed high-accuracy control function II mode OFF
:

```

- (1) The spline function carries out spline interpolation when the following conditions are all satisfied. If the following conditions are not satisfied, the spline function is canceled once, and it is judged whether to carry out new spline from the next block.
  - When the block length is shorter than the machining parameter "#8030 MINUTE LENGTH".
  - When the movement amount is not 0.
  - When one of the following modes is entered.
 

G01: Linear interpolation,	G40: Tool compensation cancel,	G64: Cutting mode
G80: Fixed cycle cancel,	G94: Per minute feed	
  - When only an axis commanded with G05.1Q2 is commanded.
  - Graphic check is not being carried out.
  - A single block is not being executed.
- (2) Command the axis for the spline function mode following G05.1Q2. Note that the command and G05.1Q2. must be in the same block. For example, if the X axis and Y axis are to be commanded in the spline function mode, command "G05.1Q2X0Y0;". The command block containing an axis not designated with this command (G05.1Q2X0Y0) in the spline function mode will carry out linear interpolation instead of spline interpolation.

- (3) If G05.1Q2 is commanded when not in the high-speed high-accuracy control function II mode (between G05P10000 and G05P0), the program error (P34) will occur.
- (4) If the machining parameter "#8025 SPLINE ON" is 0 in the high-speed high-accuracy control function II mode (between G05P10000 and G05P0) and G05.1Q2 is commanded, program error (P34) will occur.
- (5) Up to three axes set as the basic axes I, J and K can be commanded for the spline function.

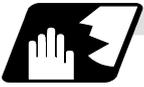

### Detailed description


#### (1) Temporary cancellation of spline interpolation

Normally, once the spline function is activated, one curve is generated by smoothly connecting all points until it is canceled. However, if a corner edge is to be created, or if the segment length is long and spline interpolation is not to be carried out, the function can be canceled temporarily with the parameters.


##### (a) Cancel angle

If the angle  $\theta$  of two consecutive blocks exceeds the value set in parameter "#8026 CANCEL ANG.", the spline function will be temporarily canceled, and optimum corner deceleration will be applied. When this parameter is not set ( $=0$ ), the spline interpolation will be constantly applied. The parameter of the high-accuracy control function "#8020 DCC ANGLE" is valid during the temporary cancellation, and the optimum corner deceleration will be applied.

#### (Example 1) #8026 CANCEL ANG. = $60^\circ$

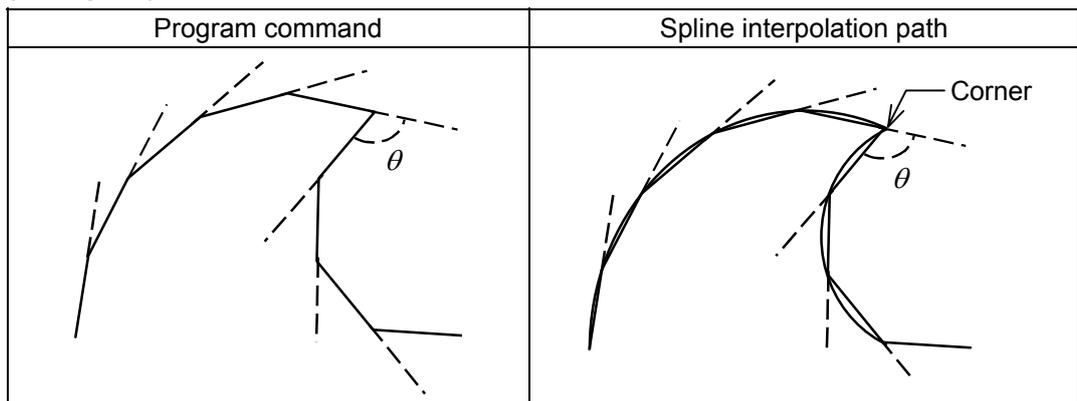

#### (Example 2) #8026 CANCEL ANG. = $0^\circ$

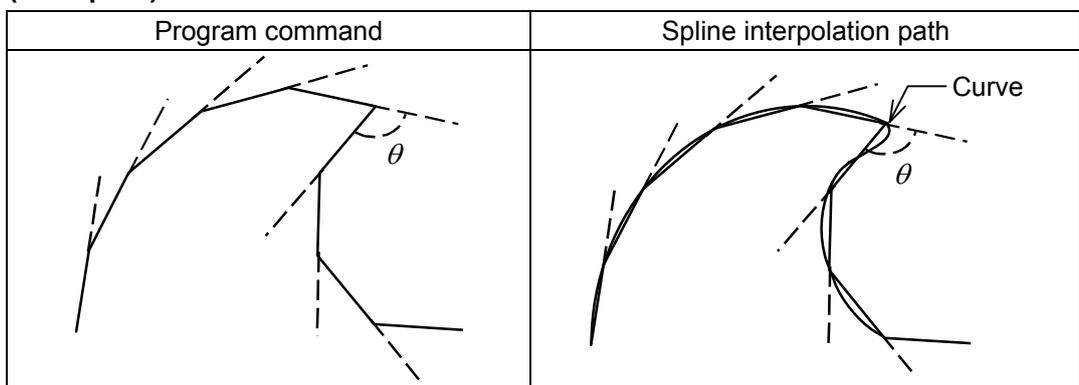

- (Note 1)** If the section to be a corner is smooth when actual machining is carried out, lower the CANCEL ANG. If a smooth section becomes a corner, increase the CANCEL ANG.
- (Note 2)** If the CANCEL ANG.  $\geq$  DCC. ANGLE, the axis will decelerate at all corners which angle is larger than the CANCEL ANG.
- (Note 3)** If the CANCEL ANG.  $<$  DCC. ANGLE, corner deceleration will not be applied if the corner angle is less than the DCC. ANGLE even if the spline interpolation is canceled.


#8026 CANCEL ANG. :Set the angle to cancel the spline control temporarily.

#8020 DCC ANGLE :Set the angle to start the corner deceleration control.

(b) Fine segment length

If the movement amount in a block is longer than the parameter "#8030 MINUTE LENGTH", the spline function will be temporarily canceled, and the linear interpolation will be executed. When this parameter is not set (= 0), the fine segment length will be 1mm. If blocks that satisfies the following condition continue, linear interpolation will be executed.


Segment length in a block  $>$  fine segment length (#8030 MINUTE LENGTH)

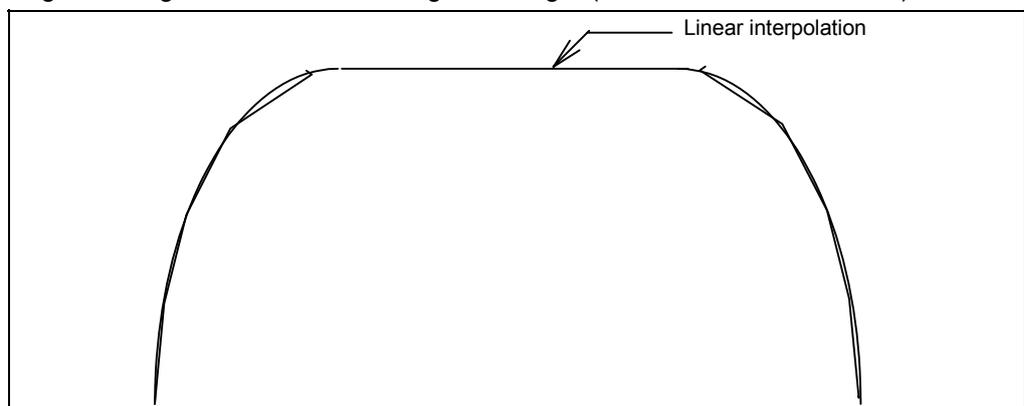


If the #8030 is set to "-1", the spline interpolation will not be canceled according to the block length.

(c) When a block without movement exists

If a block without movement exists in the spline function, the spline interpolation will be canceled temporarily. Note that blocks containing only ";" will not be viewed as a block without movement.

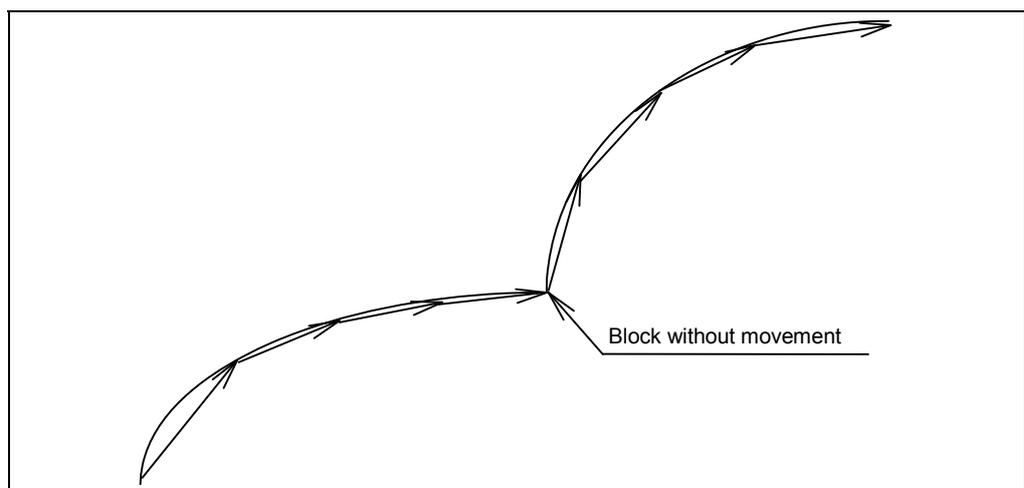

- (d) When a block markedly longer than other blocks exists in spline function  
 If the  $i$ th block length is  $L_i$  in the spline interpolation mode, and it is given as " $L_i > L_{i-1} \times 8$ " or " $L_i > L_{i+1} \times 8$ ", the block will be interpreted as a linear section, and the spline mode will be temporarily canceled. However, if the parameter "#8030 MINUTE LENGTH" is set to "-1", the mode will not be canceled.

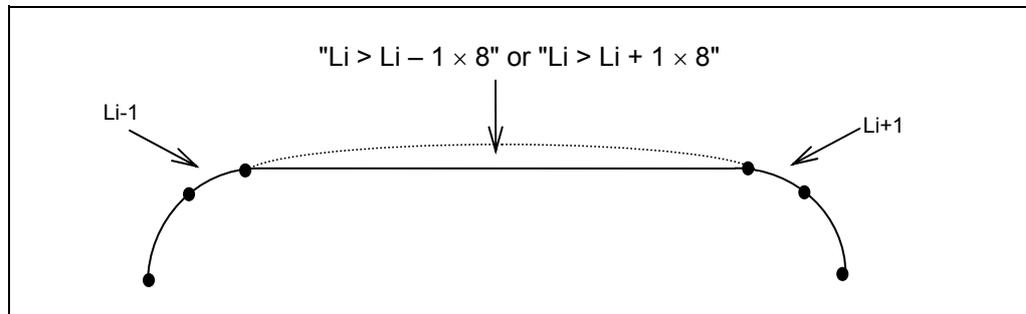

## (2) Spline interpolation curve shape revision

Normally, once the spline function is entered, one curve connecting all points smoothly is generated until the function is canceled. However, if the spline curve shape is to be revised, the spline curve shape can be revised with the parameters.

- (a) Chord error of block containing inflection point  
 When changing the CAD curve data into fine segments with the CAM, normally, the tolerance (chord error) of the curve is approximated in segments that are approx.  $10\mu\text{m}$ . If there is an inflection point in the curve, the length of the block containing the inflection point may lengthen. (Because the tolerance is applied at both ends near the inflection point.) If the block lengths with this block and the previous and subsequent blocks are unbalanced, the spline curve in this block will have a large error in respect to the original curve.

At sections where the tolerance (chord error) of the fine segment block and spline curve in a block containing this type of inflection point, if the chord error in the corresponding section is larger than the value set in parameter (#8027 Toler-1), the spline curve shape is automatically revised so that the error is within the designated value.



However, if the maximum chord error of the corresponding section is more than five times larger than the parameter "Toler-1" setting value, the spline function will be temporarily canceled.

The curve is revised only in the corresponding block.

The revisions are carried out with the following conditions for each block in the spline interpolation mode.

There is an inflection point in the spline curve, and the maximum error of the spline curve and linear block is larger than parameter "Toler-1". (Distance between P3-P4 in Fig. 1)

When the above conditions are satisfied, the spline curve will be revised so that the error between P3-P4 in Fig. 2 is within the designated value.

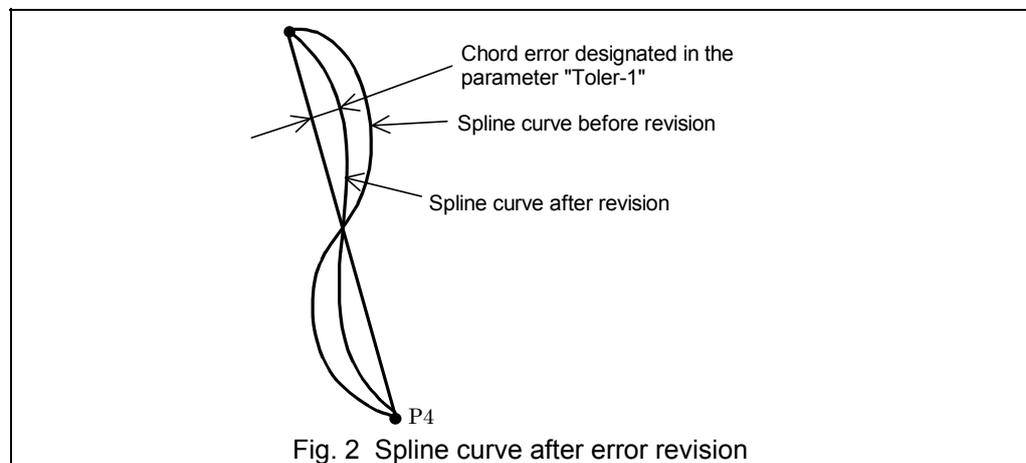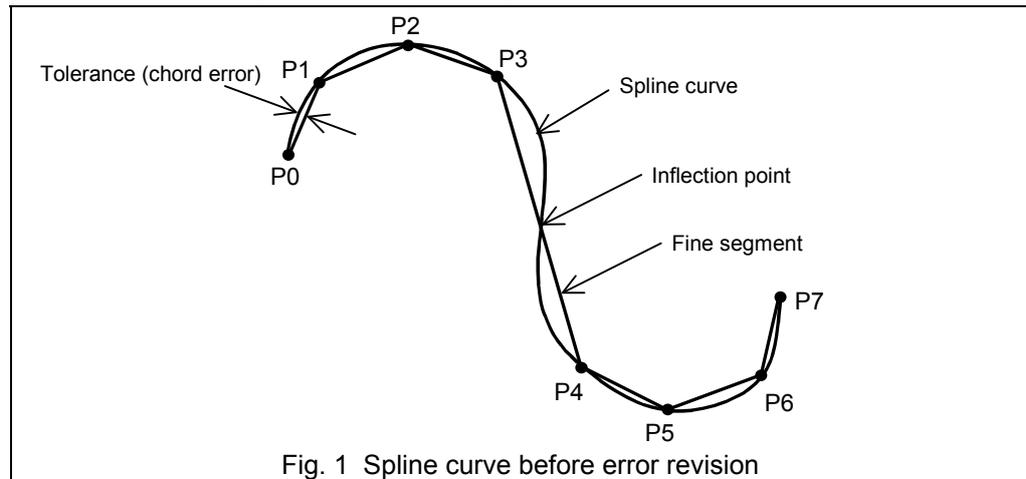

In parameter "Toler-1", set the tolerance for developing into fine segments with the CAM. Set a smaller value if the expansion (indentation) is apparent due to the relation with the adjacent cutting paths.

(b) Chord error of block not containing inflection point

Even in blocks that do not contain an inflection point, if the block lengths are not matched, the tolerance of the spline curve may increase. The curve may also expand due to the effect of relatively short blocks.



At sections where the tolerance (chord error) of the fine segment block and spline curve in a block not containing an inflection point, if the chord error in the corresponding section is larger than the value set in parameter (#8028 Toler-2), the spline curve shape is automatically revised so that the error is within the designated value. However, if the maximum chord error of the corresponding section is more than five times larger than the parameter "Toler-2" setting value, the spline function will be temporarily canceled.

The curve is revised only in the corresponding block.

The revisions are carried out with the following conditions for each block in the spline interpolation mode.

There is no inflection point in the spline curve, and the maximum error of the spline curve and linear block is larger than parameter "Toler-2". (Distance between P2-P3 in Fig. 3)


When the above conditions are satisfied, the spline curve will be revised so that the error between P2-P3 in Fig. 4 is within the designated value.

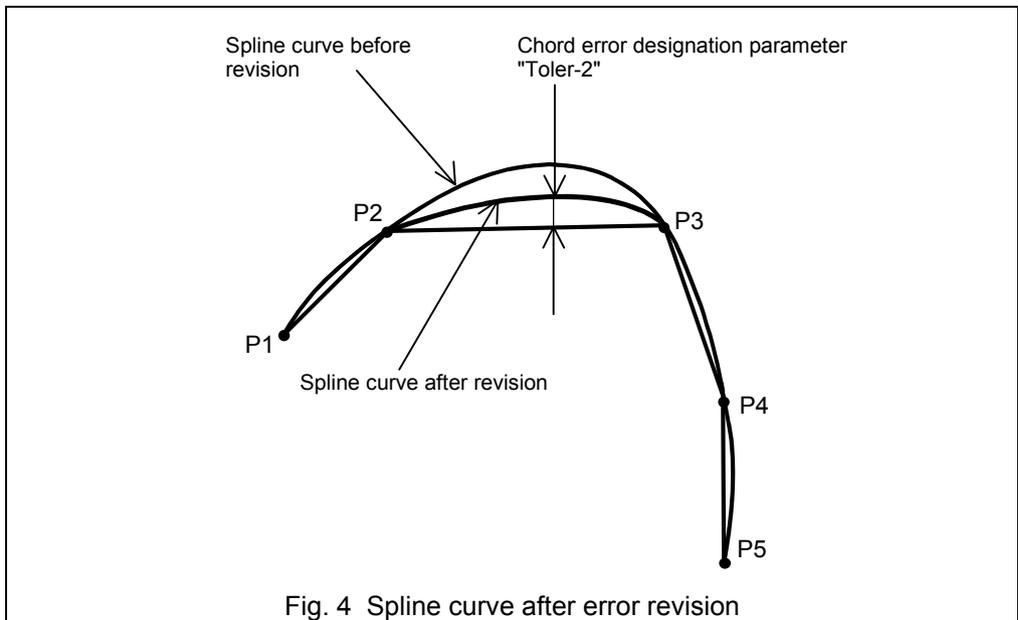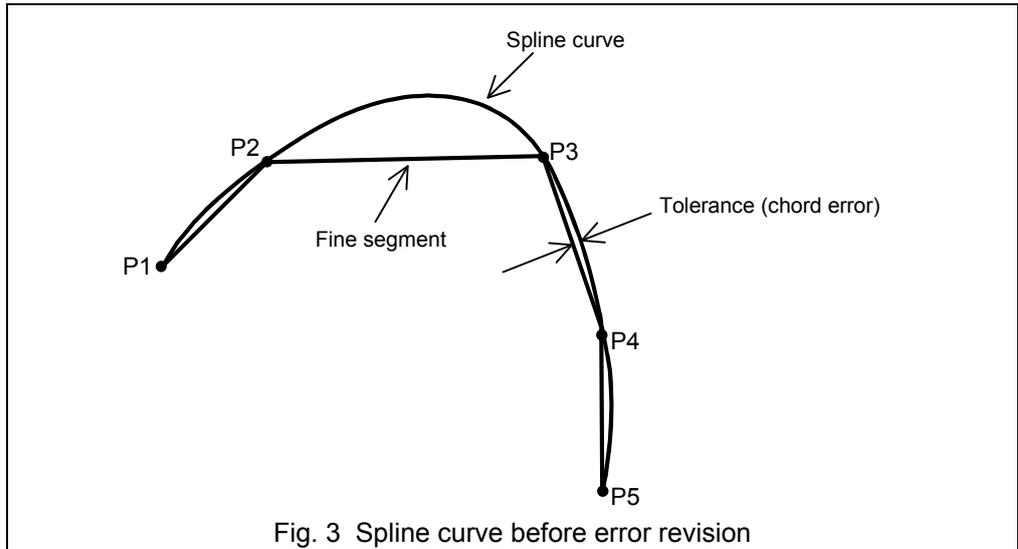

In parameter "Toler-2", set the tolerance for developing into fine segments with the CAM.

**(3) Curvature speed clamp**

The commanded speed F for the spline function during a segment linear arc will be the speed commanded in the previously set modal. However, if the axis is fed with the same speed, excessive acceleration may occur at the sections where the curvature is large (where curvature radius is small) as shown below. Thus, the speed clamp will be applied.

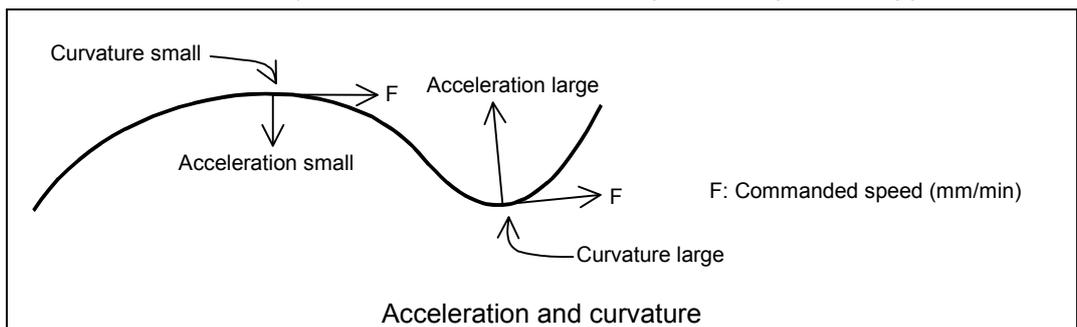


With the spline function, the high-accuracy control function is always valid. Thus, even if the curvature changes such as in this curve, the speed will be clamped so that the tolerable value of acceleration/deceleration before interpolation, which is calculated with the parameters, is not exceeded.

The clamp speed is set for each block, and the smaller of the curvature radius  $R_s$  at the curve block start point and the curvature radius  $R_e$  at the end point of the block will be used as the main curvature radius  $R$ . Using this main curvature radius  $R$ , the clamp speed  $F'$  will be calculated with expression (1).

The smaller of this clamp speed  $F'$  and the commanded speed  $F$  will be incorporated for the actual feedrate.

This allows cutting with an adequate feedrate corresponding the curvature radius along the entire curve.

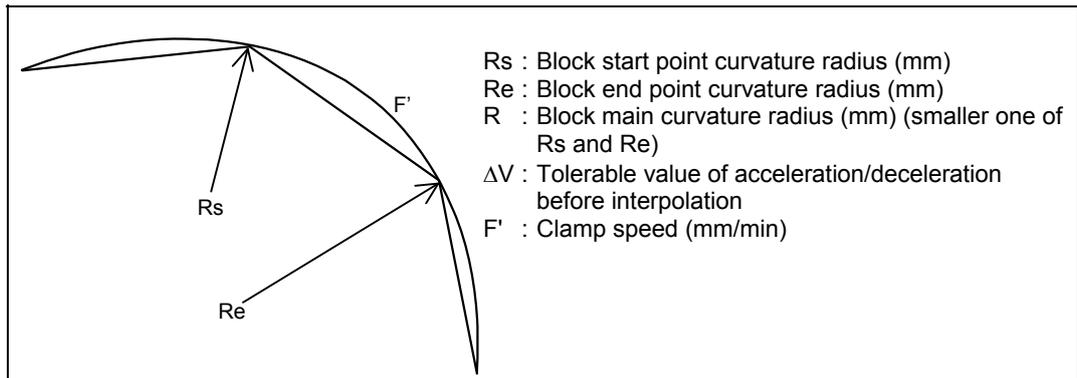

$$F' = \sqrt{R \times \Delta V \times 60 \times 1000} \times \frac{100 - K_s}{100} \dots\dots\dots (1)$$

$$\Delta V = \frac{G1bF \text{ (mm/min)}}{G1btL \text{ (ms)}}$$

$G1bF$  : Target acceleration/deceleration before interpolation

$G1btL$  : Acceleration/deceleration time to reach the target speed


$K_s$  : #8019 R COMP (Accuracy coefficient)



### Precautions

- (1) The spline function will be canceled during graphic check.
- (2) This function is valid when the base specifications parameters "#1267 ext03/bit0" is set to "1". If G05.1 Q2 is commanded when "0" is set, program error (P34) will occur.
- (3) If the specifications for this function are not provided and G05.1Q2 is commanded, the program error (P39) will occur.
- (4) Even if "-1" is set for parameter "#8030 MINUTE LENGTH", the spline function will be temporarily canceled by the cancel conditions (cancel angle, non-movement block, excessive chord error, etc.) other than the block length.
- (5) Command the G05.1 Q2 and G05.1 Q0 commands in independent blocks. A program error (P33) will occur if these are not commanded in independent blocks.
- (6) A program error (P33) will occur if the G05.1 command block does not contain a Q command.

### 13.17 Scaling ; G50/G51

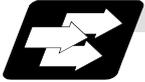

#### Function and purpose

By multiplying the moving axis command values within the range specified under this command by the factor, the shape commanded by the program can be enlarged or reduced to the desired size.



#### Command format


##### (1) Scaling ON

**G51 Xx Yy Zz Pp ; Scaling ON**

Xx, Yy, Zz : Scaling center coordinates  
Pp : Scaling factor

##### (2) Scaling cancel

**G50 ; Scaling cancel**

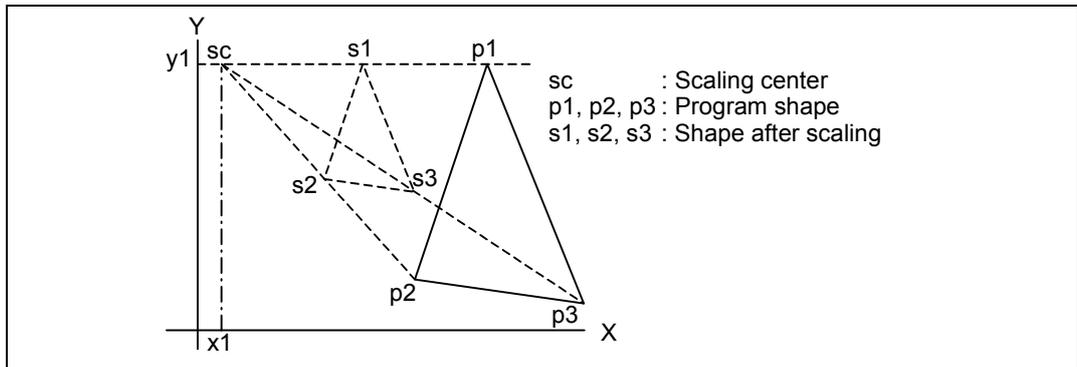



## Detailed description

**(1) Specifying the scaling axis, scaling center and its factor**

Commanding G51 selects the scaling mode. The G51 command only specifies the scaling axis, its center and factor, and does not move the axis.

Though the scaling mode is selected by the G51 command, the axis actually valid for scaling is the axis where the scaling center has been specified.

**(a) Scaling center**

- Specify the scaling center in accordance with the then absolute/incremental mode (G90/G91).
- The scaling center must be specified also when the current position is defined as a center.
- As described above, the axis valid for scaling is only the axis whose center has been specified.

**(b) Scaling factor**

- Use the address P to specify the scaling factor.
- Minimum command unit : 0.000001
- Command range: Either 1 to 99999999 (0.0000001 to 99.999999 times) or 0.0000001 to 99.999999 is valid, but the decimal point command is valid only after the G51 command.
- When the factor is not specified in the same block as G51, the factor set with the parameter (#8072 SCALING P) is used.
- If changed during the scaling mode, the value of this parameter is not made valid. Scaling is performed with the setting value that was used when G51 was commanded.
- When the factor is not specified in both the program and parameter, it is calculated as 1.

**(c) A program error will occur in either of the following cases.**

- Scaling was commanded though there was no scaling specification. (Program error (P350))
- The upper limit of the factor specifying range was exceeded in the same block as G51. (Program error (P 35))  
(If the machining parameter scaling factor is used, a factor less than 0.0000001 or more than 99.999999 is calculated as 1.)

**(2) Scaling cancel**

When G50 is commanded, scaling is canceled.




## Precautions

- (1) Scaling is not applied to the offset amounts of tool radius compensation, tool position offset, tool length offset and like. (Compensation and offset are calculated for the shape after scaling.)
- (2) Scaling is valid for only the movement command in automatic operation. It is invalid for manual movement.
- (3) For X, Y and Z, scaling is valid for only the specified axes and is not applied to the axes not specified.
- (4) When an arc is commanded and scaling is valid for one of the two axes configuring the arc plane, a program error (P70) will occur.
- (5) Commanding M02, M30 or M00 (only when M0 is reset) during the scaling mode selects the cancel mode.
- (6) When the coordinate system is shifted (G92, G52 command) during scaling, the scaling center is also shifted by the difference amount.
- (7) If manual interrupt is made during scaling, manual ABS selection is ignored and operation performed is the same as in manual ABS OFF.



### Example of program

(Example 1)

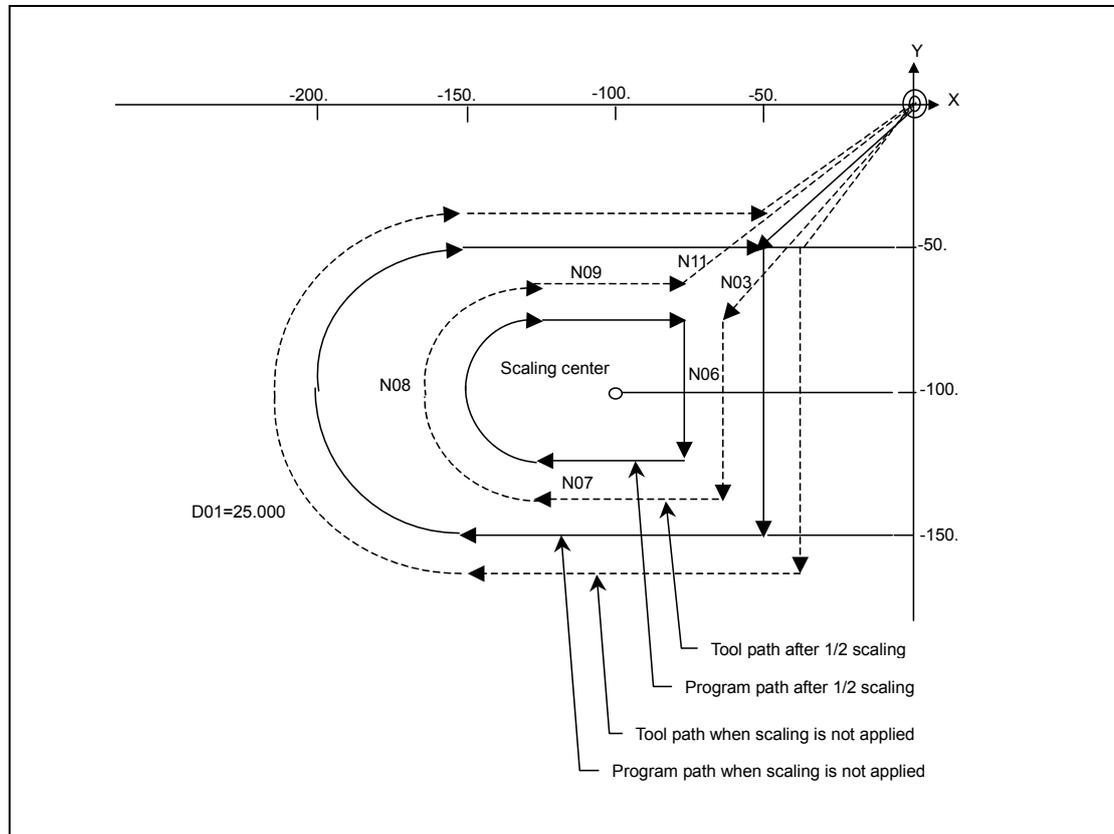

<Program>

```

N01 G92    X0 Y0 Z0;
N02 G90 G51 X-100. Y-100. P0.5;
N03 G00 G43 Z-200. H02;
N04 G41    X-50. Y-50. D01;
N05 G01    Z-250. F1000;
N06        Y-150. F200;
N07        X-150.;
N08 G02    Y-50. J50.;
N09 G01    X-50.;
N10 G00 G49 Z0;
N11 G40 G50 X0 Y0;
N12 M02;
    
```




#### Relation with other functions

- (1) G27 reference point verify command  
When G27 is commanded during scaling, scaling is canceled at completion of the command.
- (2) Reference point return command (G28, G29, G30)  
When the G28 or G30 reference point return command is issued during scaling, scaling is canceled at the midpoint and the axis returns to the reference point. When the midpoint is to be ignored, the axis returns to the reference point directly. When G29 is commanded during scaling, scaling is applied to the movement after the midpoint.
- (3) G60 (unidirectional positioning) command  
If the G60 (unidirectional positioning) command is given during scaling, scaling is applied to the final positioning point and is not applied to the creep amount. Namely, the creep amount is uniform regardless of scaling.
- (4) Workpiece coordinate system switching  
When the workpiece coordinate system is switched during scaling, the scaling center is shifted by the difference between the offset amounts of the new and old workpiece coordinate systems.
- (5) During coordinate rotation  
When scaling is commanded during coordinate rotation, the scaling center rotates. Scaling is executed at that rotated scaling center.
- (6) G51 command  
When the G51 command is issued during the scaling mode, the axis whose center was newly specified is also made valid for scaling. Also, the factor under the latest G51 command is made valid.

## 13. Program Support Functions

### 13.18 Program coordinate rotation

#### 13.18 Program coordinate rotation; G68/G69

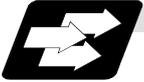

##### Function and purpose

When machining a complicated shape at a position rotated in respect to the coordinate system, the shape before rotation can be programmed on the local coordinate system, rotation angle designated with the program coordinate rotation command, and the rotated shaped machined.



##### Command format

##### (1) Coordinate rotation ON

###### **G68 Xx Yy Rr; Coordinate rotation ON**

G68 : Coordinate rotation command

Xx, Yy : Rotation center coordinates.

Two axes (X, Y or Z) corresponding to the selected plane are designated with absolute positions.


Rr : Rotation angle

The counterclockwise direction is +.

Select the command plane with G17 to G19.

##### (2) Coordinate rotation cancel


###### **G69 ; Coordinate rotation cancel**

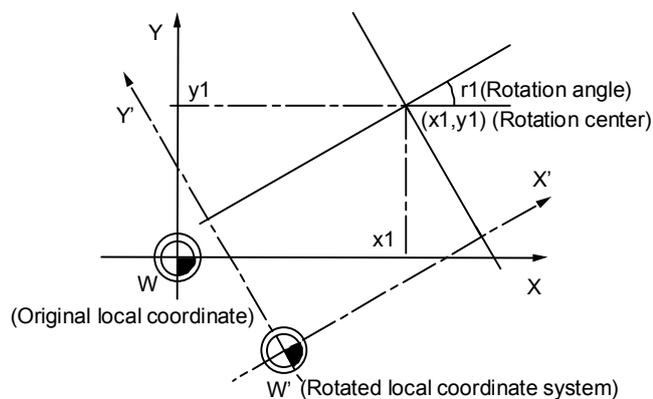



## Detailed description

- (1) Always command the rotation center coordinate (x1, y1) with an absolute value. Even if commanded with an incremental address, it will not be handled as an incremental value.
- (2) If the rotation center coordinates (x1, y1) are omitted, the position where the G68 command was executed will be the rotation center.
- (3) The rotation takes place in the counterclockwise direction by the angle designated in rotation angle r1.
- (4) The rotation angle r1 setting range is -360.000 to 360.000. If a command exceeding 360 degrees is issued, the remainder divided by 360 degrees will be the command.
- (5) The program coordinate rotation is a function used on the local coordinate system. The relation of the rotated coordinate system, workpiece coordinate system and basic machine coordinate system is shown below.

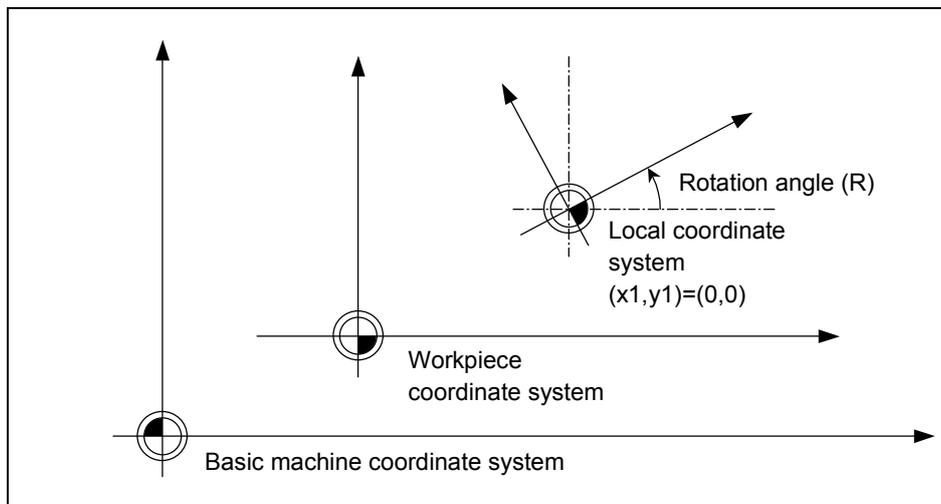


- (6) The coordinate rotation command during coordinate rotation is processed as center coordinates and rotation angle changes.
- (7) If M02 or M30 is commanded or the reset signal is input during the coordinate rotation mode, the coordinate rotation mode will be canceled.
- (8) G68 is displayed on the modal information screen during the coordinate rotation mode. When the mode is canceled, the display changes to G69. (The modal value is not displayed for the rotation angle command R.)
- (9) The program coordinate rotation function is valid only in the automatic operation mode.

## 13. Program Support Functions

### 13.18 Program coordinate rotation



#### Example of program

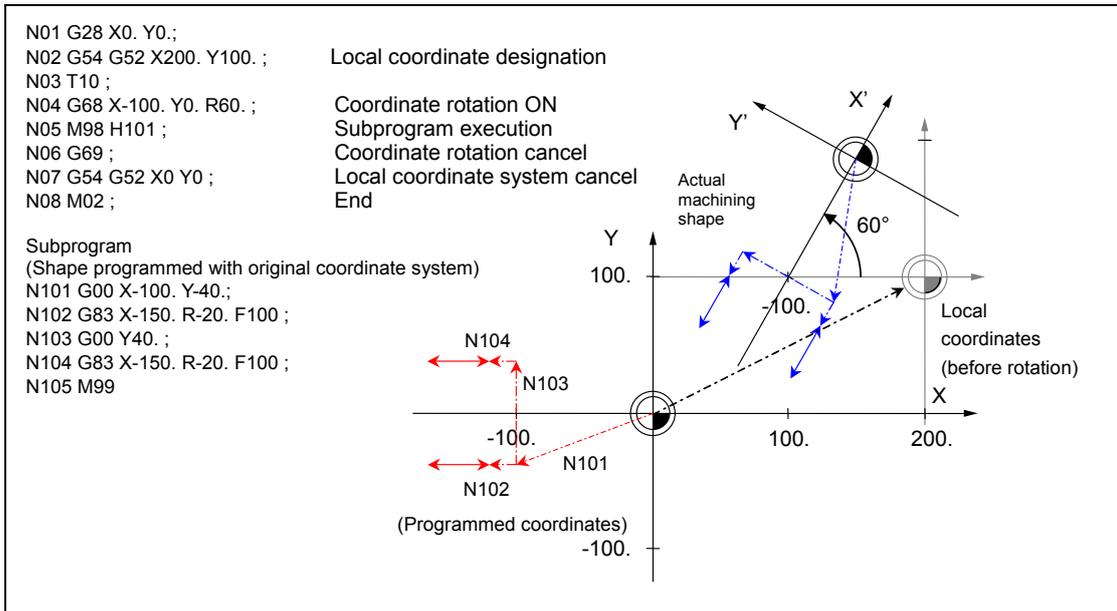

#### Precautions

- (1) Always command an absolute value for the movement command immediately after G68 and G69.
- (2) If manual absolute is ON and manual interrupt is issued for the coordinate rotation axis, do not use automatic operation for the following absolute value command.
- (3) The intermediate point during reference point return is the position after the coordinates are rotated.
- (4) If the workpiece coordinate system offset amount is changed during the coordinate rotation mode, the rotation center for the program coordinate rotation will be shifted. (The center will follow the coordinate system.)
- (5) If workpiece coordinate system setting (G92) is executed during the coordinate rotation mode, the rotation center for program coordinate rotation will not shift. (The center position will be the same looking from the basic machine coordinate system.)
- (6) If the workpiece coordinates are changed during the coordinate rotation mode (ex., from G54 to G55), the rotation center of the program coordinate rotation will be the position in the commanded coordinate system. (The center position will be the same looking from the basic machine coordinate system.)
- (7) If coordinate rotation is executed to the G00 command for only one axis, two axes will move. If G00 non-interpolation (parameter "#1086 GOIntp" = 1) is set, each axis will move independently at the respective rapid traverse rates. If the axis must be moved linearly (interpolated) from the start point to the end point (such as during the hole machining cycle), always turn G00 non-interpolation OFF (parameter "#1086 GOIntp" = 0). The feedrate in this case is the composite speed of each axis' rapid traverse rate, so the movement speed will be faster than when moving only one axis (before coordinate rotation).
- (8) If the coordinate rotation specifications are not provided, a program error (P260) will occur when coordinate rotation is commanded.

- (9) Program error (P111) will occur if the plane selection code is commanded during the coordinate rotation mode.
- (10) Program error (P485) will occur if pole coordinate interpolation is commanded during the coordinate rotation mode.
- (11) Program error (P481) will occur if coordinate rotation is commanded during the pole coordinate interpolation mode.
- (12) Program error (P485) will occur if cylindrical interpolation is commanded during the coordinate rotation mode.
- (13) Program error (P481) will occur if coordinate rotation is commanded during the cylindrical interpolation mode.
- (14) Program error (P34) will occur if the workpiece coordinate system preset (G92.1) is commanded during the coordinate rotation mode.
- (15) Program error (P34) will occur if high-accuracy control mode, high-speed machining mode 3, high-speed high-accuracy I or II is commanded during the coordinate rotation mode.



#### Relation with other functions


- (1) The offset operation during the coordinate rotation mode compensates the local coordinate system after coordinate rotation. The compensation direction is the coordinate system before rotation.
- (2) Mirror image during the coordinate rotation mode is applied on the local coordinate system after coordinate rotation.
- (3) All position displays show the positions after coordinate rotation with the local coordinate system before rotation.
- (4) When the coordinate value variables are read, the positions are all on the coordinate system before rotation.
- (5) The coordinates can also be rotated for the a parallel axis. Select the plane that contains the parallel axis before issuing the G68 command. The plane cannot be selected in the same block as the G68 command.
- (6) The coordinates can be rotated for the rotation axis. The angle will be interpreted as a length when rotating.

# 14. Coordinates System Setting Functions

## 14.1 Coordinate words and control axes



### 14. Coordinates System Setting Functions

#### 14.1 Coordinate words and control axes

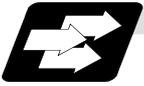

#### Function and purpose


There are three controlled axis for the basic specifications, but when an additional axis is added, up to four axes can be controlled. Pre-determined alphabetic coordinate words that correspond to the axes are used to designate each machining direction.

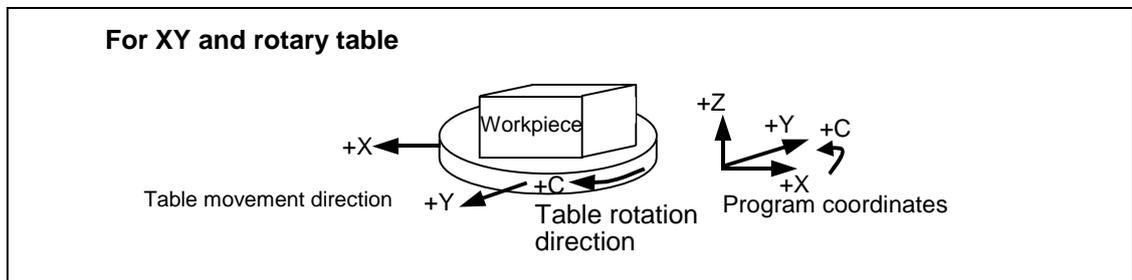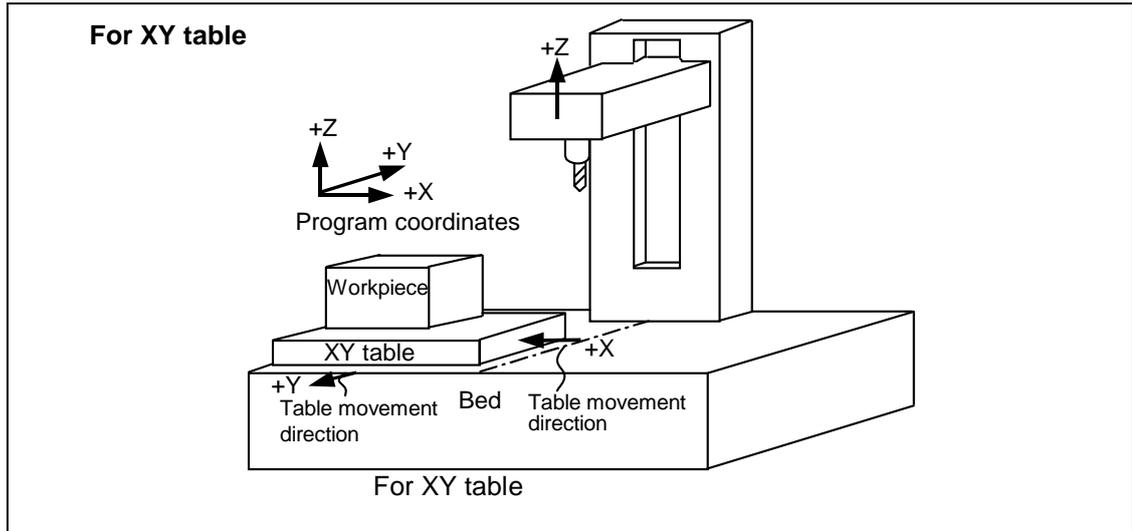

# 14. Coordinates System Setting Functions

## 14.2 Basic machine, work and local coordinate systems

### 14.2 Basic machine, work and local coordinate systems

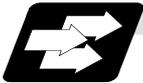


#### Function and purpose

The basic machine coordinate system is fixed in the machine and it denotes that position which is determined inherently by the machine.

The work coordinate systems are used for programming and in these systems the reference point on the workpiece is set as the coordinate zero point.

the local coordinate systems are created on the work coordinate systems and they are designed to facilitate the programs for parts machining.

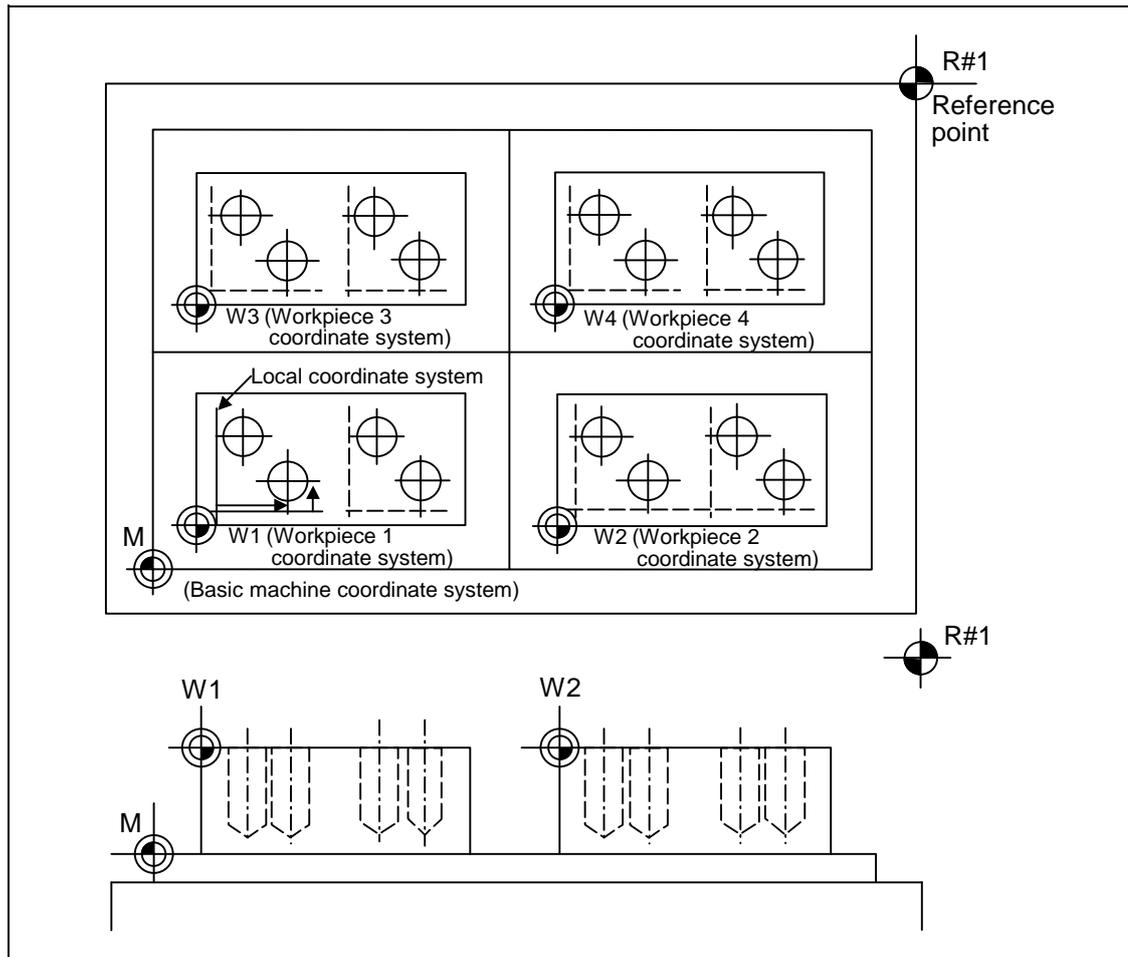

## 14. Coordinates System Setting Functions

### 14.3 Machine zero point and 2nd, 3rd, 4th reference points (Zero point)


#### 14.3 Machine zero point and 2nd, 3rd, 4th reference points (Zero point)



##### Function and purpose

The machine zero point serves as the reference for the basic machine coordinate system. It is inherent to the machine and is determined by the reference (zero) point return.

2nd, 3rd and 4th reference (zero points) points (zero points) relate to the position of the coordinates which have been set beforehand by parameter from the zero point of the basic machine coordinate system.

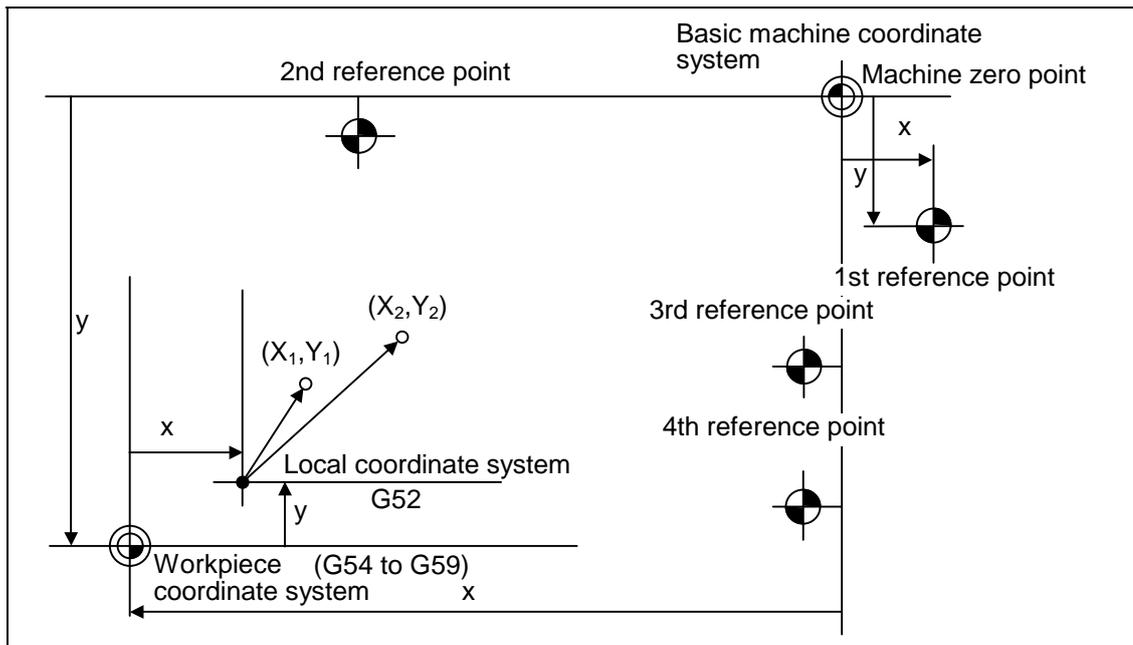

## 14. Coordinates System Setting Functions

### 14.4 Basic machine coordinate system selection

#### 14.4 Basic machine coordinate system selection; G53



##### Function and purpose

The basic machine coordinate system is the coordinate system that expresses the position (tool change position, stroke end position, etc.) that is characteristic to the machine.

The tool is moved to the position commanded on the basic machine coordinate system with the G53 command and the coordinate command that follows.



##### Command format

Basic machine coordinate system selection


**(G90) G53 Xx Yy Zz αα ;**

αα :Additional axis



##### Detailed description


- (1) When the power is switched on, the basic machine coordinate system is automatically set as referenced to the reference (zero) point return position, which is determined by the automatic or manual reference (zero) point return.
- (2) The basic machine coordinate system is not changed by the G92 command.
- (3) The G53 command is valid only in the block in which it has been designated.
- (4) In the incremental value command mode (G91), the G53 command provides movement with the incremental value in the coordinate system being selected.
- (5) Even if G53 is commanded, the tool diameter offset amount for the commanded axis will not be canceled.
- (6) The 1st reference point coordinate value indicates the distance from the basic machine coordinate system 0 point to the reference point (zero point) return position.
- (7) The G53 commands will all move with rapid traverse.
- (8) If the G53 command and G28 command (reference point return) are issued in the same block, the command issued last will be valid.

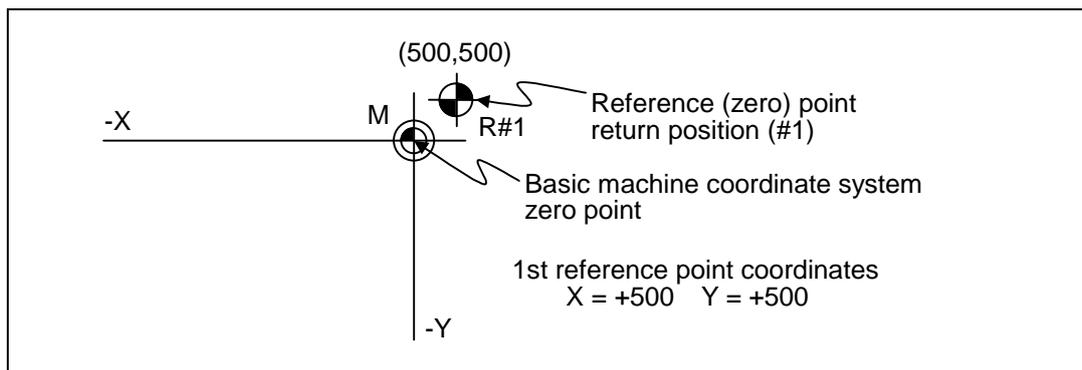

# 14. Coordinates System Setting Functions

## 14.5 Coordinate system setting

### 14.5 Coordinate system setting ;G92

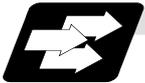

#### Function and purpose

By commanding G92, the absolute value (workpiece) coordinate system and current position display value can be preset in the command value without moving the machine.




#### Command format

**G92 Xx₁ Yy₁ Zz₁ αα₁ ;**  
 αα :Additional axis




#### Detailed description

- (1) After the power is turned on, the first reference point return will be done with dog-type, and when completed, the coordinate system will be set automatically. (Automatic coordinate system setting)

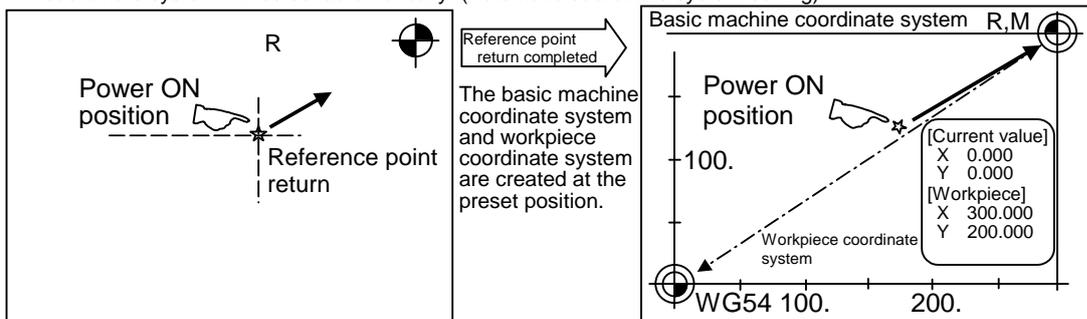

- (2) By commanding G92, the absolute value (workpiece) coordinate system and current position display value can be preset in the command value without moving the machine.

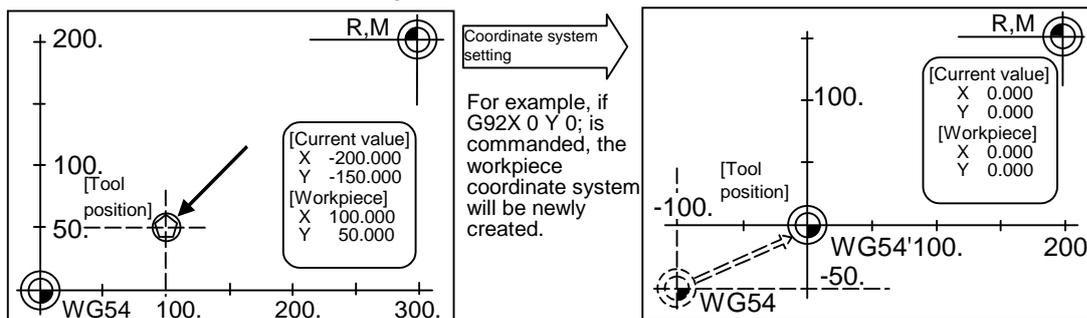

**(Note)** If the workpiece coordinate system deviated because the axis is moved manually when the manual absolute position switch is OFF, etc., the workpiece coordinate system can be corrected with the following steps.

- (1) Execute reference point return while the coordinate system is deviated.
- (2) After that, command G92G53X0Y0Z0;. With this command, the workpiece coordinate value and current value will be displayed, and the workpiece coordinate system will be preset to the offset value.

## 14. Coordinates System Setting Functions


### 14.6 Automatic coordinate system setting

#### 14.6 Automatic coordinate system setting



##### Function and purpose

This function creates each coordinate system according to the parameter values input beforehand from the setting and display unit when the reference point is reached with the first manual reference point return or dog-type reference point return when the NC power is turned ON.

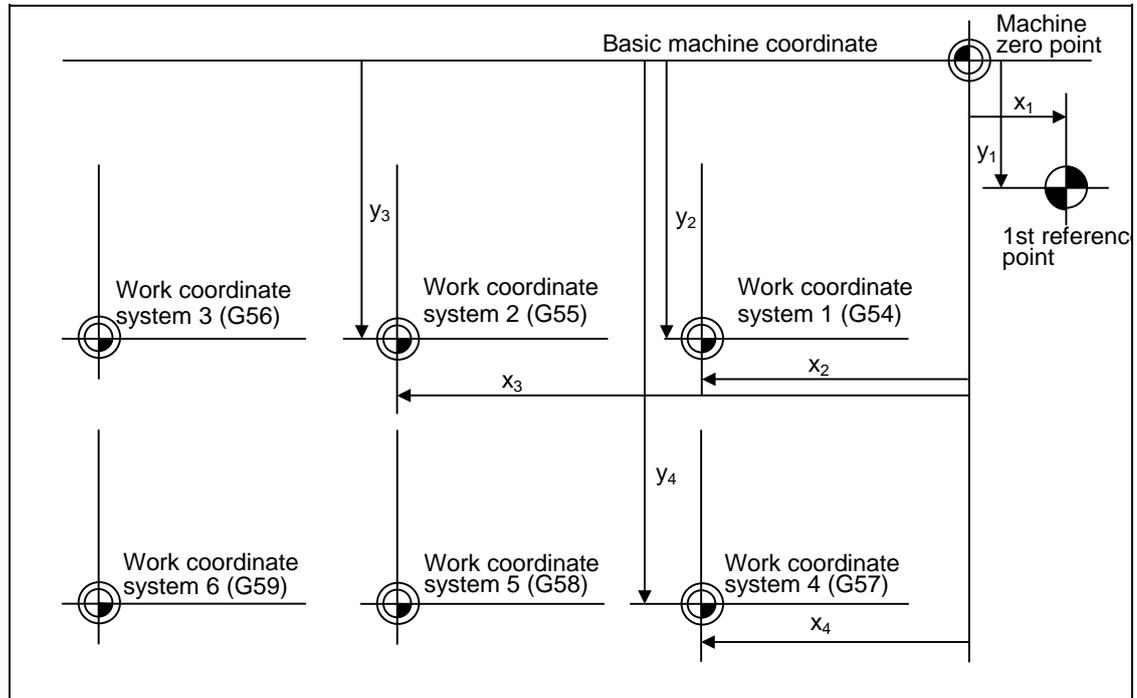

##### Detailed description

- (1) The coordinate systems created by this function are as follow:
  - (a) Basic machine coordinate system
  - (b) Work coordinate systems (G54 to G59)
- (2) The parameters related to the coordinate system all provide the distance from the zero point of the basic machine coordinate system. Therefore, it is decided at which position in the basic machine coordinate system the first reference point should be set and then the zero point positions of the work coordinate systems are set.
- (3) When the automatic coordinate system setting function is executed, shifting of the workpiece coordinate system with G92, setting of the local coordinate system with G52, shifting of the workpiece coordinate system with origin set, and shifting of the workpiece coordinate system with manual interrupt will be canceled.
- (4) The dog-type reference point return will be executed in the following conditions.
  - The first manual reference point return after power ON.
  - The first automatic reference point return after power ON.
  - The second and following manual reference point return when the dog-type is selected with a parameter.
  - The second and following automatic reference point return when the dog-type is selected with a parameter.

## 14. Coordinates System Setting Functions


### 14.7 Reference (zero) point return

#### 14.7 Reference (zero) point return; G28, G29



##### Function and purpose

- (1) After the commanded axes have been positioned by G0, they are returned respectively at rapid traverse to the first reference (zero) point when G28 is commanded.
- (2) By commanding G29, the axes are first positioned independently at high speed to the G28 or G30 intermediate point and then positioned by G0 at the commanded position.

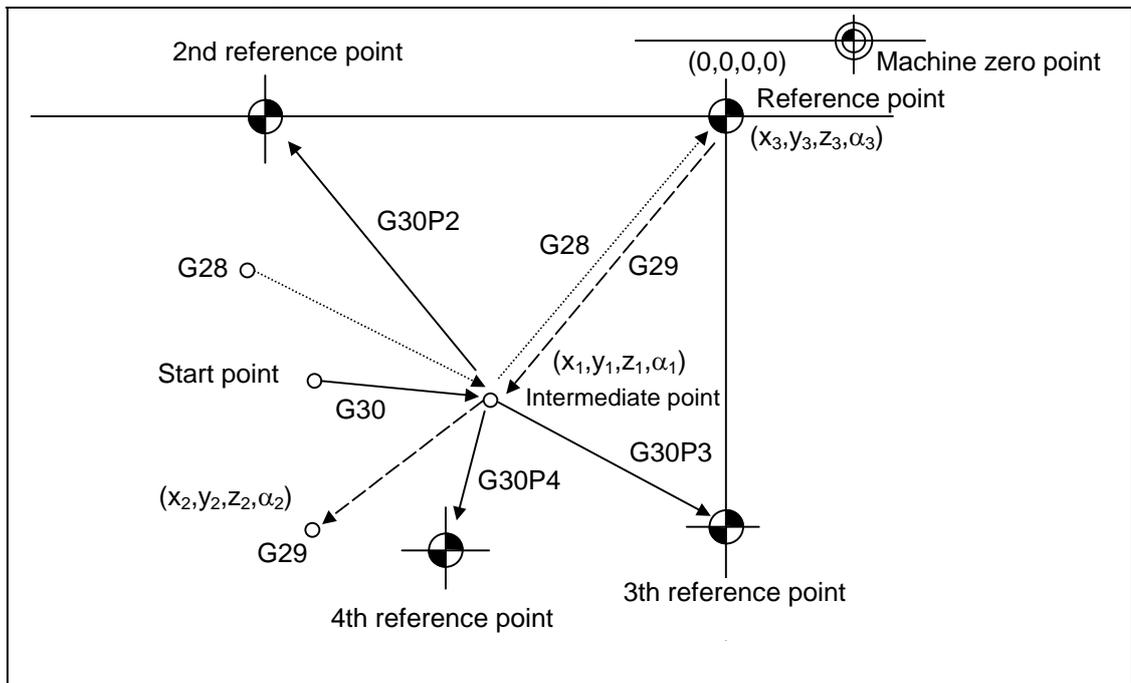

##### Command format

**G28**  $Xx_1 Yy_1 Zz_1 \alpha\alpha_1$ ; Automatic reference point return

**G29**  $Xx_2 Yy_2 Zz_2 \alpha\alpha_2$ ; Start position return

$\alpha\alpha_1/\alpha\alpha_2$  : additional axis

## 14. Coordinates System Setting Functions

### 14.7 Reference (zero) point return



#### Detailed description


- (1) The G28 command is equivalent to the following:  
G00 Xx₁ Yy₁ Zz₁ αα₁ ;  
G00 Xx₃ Yy₃ Zz₃ αα₃ ;  
In this case, x₃, y₃, z₃ and α₃ are the reference point coordinates and they are set by a parameter "#2037 G53ofs" as the distance from the zero point of the basic machine coordinate system.
- (2) After the power has been switched on, the axes which have not been subject to manual reference (zero) point are returned by the dog type of return just as with the manual type. In this case, the return direction is regarded as the command sign direction. If the return type is straight-type return, the return direction will not be checked. For the second and subsequent returns, the return is made at high speed to the reference (zero) point which was stored at the first time and the direction is not checked.
- (3) When reference (zero) point return is completed, the zero point arrival output signal is output and also #1 appears at the axis name line on the setting and display unit screen.
- (4) The G29 command is equivalent to the following:  
G00 Xx₁ Yy₁ Zz₁ αα₁ ;  
G00 Xx₂ Yy₂ Zz₂ αα₂ ;  
} Rapid traverse (non-interpolation type) applies independently for each axis for the positioning from the reference point to the intermediate point.  
In this case, x₁, y₁, z₁ and α₁ are the coordinates of the G28 or G30 intermediate point.
- (5) Program error (P430) results when G29 is executed if automatic reference (zero) point return (G28) is not performed after the power has been switched on.
- (6) When the Z axis is canceled, the movement of the Z axis to the intermediate point will be ignored, and only the position display for the following positioning will be executed. (The machine itself will not move.)
- (7) The intermediate point coordinates (x₁, y₁, z₁, α₁) of the positioning point are assigned by the position command modal. (G90, G91).
- (8) G29 is valid for either G28 or G30 but the commanded axes are positioned after a return has been made to the latest intermediate point.
- (9) The tool offset will be canceled during reference point return unless it is already canceled, and the offset amount will be cleared.

# 14. Coordinates System Setting Functions

## 14.7 Reference (zero) point return




### Example of program

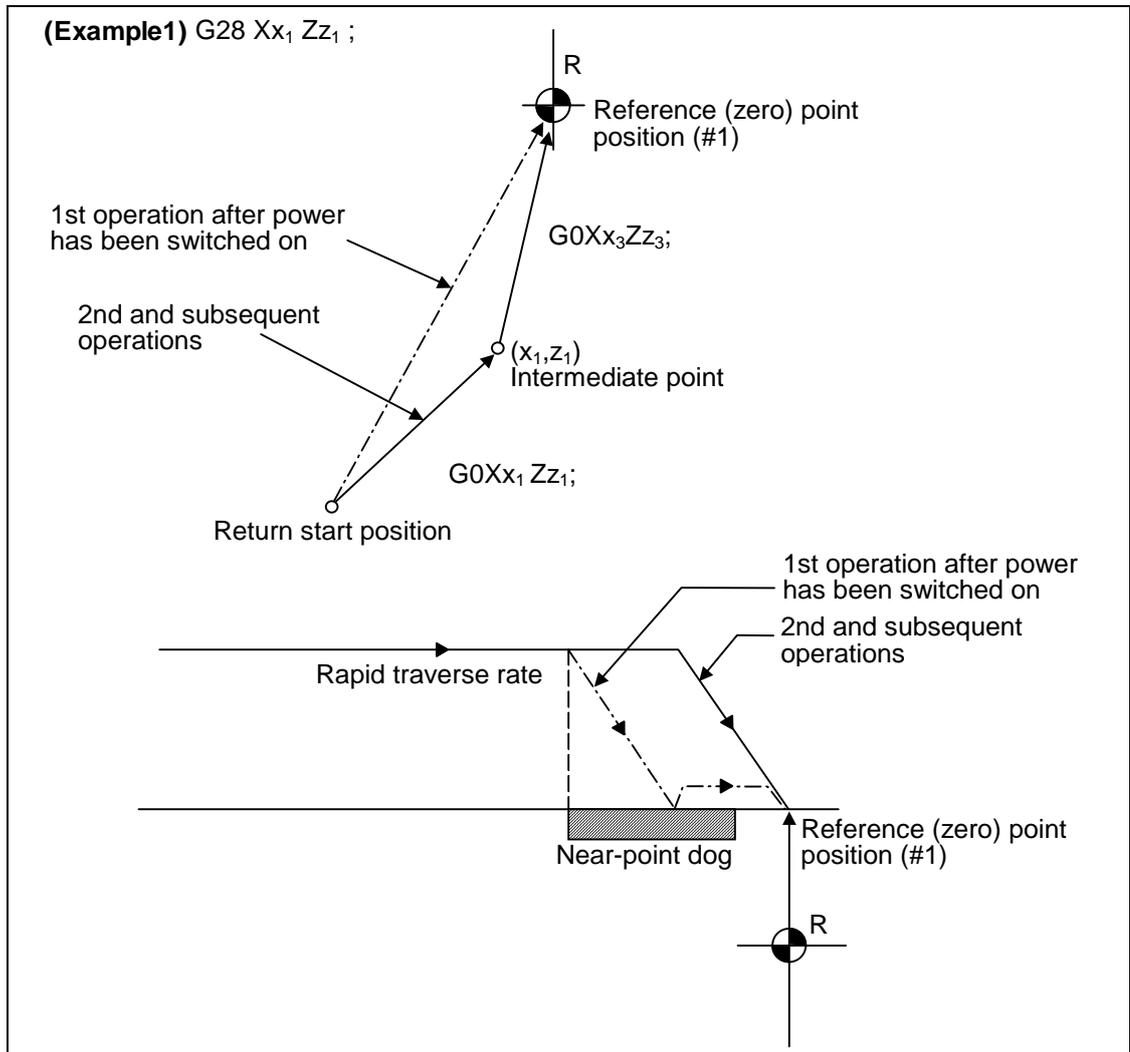

# 14. Coordinates System Setting Functions


## 14.7 Reference (zero) point return

(Example2) G29 Xx₂ Zz₂ ;

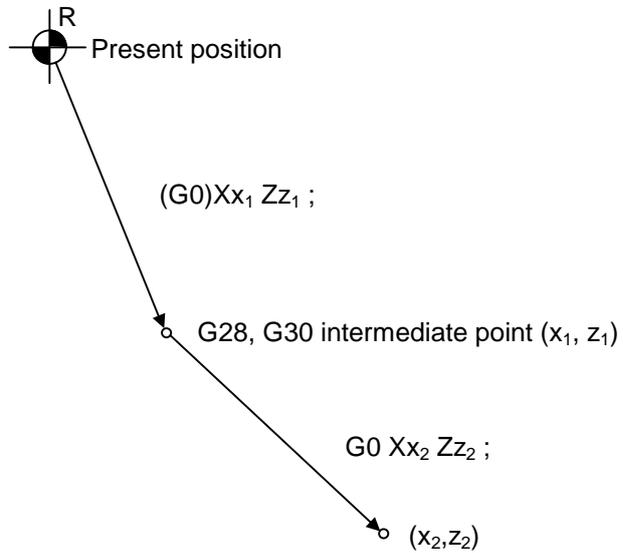

(Example 3)


- G28 Xx₁ Zz₁ ; (From point A to reference (zero) point)
- G30 Xx₂ Zz₂ ; (From point B to 2nd reference (zero) point)
- G29 Xx₃ Zz₃ ; (From point C to point D)

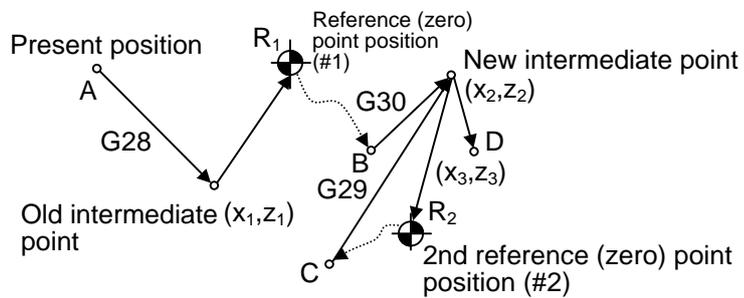

## 14. Coordinates System Setting Functions


### 14.8 2nd, 3rd and 4th reference (zero) point return

#### 14.8 2nd, 3rd and 4th reference (zero) point return; G30

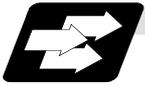

##### Function and purpose

The tool can return to the second, third, or fourth reference (zero) point by specifying G30 P2 (P3 or P4).

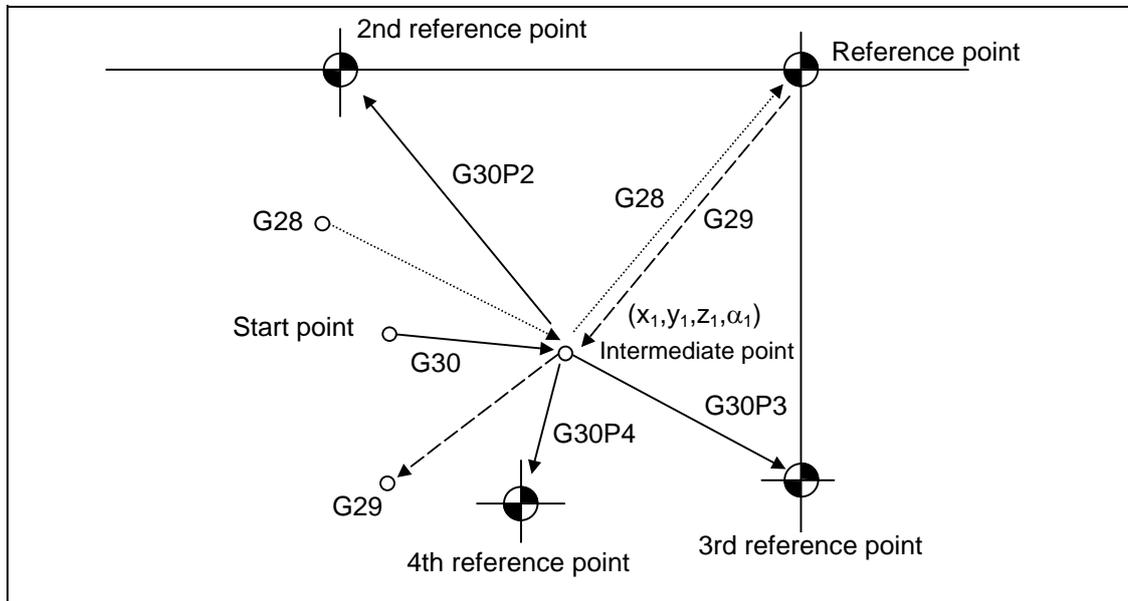

##### Command format

**G30 P2 (P3, P4) Xx₁ Yy₁ Zz₁ aa₁;**

$\alpha_1$

:Additional axis


## 14. Coordinates System Setting Functions

### 14.8 2nd, 3rd and 4th reference (zero) point return




#### Detailed description

- (1) The second, third, or fourth reference (zero) point return is specified by P2, P3, or P4. A command without P or with P0, P1, P5 or a greater P number is ignored, returning the tool to the second reference (zero) point.
- (2) In the second, third, or fourth reference (zero) point return mode, as in the first reference (zero) point return mode, the tool returns to the second, third, or fourth reference (zero) point via the intermediate point specified by G30.
- (3) The second, third, and fourth reference (zero) point coordinates refer to the positions specific to the machine, and these can be checked with the setting and display unit.
- (4) If G29 is specified after completion of returning to the second, third, and fourth reference (zero) points, the intermediate position used last is used as the intermediate position for returning by G29.

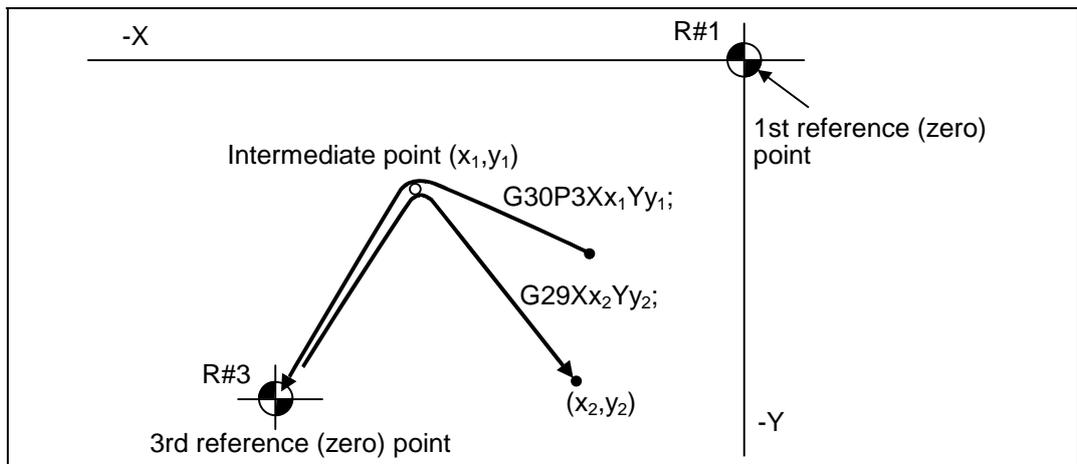


- (5) With reference (zero) point return on a plane during compensation, the tool moves without tool diameter compensation (zero compensation) from the intermediate point. With a subsequent G29 command, the tool moves with tool diameter compensation until the G29 command from the intermediate point.

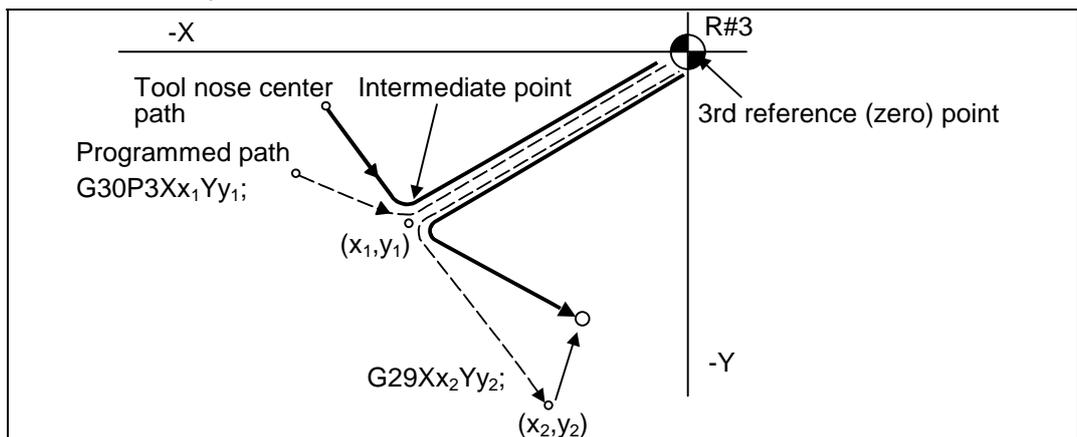

## 14. Coordinates System Setting Functions

### 14.8 2nd, 3rd and 4th reference (zero) point return


- (6) The tool length offset amount for the axis involved is canceled after the second, third and fourth reference (zero) point returns.
- (7) With second, third and fourth reference (zero) point returns in the machine lock status, control from the intermediate point to the reference (zero) point will be ignored. When the designated axis reaches as far as the intermediate point, the next block will be executed.
- (8) With second, third and fourth reference (zero) point returns in the mirror image mode, mirror image will be valid from the start point to the intermediate point and the tool will move in the opposite direction to that of the command. However, mirror image is ignored from the intermediate point to the reference (zero) point and the tool moves to the reference (zero) point.

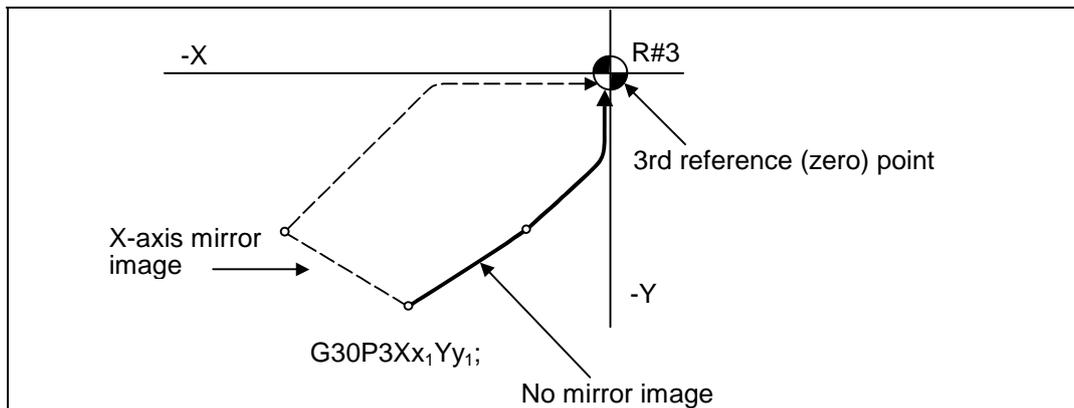

# 14. Coordinates System Setting Functions

## 14.9 Simple zero point return

### 14.9 Simple zero point return

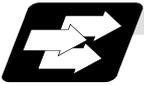

#### Function and purpose

By setting the parameters (#1222 aux06/bit7), the G28, G29 and G30 positioning operations can be simplified and the time shortened.

The time is shortened by approx. several ten ms.

When this function is validated, the positioning accuracy may drop.



Do not use this function when using an inclined axis.



#### Methods of shortening time



##### (1) G90 without intermediate point

Fig. 1 The graph shows the commanded speed during movement.

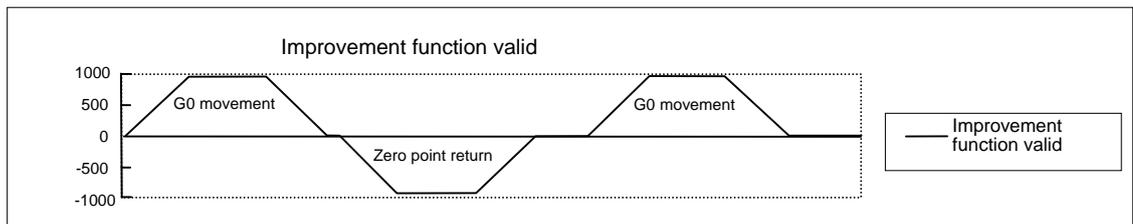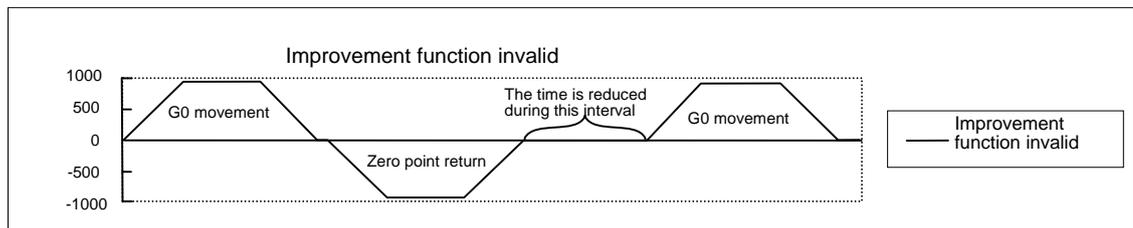

##### (2) G90 with intermediate point

Fig. 2 The graph shows the commanded speed during movement.

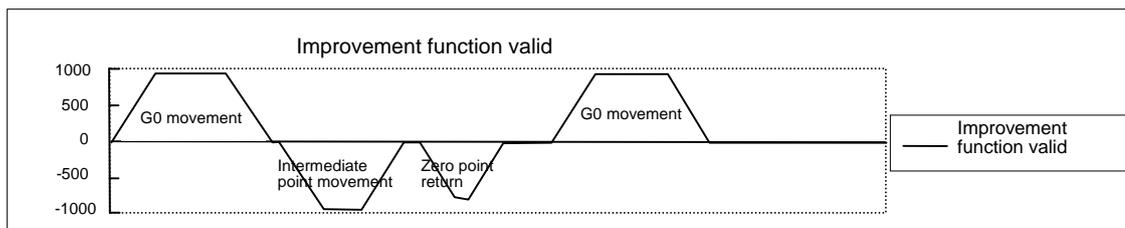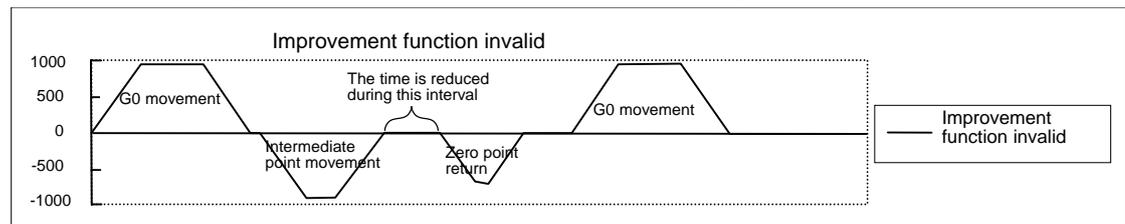


# 14. Coordinates System Setting Functions

## 14.9 Simple zero point return


### (3) G91 without intermediate point

Fig. 3 The graph shows the commanded speed during movement.

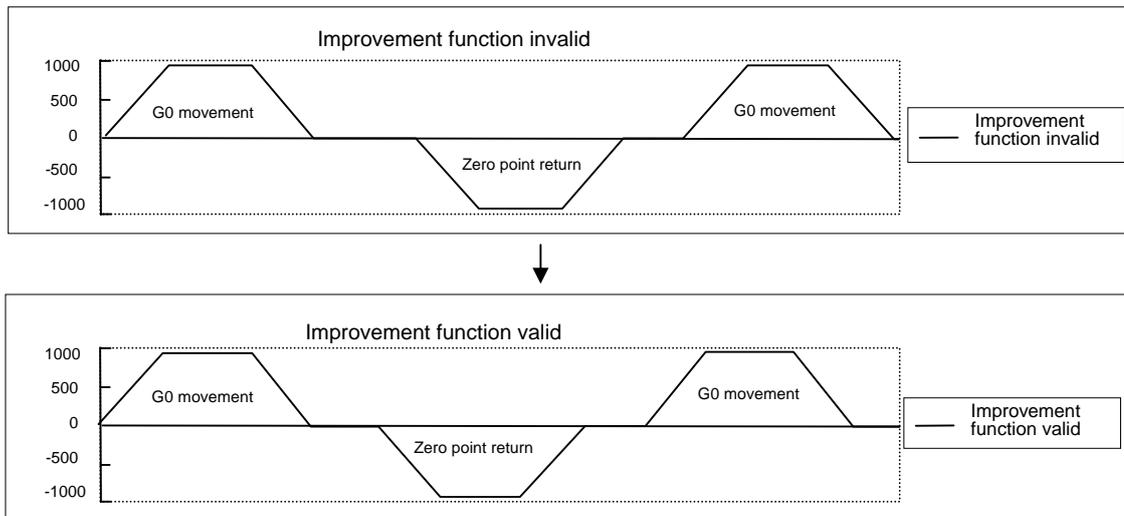

### (4) G91 with intermediate point

Fig. 4 The graph shows the commanded speed during movement.

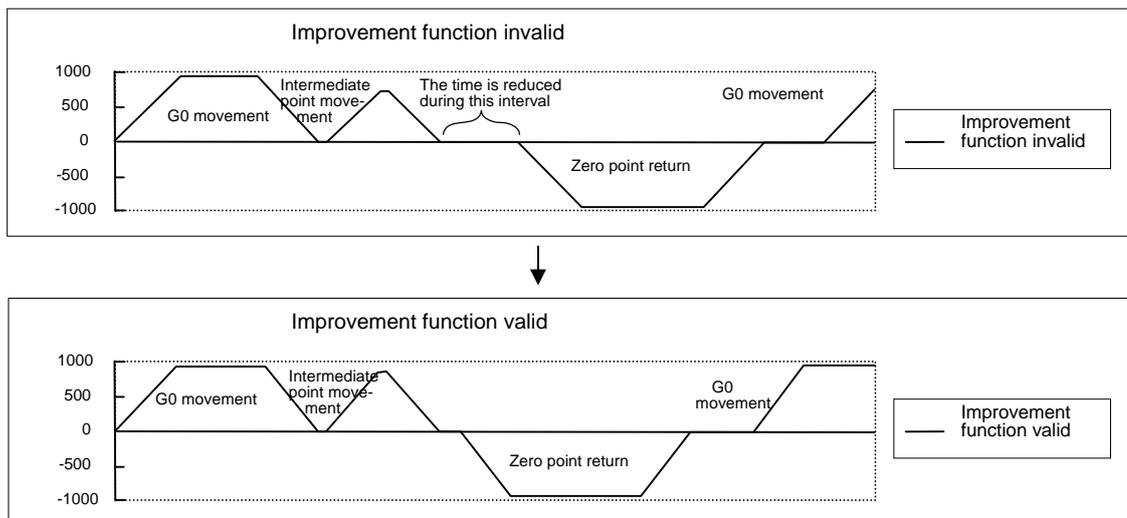




### (1) G90 without intermediate point

```
(Program example)
G90;
G00 X30.0 Y30.0 Z30.0;
G28 XYZ;
G00 X-30.0 Y30.0 Z30.0;
M30;
```


The accuracy of the movement before G28 is maintained.  
 The G28 zero point return accuracy will drop. (The accuracy is affected by the positioning speed and movement distance.)

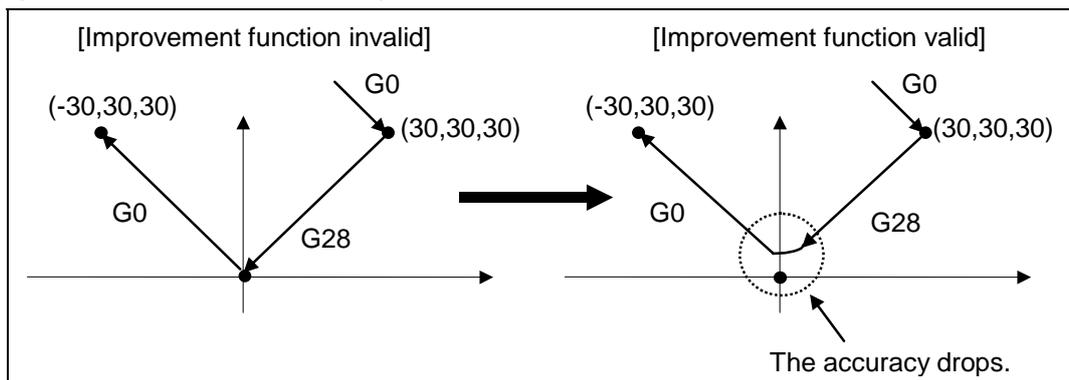

### (2) G90 with intermediate point

```
(Program example)
G90;
G00 X30.0 Y30.0 Z30.0;
G28 X30.0 Y15.0 Z10.0;
G00 X-30.0 Y30.0 Z30.0;
M30;
```

The accuracy of the movement before G28 is maintained.  
 The accuracy of the movement to the intermediate point is maintained.

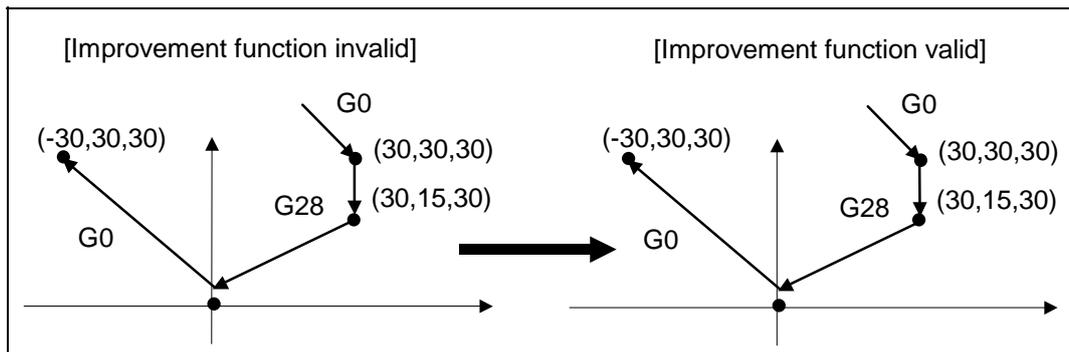


# 14. Coordinates System Setting Functions

## 14.9 Simple zero point return

### (3) G91 without intermediate point

```
(Program example)  
G91;  
G00 X30.0 Y30.0 Z30.0;  
G28 XYZ;  
G00 X-30.0 Y30.0 Z30.0;  
M30;
```


The accuracy of the movement before G28 will drop. (The accuracy is affected by the positioning speed and movement distance.)

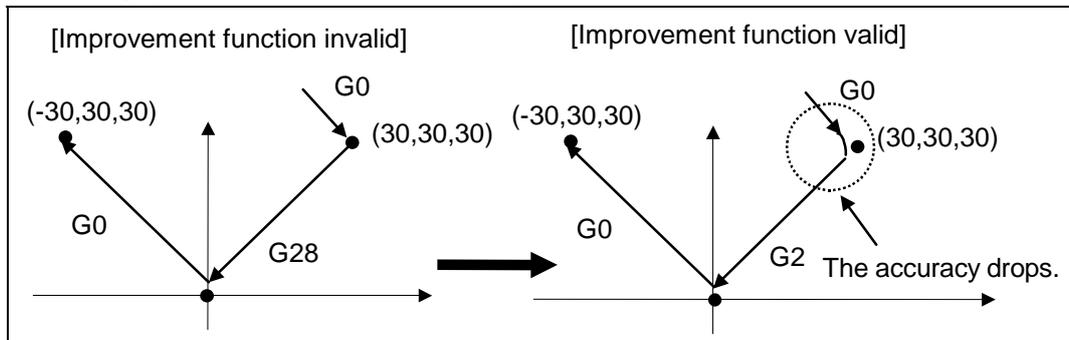

### (4) G91 with intermediate point

```
(Program example)  
G91;  
G00 X30.0 Y30.0 Z30.0;  
G28 X0.0 Y-15.0 Z0.0;  
G00 X-30.0 Y30.0 Z30.0;  
M30;
```

The accuracy of the movement before G28 is maintained.  
The accuracy of the movement to the intermediate point will drop. (The accuracy is affected by the positioning speed and movement distance.)

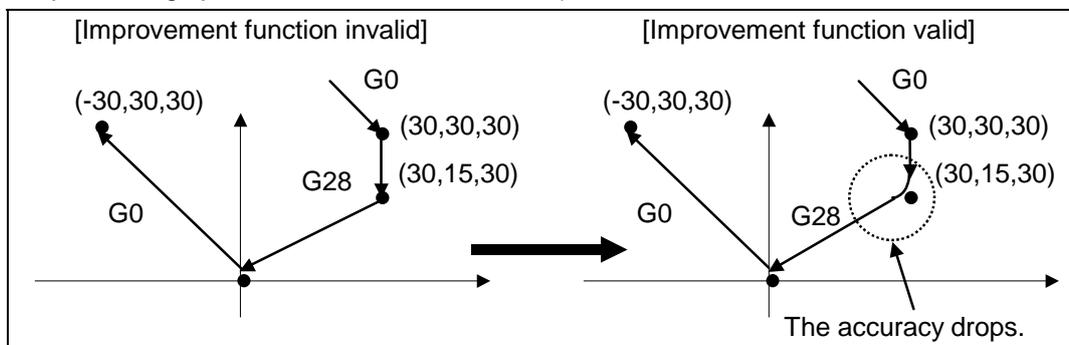




#### Precautions

- (1) Even when this function's parameter is ON and the improvement function is validated, if an inclined axis is validated, this function's parameter will be forcibly turned OFF, and this function will be invalidated.
- (2) If this function's parameter is turned ON while an inclined axis is valid, a "setting error" will occur, and this function will be invalidated.
- (3) If parameters which "validate this function" and "validate the inclined axis" are input, this function's parameter will be forcibly turned OFF, and this function will be invalidated.
- (4) When the improvement function is valid, the accuracy of the rapid feed command, cutting feed command, and movement command to the intermediate point before G28 may drop. If the rapid feed command and cutting feed command before G28 must be accurate, use one of the following methods.
  - Invalidate this function.
  - Carry out an in-position check in the block before G28/G29/G30, and confirm the accuracy. (G09: Exact stop check, etc.)
  - Input the required dwell command (time) in the block before G28/G29/G30.

## 14. Coordinates System Setting Functions

### 14.10 Reference point check

#### 14.10 Reference point check; G27

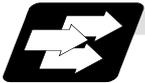

##### Function and purpose

This command first positions the tool at the position assigned by the program and then, if that positioning point is the first reference point, it outputs the reference point arrival signal to the machine in the same way as with the G28 command. Therefore, when a machining program is prepared so that the tool will depart from the first reference point and return to the first reference point, it is possible to check whether the tool has returned to the reference point after the program has been run.



##### Command format

**G27 Xx₁ Yy₁ Zz₁ Pp₁ ;**

G27	: Check command
Xx ₁ Yy ₁ Zz ₁	: Return control axis
Pp ₁	: Check number
	P1 : 1st reference point check
	P2 : 2nd reference point check
	P3 : 3rd reference point check
	P4 : 4th reference point check




##### Detailed description

- (1) If the P command has been omitted, the first reference point will be checked.
- (2) The number of axes whose reference points can be checked simultaneously depends on the number of axes which can be controlled simultaneously.  
Note that the display shows one axis at a time from the final axis.
- (3) An alarm will occur if the reference point is not reached after the command is completed.

## 14. Coordinates System Setting Functions

### 14.11 Work coordinate system setting and offset

#### 14.11 Work coordinate system setting and offset ; G54 to G59 (G54.1)

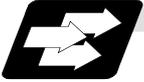

##### Function and purpose

- (1) The work coordinate systems are for facilitating the programming of workpiece machining in which the reference point of the workpiece to be machined is to serve as the zero point.
- (2) These commands enable the tool to move to the positions in the work coordinate system. There are 6 work coordinate systems which are used by the programmer for programming. (G54 to G59)  
In addition to the six sets of workpiece coordinate systems between G54 and G59, there are 48 additional workpiece coordinate system sets. (The 48 sets are options.)
- (3) Among the work coordinate systems currently selected by these commands, any work coordinate system with coordinates which have been commanded by the present position of the tool is reset. (The "present position of the tool" includes the offset amounts for tool radius, tool length and tool position offset.)
- (4) An imaginary machine coordinate system with coordinates which have been commanded by the present position of the tool is set by this command. (The "present position of the tool" includes the offset amounts for tool diameter, tool length and tool position offset.) (G54, G92)



##### Command format

- (1) Work coordinate system selection (G54 to G59)

<b>(G90) G54 Xx₁ Yy₁ Zz₁ αα₁;</b> αα ₁ :Additional axis
-------------------------------------------------------------------------------------------------------------------

- (2) Work coordinate system setting (G54 to G59)

<b>(G54) G92 Xx₁ Yy₁ Zz₁ αα₁;</b> αα ₁ :Additional axis
-------------------------------------------------------------------------------------------------------------------

- (3) Extended work coordinate system selection (P1 to P48)

<b>G54.1 Pn ;</b>
-------------------

- (4) Extended work coordinate system setting (P1 to P48)

<b>G54.1 Pn ;</b> <b>G92 Xx Yy Zz ;</b>
--------------------------------------------

- (5) Extended work coordinate system offset amount setting (P1 to P48)

<b>G10 L20 Pn Xx Yy Zz ;</b>
------------------------------


# 14. Coordinates System Setting Functions

## 14.11 Work coordinate system setting and offset



### Detailed description

- (1) With any of the G54 through G59 commands, the tool diameter offset amounts for the commanded axes will not be canceled even if work coordinate system selection is commanded.
- (2) The G54 work coordinate system is selected when the power is switched on.
- (3) Commands G54 through G59 are modal commands (group 12).
- (4) The coordinate system will move with G92 in a work coordinate system.
- (5) The offset setting in a work coordinate system denotes the distance from the zero point of the basic machine coordinate system.

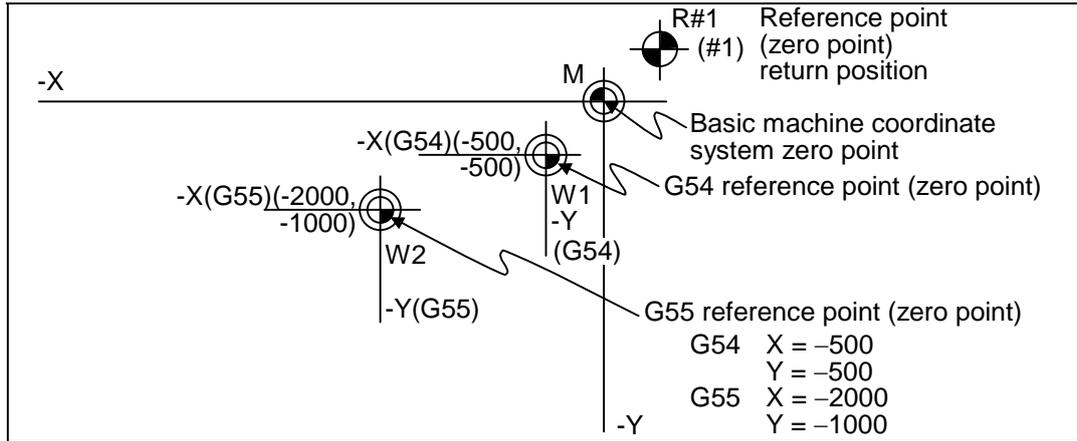


- (6) The offset settings of work coordinate systems can be changed any number of times. (They can also be changed by G10 L2 Pp1 Xx1 Zz1.)  
Handling when L or P is omitted

G10 L2 Pn Xx Yy Zz ;	;n=0 : Set the offset amount in the external workpiece coordinate system. n=1 to 6 : Set the offset amount in the designated workpiece coordinate system. Others : The program error (P35) will occur.
G10 L2 Xx Yy Zz ;	Set the offset amount in the currently selected workpiece coordinate system. When in G54.1 modal, the program error (P33) will occur.
G10 L20 Pn Xx Yy Zz ;	n=1 to 48 : Set the offset amount in the designated workpiece coordinate system. Others : The program error (P35) will occur.
G10 L20 Xx Yy Zz ;	Set the offset amount in the currently selected workpiece coordinate system. When in G54 to G59 modal, the program error (P33) will occur.
G10 Pn Xx Yy Zz ; G10 Xx Yy Zz ;	L2 (workpiece offset) will be judged if there is no L value.

## 14. Coordinates System Setting Functions

### 14.11 Work coordinate system setting and offset

- (7) A new work coordinate system 1 is set by issuing the G92 command in the G54 (work coordinate system 1) mode. At the same time, the other work coordinate systems 2 through 6 (G55 to G59) will move in parallel and new work coordinate systems 2 through 6 will be set.
- (8) An imaginary machine coordinate system is formed at the position which deviates from the new workpiece reference (zero) point by an amount equivalent to the work coordinate system offset amount.

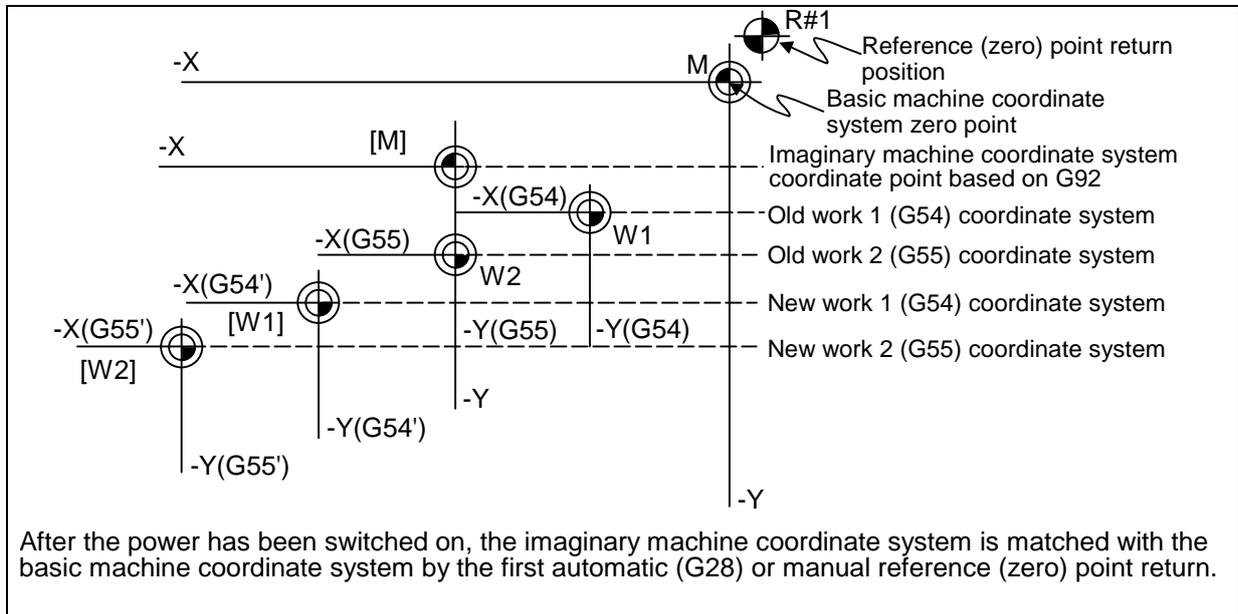

- (9) By setting the imaginary basic machine coordinate system, the new work coordinate system will be set at a position which deviates from that imaginary basic machine coordinate system by an amount equivalent to the work coordinate system offset amount.
- (10) When the first automatic (G28) or manual reference (zero) point return is completed after the power has been switched on, the basic machine coordinate system and work coordinate systems are set automatically in accordance with the parameter setting.
- (11) If G54X-Y-; is commanded after the reference return (both automatic or manual) executed after the power is turned ON, the program error (P62) will occur. (A speed command is required as the movement will be controlled with the G01 speed.)
- (12) Do not command a G code for which a P code is used in the same block as G54.1. The P code will be used in the prioritized G command.
- (13) When number of workpiece offset sets additional specifications is not added, the program error (P39) will occur when the G54.1 command is executed.

## 14. Coordinates System Setting Functions

### 14.11 Work coordinate system setting and offset

- (14) When number of workpiece offset sets additional specifications is not added, the program error (P172) will occur when the G10 L20 command is executed.
- (15) The local coordinate system cannot be used during G54.1 modal. The program error (P438) will occur when the G52 command is executed during G54.1 modal.
- (16) A new workpiece coordinate system P1 can be set by commanding G92 in the G54.1 P1 mode. However, the workpiece coordinate system of the other workpiece coordinate systems G54 to G59, G54.1 and P2 to P96 will move in parallel with it, and a new workpiece coordinate system will be set.
- (17) The offset amount of the extended workpiece coordinate system is assigned to the variable number as shown in Table 1.

Table 1 Variable numbers of the extended workpiece coordinate offset system

	1st axis to nth axis						
P 1	#7001 to #700n	P25	#7481 to #748n	P49	#7961 to #796n	P73	#8441 to #844n
P 2	#7021 to #702n	P26	#7501 to #750n	P50	#7981 to #798n	P74	#8461 to #846n
P 3	#7041 to #704n	P27	#7521 to #752n	P51	#8001 to #800n	P75	#8481 to #848n
P 4	#7061 to #706n	P28	#7541 to #754n	P52	#8021 to #802n	P76	#8501 to #850n
P 5	#7081 to #708n	P29	#7561 to #756n	P53	#8041 to #804n	P77	#8521 to #852n
P 6	#7101 to #710n	P30	#7581 to #758n	P54	#8061 to #806n	P78	#8541 to #854n
P 7	#7121 to #712n	P31	#7601 to #760n	P55	#8081 to #808n	P79	#8561 to #856n
P 8	#7141 to #714n	P32	#7621 to #762n	P56	#8101 to #810n	P80	#8581 to #858n
P 9	#7161 to #716n	P33	#7641 to #764n	P57	#8121 to #812n	P81	#8601 to #860n
P10	#7181 to #718n	P34	#7661 to #766n	P58	#8141 to #814n	P82	#8621 to #862n
P11	#7201 to #720n	P35	#7681 to #768n	P59	#8161 to #816n	P83	#8641 to #864n
P12	#7221 to #722n	P36	#7701 to #770n	P60	#8181 to #818n	P84	#8661 to #866n
P13	#7241 to #724n	P37	#7721 to #772n	P61	#8201 to #820n	P85	#8681 to #868n
P14	#7261 to #726n	P38	#7741 to #774n	P62	#8221 to #822n	P86	#8701 to #870n
P15	#7281 to #728n	P39	#7761 to #776n	P63	#8241 to #824n	P87	#8721 to #872n
P16	#7301 to #730n	P40	#7781 to #778n	P64	#8261 to #826n	P88	#8741 to #874n
P17	#7321 to #732n	P41	#7801 to #780n	P65	#8281 to #828n	P89	#8761 to #876n
P18	#7341 to #734n	P42	#7821 to #782n	P66	#8301 to #830n	P90	#8781 to #878n
P19	#7361 to #736n	P43	#7841 to #784n	P67	#8321 to #832n	P91	#8801 to #880n
P20	#7381 to #738n	P44	#7861 to #786n	P68	#8341 to #834n	P92	#8821 to #882n
P21	#7401 to #740n	P45	#7881 to #788n	P69	#8361 to #836n	P93	#8841 to #884n
P22	#7421 to #742n	P46	#7901 to #790n	P70	#8381 to #838n	P94	#8861 to #886n
P23	#7441 to #744n	P47	#7921 to #792n	P71	#8401 to #840n	P95	#8881 to #888n
P24	#7461 to #746n	P48	#7941 to #794n	P72	#8421 to #842n	P96	#8901 to #890n

#### CAUTION

 If the workpiece coordinate system offset amount is changed during single block stop, the new setting will be valid from the next block.


# 14. Coordinates System Setting Functions

## 14.11 Work coordinate system setting and offset




### Example of program

#### (Example 1)

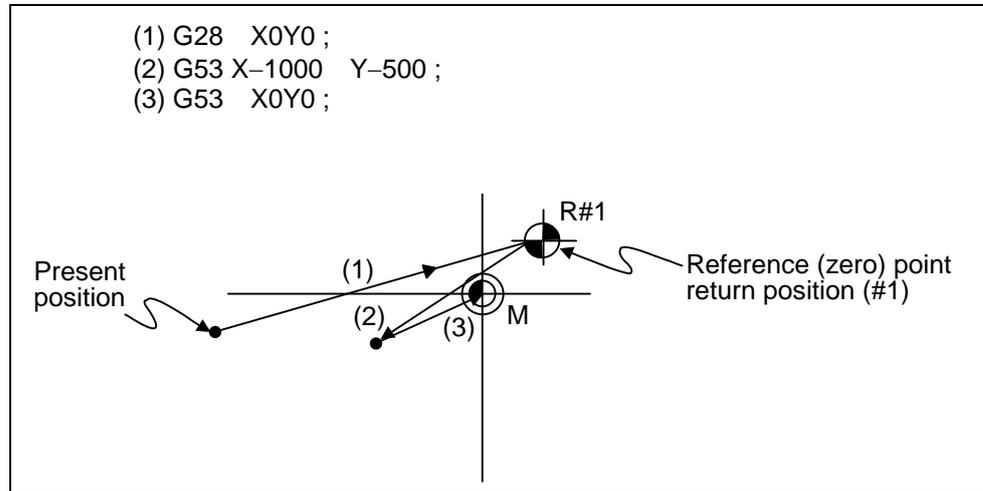

When the first reference point coordinate is zero, the basic machine coordinate system zero point and reference (zero) point return position (#1) will coincide.

#### (Example 2)

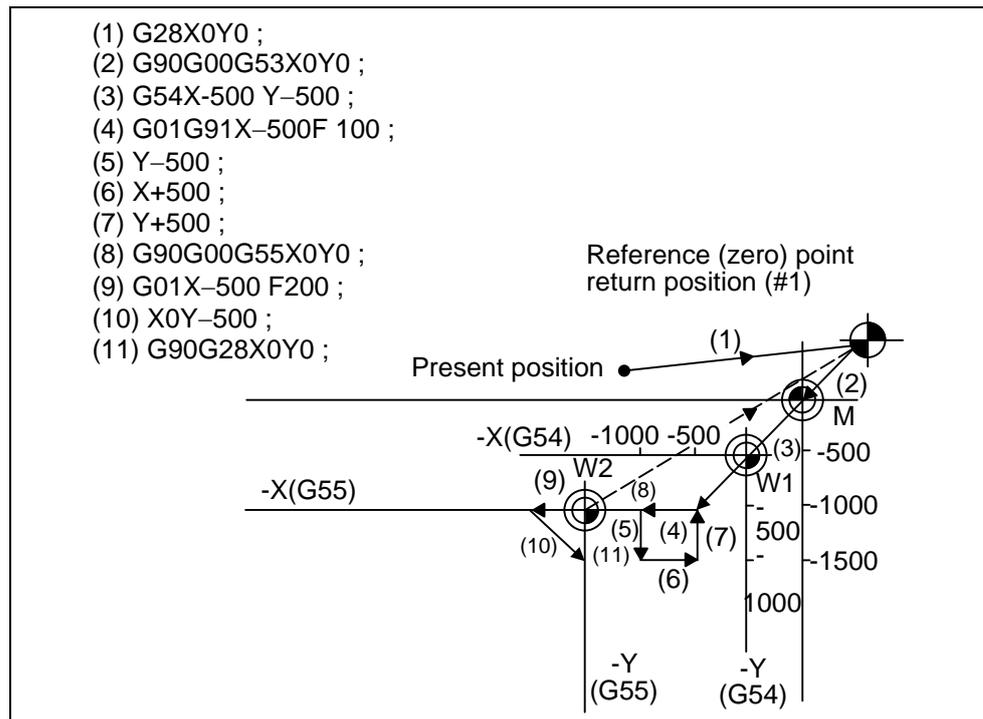


## 14. Coordinates System Setting Functions

### 14.11 Work coordinate system setting and offset

**(Example 3)** When work coordinate system G54 has shifted (-500, -500) in example 2 (It is assumed that 3 through 10 in example 2 have been entered in subprogram 01111.)

(1) G28 X0 Y0 ;	
(2) G90 G53 X0 Y0 ;	(This is not required when there is no G53 offset.)
(3) G54 X -500Y-500 ;	Amount by which work coordinate system deviates
(4) G92 X0 Y0 ;	New work coordinate system is set.
(5) M98 P1111 ;	

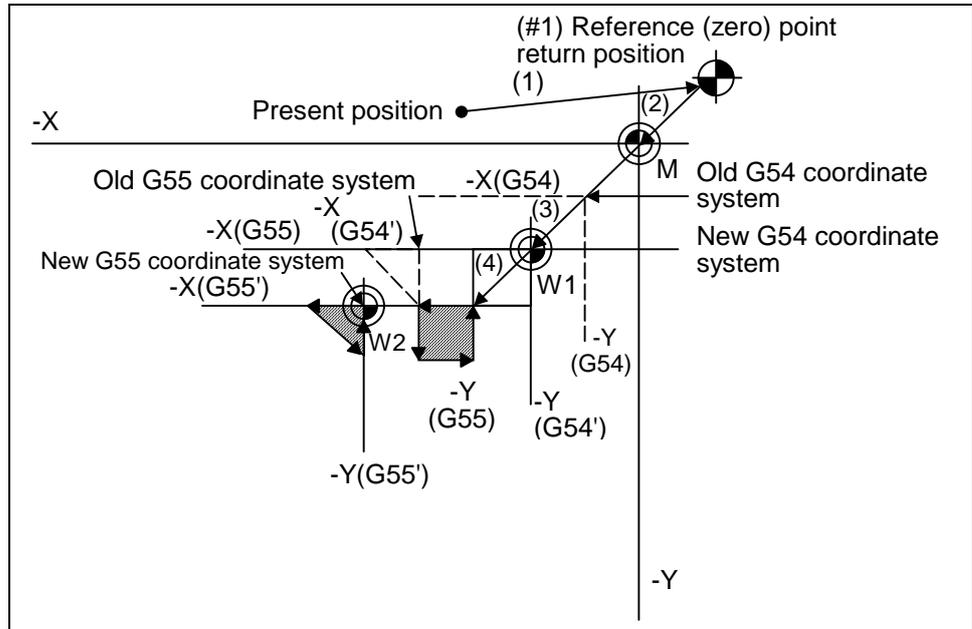

**(Note)** The work coordinate system will shift each time steps 3 through 5 are repeated. The reference point return (G28) command should therefore be issued upon completion of the program.

## 14. Coordinates System Setting Functions

### 14.11 Work coordinate system setting and offset

**(Example 4)** When six workpieces are placed on the same coordinate system of G54 to G59, and each is to be machined with the same machining.

#### (1) Setting of workpiece offset data

Workpiece1	X = -100.000	Y = -100.000	.....	G54
2	X = -100.000	Y = -500.000	.....	G55
3	X = -500.000	Y = -100.000	.....	G56
4	X = -500.000	Y = -500.000	.....	G57
5	X = -900.000	Y = -100.000	.....	G58
6	X = -900.000	Y = -500.000	.....	G59

#### (2) Machining program (subprogram)


O100;			
N1 G90 G0 G43X-50. Y-50. Z-100. H10;		Positioning	
N2 G01 X-200. F50;	}	Surface cutting	
Y-200. ;			
X- 50. ;			
Y- 50. ;			
N3 G28 X0 Y0 Z0 ;			
)			
N4 G98 G81 X-125. Y-75. Z-150. R-100. F40;	}	Drilling	1
X-175. Y-125. ;			2
X-125. Y-175. ;			3
X- 75. Y-125. ;			4
G80;			
N5 G28 X0 Y0 Z0 ;			
)			
N6 G98 G84 X-125. Y-75. Z-150. R-100. F40 ;	}	Tapping	1
X-175. Y-125. ;			2
X-125. Y-175. ;			3
X- 75. Y-125. ;			4
G80;			
M99;			

#### (3) Positioning program (main)

G28 X0 Y0 Z0 ;	}	When power is turned ON
N1 G90 G54 M98 P100 ;		
N2 G55 M98 P100 ;		
N3 G57 M98 P100 ;		
N4 G56 M98 P100 ;		
N5 G58 M98 P100 ;		
N6 G59 M98 P100 ;		
N7 G28 X0 Y0 Z0 ;		
N8 M02 ;		
%		

# 14. Coordinates System Setting Functions

## 14.11 Work coordinate system setting and offset

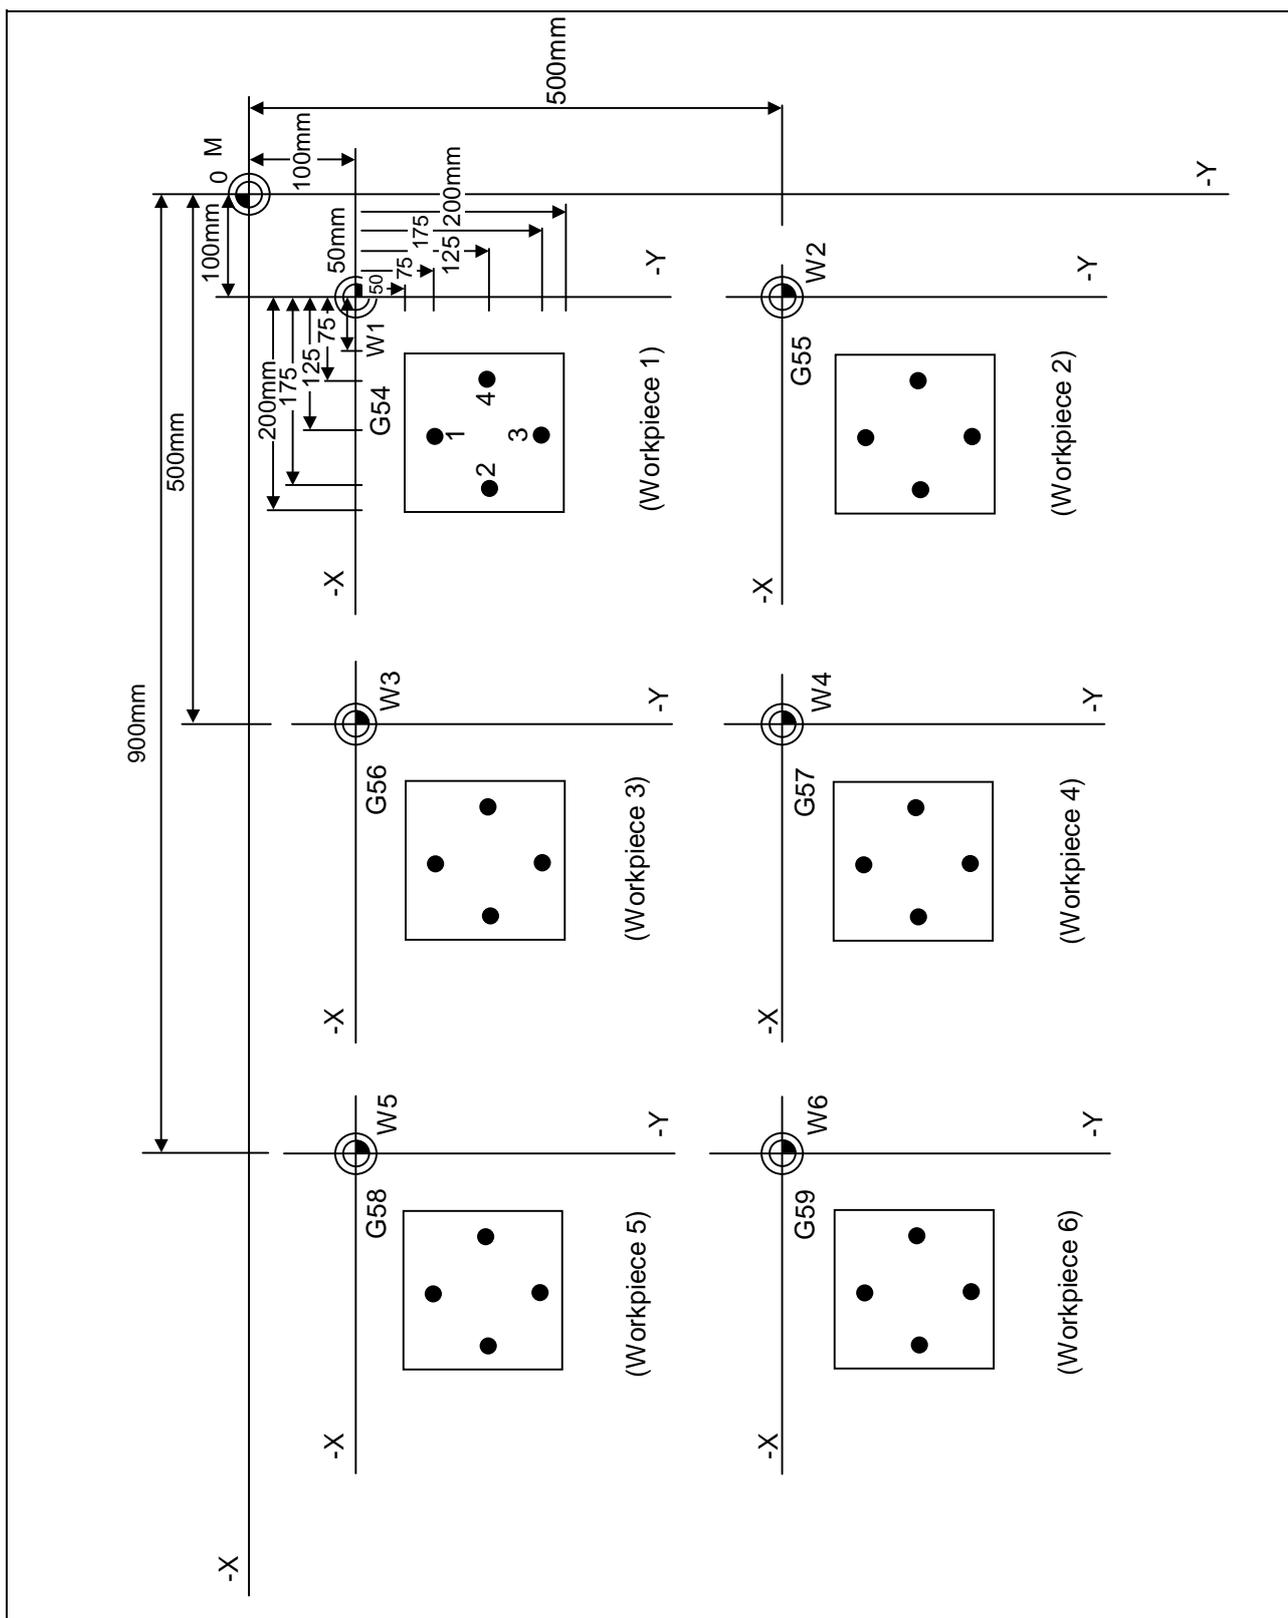


## 14. Coordinates System Setting Functions

### 14.11 Work coordinate system setting and offset

**(Example 5)** Program example when continuously using 48 sets of added workpiece coordinate system offsets.

In this example, the offsets for each workpiece are set beforehand in P1 to P48 when 48 workpieces are fixed on a table, as shown in the drawing below.

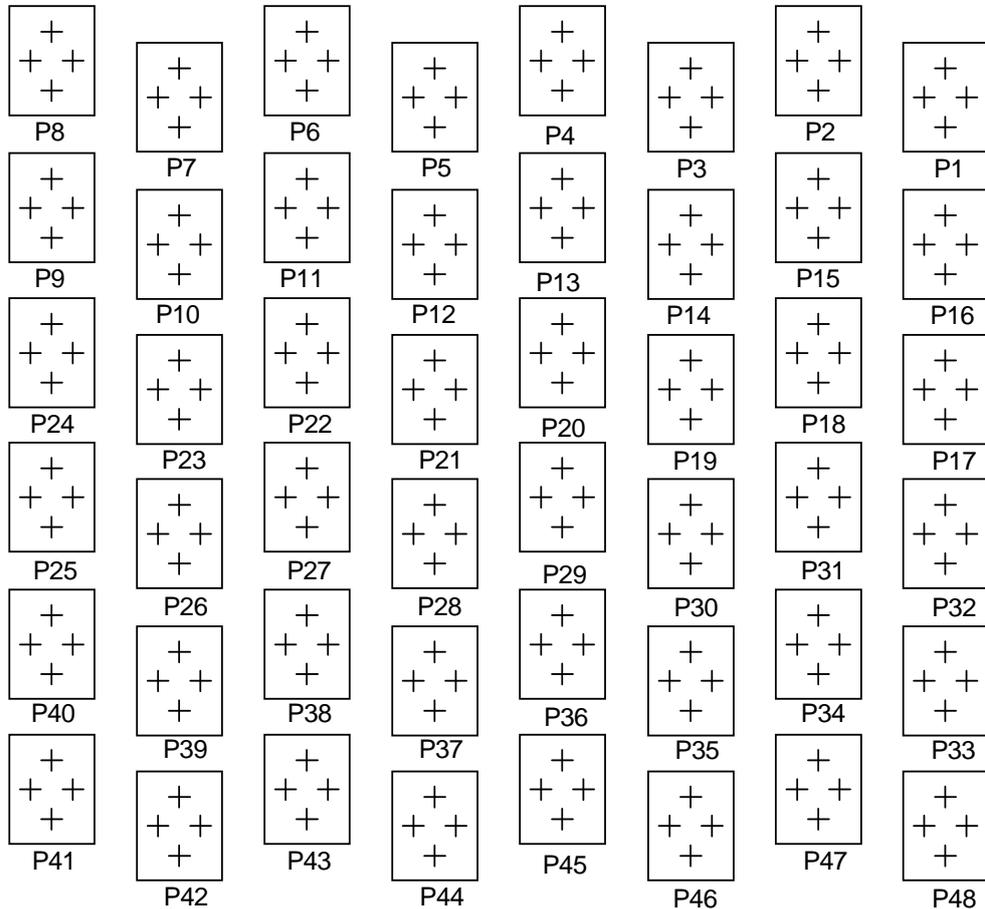

```

01000
G28 XYZ ;
#100=1 ;
G90 ;
WHILE [#100LE48]D01 ;
G54.1 P#100 ;
M98 P1001 ;
#100=#100+1 ;
END1 ;
G28 Z ;
G28 XY ;
M02 ;

```

```

Zero point return
Initialize added workpiece coordinate system P No.
Absolute value mode
Repeat P No. to 48
Set workpiece coordinate system
Read sub-program
P No. +1
Return to zero point

```

```


01001
G43 X-10.Y-10.Z-100.H10.; Contour
G01 X-30.;
Y-30.;
X-10.;
Y-10.;
G00 G40 Z10.;
G98 G81· X-20.Y-15.Z-150.R5.F40; Drilling
X-25.Y-20.;
X-20.Y-25.;
X-15.Y-20.;
G80 ;
M99 ;

```

## 14. Coordinates System Setting Functions

### 14.11 Work coordinate system setting and offset

**(Example 6)** Program example when the added workpiece coordinate system offsets are transferred to the standard workpiece coordinate system offsets and used.  
In this example, the workpiece coordinate system offsets for each workpiece are set beforehand in P1 to P24 when the workpiece is fixed on a rotating table, as shown in the drawing below.

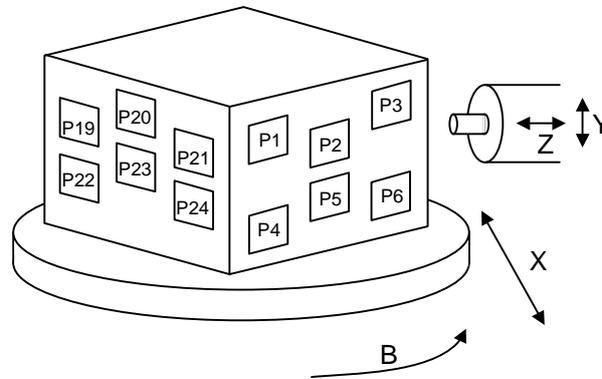

```

O20000 (Main)
G28 XYZB ;           Zero point return
G90 ;               Absolute value mode
G00 B0 ;           Position table to face 1
G65 P2001 A1 ;     Load workpiece offsets
M98 P2002 ;       Drilling
G00 B90. ;        Position table to face 2
G65 P2001 A7 ;
M98 P2002 ;
G00 B180. ;       Position table to face 3
G65 P2001 A13 ;
M98 P2002 ;
G00 B270. ;       Position table to face 4
G65 P2001 A19 ;
M98 P2002 ;
G28 XYB ;         Return to zero point
M02 ;
%
O2001  Transmission of workpiece offsets
#2=5221 ;         Leading No. of workpiece coordinate system
variables
#3=(#1-1)*20+7001 ; Leading No. of added workpiece coordinate
system variables
#5=0 ;           No. of sets counter clear
WHILE [#5 LT 6] DO1 ; Check No. of sets
#6=#6+1 ;       Set transmission source 1st axis variable No.
#7=#7+1 ;       Set transmission destination 1st axis variable No.
#4=#4+1 ;       Clear No. of axes counter
WHILE [#4 LT 6] DO2 ; Check No. of axes
#[#6]=#[#7] ;   Transmit variable data
#6=#6+1 ;       Set transmission source next axis
#7=#7+1 ;       Set transmission destination next axis
#4=#4+1 ;       No. of axes counter +1
END2 ;
#2=#2+20 ;      Transmission source Set lead of next No. of sets
#3=#3+20 ;      Transmission destination Set lead of next No. of
sets
#5=#5+1 ;       No. of sets counter +1
END1 ;
M99 ;
%
```

## 14. Coordinates System Setting Functions


### 14.11 Work coordinate system setting and offset

```
O2002 (Drilling)
G54 M98 H100 ;           Drilling in G54 coordinate system
G55 M98 H100 ;           In G55
G56 M98 H100 ;           In G56
G57 M98 H100 ;           In G57
G58 M98 H100 ;           In G58
G59 M98 H100 ;           In G59
G28 Z0 ;
M99 ;
N100 G98 G81 X-20. Y-15. Z-150. R5. F40 ; Fixed cycle for Drilling call
X-25. Y-20. ;
X-20. Y-25. ;
X-15. Y-20. ;
G80 ;
G28 Z ;
M99 ;
%
```

## 14. Coordinates System Setting Functions

### 14.12 Local coordinate system setting

#### 14.12 Local coordinate system setting; G52

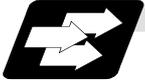

##### Function and purpose

The local coordinate systems can be set independently on the G54 through G59 work coordinate systems using the G52 command so that the commanded position serves as the programmed zero point.

The G52 command can also be used instead of the G92 command to change the deviation between the zero point in the machining program and the machining workpiece zero point.




##### Command format

**G54 (G54 to G59) G52 Xx₁ Yy₁ Zz₁ αα₁ ;**  
αα₁ :Additional axis



##### Detailed description

- (1) The G52 command is valid until a new G52 command is issued, and the tool does not move. This command comes in handy for employing another coordinate system without changing the zero point positions of the work coordinate systems (G54 to G59).
- (2) The local coordinate system offset will be cleared by the dog-type manual reference (zero) point return or reference (zero) point return performed after the power has been switched on.
- (3) The local coordinate system is canceled by (G54 to G59) G52X0 Y0 Z0 α0 ;.
- (4) Coordinate commands in the absolute value (G90) cause the tool to move to the local coordinate system position.

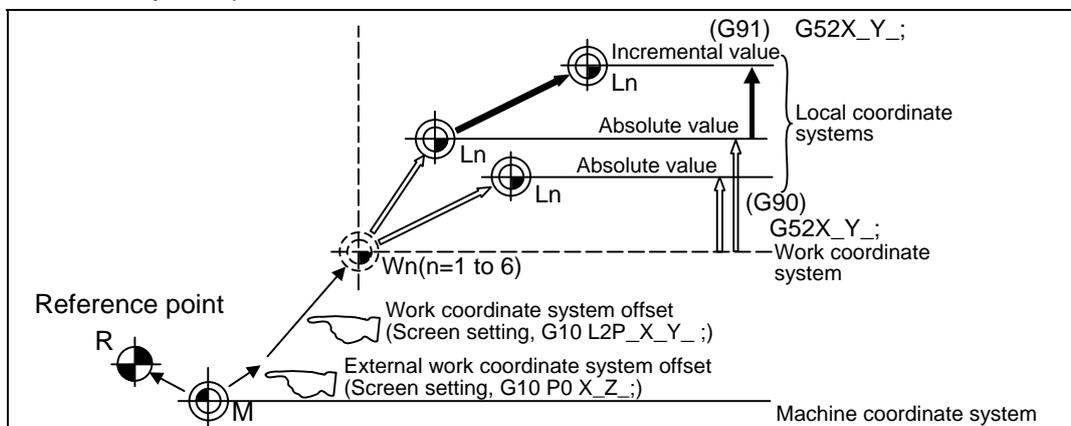


**(Note)** If the program is executed repeatedly, the workpiece coordinate system will deviate each time. Thus, when the program is completed, the reference point return operation must be commanded.

# 14. Coordinates System Setting Functions


## 14.12 Local coordinate system setting

**(Example 1)** Local coordinates for absolute value mode (The local coordinate system offset is not cumulated)

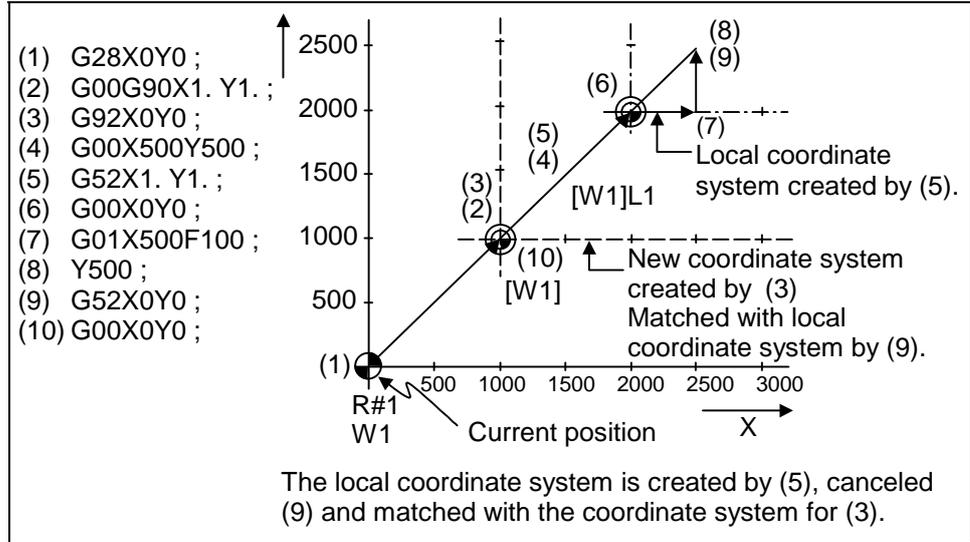

**(Note)** If the program is executed repeatedly, the workpiece coordinate system will deviate each time. Thus, when the program is completed, the reference point return operation must be commanded.

**(Example 2)** Local coordinates for incremental value mode (The local coordinate system offset is cumulated.)

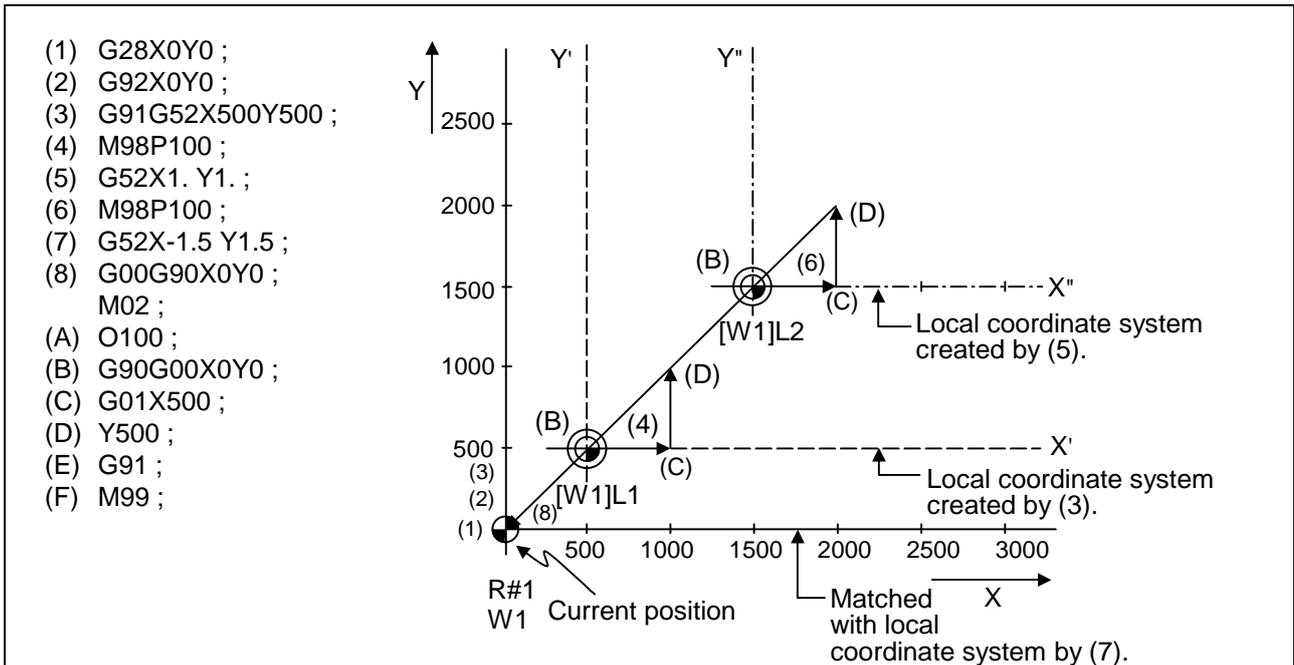


**(Explanation)**

The local coordinate system X'Y' is created at the XY coordinate system (500,500) position by (3). The local coordinate system X''Y'' is created at the X'Y' coordinate system (1000,1000) position by (5). The local coordinate system is created at the X''Y'' coordinate system (-1500, -1500) position by (7). In other words, the same occurs as when the local coordinate system and XY coordinate system are matched and the local coordinate system is canceled.

# 14. Coordinates System Setting Functions

## 14.12 Local coordinate system setting

(Example 3) When used together with workpiece coordinate system

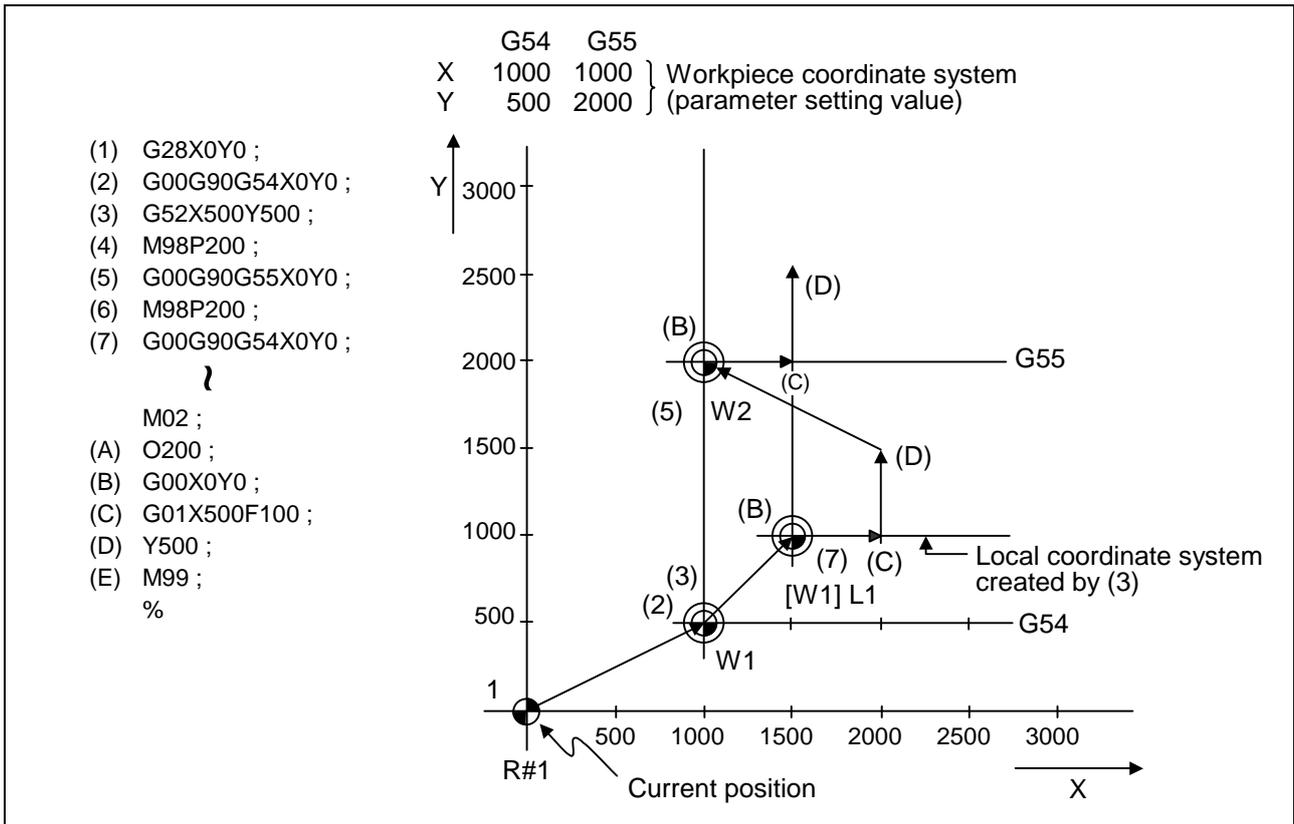

**(Explanation)**

The local coordinate system is created at the G54 coordinate system (500,500) position by (3), but the local coordinate system is not created for the G55 coordinate system.


During the movement for (7), the axis moves to the G54 local coordinate system's reference point (zero point).

The local coordinate system is canceled by G90G54G52X0Y0;.

# 14. Coordinates System Setting Functions

## 14.12 Local coordinate system setting

**(Example 4)** Combination of workpiece coordinate system G54 and multiple local coordinate systems

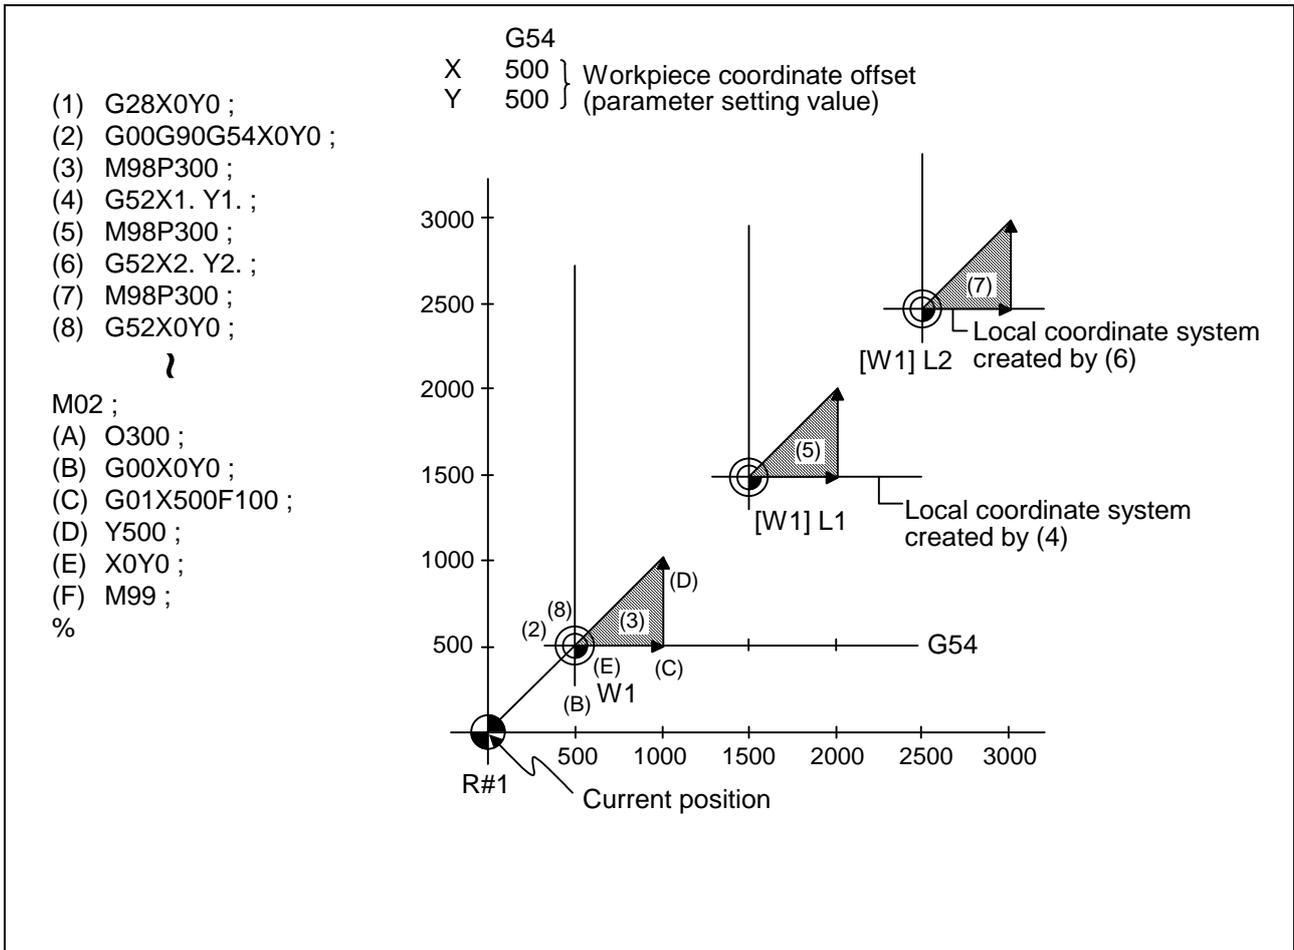


**(Explanation)**

The local coordinate system is created at the G54 coordinate system (1000,1000) position by (4).  
 The local coordinate system is created at the G54 coordinate system (2000,2000) by (6).  
 The G54 coordinate system and local coordinate system are matched by (8).

## 14. Coordinates System Setting Functions

### 14.13 Workpiece coordinate system preset

#### 14.13 Workpiece coordinate system preset; G92.1

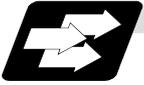

##### Function and purpose

- (1) This function presets the workpiece coordinate system shifted with the program command during manual operation to the workpiece coordinate system offset from the machine zero point by the workpiece coordinate offset amount by the program command (G92.1).
- (2) The set workpiece coordinate system will be shifted from the machine coordinate system when the following type of operation or program command is executed.
  - When manual interrupt is executed while manual absolute is OFF
  - When movement command is issued in machine lock state
  - When axis is moved with handle interrupt
  - When operation is started with mirror image
  - When local coordinate system is set with G52
  - When workpiece coordinate system is shifted with G92

This function presets the shifted workpiece coordinate system to the workpiece coordinate system offset from the machine zero point by the workpiece coordinate offset amount. This takes place in the same manner as manual reference point return. Whether to preset the relative coordinates or not can be selected with the parameters.



##### Command format

```
G92.1 X0 Y0 Z0 α0 ;
```

```
(G50.3)
```

```
α0
```

```
Additional axis
```


## 14. Coordinates System Setting Functions

### 14.13 Workpiece coordinate system preset



#### Detailed description

- (1) Command the address of the axis to be preset. The axis will not be preset unless commanded.
- (2) A program error (P35) will occur if a value other than "0" is commanded.
- (3) This can be commanded in the following G code systems.
  - G code system 2 to 7
  - G code system 1 when the G code changeover parameter (#1267 ext3/bit0 = 1) is set.
- (4) Depending on the G code system, the G code will be "G50.3".
- (5) When manual operation is carried out when manual absolute is set to OFF, or if the axis is moved with handle interrupt

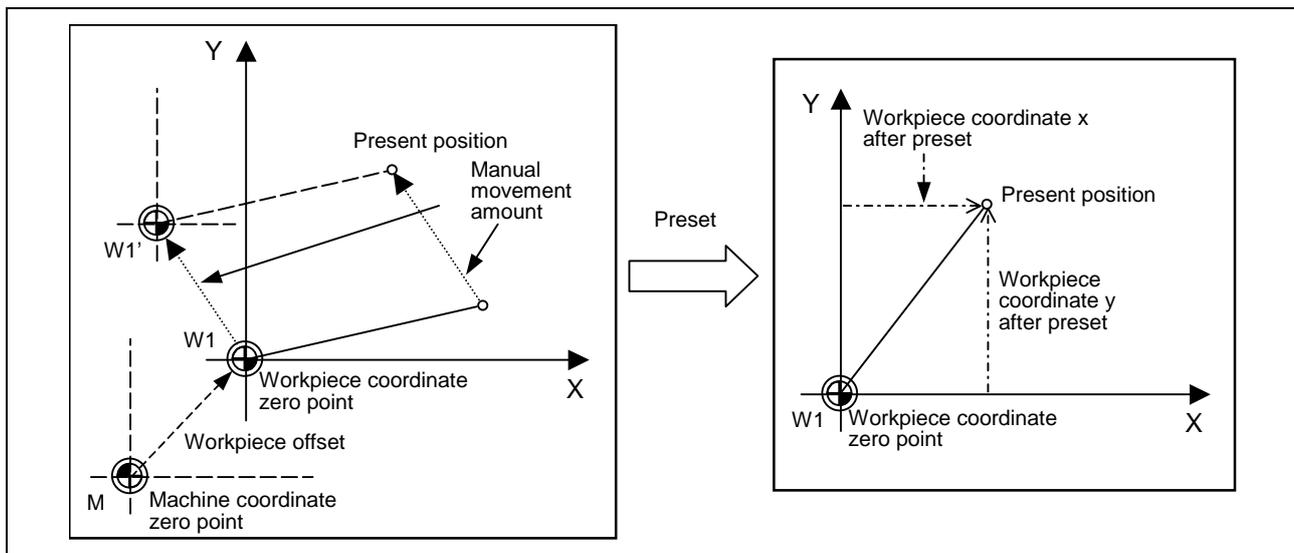


If manual operation is carried out when manual absolute is set to OFF, or if the axis is moved with handle interrupt, the workpiece coordinate system will be shifted by the manual movement amount.

This function returns the shifted workpiece coordinate zero point W1' to the original workpiece coordinate zero point W1, and sets the distance from W1 to the present position as the workpiece coordinate system's present position.

## 14. Coordinates System Setting Functions

### 14.13 Workpiece coordinate system preset


(6) When movement command is issued in machine lock state

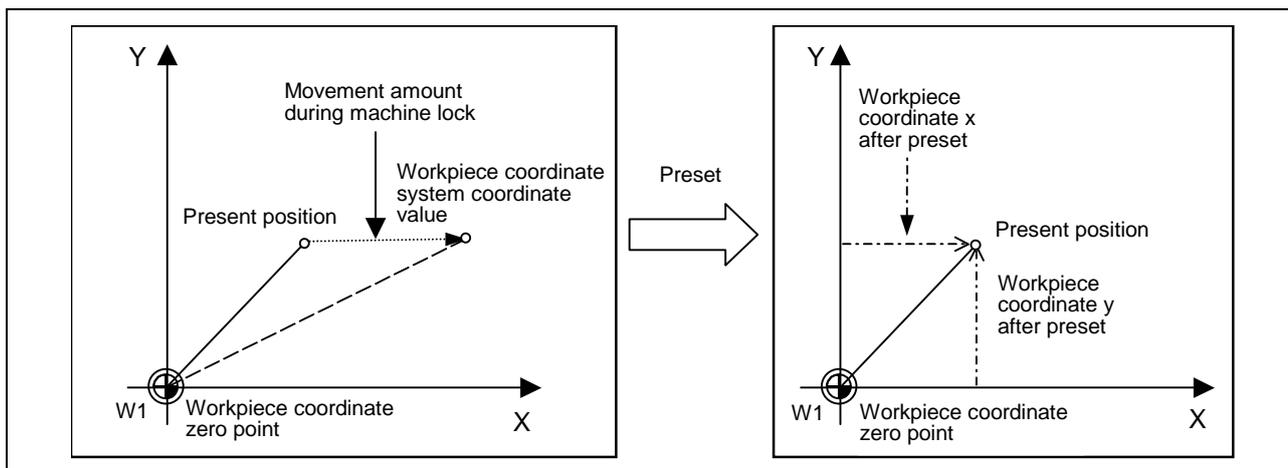

If the movement command is issued in the machine lock state, the present position will not move, and only the workpiece coordinates will move.

This function returns the moved workpiece coordinates to the original present position, and sets the distance from W1 to the present position as the workpiece coordinate system's present position.

(7) When operation is carried out with mirror image

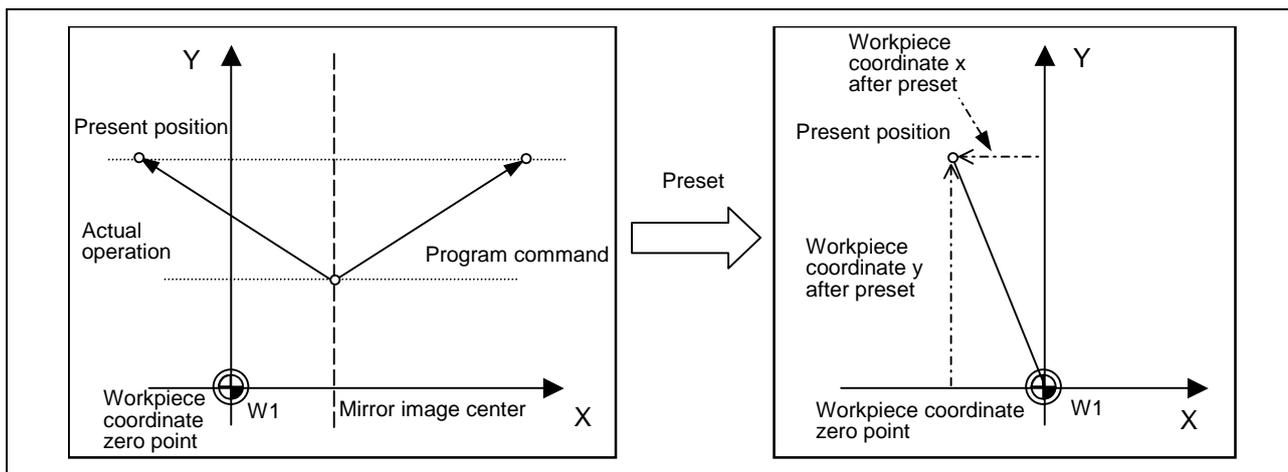


If operation is carried out with mirror image, only the NC internal coordinates are used as the program command coordinates. The other coordinates are the present position coordinates. This function sets the NC internal coordinates as the present position coordinates.

## 14. Coordinates System Setting Functions

### 14.13 Workpiece coordinate system preset


#### (8) Setting local coordinate system with G52

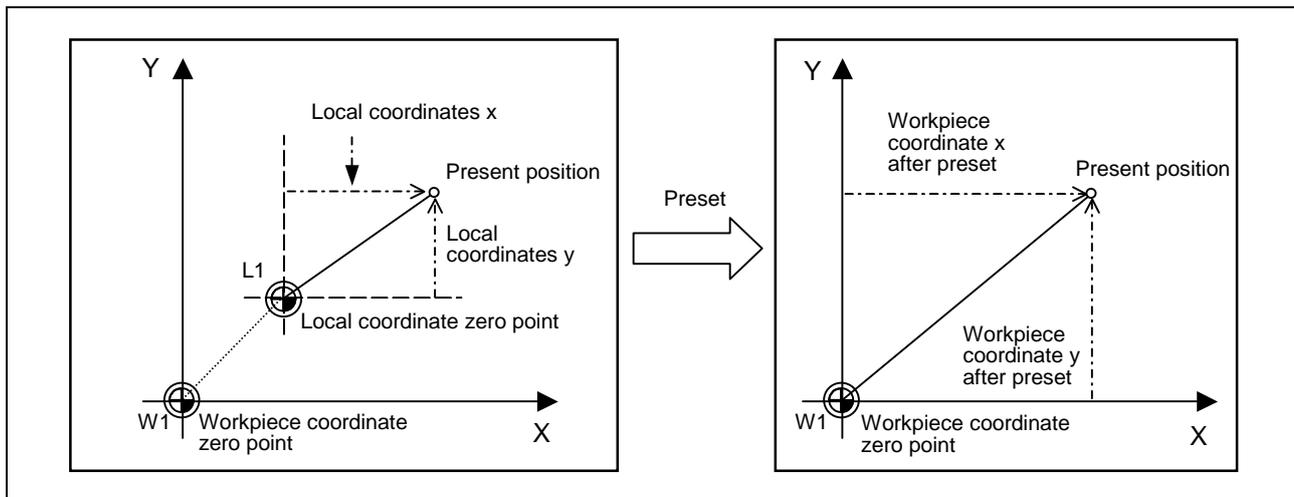

The local coordinate system is set with the G52 command, and the program commands, etc., are issued with the local coordinate system.

With this function, the set local coordinate system is canceled, and the program commands, etc., use the workpiece coordinate system which has W1 as the zero point. The canceled local coordinate system is only the selected workpiece coordinate system.

#### (9) Shifting the workpiece coordinate system with G92

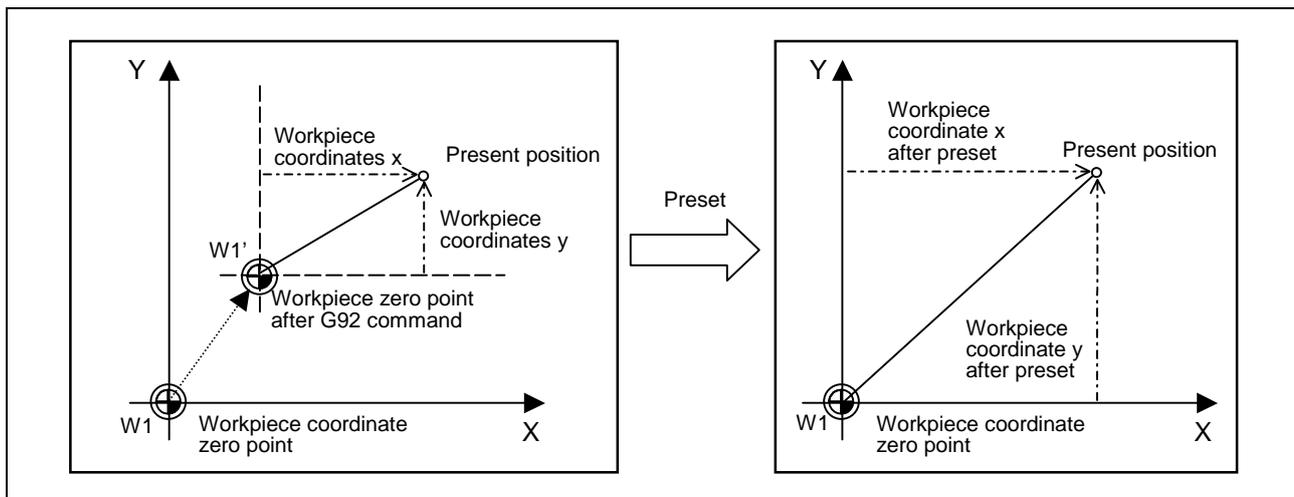

The workpiece coordinate system shifts with the G92 command, and the distance between W1' and the present position is set as the present position of the workpiece coordinate system.

This function returns the shifted workpiece coordinate zero point to W1, and sets the distance from W1 to the present position as the workpiece coordinate system's present position. This is valid for all workpiece coordinate systems.


## 14. Coordinates System Setting Functions

### 14.13 Workpiece coordinate system preset



#### Example of program

The workpiece coordinate system shifted with G92 is preset with G92.1.

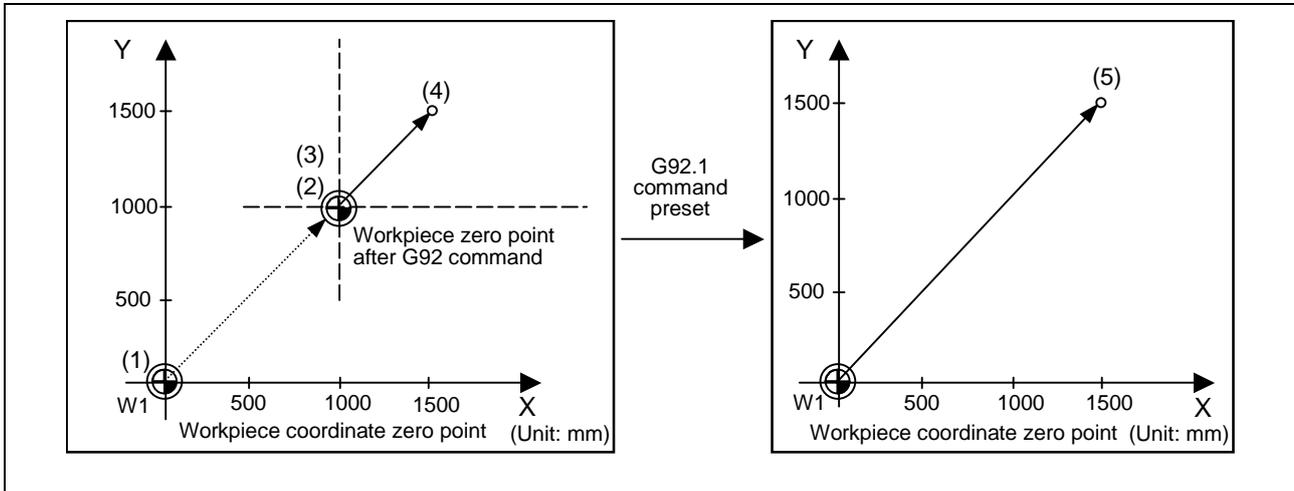

#### (Example)

```
G28 X0 Y0 ;..... (1)
G00 G90 X1. Y1. ;..... (2)
G92 X0 Y0 ;..... (3)
G00 X500 Y500 ;..... (4)
G92.1 X0 Y0 ;..... (5)
```



#### Precautions

- (1) Cancel tool radius compensation, tool length offset and tool position offset before using this function. If these are not canceled, the workpiece coordinates will be at a position obtained by subtracting the workpiece coordinate offset amount from the machine value. Thus, the compensation vector will be temporarily canceled.
- (2) This function cannot be executed while the program is being resumed.
- (3) Do not command this function during the scaling, coordinate rotation or program mirror image modes.  
A program error (P34) will occur if commanded.

## 15. Measurement Support Functions

### 15.1 Automatic tool length measurement

## 15. Measurement Support Functions

### 15.1 Automatic tool length measurement; G37



#### Function and purpose

These functions issue the command values from the measuring start position as far as the measurement position, move the tool in the direction of the measurement position, stop the machine once the tool has arrived at the sensor, cause the NC system to calculate automatically the difference between the coordinate values at that time and the coordinate values of the commanded measurement position and provide this difference as the tool offset amount.

When offset is already being applied to a tool, it moves the tool toward the measurement position with the offset still applied, and if a further offset amount is generated as a result of the measurement and calculation, it provides further compensation of the present offset amount.

If there is one type of offset amount at this time, and the offset amount is distinguished between tool length offset amount and wear offset amount, the wear amount will be automatically compensated.



#### Command format

**G37Z_R_D_F_;**

Z: Measuring axis address and coordinates of measurement position ..... X, Y, z,  $\alpha$  (where,  $\alpha$  is the additional axis)

R: This commands the distance between the measurement position and point where the movement is to start at the measuring speed.

D: This commands the range within which the tool is to stop.

F: This commands the measuring feedrate.


When R_, D_ of F_ is omitted, the value set in the parameter is used instead.

<Parameter> ("TLM" on machining parameter screen)

- #8004 SPEED (measuring feedrate) : 0 to 60000 (mm/min)
- #8005 ZONE r (deceleration range) : 0 to 99999.999 (mm)
- #8006 ZONE d (measurement range) : 0 to 99999.999 (mm)


## 15. Measurement Support Functions

### 15.1 Automatic tool length measurement

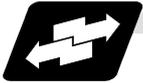

#### Example of execution

For new measurement

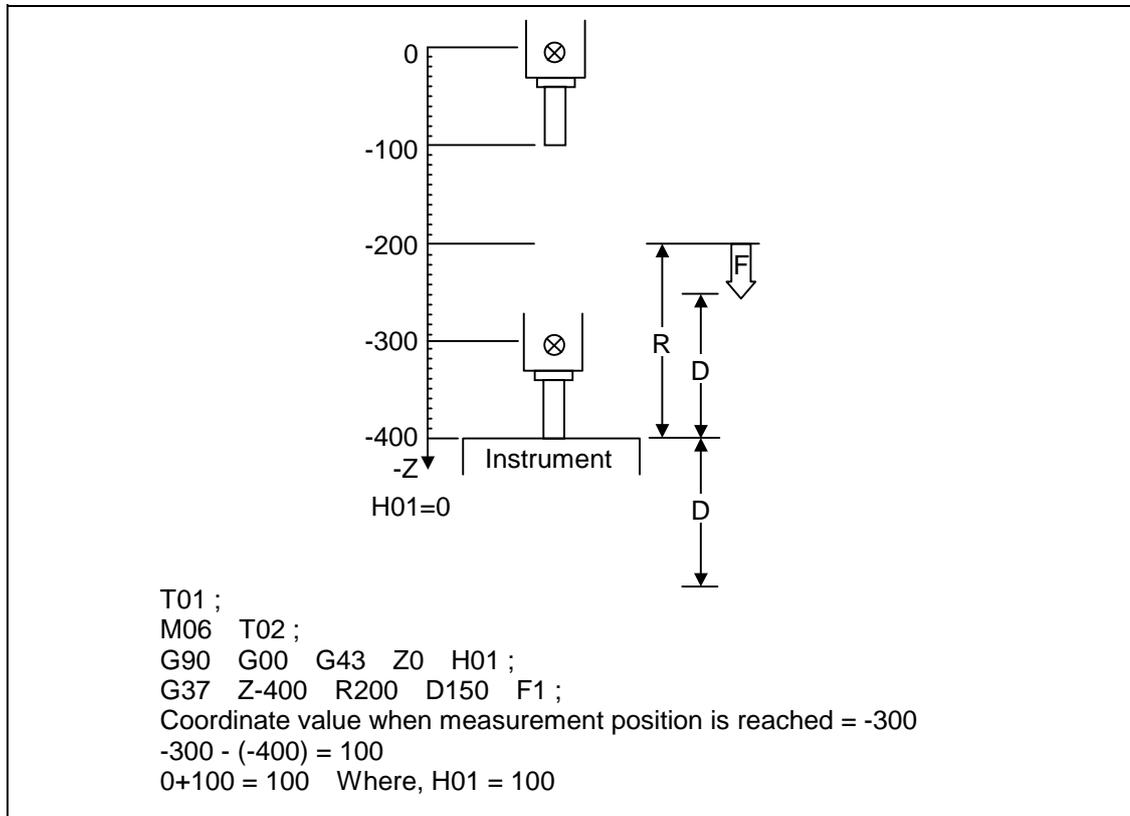


## 15. Measurement Support Functions

### 15.1 Automatic tool length measurement



#### Detailed description

##### (1) Operation with G37 command

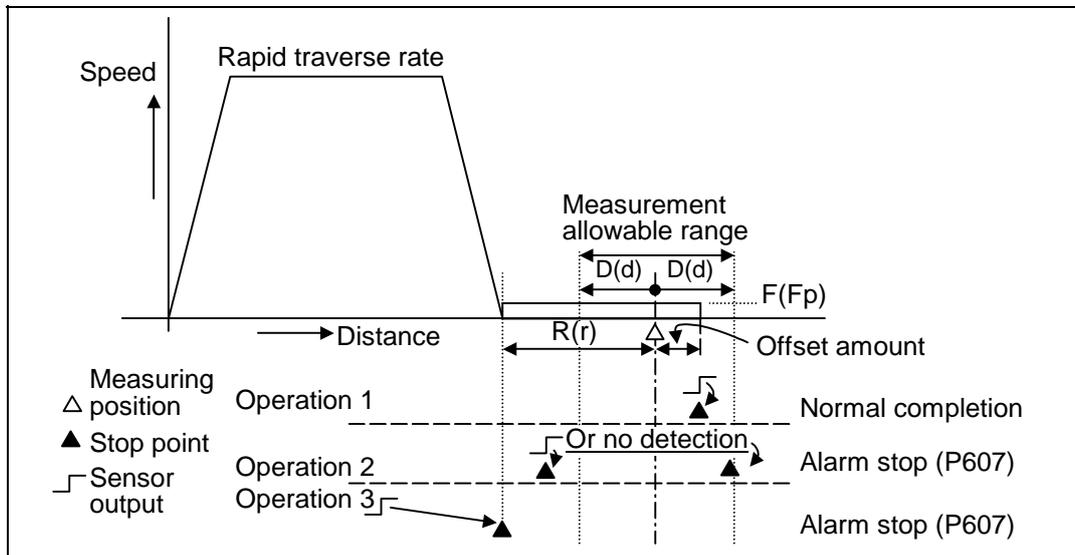

- (2) The sensor signal (measuring position arrival signal) is used in common with the skip signal.
- (3) The feedrate will be 1mm/min if the F command and parameter measurement speed are 0.
- (4) An updated offset amount is valid unless it is assigned from the following Z axis (measurement axis) command of the G37 command.
- (5) Excluding the corresponding values at the PLC side, the delay and fluctuations in the sensor signal processing range from 0 to 0.2ms.

As a result, the measuring error shown below is caused.

$$\text{Maximum measuring error (mm)} = \text{Measuring speed (mm/min)} \cdot \frac{1}{60} \cdot \frac{0.2 \text{ (ms)}}{1000}$$

- (6) The machine position coordinates at that point in time are ready by sensor signal detection, and the machine will overtravel and stop at a position equivalent to the servo droop.

Maximum overtravel (mm)

$$= \text{Measuring speed (mm/min)} \cdot \frac{1}{60} \cdot \frac{1}{\text{Position loop gain (s}^{-1}\text{)}}$$

The standard position loop gain is 33 (s⁻¹).

## 15. Measurement Support Functions


### 15.1 Automatic tool length measurement



#### Precautions

- (1) Program error (P600) results if G37 is commanded when the automatic tool length measurement function is not provided.
- (2) Program error (P604) results when no axis has been commanded in the G37 block or when two or more axes have been commanded.
- (3) Program error (P605) results when the H code is commanded in the G37 block.
- (4) Program error (P606) results when G43_H is not commanded prior to the G37 block.
- (5) Program error (P607) results when the sensor signal was input outside the allowable measuring range or when the sensor signal was not detected even upon arrival at the end point.
- (6) When a manual interrupt is applied while the tool is moving at the measuring speed, a return must be made to the position prior to the interrupt and then operation must be resumed.
- (7) The data commanded in G37 or the parameter setting data must meet the following conditions:
  - | Measurement point – start point | > R command or parameter r
  - > D command or parameter d
- (8) When the D command and parameter d in (7) above are zero, operation will be completed normally only when the commanded measurement point and sensor signal detection point coincide. Otherwise, program error (P607) will result.
- (9) When the R and D commands as well as parameters r and d in (7) above are all zero, program error (P607) will result regardless of whether the sensor signal is present or not after the tool has been positioned at the commanded measurement point.
- (10) The automatic tool length measurement command (G37) must be commanded together with the G43H_ command that designates the offset No.
  - G43H_;
  - G37 Z_ R_ D_ F_;

## 15.2 Skip function; G31

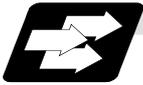

## Function and purpose

When the skip signal is input externally during linear interpolation based on the G31 command, the machine feed is stopped immediately, the remaining distance is discarded and the command in the following block is executed.



## Command format

**G31 Xx Yy Zz αα Ff ; (where, a is the additional axis)**

x, y, z, α : Axis coordinates; they are commanded as absolute or incremental values according to the G90/G91 modal when commanded.

f : Feedrate (mm/min)

Linear interpolation can be executed using this function. If the skip signal is input externally while this command is being executed, the machine will stop, the remaining commands will be canceled and operation will be executed from the next block.




## Detailed description

- (1) If Ff is assigned as the feedrate in the same block as the G31 command block, command feed f will apply; if it not assigned, the value set in the parameter "#1174 Skip_F" will serve as the feedrate. In either case, the F modal will not be updated.
- (2) The machine will not automatically accelerate and decelerate with the G31 block. The G31 maximum speed will depend on the machine specifications.
- (3) Override is invalid with the G31 command and it is fixed at 100%. Dry run is also invalid. The stop conditions (feed hold, interlock, override zero and stroke end) are valid. External deceleration is also valid.
- (4) The G31 command is unmodal and so it needs to be commanded each time.
- (5) If the skip command is input during G31 command start, the G31 command will be completed immediately.  
When a skip signal has not been input until the G31 block completion, the G31 command will also be completed upon completion of the movement commands.
- (6) When the G31 command is issued during tool diameter compensation, program error (P608) will result.
- (7) When there is no F command in the G31 command and the parameter speed is also zero, program error (P603) will result.
- (8) With machine lock or with a command for the Z-axis only with the Z-axis cancel switch ON, the skip signal will be ignored and execution will continue as far as the end of the block.



### Execution of G31

```
G90 G00 X-100000 Y0 ;
G31 X-500000 F100 ;
G01 Y-100000 ;
G31 X0 F100 ;
Y-200000 ;
G31 X-50000 F100 ;
Y-300000 ;
X0 ;
```

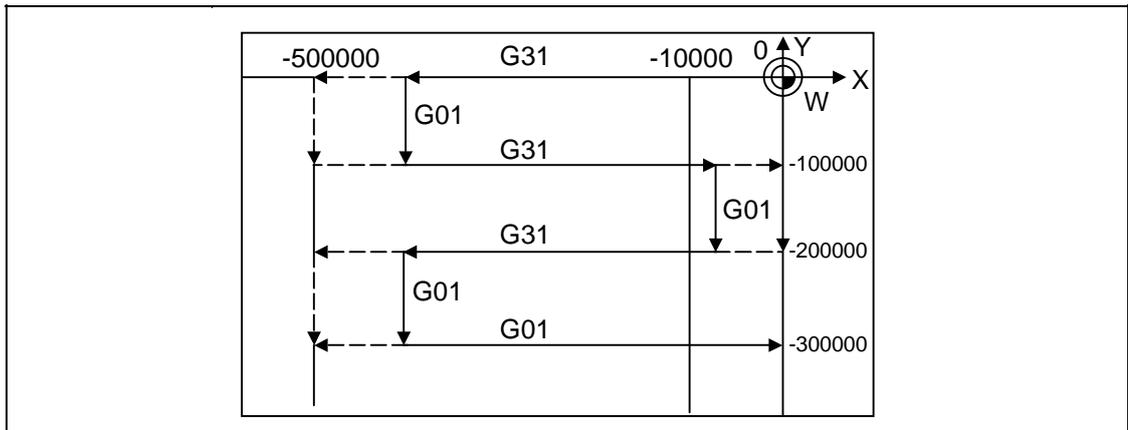

### Detailed description (Readout of skip coordinates)

The coordinate positions for which the skip signal is input are stored in the system variables #5061 (1st axis) to #506n (n-th axis), so these can be used in the user macros.

}	
G90 G00 X-100. ;	
G31 X-200. F60 ;	— Skip command
#101 = #5061	— Skip signal input coordinate values (workpiece coordinate system) are readout to #101.
}	



### Detailed description (G31 coasting)

The amount of coasting from when the skip signal is input during the G31 command until the machine stops differs according to the parameter "#1174 skip_F" or F command in G31. The time to start deceleration to a stop after responding to the skip signal is short, so the machine can be stopped precisely with a small coasting amount

$$\delta_0 = \frac{F}{60} \times T_p + \frac{F}{60} \times (t_1 \pm t_2) = \underbrace{\frac{F}{60} \times (T_p + t_1)}_{\delta_1} \pm \underbrace{\frac{F}{60} \times t_2}_{\delta_2}$$

$\delta_0$  : Coasting amount (mm)


F : G31 skip speed (mm/min.)

$T_p$  : Position loop time constant (s) = (position loop gain)⁻¹


$t_1$  : Response delay time (s) = (time taken from the detection to the arrival of the skip signal at the controller via PC)

$t_2$  : Response error time (0.001 s)

When G31 is used for calculation, the value calculated from the section indicated by  $\delta_1$  in the above equation can be compensated, however,  $\delta_2$  results in calculation error.

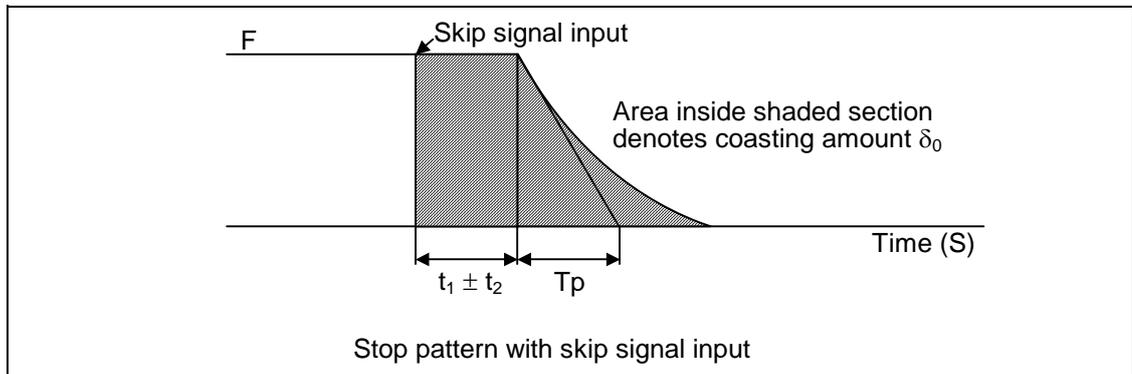

The relationship between the coasting amount and speed when  $T_p$  is 30ms and  $t_1$  is 5ms is shown in the following figure.

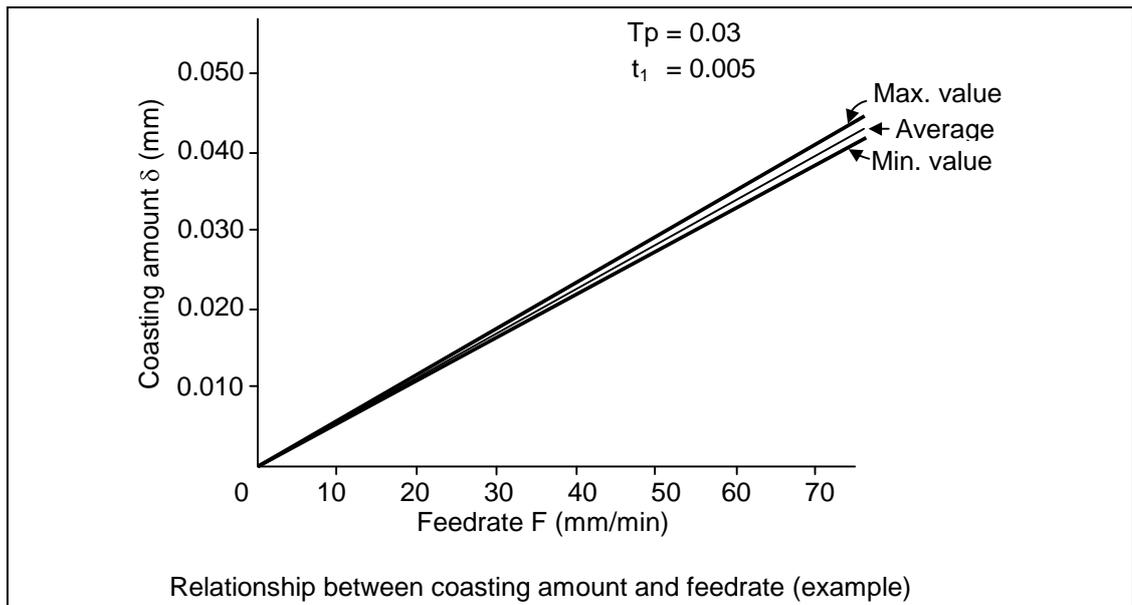




### Detailed description (Skip coordinate readout error)

#### (1) Skip signal input coordinate readout

The coasting amount based on the position loop time constant  $T_p$  and cutting feed time constant  $T_s$  is not included in the skip signal input coordinate values. Therefore, the work coordinate values applying when the skip signal is input can be read out across the error range in the following formula as the skip signal input coordinate values. However, coasting based on response delay time  $t_1$  results in a measurement error and so compensation must be provided.

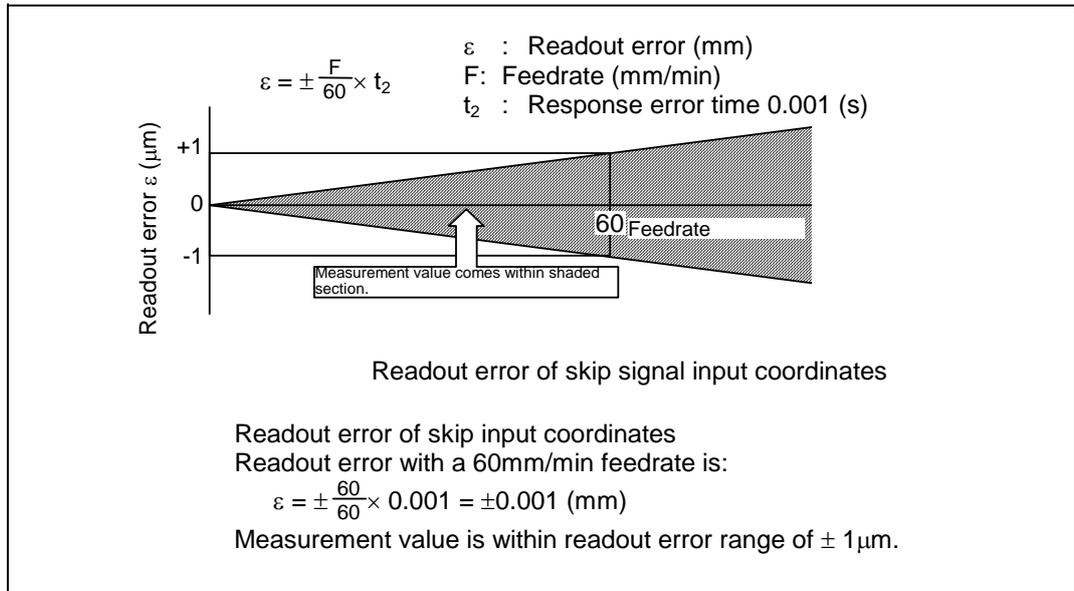

#### (2) Readout of other coordinates

The readout coordinate values include the coasting amount. Therefore, when coordinate values are required with skip signal input, reference should be made to the section on the G31 coasting amount and compensation provided. As in the case of (1), the coasting amount based on the delay error time  $t_2$  cannot be calculated, and this generates a measuring error.



### Examples of compensating for coasting

#### (1) Compensating for skip signal input coordinates

```

#110 = Skip feedrate ;
#111 = Response delay time  $t_1$  ;

      λ
G31 X100. F100 ;      — Skip command
G04 ;                 — Machine stop check
#101 = #5061 ;        — Skip signal input coordinate readout
#102 = #110*#111/60 ; — Coasting based on response delay time
#105 = #101-#102-#103 ; — Skip signal input coordinates
      λ
    
```


#### (2) Compensating for work coordinates

```

#110 = Skip feedrate ;
#111 = Response delay time  $t_1$  ;
#112 = Position loop time constant  $T_p$  ;

      λ
G31 X100. F100 ;      — Skip command
G04 ;                 — Machine stop check
#101 = #5061 ;        — Skip signal input coordinate readout
#102 = #110*#111/60 ; — Coasting based on response delay time
#103 = #110*#112/60 ; — Coasting based on position loop time constant
#105 = #101-#102-#103 ; — Skip signal input coordinates
      λ
    
```

### 15.3 Multi-stage skip function; G31.n, G04

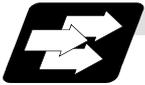

#### Function and purpose

The setting of combinations of skip signals to be input enables skipping under various conditions. The actual skip operation is the same as with G31.

The G commands which can specify skipping are G31.1, G31.2, G31.3, and G04, and the correspondence between the G commands and skip signals can be set by parameters.



#### Command format

**G31.1 Xx Yy Zz αα Ff ;**

Xx Yy Zz αα ; Command format axis coordinate word and target coordinates  
Ff ; Feedrate (mm/min)

Same with G31.2 and G31.3 ; Ff is not required with G04

As with the G31 command, this command executes linear interpolation and when the preset skip signal conditions have been met, the machine is stopped, the remaining commands are canceled, and the next block is executed.



#### Detailed description

- (1) Feedrate G31.1 set with the parameter corresponds to "#1176 skip1f", G31.2 corresponds to "#1178 skip2f", and G31.3 corresponds to "#1180 skip3f".
- (2) A command is skipped if it meets the specified skip signal condition.
- (3) The G31.n and G04 commands work the same as the G31 command for other than (1) and (2) above.
- (4) The feedrates corresponding to the G31.1, G31.2, and G31.3 commands can be set by parameters.
- (5) The skip conditions (logical sum of skip signals which have been set) corresponding to the G31.1, G31.2, G31.3 and G04 commands can be set by parameters.

Parameter setting	Valid skip signal		
	1	2	3
1	○		
2		○	
3	○	○	
4			○
5	○		○
6		○	○
7	○	○	○

(Skip when ○ signal is input.)



### Example of operation


- (1) The multi-stage skip function enables the following control, thereby improving measurement accuracy and shortening the time required for measurement.

Parameter settings :

Skip condition	Skip speed
G31.1 : 7	20.0mm/min (f ₁ )
G31.2 : 3	5.0mm/min (f ₂ )
G31.3 : 1	1.0mm/min (f ₃ )

Program example :


```
N10G31.1 X200.0 ;
N20G31.2 X40.0 ;
N30G31.3 X1.0 ;
```

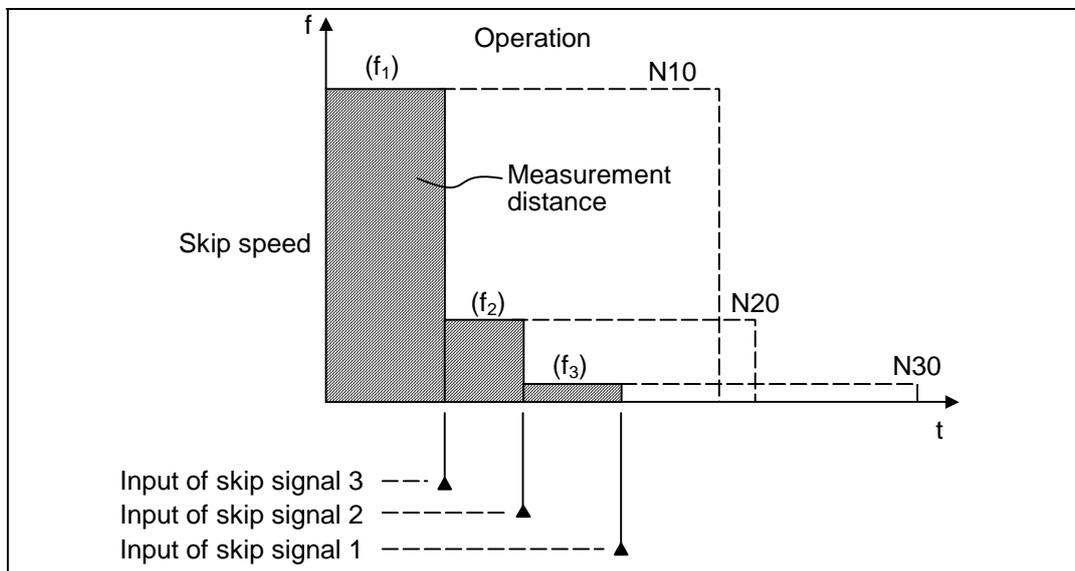

**(Note 1)** If skip signal 1 is input before skip signal 2 in the above operation, N20 is skipped at that point and N30 is also ignored.

- (2) If a skip signal with the condition set during G04 (dwell) is input, the remaining dwell time is canceled and the following block is executed.


### 15.4 Multi-skip function 2

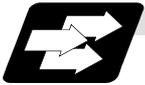

#### Function and purpose

During linear interpolation, command operation is skipped if skip signal parameter Pp specified with a skip command (G31), which indicates external skip signals 1 to 7, is met.

If multi-skip commands are issued simultaneously in different systems, both systems perform skip operation simultaneously if the input skip signals are the same, or they perform skip operation separately if the input skip signals are different. The skip operation is the same as with a normal skip command (G31 without P parameter).

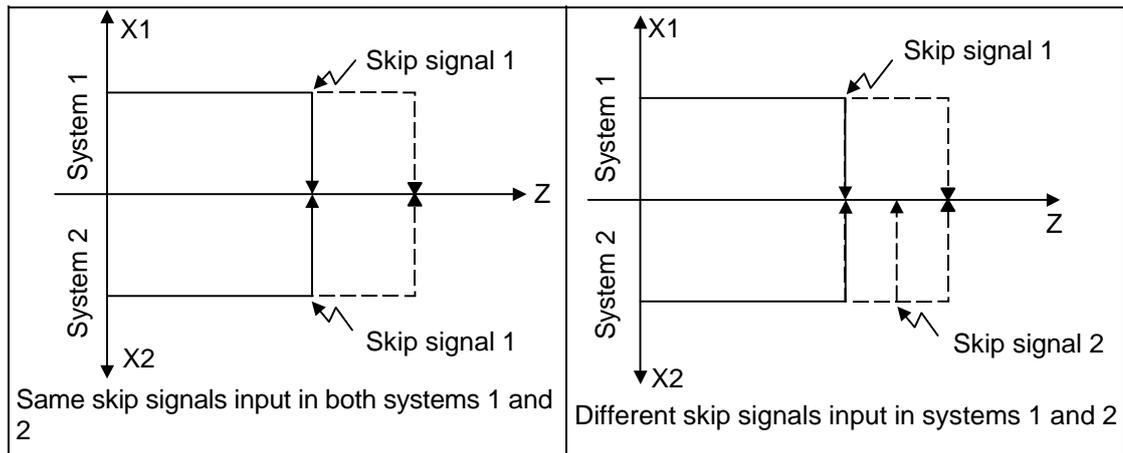

If the skip condition specified by the parameter "#1173 dwlskp" (indicating external skip signals 1 to 7) is met during execution of a dwell command (G04), the remaining dwell time is canceled and the following block is executed. Similarly, if the skip condition is met during revolution dwelling, the remaining revolution is canceled and the following block is executed.



#### Command format

**G31 Xx Zz αα Pp Ff ;**

Xx Zz αα : Command format axis coordinate word and target coordinates  
 Pp : Skip signal parameter  
 Ff : Feedrate (mm/min)



### Detailed description

- (1) The skip is specified by command speed f. Note that the F modal is not updated.
- (2) The skip signal is specified by skip signal parameter p. p can range from 1 to 127. If p is specified outside the range, program error (P35) occurs.

Skip signal parameter P	Valid skip signal						
	7	6	5	4	3	2	1
1							○
2						○	
3						○	○
4					○		
5					○		○
6					○	○	
7					○	○	○
8				○			
~	~	~	~	~	~	~	~
125	○	○	○	○	○		○
126	○	○	○	○	○	○	
127	○	○	○	○	○	○	○

(Skip when ○ signal is input.)

- (3) The specified skip signal command is a logical sum of the skip signals.

**(Example)**

G31 X100. P5 F100 ;



Operation is skipped if skip signal 1 or 3 is input.

- (4) If skip signal parameter Pp is not specified, the skip condition specified by the G31 parameter works. If speed parameter Ff is not specified, the skip speed specified by the G31 parameter works.

Relations between skip and multi-skip

Skip specifications	x		o	
	Condition	Speed	condition	Speed
G31 X100 ; Without P and F	Program error (P601)		Skip 1	Parameter
G31 X100 P5 ; Without F	Program error (P602)		Command value	Parameter
G31 X100 F100 ; Without P	Program error (P601)		Skip 1	Command value
G31 X100 P5 F100 ;	Program error (P602)		Command value	Command value

**(Note)** "Parameter" in the above table indicates that specified with a skip command (G31).

- (5) If skip specification is effective and P is specified as an axis address, skip signal parameter P is given priority and axis address P is ignored.

**(Example)**

G31 P500. F100 ;

— This is regarded as a skip signal parameter and program error (P35) results.

- (6) Those items other than (1) to (5) are the same with the ordinary skip function (G31 without P).

## 15.5 Speed change skip



## Function and purpose

When the skip signal is detected during linear interpolation by the skip command (G31), the feedrate is changed.



## Command format

```
G31 Xx Yy Zz αα Ff F1=f1 ... Fn=fn ;
      (n is the skip signal 1 to 8)


Xx Yy Zz αα : Command format axis coordinate word and target coordinates
Ff          : Feedrate when starting the cutting feed (mm/min)
Fn          : Feedrate after detecting the skip signal (mm/min)
             fn=0: Movement stop
             fn≠0: Changing the feedrate to fn
                 F1=Feedrate after inputting the skip signal 1
                   :
                 F8=Feedrate after inputting the skip signal 8
```




## Detailed description

- (1) When the skip signal for which the feedrate  $fn \neq 0$  is commanded, the speed is changed to the command speed corresponding to the skip signal.
- (2) When the skip signal for which the feedrate  $fn = 0$  is commanded, the movement is stopped. The acceleration and deceleration time constant at the movement stop does not follow the skip time constant, but the normal G31 skip. After the movement is stopped, the remaining movement commands are canceled and the following block executed.
- (3) When the skip signal has not been input until the G31 block completion, the G31 command will be also completed upon completion of the movement command.
- (4) When the skip return is valid, the return operation by the skip signal detection is executed after the movement is stopped.
- (5) Even if the acceleration and deceleration with the inclination constant G1 (#1201 G1_acc) is valid, the speed change skip will be the operation of the time constant acceleration and deceleration.
- (6) When the feedrate command ( $Fn = fn$ ) is not specified after detecting the skip signal, the normal G31 skip operation will be applied.

- (7) If the skip signal is input during the deceleration by the movement command completion, the speed change will be ignored.

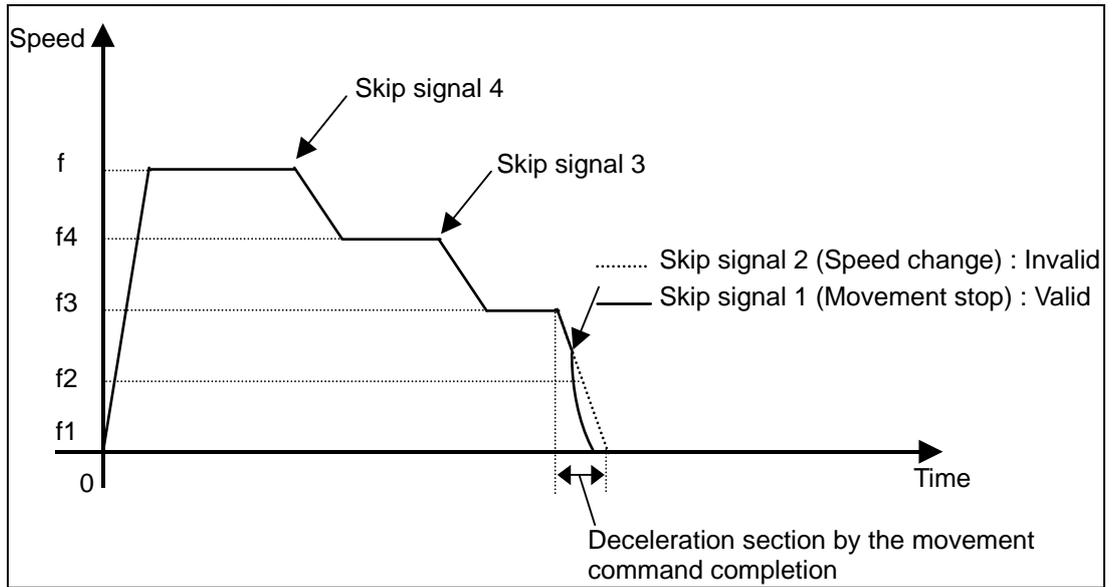

- (8) The skip signal for which the feedrate is not commanded in the program is ignored.
- (9) The speed change or the movement stop is performed when detecting the rising edge of the skip signal. Note that if several rising edges are input at 3.5ms intervals or less, they may be judged the simultaneous input. When they are judged the simultaneous input, the smaller value will be valid.

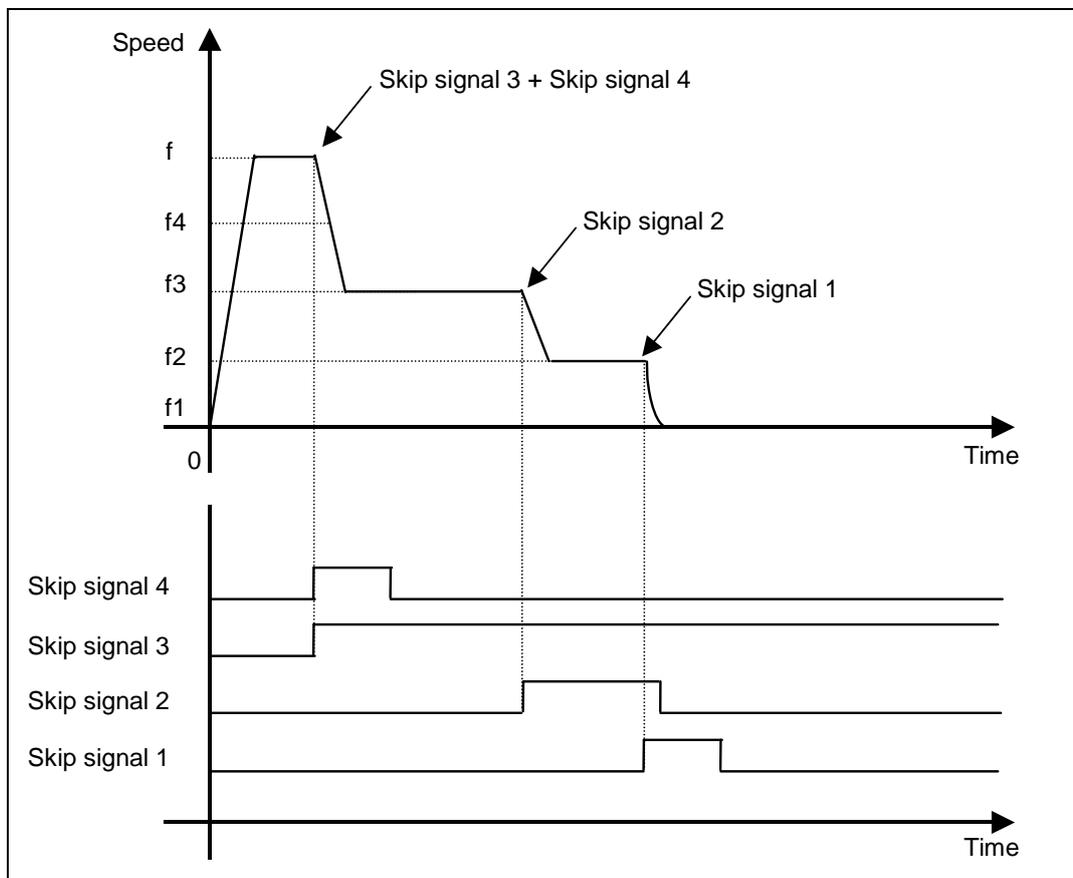

- (10) If the G31 block is started with the skip signal input, that signal is considered to rise at the same time as the block start.
- (11) If the skip signals for changing the speed and for stopping the movement are simultaneously input, the skip signal for stopping the movement will be valid regardless of the size of the number.
- (12) If the skip time constant "#2102 skip_tL" is illegal, the "Y51 PARAMETER ERROR 15" will occur, and if the "#2103 skip_t1" is illegal, the "Y51 PARAMETER ERROR 16" will occur.
- (13) The items other than (1) to (12) are the same with the G31 command.




### Example of operation

#### Example of program

```
G31 X100. Ff F1=0 F2=f2 F3=f3 F4=f4 ;
```


#### Operation

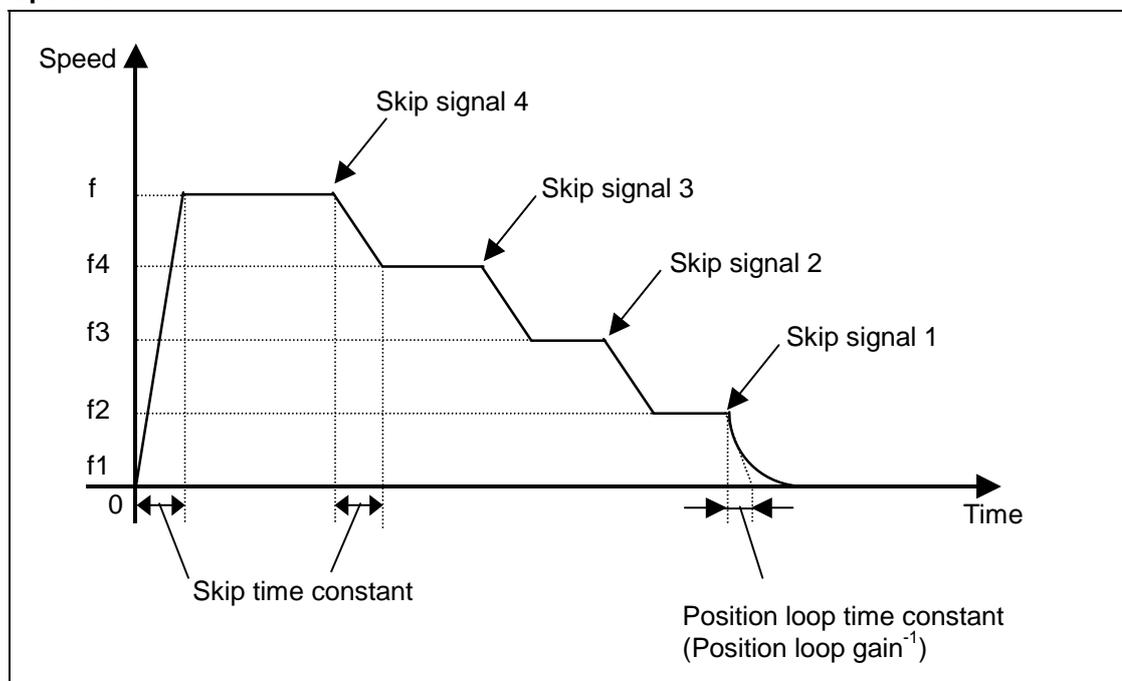

## 15. Measurement Support Functions

### 15.6 Programmable current limitation

#### 15.6 Programmable current limitation

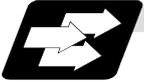

##### Function and purpose

This function allows the current limit value of the servo axis to be changed to a desired value in the program, and is used for the workpiece stopper, etc.

The commanded current limit value is designated with a ratio of the limit current to the rated current.



##### Command format

**G10 L14 X dn ;**

(n is the skip signal 1 to 8)

L14 : Current limit value setting (+ side/- side)

X : Axis address

dn : Current limit value 1% to 300%




##### Precautions and restrictions

- (1) If the current limit is reached when the current limit is valid, the current limit reached signal is output.
- (2) The following two modes can be used with external signals as the operation after the current limit is reached.
  - Normal mode  
The movement command is executed in the current state.  
During automatic operation, the movement command is executed to the end, and then the next block is moved to with the droops still accumulated.
  - Interlock mode  
The movement command is blocked (internal interlock).  
During automatic operation, the operation stops at the corresponding block, and the next block is not moved to.  
During manual operation, the following same direction commands are ignored.
- (3) During the current limit, the droop generated by the current limit can be canceled with external signals.  
(Note that the axis must not be moving.)
- (4) The setting range of the current limit value is 1% to 300%. Commands that exceed this range will cause a program error (P35).
- (5) If a decimal point is designated with the G10 command, only the integer will be valid.  
**(Example)** G10 L14 X10.123 ; The current limit value will be set to 10%.
- (6) For the axis name "C", the current limit value cannot be set from the program (G10 command). To set from the program, set the axis address with an incremental axis name, or set the axis name to one other than "C".

### 16. Machining mode

#### 16.1 High-speed machining mode

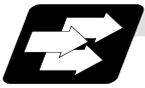

##### Function and purpose

This function runs a machining program that approximates a freely curved surface with fine segments at high speed using the MELDAS 64 (M type). This is effective in increasing the speed of machining dies of a freely curved surface.

High-accuracy machining can be realized by combined use of this function with the high-accuracy control function.

This function requires the "High-speed machining mode III" specifications.

##### (1) Basic Specifications

The performance of simultaneous 3-axis and 1mm-length fine segment is as follows.

High-speed machining mode	Performance of fine segment length
OFF	8.4 m/min
III	16.8 m/min



##### Command format

```
G05 P3 ;.....High-speed machining mode III ON
G05 P0 ;.....High-speed machining mode III OFF
```



##### Example of program

```
G28 X0. Y0. Z0. ;
G91 G00 X-100. Y-100. ;
G01 F3000 ;
G05 P3 ;
X0.1 ;
X0.1 Y0.001 ;
X0.1 Y0.002 ;
G90 G00 X0 Y0 Z0 ;
G02 X_Y_R_F_ ;
G03 X_Y_I_J_F_ ;
.
.
.
G05 P0 ;
M02;
```

High-speed machining mode III ON

INC modal, linear cutting

Rapid traverse

ABS modal, R designation arc

Arc

High-speed machining mode III OFF



### Detailed description

- (1) The following G codes can be used in high-speed machining mode III.  
G00, G01, G02, G03, G90, G91, G17, G18, G19
- (2) It is possible to command only axis names, movement amounts (variables and calculating not possible), and F commands I/J/K/R/P in high-speed machining mode III. (Comments can be used.)
- (3) Tape, MDI, and memory operation are all possible with the high-speed machining mode III.
- (4) Override, maximum cutting speed clamp, single block operation, dry run, handle interrupt, graphic trace, and high-accuracy control functions are valid even in the high-speed machining mode III modal.
- (5) Depending on the No. of characters in one block, the machining speed may decrease.
- (6) When high-speed machining mode III is validated, absolute/incremental, G00 to G03, and F command modal information are carried over.
- (7) High-speed machining mode III commands are possible in a sub-program.

### Program example

<pre> Main program O1   .   . G61.1 ; M98 P1000 L100 ;   .   .   .   .           </pre>	<pre> Sub-program O1000 G05 P3 ; High-speed machining mode III ON   .   .   .   .   . G05 P0 ; High-speed machining mode III OFF M99 ;           </pre>
-----------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------------------------------------------------------

M99 commands cannot be used in the high-speed machining mode III modal.  
(A program error (P33) will occur.)  
Always turn OFF the high-speed machining mode III before the M99 command.


# 16. Machining mode

## 16.1 High-speed machining mode




### Restrictions

- (1) This function requires the "High-speed machining mode III" specifications. If G05 is commanded when there are no specifications, program error (P65) will occur.
- (2) When machining with the high-speed machining mode III, the program path and actual path may differ.

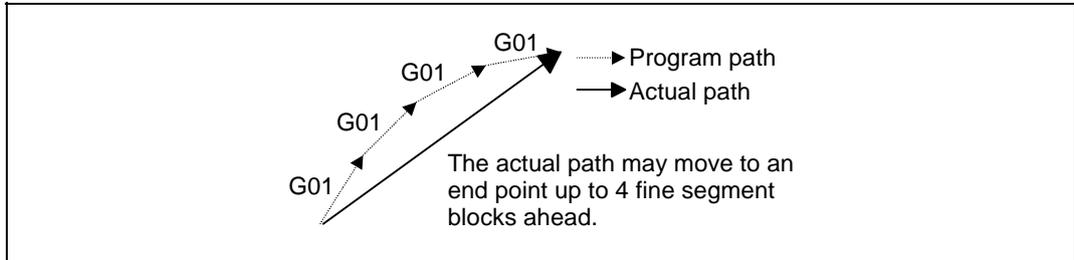

- (3) Cancel tool radius compensation, tool length offset, G command mirror image, and program coordinate rotation before commanding G05 P3. If these functions are not canceled, program error (P34) will occur.  
The modal information of the Modal Inform. screen will also change to the modal information during the G05 P3 command.  
The modal updated during the high-speed machining mode III modal is carried over even after the high-speed machining mode III is canceled.
- (4) The program error (P33) will occur if any command other than the following is carried out during high-speed machining mode III modal: Axis names, absolute/incremental movement amounts, F commands, G05 P0, G90/G91, G17/G18/G19, G00/G01/G02/G03, I/J/K/R/P commands, or comments.  
Change to the standard mode (G05 P0) before issuing commands other than those above.
- (5) The optional block skip (/) cannot be used during high-speed machining mode III modal. The program error (P33) will occur.
- (6) The sequence No. (N) cannot be used during the high-speed machining mode III modal. The program error (P33) will occur.
- (7) The automatic operation process is prioritized during high-speed machining mode III modal, so the monitor display, etc., may be delayed.
- (8) The machine decelerates temporarily in the G05 P3 and G05 P0 command blocks, so turn the machine ON/OFF at the places where the tool separates from the workpiece.

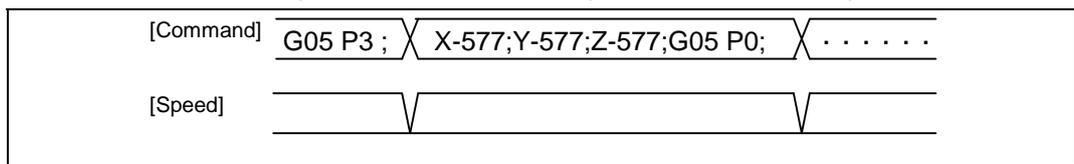

- (9) During high-speed machining mode operation by tape operation, the machining speed may be suppressed due to the No. of characters in one block.
- (10) If there is no P command in the G05 command block, a program error (P33) will occur.
- (11) Decimal points are invalid in P commands.
- (12) Program error (P35) will occur for commands other than P0/P3.  
Note that program error (P39) will occur for P1/P2 commands.
- (13) Variable commands and user macro cannot be used during high-speed machining mode III modal.
- (14) The high-speed machining mode III cannot be used when using the 2-part system. A program error (P34) will occur.
- (15) If an address other than G, P or N is commanded in the G5P3, G5P0 command block, a program error (P33) will occur.

## Appendix 1. Program Parameter Input N No. Correspondence Table

### Appendix 1. Program Parameter Input N No. Correspondence Table

**(Note 1)** The units in the table indicate the minimum setting units for the parameter data.

**(Note 2)** The setting ranges given in the table are the setting ranges on the screen. Designate parameters related to the length by doubling the input setting unit.

**(Example 1)** If the input setting unit in the metric system is "B" (0.001mm), set 30mm in the parameter.

**(Example 2)** If the input setting unit in the inch system is "B" (0.0001inch), set 5inch in the parameter.

**(Note 3)** The binary type parameters must be converted into by-type data, and commanded with a decimal data after address D.

**(Example 1)** Binary data  
 $01010101_B = 55_H = 85_D$  ..... Command 85

**(Example 2)** ASCII code  
 $"M" = 01001101_B = 4D_H = 77_D$  ..... Command 77  
 (B indicates Binary, H indicates Hexadecimal, and D indicates Decimal.)

**[Machining parameters]**

**Parameter 1.**

#	Item	P	A	N	Data type	Setting range	(Unit)	Remarks
8007	OVERRIDE	11	-	1010	D	0 to 100	(%)	
8008	MAX ANGLE	11	-	756	L	0 to 180	(°)	
8009	DSC. ZONE	11	-	760	L	0 to 99999.999	(mm)	
8013	G83 n	11	-	832	L	0 to 99999.999	(mm)	
8051	G71 THICK	11	-	784	L		(mm)	
8052	PULL UP	11	-	796	L		(mm)	
8053	G73 U	11	-	800	L		(mm)	
8054	W	11	-	804	L		(mm)	
8055	R	11	-	808	L		(time)	
8056	G74 RETRACT	11	-	820	L		(mm)	
8057	G76 LAST-D	11	-	824			(mm)	
8058	TIMES	11	-	997	D	0 to 99	(time)	
8059	ANGLE	11	-	998	D	0 to 99	(°)	

## Appendix 1. Program Parameter Input N No. Correspondence Table

### [Axis parameters]

### Parameter 1.

#	Item	P	A	N	Data type	Setting range	(Unit)	Remarks
8202	OT-CHECK OFF	2	No.	897	H2	0 to 1		
8204	OT-CHECK-N	2	No.	916	L	±99999.999	(mm)	
8205	OT-CHECK-P	2	No.	912	L	±99999.999	(mm)	

### [PLC data]

### Setup parameter 6.

#	Item	P	A	N	Data type	Setting range	(Unit)	Remarks
#6301 to #6348	PLC constant	5	–	1 to 48	L	±99999999		

### [PLC timer]

### Setup parameter 6.

#	Item	P	A	N	Data type	Setting range	(Unit)	Remarks
T0 to T15	10ms TIMER (T0 to T15)	6	–	0 to 15	S	0 to 32767	0.01s	
T16 to T95	100ms TIMER (T16 to T95)	6	–	16 to 95	S	0 to 32767	0.1s	
T96 to T103	100ms TIMER (T96 to T103) (INC.)	6	–	96 to 103	S	0 to 32767	0.1s	

### [PLC counter]

### Setup parameter 6.

#	Item	P	A	N	Data type	Setting range	(Unit)	Remarks
C0 to C23	PLC counter	7	–	0 to 23	L	0 to 32767		

### [Bit selection]

### Setup parameter 6.

#	Item	P	A	N	Data type	Setting range	(Unit)	Remarks
6401 to 6496	Bit selection	8	–	1 to 96	D or H0 to H7	0x00 to 0xFF (Note) 0 to 256 0 to 1	(Hex) (Dec)	

**(Note)** Convert the 0x00 to 0xFF data into a decimal before using.

## Appendix 1. Program Parameter Input N No. Correspondence Table

[20: High precision control]

Setup parameter 6.

#	Item	P	A	N	Data type	Setting range	(Unit)	Remarks
8025	SPLINE ON	20	-	1	H0	0 to 1		
8027	Toler-1	20	-	2	L	0 to 100.000 0 to 10.0000	(mm) (mm)	
8028	Toler-2	20	-	3	L	0 to 100.000 0 to 10.0000	(mm) (mm)	
8029	FairingL	20	-	4	L	0 to 100.000	(mm)	
8030	MINUTE LENGTH	20	-	5	D	-1 to 127	(mm)	
8033	Fairing ON	20	-	6	H0	0 to 1		
8034	AccClamp ON	20	-	6	H1	0 to 1		
8035	AccClampMag	20	-	7	L	0 to 999	(%)	
8036	CordecJudge	20	-	6	H2	0 to 1		
8037	CorJudgeL	20	-	8	L	0 to 99999.999	(mm)	
8019	R COMP	20	-	101	D	0 to 99	(%)	
8020	DCC ANGLE	20	-	102	D	0 to 89	(°)	
8021	COMP CHANGE	20	-	103	H0	0 to 1		
8022	CORNER COMP	20	-	104	L	-1000 to 99	(%)	
8023	CURVE COMP	20	-	105	L	-1000 to 99	(%)	
8026	CANCEL ANG.	20	-	106	D	0 to 180	(°)	

## Appendix 2. Program Error

### Appendix 2. Program Error

(The bold characters are the message displayed in the screen.)

These alarms occur during automatic operation, and the causes of these alarms are mainly program errors which occur, for instance, when mistakes have been made in the preparation of the machining programs or when programs which conform to the specification have not been prepared.

Error No.	Details	Remedy
<b>P 10</b>	<b>EXCS. AXIS No.</b> The number of axis addresses commanded in the same block exceeds the specifications.	<ul style="list-style-type: none"> <li>• Divide the alarm block command into two.</li> <li>• Check the specifications.</li> </ul>
<b>P 11</b>	<b>AXIS ADR. ERROR</b> The axis address commanded by the program and the axis address set by the parameter do not match.	<ul style="list-style-type: none"> <li>• Revise the axis names in the program.</li> </ul>
<b>P 20</b>	<b>DIVISION ERROR</b> An axis command which cannot be divided by the command unit has been issued.	<ul style="list-style-type: none"> <li>• Check the program.</li> </ul>
<b>P 29</b>	<b>NOT ACCEPT CMND</b> The normal line control command (G40.1, G41.1, G42.1) has been issued during the modal in which the normal line control is not acceptable.	<ul style="list-style-type: none"> <li>• Check the program.</li> </ul>
<b>P 30</b>	<b>PARITY H</b> The number of holes per character on the paper tape is even for EIA code and odd for ISO code.	<ul style="list-style-type: none"> <li>• Check the paper tape.</li> <li>• Check the tape puncher and tape reader.</li> </ul>
<b>P 31</b>	<b>PARITY V</b> The number of characters per block on the paper tape is odd.	<ul style="list-style-type: none"> <li>• Make the number of characters per block on the paper tape even.</li> <li>• Set the parameter parity V selection OFF.</li> </ul>
<b>P 32</b>	<b>ADDRESS ERROR</b> An address not listed in the specifications has been used.	<ul style="list-style-type: none"> <li>• Check and revise the program address.</li> <li>• Check and correct the parameters values.</li> <li>• Check the specifications.</li> </ul>
<b>P 33</b>	<b>FORMAT ERROR</b> The command format in the program is not correct.	<ul style="list-style-type: none"> <li>• Check the program.</li> </ul>
<b>P 34</b>	<b>G-CODE ERROR</b> A G code not listed in the specifications has been used. An illegal G code was commanded during the coordinate rotation command (G68).	<ul style="list-style-type: none"> <li>• Check and correct the G code address in the program.</li> </ul>
	G51.2 or G50.2 was commanded when the rotary tool axis No. (#1501 polyax) was set to "0". G51.2 or G50.2 was commanded when the tool axis was set to the linear axis (#1017 rot "0").	<ul style="list-style-type: none"> <li>• Check the parameter setting values.</li> </ul>

## Appendix 2. Program Error

Error No.	Details	Remedy
<b>P 35</b>	<b>CMD-VALUE OVER</b> The setting range for the addresses has been exceeded.	<ul style="list-style-type: none"> <li>• Check the program.</li> </ul>
<b>P 36</b>	<b>PROGRAM END ERR</b> “EOR” has been read during tape and memory operation.	<ul style="list-style-type: none"> <li>• Enter the M02 and M30 command at the end of the program.</li> <li>• Enter the M99 command at the end of the subprogram.</li> </ul>
<b>P 37</b>	<b>PROG. NO. ZERO</b> A zero has been specified for program and sequence numbers.	<ul style="list-style-type: none"> <li>• The program numbers are designated across a range from 1 to 99999999.</li> <li>• The sequence numbers are designated across a range from 1 to 99999.</li> </ul>
<b>P 39</b>	<b>NO SPEC ERR</b> <ul style="list-style-type: none"> <li>• A non-specified G code was specified.</li> <li>• The high-speed program server operation specifications are not provided.</li> </ul>	<ul style="list-style-type: none"> <li>• Check the specifications.</li> </ul>
<b>P 40</b>	<b>PREREAD BL. ERR</b> When tool radius compensation is executed, there is an error in the pre-read block and so the interference check is disabled.	<ul style="list-style-type: none"> <li>• Reconsider the program.</li> </ul>
<b>P 60</b>	<b>OVER CMP. LENG.</b> The commanded movement distance is excessive. (Over $2^{31}$ )	<ul style="list-style-type: none"> <li>• Reconsider the axis address command.</li> </ul>
<b>P 62</b>	<b>F-CMD. NOTHING</b> <ul style="list-style-type: none"> <li>• No feed rate command has been issued.</li> <li>• There is no F command in the cylindrical interpolation or pole coordinate interpolation immediately after the G95 mode is commanded.</li> </ul>	<ul style="list-style-type: none"> <li>• The default movement modal command at power ON is G01. This causes the machine to move without a G01 command if a movement command is issued in the program, and an alarm results. Use an F command to specify the feedrate.</li> <li>• Specify F with a thread lead command.</li> </ul>
<b>P 65</b>	<b>NO G05P3 SPEC</b>	<ul style="list-style-type: none"> <li>• Check the high-speed mode III specifications.</li> </ul>
<b>P 70</b>	<b>ARC ERROR</b> <ul style="list-style-type: none"> <li>• There is an error in the arc start and end points as well as in the arc center.</li> <li>• The difference of the involute curve through the start point and the end point is large.</li> <li>• When arc was commanded, one of the two axes configuring the arc plane was a scaling valid axis.</li> </ul>	<ul style="list-style-type: none"> <li>• Check the numerical values of the addresses that specify the start and end points, arc center as well as the radius in the program.</li> <li>• Check the “+” and “-” directions of the address numerical values.</li> </ul>

## Appendix 2. Program Error

Error No.	Details	Remedy
<b>P 71</b>	<b>ARC CENTER</b> <ul style="list-style-type: none"> <li>The arc center is not sought during R-specified circular interpolation.</li> <li>The curvature center of the involute curve cannot be obtained.</li> </ul>	<ul style="list-style-type: none"> <li>Check the numerical values of the addresses in the program.</li> <li>Check whether the start point or end point is on the inner side of the base circle for involute interpolation. When carrying out tool radius compensation, check that the start point and end point after compensation are not on the inner side of the base circle for involute interpolation.</li> <li>Check whether the start point and end point are at an even distance from the center of the base circle for involute interpolation.</li> </ul>
<b>P 72</b>	<b>NO HELICAL SPEC</b> A helical command has been issued though it is not included in the specifications.	<ul style="list-style-type: none"> <li>Check the helical specifications.</li> <li>An Axis 3 command was issued by the circular interpolation command. If there is no helical specification, the linear axis is moved to the next block.</li> </ul>
<b>P 90</b>	<b>NO THREAD SPEC</b> A thread cutting command has been issued though it is not included in the specifications.	<ul style="list-style-type: none"> <li>Check the specifications.</li> </ul>
<b>P 93</b>	<b>SCREW PITCH ERR</b> The screw pitch has not been set correctly when the thread cutting command is issued.	<ul style="list-style-type: none"> <li>Issue the thread cutting command and then set the screw pitch command properly.</li> </ul>
<b>P100</b>	<b>NO CYLIND SPEC</b> Cylindrical interpolation was commanded when the cylindrical interpolation specifications were not provided.	<ul style="list-style-type: none"> <li>Check the specifications.</li> </ul>
<b>P111</b>	<b>PLANE CHG (CR)</b> Plane selection commands (G17, G18, and G19) were issued when a coordinate rotation command (G68) was issued.	<ul style="list-style-type: none"> <li>Before issuing the plane selection commands, issue G68 and then G69 (coordinate rotation cancel).</li> </ul>
<b>P112</b>	<b>PLANE CHG (CC)</b> <ul style="list-style-type: none"> <li>A plane selection command (G17, G18, G19) has been issued when the tool radius compensation command (G41, G42) or nose R compensation command (G41, G42, G46) is issued.</li> <li>The plane selection command was issued when nose R compensation is completed, there is no axial movement command after the G40 command, and the compensation has not been canceled.</li> </ul>	<ul style="list-style-type: none"> <li>Issue the plane selection command after the tool radius compensation command or nose R compensation command has been canceled (issue axial movement command after the G40 cancel command).</li> </ul>

## Appendix 2. Program Error

Error No.	Details	Remedy
<b>P113</b>	<b>ILLEGAL PLANE</b> The arc command axis is not on the selected plane.	<ul style="list-style-type: none"> <li>• Issue arc command on the correctly selected plane.</li> </ul>
<b>P122</b>	<b>NO AUTO C-OVR</b> An automatic corner override command (G62) has been issued though it is not included in the specifications.	<ul style="list-style-type: none"> <li>• Check the specifications.</li> <li>• Delete the G62 command from the program.</li> </ul>
<b>P130</b>	<b>2nd AUX. ADDR</b> The 2nd miscellaneous function address specified in the program does not match that set by the parameter.	<ul style="list-style-type: none"> <li>• Check and correct the 2nd miscellaneous function address in the program.</li> </ul>
<b>P131</b>	<b>NO G96 SPEC</b> (No constant peripheral speed) The constant peripheral speed command (G96) was issued despite the fact that such a command does not exist in the specifications.	<ul style="list-style-type: none"> <li>• Check the specifications.</li> <li>• Change from the constant peripheral speed command (G96) to the rotation speed command (G97).</li> </ul>
<b>P132</b>	<b>SPINDLE S = 0</b> No spindle speed command has been specified.	<ul style="list-style-type: none"> <li>• Reconsider the program.</li> </ul>
<b>P133</b>	<b>G96 P-No. ERR</b> An invalid constant peripheral speed control axis has been specified.	<ul style="list-style-type: none"> <li>• Reconsider the parameter specified for the constant peripheral speed control axis.</li> </ul>
<b>P134</b>	<b>G96 Clamp Err.</b> The constant surface speed control command (G96) was issued without commanding the spindle speed clamp (G92/G50).	<p>Press the reset key and carry out the remedy below.</p> <ul style="list-style-type: none"> <li>• Check the program.</li> <li>• Issue the G92/G50 command before the G96 command.</li> <li>• Command the constant surface speed cancel (G97) to switch to the rotation speed command.</li> </ul> <p>(Applicable only to M65 V series and M64 C version series)</p>
<b>P140</b>	<b>NO T-POS OFST</b> The position compensation command (G45 to G48) specifications are not available.	<ul style="list-style-type: none"> <li>• Check the specifications.</li> </ul>
<b>P141</b>	<b>PAT-ROT ERROR</b> Position compensation was commanded during the figure rotation or coordinate rotation command.	<ul style="list-style-type: none"> <li>• Reconsider the program.</li> </ul>
<b>P142</b>	<b>T-OFFS G2 ERR</b> A position compensation invalid arc command was commanded.	<ul style="list-style-type: none"> <li>• Reconsider the program.</li> </ul>

## Appendix 2. Program Error

Error No.	Details	Remedy
<b>P150</b>	<b>NO C-CMP SPEC</b> <ul style="list-style-type: none"> <li>• Even though there were no tool radius compensation specifications, tool radius compensation commands (G41 and G42) were issued.</li> <li>• Even though there were no nose R compensation specifications, nose R compensation commands (G41, G42, and G46) were issued.</li> </ul>	<ul style="list-style-type: none"> <li>• Check the specifications.</li> </ul>
<b>P151</b>	<b>G2, 3 CMP. ERR</b> A compensation command (G40, G41, G42, G43, G44, G46) has been issued in the arc mode (G02, G03).	<ul style="list-style-type: none"> <li>• Issue the linear command (G01) or rapid traverse command (G00) in the compensation command block or cancel block. (Set the modal to linear interpolation.)</li> </ul>
<b>P152</b>	<b>I.S.P NOTHING</b> In interference block processing during execution of a tool radius compensation (G41 or G42) or nose R compensation (G41, G42, or G46) command, the intersection point after one block is skipped cannot be determined.	<ul style="list-style-type: none"> <li>• Reconsider the program.</li> </ul>
<b>P153</b>	<b>I.F ERROR</b> An interference error has arisen while the tool radius compensation command (G41, G42) or nose R compensation command (G41, G42, G46) was being executed.	<ul style="list-style-type: none"> <li>• Reconsider the program.</li> </ul>
<b>P155</b>	<b>F-CYC ERR (CC)</b> A fixed cycle command has been issued in the radius compensation mode.	<ul style="list-style-type: none"> <li>• The radius compensation mode is established when a fixed cycle command is executed and so the radius compensation cancel command (G40) should be issued.</li> </ul>
<b>P156</b>	<b>BOUND DIRECT</b> At the start of G46 nose R compensation, the compensation direction is undefined if this shift vector is used.	<ul style="list-style-type: none"> <li>• Change the vector to that with which the compensation direction is defined.</li> <li>• Exchange with a tool having a different tip point number.</li> </ul>
<b>P157</b>	<b>SIDE REVERSED</b> During G46 nose R compensation, the compensation direction is inverted.	<ul style="list-style-type: none"> <li>• Change the G command to that which allows inversion of the compensation direction (G00, G28, G30, G33, or G53).</li> <li>• Exchange with a tool having a different tip point number.</li> <li>• Turn ON the #8106 G46 inversion error avoidance parameter.</li> </ul>
<b>P158</b>	<b>ILLEGAL TIP P.</b> During G46 nose R compensation, the tip point is illegal (other than 1 to 8).	<ul style="list-style-type: none"> <li>• Change the tip point number to a legal one.</li> </ul>

## Appendix 2. Program Error

Error No.	Details	Remedy												
<b>P170</b>	<b>NO CORR. No.</b> The compensation number (DOO, TOO, HOO) command was not given when the radius compensation (G41, G42, G43, G46) command was issued. Alternatively, the compensation number is larger than the number of sets in the specifications.	<ul style="list-style-type: none"> <li>• Add the compensation number command to the compensation command block.</li> <li>• Check the number of compensation number sets a correct it to a compensation number command within the permitted number of compensation sets.</li> </ul>												
<b>P172</b>	<b>G10 L-No. ERR</b> (G10 L-number error) The L address command is not correct when the G10 command is issued.	<ul style="list-style-type: none"> <li>• Check the address L-Number of the G10 command and correct the number.</li> </ul>												
<b>P173</b>	<b>G10 P-No. ERR</b> (G10 compensation error) When the G10 command is issued, a compensation number outside the permitted number of sets in the specifications has been commanded for the compensation number command.	<ul style="list-style-type: none"> <li>• First check the number of compensation sets and then set the address P designation to within the permitted number of sets.</li> </ul>												
<b>P177</b>	<b>LIFE COUNT ACT</b> Registration of tool life management data with G10 was attempted when the used data count valid signal was ON.	<ul style="list-style-type: none"> <li>• The tool life management data cannot be registered when counting the used data. Turn the used data count valid signal OFF.</li> </ul>												
<b>P178</b>	<b>LIFE DATA OVER</b> The No. of registration groups, total No. of registered tools or the No. of registrations per group exceeded the specifications range.	<ul style="list-style-type: none"> <li>• Review the No. of registrations. The maximum No. of registrations is shown below.</li> </ul> <table border="1"> <thead> <tr> <th>System</th> <th>System 1</th> <th>System 2</th> </tr> </thead> <tbody> <tr> <td>No. of groups</td> <td>80</td> <td>40/40</td> </tr> <tr> <td>No. of tools</td> <td>80</td> <td>40/40</td> </tr> <tr> <td>Per group</td> <td colspan="2">16</td> </tr> </tbody> </table>	System	System 1	System 2	No. of groups	80	40/40	No. of tools	80	40/40	Per group	16	
System	System 1	System 2												
No. of groups	80	40/40												
No. of tools	80	40/40												
Per group	16													
<b>P179</b>	<b>GROUP No. ILL.</b> <ul style="list-style-type: none"> <li>• When registering the tool life management data with G10, the group No. was commanded in duplicate.</li> <li>• A group No. that was not registered was designated during the T□□□□99 command.</li> <li>• An M code command must be issued as a single command but coexists in the same block as that of another M code command.</li> <li>• The M code commands set in the same group exist in the same block.</li> </ul>	<ul style="list-style-type: none"> <li>• The group No. cannot be commanded in duplicate. When registering the group data, register it in group units.</li> <li>• Correct to the correct group No.</li> </ul>												

## Appendix 2. Program Error

Error No.	Details	Remedy
<b>P180</b>	<b>NO BORING CYC.</b> A fixed cycle command was issued though there are not fixed cycle (G72 – G89) specifications.	<ul style="list-style-type: none"> <li>• Check the specifications.</li> <li>• Correct the program.</li> </ul>
<b>P181</b>	<b>NO S-CMD (TAP)</b> The spindle rotation speed command has not been issued when the hole drilling fixed cycle command is given.	<ul style="list-style-type: none"> <li>• Issue the spindle rotation speed command (S) when the hole drilling fixed cycle command G84, G74 (G84, G88) is given.</li> </ul>
<b>P182</b>	<b>SYN TAP ERROR</b> Connection to the main spindle unit was not established.	<ul style="list-style-type: none"> <li>• Check connection to the main spindle.</li> <li>• Check that the main spindle encoder exists.</li> </ul>
<b>P183</b>	<b>PTC/THD, No.</b> The pitch or thread number command has not been issued in the tap cycle of a hole drilling fixed cycle command.	<ul style="list-style-type: none"> <li>• Specify the pitch data and the number of threads by F or E command.</li> </ul>
<b>P184</b>	<b>NO PTC/THD CMD</b> The pitch or the number of threads per inch is illegal in the tap cycle of the hole drilling fixed cycle command.	<ul style="list-style-type: none"> <li>• Check the pitch or the number of threads per inch.</li> </ul>
<b>P190</b>	<b>NO CUTTING CYC</b> A lathe cutting cycle command was input although the lathe cutting cycle was undefined in the specification.	<ul style="list-style-type: none"> <li>• Check the specification.</li> <li>• Delete the lathe cutting cycle command.</li> </ul>
<b>P191</b>	<b>TAPER LENG ERR</b> In the lathe cutting cycle, the specified length of taper section is illegal.	<ul style="list-style-type: none"> <li>• The radius set value in the lathe cycle command must be smaller than the axis shift amount.</li> </ul>
<b>P192</b>	<b>CHAMFERING ERR</b> Chamfering in the thread cutting cycle is illegal.	<ul style="list-style-type: none"> <li>• Set a chamfering amount not exceeding the cycle.</li> </ul>
<b>P200</b>	<b>NO MRC CYC SPC</b> The fixed cycle for compound lathe I (G70 to G73) was commanded when the fixed cycle for compound lathe I specifications were not provided.	<ul style="list-style-type: none"> <li>• Check the specification.</li> </ul>
<b>P201</b>	<b>PROG. ERR (MRC)</b> <ul style="list-style-type: none"> <li>• When called with a fixed cycle for compound lathe I command, the subprogram contained at least one of the following commands: <ul style="list-style-type: none"> <li>• Reference point return command (G27, G28, G29, G30)</li> <li>• Thread cutting (G33, G34)</li> <li>• Fixed cycle skip-function (G31)</li> </ul> </li> <li>• The first move block of the finish shape program in fixed cycle for compound lathe I contains an arc command.</li> </ul>	<ul style="list-style-type: none"> <li>• Delete the following G codes from this subprogram that is called with the fixed cycle for compound lathe I commands (G70 to G73): G27, G28, G29, G30, G31, G33, G34, fixed cycle G-code.</li> <li>• Remove G2 and G3 from the first move block of the finish shape program in fixed cycle for compound lathe I.</li> </ul>

## Appendix 2. Program Error

Error No.	Details	Remedy
<b>P202</b>	<b>BLOCK OVR (MRC)</b> The number of blocks in the shape program of the fixed cycle for compound lathe I is over 50 or 200 (this differs according to the model).	<ul style="list-style-type: none"> <li>Specify 50 or a less value. The number of blocks in the shape program called by the fixed cycle for compound lathe I commands (G70 to G73) must be decreased below 50 or 200 (this differs according to the model).</li> </ul>
<b>P203</b>	<b>CONF. ERR (MRC)</b> The fixed cycle for compound lathe I (G70 to G73) shape program could not cut the work normally because it defined an abnormal shape.	<ul style="list-style-type: none"> <li>Check the fixed cycle for compound lathe I (G70 to G73) shape program.</li> </ul>
<b>P204</b>	<b>VALUE ERR (MRC)</b> A command value of the fixed cycle for compound lathe (G70 to G76) is illegal.	<ul style="list-style-type: none"> <li>Check the fixed cycle for compound lathe (G70 to G76) command value.</li> </ul>
<b>P210</b>	<b>NO PAT CYC SPC</b> A fixed cycle for compound lathe II (G74 to G76) command was input although it was undefined in the specification.	<ul style="list-style-type: none"> <li>Check the specification.</li> </ul>
<b>P220</b>	<b>NO SPECIAL CYC</b> No special fixed cycle specifications are available.	<ul style="list-style-type: none"> <li>Check the specifications.</li> </ul>
<b>P221</b>	<b>NO HOLE (S_CYC)</b> A 0 has been specified for the number of holes in special fixed cycle mode.	<ul style="list-style-type: none"> <li>Reconsider the program.</li> </ul>
<b>P222</b>	<b>G36 ANGLE ERR</b> A G36 command specifies 0 for angle intervals.	<ul style="list-style-type: none"> <li>Reconsider the program.</li> </ul>
<b>P223</b>	<b>G12 G13 R ERR</b> The radius value specified with a G12 or G13 command is below the compensation amount.	<ul style="list-style-type: none"> <li>Reconsider the program.</li> </ul>
<b>P224</b>	<b>NO G12, G13 SPC</b> There are no circular cutting specifications.	<ul style="list-style-type: none"> <li>Check the specifications.</li> </ul>
<b>P230</b>	<b>NESTING OVER</b> <ul style="list-style-type: none"> <li>A subprogram has been called 4 or more times in succession from the subprogram.</li> <li>The program in the IC card contains the M198 command.</li> <li>The program in the IC card has been called more than once (the program in the IC card can be called only once at a time).</li> </ul>	<ul style="list-style-type: none"> <li>Check the number of subprogram calls and correct the program so that it does not exceed 4 times.</li> <li>When using the IC card, the IC card and the number of IC card program calls.</li> </ul>
<b>P231</b>	<b>NO N-NUMBER</b> At subprogram call time, the sequence number set at return from the subprogram or specified by GOTO, was not set.	<ul style="list-style-type: none"> <li>Specify the sequence numbers in the call block of the subprogram.</li> <li>When using an IC card, check the program and its No. in the IC card.</li> </ul>

## Appendix 2. Program Error

Error No.	Details	Remedy
<b>P232</b>	<b>NO PROGRAM No.</b> The subprogram has not been found when the subprogram is called.	<ul style="list-style-type: none"> <li>• Enter the subprogram.</li> <li>• Check the program number in the IC card.</li> </ul>
<b>P241</b>	<b>NO VARI NUMBER</b> The variable number commanded is higher than the numbers in the specifications.	<ul style="list-style-type: none"> <li>• Check the specifications.</li> <li>• Check the program variable number.</li> </ul>
<b>P242</b>	<b>EQL. SYM. MSSG.</b> The “=” sign has not been commanded when a variable is defined.	<ul style="list-style-type: none"> <li>• Designate the “=” sign in the variable definition of the program.</li> </ul>
<b>P243</b>	<b>VARIABLE ERR.</b> An invalid variable has been specified in the left or right side of an operation expression.	<ul style="list-style-type: none"> <li>• Correct the program.</li> </ul>
<b>P252</b>	<b>PAT. &amp; COOD-ROT</b> A coordinate rotation related command (G68, G69) was issued during figure rotation.	<ul style="list-style-type: none"> <li>• Reconsider the program.</li> </ul>
<b>P260</b>	<b>NO COOD-RT SPC</b> Even though there were no coordinate rotation specifications, a coordinate rotation command was issued.	<ul style="list-style-type: none"> <li>• Check the specifications.</li> </ul>
<b>P270</b>	<b>NO MACRO SPEC</b> A macro specification was commanded though there are no such command specifications.	<ul style="list-style-type: none"> <li>• Check the specifications.</li> </ul>
<b>P271</b>	<b>NO MACRO INT.</b> A macro interrupt command has been issued though it is not included in the specifications.	<ul style="list-style-type: none"> <li>• Check the specifications.</li> </ul>
<b>P272</b>	<b>MACRO ILL.</b> A statement and a macro statement exist together in the same block.	<ul style="list-style-type: none"> <li>• Reconsider the program and place the executable statement and macro statement in separate blocks.</li> </ul>
<b>P273</b>	<b>MACRO OVERCALL</b> The number of macro call nests exceeded the specifications.	<ul style="list-style-type: none"> <li>• Reconsider the program and correct it so that the macro calls do not exceed the limit imposed by the specification.</li> </ul>
<b>P275</b>	<b>MACRO ARG. EX.</b> The number of macro call argument type II sets has exceeded the limit.	<ul style="list-style-type: none"> <li>• Reconsider the program.</li> </ul>
<b>P276</b>	<b>CALL CANCEL</b> A G67 command was issued though it was not during the G66 command modal.	<ul style="list-style-type: none"> <li>• Reconsider the program.</li> <li>• The G67 command is the call cancel command and so the G66 command must be designated first before it is issued.</li> </ul>
<b>P277</b>	<b>MACRO ALM MMSG</b> An alarm command has been issued in #3000.	<ul style="list-style-type: none"> <li>• Refer to the operator messages on the DIAG screen.</li> <li>• Refer to the instruction manual issued by the machine manufacturer.</li> </ul>

## Appendix 2. Program Error

Error No.	Details	Remedy
<b>P280</b>	<b>EXC. [ ,</b> The number of parentheses “[” or “]” which can be commanded in a single block has exceeded five.	<ul style="list-style-type: none"> <li>Reconsider the program and correct it so the number of “[” or “]” does not exceed five.</li> </ul>
<b>P281</b>	<b>[ , ] ILLEGAL</b> The number of “[” and “]” parentheses commanded in a single block does not match.	<ul style="list-style-type: none"> <li>Reconsider the program and correct it so that “[” and “]” parentheses are paired up properly.</li> </ul>
<b>P282</b>	<b>CALC. IMPOSS.</b> The arithmetic formula is incorrect.	<ul style="list-style-type: none"> <li>Reconsider the program and correct the formula.</li> </ul>
<b>P283</b>	<b>DIVIDE BY ZERO</b> The denominator of the division is zero.	<ul style="list-style-type: none"> <li>Reconsider the program and correct it so that the denominator for division in the formula is not zero.</li> </ul>
<b>P290</b>	<b>IF SNT. ERROR</b> There is an error in the IF conditional GOTO□ statement.	<ul style="list-style-type: none"> <li>Reconsider the program.</li> </ul>
<b>P291</b>	<b>WHILE SNT. ERR</b> There is an error in the WHILE conditional DO□-END□ statement.	<ul style="list-style-type: none"> <li>Reconsider the program.</li> </ul>
<b>P292</b>	<b>SETVN SNT. ERR</b> There is an error in the SETVN□ statement when the variable name setting was made.	<ul style="list-style-type: none"> <li>Reconsider the program.</li> <li>The number of characters in the variable name of the SETVN statement must be 7 or less.</li> </ul>
<b>P293</b>	<b>DO-END EXCESS</b> The number of □’s for DO-END□ in the WHILE conditional DO□ – END□ statement has exceed 27.	<ul style="list-style-type: none"> <li>Reconsider the program and correct it so that the number of ’s in the DO – END statement does not exceed 27.</li> </ul>
<b>P294</b>	<b>DO-END MMC.</b> The DO’s and END’s are not paired off properly.	<ul style="list-style-type: none"> <li>Reconsider the program and correct it so that the DO’s and END’s are paired off properly.</li> </ul>
<b>P295</b>	<b>WHILE/GOTO TPE</b> There is a WHILE or GOTO statement on the tape during tape operation.	<ul style="list-style-type: none"> <li>During tape operation, a program which includes a WHILE or GOTO statement cannot be executed and so the memory operation mode is established instead.</li> </ul>
<b>P296</b>	<b>NO ADR (MACRO)</b> A required address has not been specified in the user macro.	<ul style="list-style-type: none"> <li>Review the program.</li> </ul>
<b>P297</b>	<b>ADR-A ERR.</b> The user macro does not use address A as a variable.	<ul style="list-style-type: none"> <li>Review the program.</li> </ul>
<b>P298</b>	<b>PTR OP (MACRO)</b> User macro G200, G201, or G202 was specified during tape or MDI operation.	<ul style="list-style-type: none"> <li>Review the program.</li> </ul>
<b>P300</b>	<b>VER. NAME ERROR</b> The variable names have not been commanded properly.	<ul style="list-style-type: none"> <li>Reconsider the variable names in the program and correct them.</li> </ul>

## Appendix 2. Program Error

Error No.	Details	Remedy
<b>P301</b>	<b>VAR NAME DUPLI</b> The name of the variable has been duplicated.	<ul style="list-style-type: none"> <li>• Correct the program so that the name is not duplicated.</li> </ul>
<b>P350</b>	<b>NO SCALING SPC</b> The scaling command (G50, G51) when the scaling specifications were not available.	<ul style="list-style-type: none"> <li>• Check the specifications.</li> </ul>
<b>P360</b>	<b>NO PROG.MIRR.</b> A mirror image (G50.1 or G51.1) command has been issued though the programmable mirror image specifications are not provided.	<ul style="list-style-type: none"> <li>• Check the specifications.</li> </ul>
<b>P370</b>	<b>NO OPOS MR SPC</b> The facing turret mirror image specifications are not provided.	<ul style="list-style-type: none"> <li>• Check the specifications.</li> </ul>
<b>P371</b>	<b>MIRR ILLEGAL</b> Facing turret mirror image was commanded to an axis for which external mirror image or parameter mirror image is valid. Facing turret mirror image validating mirror image for a rotary axis was commanded.	<ul style="list-style-type: none"> <li>• Check the program.</li> <li>• Check the parameters.</li> </ul>
<b>P380</b>	<b>NO CORNER R/C</b> A command was issued for corner chamfering/corner rounding though there are no such specifications.	<ul style="list-style-type: none"> <li>• Check the specifications.</li> <li>• Remove the corner chamfering/corner rounding command from the program.</li> </ul>
<b>P381</b>	<b>NO ARC R/C SPC</b> Corner chamfering/corner rounding was specified in the arc interpolation block although corner chamfering/corner rounding II is unsupported.	<ul style="list-style-type: none"> <li>• Check the specifications.</li> </ul>
<b>P382</b>	<b>CORNER NO MOVE</b> The block next to corner chamfering/corner rounding is not a movement command.	<ul style="list-style-type: none"> <li>• Replace the block succeeding the corner chamfering/corner rounding command by G01 command.</li> </ul>
<b>P383</b>	<b>CORNER SHORT</b> In the corner chamfering/corner rounding command, the movement distance was shorter than the value in the corner chamfering/corner rounding command.	<ul style="list-style-type: none"> <li>• Make the corner chamfering/corner rounding less than the movement distance since this distance is shorter than the corner chamfering/corner rounding.</li> </ul>
<b>P384</b>	<b>CORNER SHORT</b> When the corner chamfering/corner rounding command was input, the movement distance in the following block was shorter than the length of the corner chamfering/corner rounding.	<ul style="list-style-type: none"> <li>• Make the corner chamfering/corner rounding less than the movement distance since this distance in the following block is shorter than the corner chamfering/corner rounding.</li> </ul>

## Appendix 2. Program Error

Error No.	Details	Remedy
<b>P385</b>	<b>G0 G33 IN CONR</b> A block with corner chamfering/corner rounding was given during G00 or G33 modal.	<ul style="list-style-type: none"> <li>• Recheck the program.</li> </ul>
<b>P390</b>	<b>NO GEOMETRIC</b> A geometric command was issued though there are no geometric specifications.	<ul style="list-style-type: none"> <li>• Check the specifications.</li> </ul>
<b>P391</b>	<b>NO GEOMETRIC 2</b> There are no geometric IB specifications.	<ul style="list-style-type: none"> <li>• Check the specifications.</li> </ul>
<b>P392</b>	<b>LES AGL (GEOMT)</b> The angular difference between the geometric line and line is 1° or less.	<ul style="list-style-type: none"> <li>• Correct the geometric angle.</li> </ul>
<b>P393</b>	<b>INC ERR (GEOMT)</b> The second geometric block was specified by an incremental value.	<ul style="list-style-type: none"> <li>• Specify this block by an absolute value.</li> </ul>
<b>P394</b>	<b>NO G01 (GEOMT)</b> The second geometric block contains no linear command.	<ul style="list-style-type: none"> <li>• Specify the G01 command.</li> </ul>
<b>P395</b>	<b>NO ADRS (GEOMT)</b> The geometric format is invalid.	<ul style="list-style-type: none"> <li>• Recheck the program.</li> </ul>
<b>P396</b>	<b>PL CHG. (GEOMT)</b> A plane switching command was executed during geometric command processing.	<ul style="list-style-type: none"> <li>• Execute the plane switching command before geometric command processing.</li> </ul>
<b>P397</b>	<b>ARC ERR (GEOMT)</b> In geometric IB, the circular arc end point does not contact or cross the next block start point.	<ul style="list-style-type: none"> <li>• Recheck the geometric circular arc command and the preceding and following commands.</li> </ul>
<b>P398</b>	<b>NO GEOMETRIC 1B</b> Although the geometric IB specifications are not included, a geometric command is given.	<ul style="list-style-type: none"> <li>• Check the specifications.</li> </ul>
<b>P421</b>	<b>PRAM. IN ERROR</b> <ul style="list-style-type: none"> <li>• The specified parameter number or set data is illegal.</li> <li>• An illegal G command address was input in parameter input mode.</li> <li>• A parameter input command was input during fixed cycle modal or nose R compensation.</li> </ul>	<ul style="list-style-type: none"> <li>• Check the program.</li> </ul>

## Appendix 2. Program Error

Error No.	Details	Remedy
<b>P430</b>	<b>AXIS NOT RET.</b> <ul style="list-style-type: none"> <li>• A command was issued to move an axis, which has not returned to the reference point, away from that reference point.</li> <li>• A command was issued to an axis removal axis.</li> </ul>	<ul style="list-style-type: none"> <li>• Execute reference point return manually.</li> <li>• The command was issued to an axis for which axis removal is validated so invalidate axis removal.</li> </ul>
<b>P431</b>	<b>NO 2nd REF. SPC</b> A command for second, third or fourth reference point return was issued though there are no such command specifications.	<ul style="list-style-type: none"> <li>• Check the specifications.</li> </ul>
<b>P434</b>	<b>COLLATION ERR</b> One of the axes did not return to the start position when the origin point collate command (G27) was executed.	<ul style="list-style-type: none"> <li>• Check the program.</li> </ul>
<b>P435</b>	<b>G27/M ERROR</b> An M command was issued simultaneously in the G27 command block.	<ul style="list-style-type: none"> <li>• An M code command cannot be issued in a G27 command block and so the G27 command and M code command must be placed in separate blocks.</li> </ul>
<b>P436</b>	<b>G29/M ERROR</b> An M command was issued simultaneously in the G29 command block.	<ul style="list-style-type: none"> <li>• An M code command cannot be issued in a G29 command block and so the G29 command and M code command must be placed in separate blocks.</li> </ul>
<b>P438</b>	<b>NOT USE (G52)</b> A local coordinate system command was issued during execution of the G54.1 command.	<ul style="list-style-type: none"> <li>• Review the program.</li> </ul>
<b>P450</b>	<b>NO CHUCK BARR.</b> The chuck barrier on command (G22) was specified although the chuck barrier was undefined in the specification.	<ul style="list-style-type: none"> <li>• Check the specification.</li> </ul>
<b>P460</b>	<b>TAPE I/O ERROR</b> An error has arisen in the tape reader or, alternatively, in the printer during macro printing.	<ul style="list-style-type: none"> <li>• Check the power and cable of the connected devices.</li> <li>• Check the I/O device parameters.</li> </ul>
<b>P461</b>	<b>FILE I/O ERROR</b> A file of the machining program cannot be read.	<ul style="list-style-type: none"> <li>• In memory mode, the programs stored in memory may have been destroyed. Output all of the programs and tool data once and format them.</li> <li>• Ensure that the external device (including a floppy disk drive and IC card) that contains the file is mounted.</li> </ul>
<b>P462</b>	<b>DNC ERROR</b> A communication error occurred during the BTR operation.	<ul style="list-style-type: none"> <li>• L01 DNC ERROR is displayed simultaneously, so remedy the problem according to the error No.</li> </ul>

## Appendix 2. Program Error

Error No.	Details	Remedy
<b>P480</b>	<b>NO MILL SPEC</b> <ul style="list-style-type: none"> <li>• Milling was commanded when the milling specifications were not provided.</li> <li>• Pole coordinate interpolation was commanded when the pole coordinate interpolation specifications were not provided.</li> </ul>	<ul style="list-style-type: none"> <li>• Check the specification.</li> </ul>
<b>P481</b>	<b>MILL ILL. G</b> <ul style="list-style-type: none"> <li>• An illegal G code was used during the milling mode.</li> <li>• An illegal G code was used during cylindrical interpolation or pole coordinate interpolation.</li> <li>• The G07.1 command was issued during the tool radius compensation.</li> </ul>	<ul style="list-style-type: none"> <li>• Check the program.</li> </ul>
<b>P482</b>	<b>MILL ILL. AXIS</b> <ul style="list-style-type: none"> <li>• A rotary axis was commanded during the milling mode.</li> <li>• Milling was executed even though an illegal value was set for the milling axis No.</li> <li>• Cylindrical interpolation or pole coordinate interpolation was commanded during mirror image.</li> <li>• Cylindrical interpolation or pole coordinate interpolation was commanded before the tool compensation was completed after the T command.</li> <li>• G07.1 was commanded when cylindrical interpolation was not possible (there is no rotary axis, or external mirror image is ON).</li> <li>• An axis other than a cylindrical coordinate system axis was commanded during cylindrical interpolation.</li> </ul>	<ul style="list-style-type: none"> <li>• Check the machining program, parameters and PLC I/F signal.</li> </ul>
<b>P484</b>	<b>MILL AXIS RET.</b> <ul style="list-style-type: none"> <li>• Movement was commanded to an axis that had not completed reference point return during the milling mode.</li> <li>• Movement was commanded to an axis that had not completed reference point return during cylindrical interpolation or pole coordinate interpolation.</li> </ul>	<ul style="list-style-type: none"> <li>• Carry out manual reference point return.</li> </ul>

## Appendix 2. Program Error

Error No.	Details	Remedy
<b>P485</b>	<b>MILL ILL. MODAL</b> <ul style="list-style-type: none"> <li>• The milling mode was turned ON during nose R compensation or constant surface speed control.</li> <li>• A T command was issued during the milling mode.</li> <li>• The mode was switched from milling to cutting during tool compensation.</li> <li>• Cylindrical interpolation or pole coordinate interpolation was commanded during the constant surface speed control mode (G96).</li> <li>• The command unacceptable in the cylindrical interpolation was issued.</li> <li>• A T command was issued during the cylindrical interpolation or pole coordinate interpolation mode.</li> <li>• A movement command was issued when the plane was not selected just before or after the G07.1 command.</li> <li>• A plane selection command was issued during the pole coordinate interpolation mode.</li> <li>• Cylindrical interpolation or pole coordinate interpolation was commanded during tool radius compensation.</li> <li>• The G16 plane in which the radius value of a cylinder is 0 was specified.</li> <li>• A cylindrical interpolation or pole coordinate interpolation command was issued during program coordinate rotation (G68).</li> </ul>	<ul style="list-style-type: none"> <li>• Check the program.</li> <li>• Before issuing G12.1, issue G40 or G97.</li> <li>• Before issuing G12.1, issue a T command.</li> <li>• Before issuing G13.1, issue G40.</li> <li>• Specify the radius value of a cylinder other than 0, or specify the X axis's current value other than 0 before issuing G12.1/G16.</li> </ul>
<b>P486</b>	<b>MILLING ERROR</b> <ul style="list-style-type: none"> <li>• The milling command was issued during the mirror image (when parameter or external input is turned ON).</li> <li>• Pole coordinate interpolation, cylindrical interpolation or milling interpolation was commanded during facing turret mirror image.</li> <li>• The start command of the cylindrical interpolation or polar coordinate interpolation was issued during the normal line control.</li> </ul>	<ul style="list-style-type: none"> <li>• Check the program.</li> </ul>

## Appendix 2. Program Error

Error No.	Details	Remedy
<b>P511</b>	<b>SYNC CODE ERR</b> <ul style="list-style-type: none"> <li>Two or more synchronization M codes were commanded in the same block.</li> <li>The synchronization M code and "!" code were commanded in the same block.</li> </ul>	<ul style="list-style-type: none"> <li>Check the program.</li> </ul>
<b>P600</b>	<b>NO AUTO TLM.</b> An automatic tool length measurement command (G37) was execute though there are no such command specifications.	<ul style="list-style-type: none"> <li>Check the specifications.</li> </ul>
<b>P601</b>	<b>NO SKIP SPEC.</b> A skip command (G31) was issued though there are no such command specifications.	<ul style="list-style-type: none"> <li>Check the specifications.</li> </ul>
<b>P602</b>	<b>NO MULTI SKIP</b> A multiple skipping command (G31.1, G31.2 or G31.3) was issued though there are no such command specifications.	<ul style="list-style-type: none"> <li>Check the specifications.</li> </ul>
<b>P603</b>	<b>SKIP SPEED 0</b> The skip speed is 0.	<ul style="list-style-type: none"> <li>Specify the skip speed.</li> </ul>
<b>P604</b>	<b>TLM ILL. AXIS</b> No axis or more than one axis was specified in the automatic tool length measurement block.	<ul style="list-style-type: none"> <li>Specify only one axis.</li> </ul>
<b>P605</b>	<b>T-CMD IN BLOCK</b> The T code is in the same block as the automatic tool length measurement block.	<ul style="list-style-type: none"> <li>Specify this T code before the block.</li> </ul>
<b>P606</b>	<b>NO T-CMD BEFOR</b> The T code was not yet specified in automatic tool length measurement.	<ul style="list-style-type: none"> <li>Specify this T code before the block.</li> </ul>
<b>P607</b>	<b>TLM ILL. SIGNAL</b> Before the area specified by the D command or decelerating area parameter d, the measurement position arrival signal went ON. The signal remains OFF to the end.	<ul style="list-style-type: none"> <li>Check the program.</li> </ul>
<b>P608</b>	<b>SKIP ERROR (CC)</b> A skip command was specified during radius compensation processing.	<ul style="list-style-type: none"> <li>Specify a radius compensation cancel (G40) command' or remove the skip command.</li> </ul>

## Appendix 2. Program Error

Error No.	Details	Remedy
<b>P610</b>	<b>ILLEGAL PARA.</b> <ul style="list-style-type: none"> <li>The parameter setting is not correct.</li> <li>G114.1 was commanded when the spindle synchronization with PLC I/F command was selected.</li> <li>G113 was commanded when the spindle-spindle polygon machining option was OFF and the spindle synchronization with PLC I/F command was selected.</li> </ul>	<ul style="list-style-type: none"> <li>Check whether #1549 lv0vR1 to #1553 lv0vR5 are set in descending order (in order of large values).</li> <li>Check whether #1554 lv0rd2 to #1557 lv0rd5 are set in descending order.</li> <li>Check and correct #1514 expLinax and #1515 expRotax.</li> <li>Check the program.</li> <li>Check the parameter.</li> </ul>
<b>P612</b>	<b>EXP. ERROR</b> A movement command for exponential function interpolation was issued during facing turret mirror image.	<ul style="list-style-type: none"> <li>Check the program.</li> </ul>
<b>P700</b>	<b>CMD-VALUE ILL.</b> Spindle synchronization was commanded to a spindle that is not connected serially.	<ul style="list-style-type: none"> <li>Check the program.</li> <li>Check the parameter.</li> </ul>
<b>P900</b>	<b>NO TANZ. SPEC</b> A normal line control command (G40.1, G41.1, G42.1) was issued when the normal line control specifications were not provided.	<ul style="list-style-type: none"> <li>Check the specifications.</li> </ul>
<b>P901</b>	<b>TAN. AXIS G92</b> A coordinate system preset command (G92) was issued to a normal line control axis during normal line control.	<ul style="list-style-type: none"> <li>Check the program.</li> </ul>
<b>P902</b>	<b>TAN. AXIS LINE</b> <ul style="list-style-type: none"> <li>The normal line control axis was set to a linear axis.</li> <li>The normal line control axis was set to the linear type rotary axis II axis.</li> <li>The normal line control axis has not been set.</li> <li>The normal line control axis was the same as the plane selection axis.</li> </ul>	<ul style="list-style-type: none"> <li>Correct the normal line control axis.</li> </ul>
<b>P903</b>	<b>PLANE CHG (TAN)</b> The plane selection command (G17, G18, G19) was issued during normal line control.	<ul style="list-style-type: none"> <li>Delete the plane selection command (G17, G18, G19) from the program for normal line control.</li> </ul>
<b>P990</b>	<b>PREPRO S/W ERR</b> Combining commands that required pre-reading (nose R offset, corner chamfering/corner rounding, geometric I, geometric IB, and fixed cycle for compound lathe) resulted in eight or more pre-read blocks.	<ul style="list-style-type: none"> <li>Reduce the number of commands that require pre-reading or delete such commands.</li> </ul>

## Appendix 3. Order of G Function Command Priority

### Appendix 3. Order of G Function Command Priority (Command in a separate block when possible)

**(Note)** Upper level: When commanded in the same block indicates that both commands are executed simultaneously

G Group Commanded G code	01 G00 to G03	02 G17 to G19	03 G90, G91		05 G94, G95	06 G20, G21	07 G40 to G42	08 G43, G44, G49
G00 to G03.1 Positioning/ interpolation	G command commanded last is valid.  Group 1 modal is updated	○  ○  Also possible during arc modal	○  ○		○  ○	○  ○	Arc and G41, G42 cause error P151  ○  Diameter is compensated, and then moves	Arc and G43 to G49 cause error P70  ○  The G49 movement in the arc modal moves with G01
G04 Dwell	○  Group 1 modal is updated  G04 is executed  ○	○	○		○	○	G04 is executed  G40 to G42 are ignored	G04 is executed  G43 to G49 are ignored
G09 Exact stop check	○  ○	○  ○	○  ○		○  ○	○  ○	○  ○	○  ○
G10, G11 Program data setting	○  G10 is priority for axis  No movement I, J, K rotation input  ○	○  G10 is used for axis, so the selected plan axis will be the basic axis.  ○	○  ○		○  ○	○  ○	G10 to G11 are executed  G40 to G42 are ignored	G10 to G11 are executed  G43 to G49 are ignored
G17 to G19 Plane selection	○  ○	○  ○  G command commanded last is valid.	○  ○		○  ○	○  ○	○  ○  Plane axis changeover during diameter compensation causes error P112	○  ○

## Appendix 3. Order of G Function Command Priority

G Group	01 G00 to G03	02 G17 to G19	03 G90, G91		05 G94, G95	06 G20, G21	07 G40 to G42	08 G43, G44, G49
G20, G21 Inch/metric changeover	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>		<input type="radio"/> <input type="radio"/>	Possible in same block <input type="radio"/>	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>
G27 to G30 Reference point compare/ return	<input type="radio"/> G00 to G03.1 modals are updated G27 to G30 are executed <input type="radio"/>	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>		<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>	G27 to G30 are executed G40 to G42 are ignored <input type="radio"/>	G27 to G30 are executed G43 to G49 are ignored <input type="radio"/>
G31 to G31.3 Skip	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>		<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>	Error:P608  Error:P608	<input type="radio"/> <input type="radio"/>
G33 Thread cutting	G command commanded last is valid. <input type="radio"/>	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>		<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>
G37 Automatic tool length measurement	G37 is executed G00 to G33 are ignored <input type="radio"/>	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>		<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>	G37 is executed G40 to G42 are ignored	G37 is executed G43 to G49 are ignored <input type="radio"/>
G40 to G42 Tool diameter compensation	Arc and G41, G42 cause error P151 G41 and G42 in arc modal cause error P151	<input type="radio"/> Plane axis changeover during diameter compensation causes error P112	<input type="radio"/> <input type="radio"/>		<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>	G command commanded last is valid. <input type="radio"/>	<input type="radio"/> <input type="radio"/>

## Appendix 3. Order of G Function Command Priority

G Group Commanded G code	09 G73 to G89	10 G98, G99	12 G54 to G59	13 G61 to G64	14 G66 to G67	17 G96, G97		19 G50.1 G51.1
G00 to G03.1 Positioning/ interpolation	Group 1 command is executed Group 9 is canceled	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	G66 to G67 are executed G00 to G03.1 modals are updated	<input type="radio"/>		<input type="radio"/> During the arc command, all axis names become mirror center data Movement with mirror shape <input type="radio"/>
G04 Dwell	G04 is executed G73 to G89 are ignored <input type="radio"/>	<input type="radio"/>	G04 is executed Group 12 is changed <input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>		G04 is executed G50.1 and G51.1 are ignored <input type="radio"/>
G09 Exact stop check	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>		<input type="radio"/> <input type="radio"/>
G10, G11 Program data setting	G10 to G11 are executed G73 to G89 are ignored <input type="radio"/>	<input type="radio"/>	G10 is executed G54 to G59 modals are updated <input type="radio"/>	<input type="radio"/>	G66 to G67 are executed G10 is ignored <input type="radio"/>	<input type="radio"/>		G10 to G11 are executed G50.1 and G51.1 are ignored <input type="radio"/>
G17 to G19 Plane selection	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>		<input type="radio"/> <input type="radio"/>

## Appendix 3. Order of G Function Command Priority

G Group Commanded G code	09 G73 to G89	10 G98, G99	12 G54 to G59	13 G61 to G64	14 G66 to G67	17 G96, G97		19 G50.1 G51.1
G20, G21 Inch/metric changeover	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>		<input type="radio"/> <input type="radio"/>
G27 to G30 Reference point compare/ return	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>	G66 to G67 are executed G27 to G30 are ignored <input type="radio"/>	<input type="radio"/> <input type="radio"/>		G27 to G30 are executed G50.1 and G51.1 are ignored <input type="radio"/>
G31 to G31.3 Skip	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>		<input type="radio"/> <input type="radio"/>
G33 Thread cutting	Group 1 command is executed Group 9 is canceled <input type="radio"/>	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>	G66 to G67 are executed G33 modals is updated <input type="radio"/>	<input type="radio"/> <input type="radio"/>		<input type="radio"/> <input type="radio"/>
G37 Automatic tool length measurement		<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>	G66 to G67 are executed G37 modals is ignored <input type="radio"/>	<input type="radio"/> <input type="radio"/>		G37 is executed G50.1 and G51.1 are ignored <input type="radio"/>
G40 to G42 Tool diameter compensation	Error:P155 <input type="radio"/>	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>		<input type="radio"/> <input type="radio"/>

## Appendix 3. Order of G Function Command Priority

G Group Commanded G code	01 G00 to G03.1 G33	02 G17 to G19	03 G90, G91		05 G94, G95	06 G20, G21	07 G40 to G42	08 G43, G44, G49
G43, G44, G49 Length compensation	Arc and G43, G44 cause error P70  Arc and G43, G44 cause error P70	<input type="radio"/>	<input type="radio"/>		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/> G command commanded last is valid.
G50.1 G51.1 Program mirror image	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>		<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>
G52 Local coordinate system	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>		<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>	G52 is executed G40 to G42 are ignored <input type="radio"/>	G52 is executed G43 to G49 are ignored <input type="radio"/>
G53 Machine coordinate system	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>		<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>	G53 is executed G40 to G42 are ignored <input type="radio"/>	G53 is executed G40 to G42 are ignored <input type="radio"/>
G54 to G59 Workpiece coordinate system	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>		<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>
G61 to G64 Mode selection	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>		<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>
G65 Macro call	G65 is executed G00 to G03.1 modals are updated <input type="radio"/>	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>		<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>	G65 is executed G43 to G49 modals are updated <input type="radio"/>

## Appendix 3. Order of G Function Command Priority

G Group Commanded G code	01 G00 to G03.1 G33	02 G17, G19	03 G90, G92		05 G94, G95	06 G20, G21	07 G40 to G42	08 G43, G44 G49
G66 to G67 Macro call	G66 to G67 are executed G00 to G03.1 modals are updated  <input type="radio"/>	<input type="radio"/>	<input type="radio"/>		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/> G66 to G67 are executed G43 to G49 modals are updated  <input type="radio"/>
G73 to G89 Canned cycle	G73 to G89 are canceled G01 to G33 modals are updated  <input type="radio"/>	<input type="radio"/>	<input type="radio"/>		<input type="radio"/>	<input type="radio"/>	Error:P155 Canned cycle during compensation  Error:P155	<input type="radio"/>   <input type="radio"/>
G90, G91 Absolute value/ incremental value	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>	Use in same block  <input type="radio"/>		<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>
G92 Coordinate system setting	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>		<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>
G94, G95 Synchronous/ asynchronous	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>		G command commanded last is valid. <input type="radio"/>	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>
G96, G97 Constant surface speed control	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>		<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>
G98, G99 Initial point/ R point return	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>		<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>

## Appendix 3. Order of G Function Command Priority

G Group Commanded G code	09 G73 to G89	10 G98 to G99	12 G54 to G59	13 G61 to G65	14 G66 to G67	17 G96, G97	19 G50.1 G51.1
G43, G44, G49 Length compensation	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	G66 to G67 are executed G43 to G49 modals are updated	<input type="radio"/>	<input type="radio"/>
G50.1 G51.1 Program mirror image	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	G66 to G67 are executed G50.1 G51.1 is ignored	<input type="radio"/>	G command commanded last is valid.  <input type="radio"/>
G52 Local coordinate system	G52 is executed G73to G89 are ignored	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	G52 is executed G50.1 G51.1 is ignored <input type="radio"/>
G53 Machine coordinate system	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	G53 is executed G50.1 G51.1 is invalid <input type="radio"/>
G54 to G59 Workpiece coordinate system	<input type="radio"/>	<input type="radio"/>	G command commanded last is valid.  <input type="radio"/>	<input type="radio"/>	G66 to G67 are executed G54 to G59 modals are updated	<input type="radio"/>	<input type="radio"/>
G61 to G64 Mode selection	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	G command commanded last is valid.  <input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
G65 Macro call	G65 is executed G73to G89 are ignored	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	Error	<input type="radio"/>	G65 is executed G50.1 G51.1 is ignored <input type="radio"/>

## Appendix 3. Order of G Function Command Priority

G Group Commanded G code	09 G73 to G89	10 G98, G99	12 G54 to G59	13 G61 to G67	14 G66 to G67	17 G96, G97		19 G50.1 G51.1
G66 to G67 Macro call	G66 to G67 are executed G73 to G89 are ignored  ○	○  ○	G66 to G67 are executed G54 to G59 modals are updated  ○	○  ○	G command commanded last is valid.  G command commanded last is valid.	○  ○		G66 to G67 are executed G50.1 G51.1 is ignored  ○
G73 to G89 Canned cycle	G command commanded last is valid.  ○	○  ○	○  ○	○  ○	G66 to G67 are executed G73 to G89 are ignored  ○	○  ○		○  All axes become mirror center  ○
G90, G91 Absolute value/ incremental value	○ ○	○ ○	○ ○	○ ○	○ ○	○ ○		○ ○
G92 Coordinate system setting	G92 is executed G73 to G89 are ignored  ○	○  ○	○  ○	○  ○	○  ○	○  ○		○  Note that G92 is priority for axis  ○
G94, G95 Synchronous/ asynchronous	○ ○	○ ○	○ ○	○ ○	○ ○	○ ○		○ ○
G96, G97 Constant surface speed control	○ ○	○ ○	○ ○	○ ○	○ ○	G command commanded last is valid.  ○		○ ○
G98, G99 Initial point/R point return	○ ○	G command commanded last is valid.  ○	○ ○	○ ○	○ ○	○ ○		○ ○



## Revision History

Date of revision	Manual No.	Revision details
Jul. 1997	BNP-B2182*(ENG)	First edition created.
Mar. 2000	BNP-B2182A(ENG)	The content of "MELDAS64 INSTRUCTION MANUAL (SUPPLEMENT)"(BNP-B2248) was reflected.
May 2000	BNP-B2182B(ENG)	Some program error messages were added. Mistakes and illegal description were corrected.
Feb. 2002	BNP-B2182C(ENG)	The contents revised to correspond to M64AS, M64S, M65S and M66S. Miswrite is corrected. Design of the cover and the back cover were changed. Manual name changed from "MELDAS 64/65 Programming Manual" to "MELDAS 60/60S Series Programming Manual". MODEL, MODEL CODE, and Manual No. were added on the back cover.
Mar. 2003	BNP-B2182D(ENG)	Revisions to comply with M60S Series Version B3.
May. 2004	BNP-B2182E(ENG)	Revisions to comply with M60S Series Version C0, C1.
Feb. 2010	BNP-B2182G(ENG)	Reviewed "Precautions for Safety". Corrected the items below. -10.4 Constant surface speed control; G96, G97 -10.5 Spindle clamp speed setting; G92 Corrected the mistakes.

# Global Service Network

## AMERICA

**MITSUBISHI ELECTRIC AUTOMATION INC. ( AMERICA FA CENTER)**  
Central Region Service Center  
500 CORPORATE WOODS PARKWAY, VERNON HILLS, IL., 60061, U.S.A.  
TEL: +1-847-478-2500 / FAX: +1-847-478-2650

**Western Michigan Service Satellite**  
ALLEGAN, MICHIGAN, 49010, U.S.A.  
TEL: +1-847-478-2500 / FAX: +1-269-673-4092

**Ohio Service Satellite**  
LIMA, OHIO, 45901, U.S.A.  
TEL: +1-847-478-2500 / FAX: +1-847-478-2650

**Minnesota Service Satellite**  
RICHFIELD, MINNESOTA, 55423, U.S.A.  
TEL: +1-847-478-2500 / FAX: +1-847-478-2650

**Western Region Service Center**  
5665 PLAZA DRIVE, CYPRESS, CALIFORNIA, 90630, U.S.A.  
TEL: +1-714-220-4796 / FAX: +1-714-229-3818

**Eastern Region Service Center**  
200 COTTONTAIL LANE SOMERSET, NEW JERSEY, 08873, U.S.A.  
TEL: +1-732-560-4500 / FAX: +1-732-560-4531

**Western Pennsylvania Service Satellite**  
ERIE, PENNSYLVANIA, 16510, U.S.A.  
TEL: +1-814-897-7820 / FAX: +1-814-987-7820

**Southern Region Service Center**  
2810 PREMIERE PARKWAY SUITE 400, DULUTH, GEORGIA, 30097, U.S.A.  
TEL: +1-678-258-4500 / FAX: +1-678-258-4519

**Northern Texas Service Satellite**  
1000, NOLEN DRIVE SUITE 200, GRAPEVINE, TEXAS, 76051, U.S.A.  
TEL: +1-817-251-7468 / FAX: +1-817-416-5000

**Southern Texas Service Satellite**  
FRIENDSWOOD, TEXAS, 77546, U.S.A.  
TEL: +1-832-573-0787 / FAX: +1-678-573-8290

**Central Florida Service Satellite**  
SATELITE BEACH, FLORIDA, 32937, U.S.A.  
TEL: +1-321-610-4436 / FAX: +1-321-610-4437

**Canadian Region Service Center**  
4299 14TH AVENUE MARKHAM, ONTARIO, L3R OJ2, CANADA  
TEL: +1-905-475-7728 / FAX: +1-905-475-7935

**Mexico City Service Center**  
MARIANO ESCOBEDO 69 TLALNEPANTLA, 54030 EDO. DE MEXICO  
TEL: +52-55-9171-7662 / FAX: +52-55-9171-7649

**Monterrey Service Satellite**  
ARGENTINA 3900, FRACC. LAS TORRES, MONTERREY, N.L., 64720, MEXICO  
TEL: +52-81-8365-4171 / FAX: +52-81-8365-4171

**Brazilian Service Center**  
ACESSO JOSE SARTORELLI, KM 2.1 CEP 18550-000, BOITUVA-SP, BRAZIL  
TEL: +55-15-3363-9900 / FAX: +55-15-3363-9911

**Brazilian's Sites Service Center**  
CITIES OF PORTO ALEGRE AND CAXIAS DO SUL BRAZIL  
CITIES OF SANTA CATARINA AND PARANA STATES  
TEL: +55-15-3363-9927

## EUROPE

**MITSUBISHI ELECTRIC EUROPE B.V. (EUROPE FA CENTER)**  
GOTHAER STRASSE 10, 40880 RATINGEN, GERMANY  
TEL: +49-2102-486-0 / FAX: +49-2102-486-5910

**Germany Service Center**  
KURZE STRASSE, 40, 70794 FILDERSTADT-BONLANDEN, GERMANY  
TEL: + 49-711-3270-010 / FAX: +49-711-3270-0141

**France Service Center**  
25, BOULEVARD DES BOUVETS, 92741 NANTERRE CEDEX FRANCE  
TEL: +33-1-41-02-83-13 / FAX: +33-1-49-01-07-25

**France (Lyon) Service Satellite**  
120, ALLEE JACQUES MONOD 69800 SAINT PRIEST  
TEL: +33-1-41-02-83-13 / FAX: +33-1-49-01-07-25

**Italy Service Center**  
VIALE COLLEONI 7-PALAZZO SIRIO CENTRO DIREZIONALE COLLEONI,  
20041 AGRATE BRIANZA MILANO ITALY  
TEL: +39-039-60531-342 / FAX: +39-039-6053-206

**Italy (Padova) Service Satellite**  
VIA SAVELLI 24 - 35129 PADOVA ITALY  
TEL: +39-039-60531-342 / FAX: +39-039-6053-206

**U.K. Service Center**  
TRAVELLERS LANE, HATFIELD, HERTFORDSHIRE, AL10 8XB, U.K.  
TEL: +44-1707-27-6100 / FAX: +44-1707-27-8992

**Spain Service Center**  
CTRA. DE RUBI, 76-80-APDO. 420  
08190 SAINT CUGAT DEL VALLES, BARCELONA SPAIN  
TEL: +34-935-65-2236 / FAX: +34-935-89-1579

**Poland Service Center**  
UL KRAKOWSKA 50, 32-083 BALICE, POLAND  
TEL: +48-12-630-4700 / FAX: +48-12-630-4727

**Poland (Wroclaw) Service Center**  
UL KOBIERZYCKA 23,52-315 WROCLAW, POLAND  
TEL: +48-71-333-77-53 / FAX: +48-71-333-77-53

**Turkey Service Center**  
BAYRAKTAR BULVARI, NUTUK SOKAK NO:5, YUKARI DUDULLU  
ISTANBUL, TURKEY  
TEL: +90-216-526-3990 / FAX: +90-216-526-3995

**Czech Republic Service Center**  
TECHNOLOGICKA 374/6, 708 00 OSTRAVA-PUSTKOVEC, CZECH REPUBLIC  
TEL: +420-59-5691-185 / FAX: +420-59-5691-199

**Russia Service Center**  
213, B.NOVODIMITROVSKAYA STR., 14/2, 127015 MOSCOW, RUSSIA  
TEL: +7-495-748-0191 / FAX: +7-495-748-0192

**Sweden Service Center**  
STRANDKULLEN, 718 91 FROVI, SWEDEN  
TEL: +46-581-700-20 / FAX: +46-581-700-75

**Bulgaria Service Center**  
4 A. LYAPCHEV BOUL., 1756 - SOFIA, BULGARIA  
TEL: +359-2-8176000 / FAX: +359-2-9744061

**Ukraine (Kharkov) Service Center**  
APTEKARSKIY PEREULOK 9-A, OFFICE 3, 61001 KHARKOV, UKRAINE  
TEL: +38-57-732-7744 / FAX: +38-57-731-8721

**Ukraine (Kiev) Service Center**  
4-B, M. RASKOVOYI STR., 02660 KIEV, UKRAINE  
TEL: +38-044-494-3355 / FAX: +38-044-494-3366

**Belarus Service Center**  
703, OKTYABRSKAYA STR., 16/5, 220030 MINSK, BELARUS  
TEL: +375-17-210-4626 / FAX: +375-17-227-5830

**South Africa Service Center**  
P.O. BOX 9234, EDLEEN, KEMPTON PARK GAUTENG, 1625 SOUTH AFRICA  
TEL: + 27-11-394-8512 / FAX: +27-11-394-8513

**ASEAN****MITSUBISHI ELECTRIC ASIA PTE. LTD. (ASEAN FA CENTER)**

**Singapore Service Center**  
307 ALEXANDRA ROAD #05-01/02 MITSUBISHI ELECTRIC BUILDING SINGAPORE 159943  
TEL: +65-6473-2308 / FAX: +65-6476-7439

**Indonesia Service Center**  
WISMA NUSANTARA 14TH FLOOR JL. M.H. THAMRIN 59, JAKARTA 10350 INDONESIA  
TEL: +62-21-3917-144 / FAX: +62-21-3917-164

**Malaysia (KL) Service Center**  
60, JALAN USJ 10/1B 47620 UEP SUBANG JAYA SELANGOR DARUL EHSAN, MALAYSIA  
TEL: +60-3-5631-7605 / FAX: +60-3-5631-7636

**Malaysia (Johor Baru) Service Center**  
No. 16, JALAN SHAH BANDAR 1, TAMAN UNGKU TUN AMINAH, 81300 SKUDAI, JOHOR MALAYSIA  
TEL: +60-7-557-8218 / FAX: +60-7-557-3404

**Vietnam Service Center-1**  
47-49 HOANG SA ST. DAKAO WARD, DIST. 1, HO CHI MINH CITY, VIETNAM  
TEL: +84-8-910-4763 / FAX: +84-8-910-2593

**Vietnam Service Center-2**  
THUAN KIEN PLAZA 190 HONG BANG ROAD.TOWER C. SUITE 3002. DIST.5,  
HO CHI MINH CITY,VIETNAM  
TEL: +84-8-240-3587 / FAX: +84-8-726-7968

**Vietnam (Hanoi) Service Center**  
5TH FL., 93B KIM LIEN ST., PHUONG LIEN WARD, DONG DA DIST.  
TEL: +84-8-573-7646 / FAX: +84-4-573-7650

**Philippines Service Center**  
UNIT No.411, ALABAMG CORPORATE CENTER KM 25, WEST SERVICE ROAD  
SOUTH SUPERHIGHWAY, ALABAMG MUNTINLUPA METRO MANILA, PHILIPPINES 1771  
TEL: +63-2-807-2416 / FAX: +63-2-807-2417

**MITSUBISHI ELECTRIC AUTOMATION (THAILAND) CO., LTD. (THAILAND FA CENTER)**

BANG-CHAN INDUSTRIAL ESTATE No.111 SOI SERITHAI 54  
T.KANNAYAO, A.KANNAYAO, BANGKOK 10230, THAILAND  
TEL: +66-2906-8255 / FAX: +66-2906-3239

**Thailand Service Center**  
898/19,20,21,22 S.V. CITY BUILDING OFFICE TOWER 1 FLOOR 7  
RAMA III RD BANGPONGPANG,YANNAWA,BANGKOK 10120, THAILAND  
TEL: +66-2-682-6522 / FAX: +66-2-682-9750

**INDIA****MITSUBISHI ELECTRIC ASIA PVT LTD**

FIRST & SECOND FLOOR, AVR BASE, MUNICIPAL No.BC-308,  
HENNURE BANASWADI ROAD, HRBR RING ROAD, BANGALORE-560 043,INDIA  
TEL: +91-80-4020-1600 / FAX: +91-80-4020-1699

**India (Pune) Service Center**  
EL-3, J BLOCK, M.I.D.C., BHOSARI PUNE 411026, INDIA  
TEL: +91-20-2710-2000 / FAX: +91-20-2710-2185

**India (Bangalore) Service Center**  
S 615, 6TH FLOOR, MANIPAL CENTER, BANGALORE 560001, INDIA  
TEL: +91-80-509-2119 / FAX: +91-80-532-0480

**India (Delhi) Service Center**  
1197, SECTOR 15 PART-2, OFF DELHI-JAIPUR HIGHWAY BEHIND 32nd MILESTONE  
GURGAON 122001, INDIA  
TEL: +91-98-1024-8895

**OCEANIA****MITSUBISHI ELECTRIC AUSTRALIA LTD.**

**Oceania Service Center**  
348 VICTORIA ROAD, RYDALMERE, N.S.W. 2116 AUSTRALIA  
TEL: +61-2-9684-7269 / FAX: +61-2-9684-7245

**CHINA****MITSUBISHI ELECTRIC AUTOMATION (SHANGHAI) LTD. (CHINA FA CENTER)**

**China (Shanghai) Service Center**  
4/F ZHI FU PLAZA, NO. 80 XIN CHANG ROAD,  
SHANGHAI 200003,CHINA  
TEL: +86-21-2322-3030 / FAX: +86-21-2322-2800

**China (Ningbo) Service Dealer**  
**China (Wuxi) Service Dealer**  
**China (Jinan) Service Dealer**

**China (Beijing) Service Center**  
9/F. OFFICE TOWER 1, HENDERSON CENTRE, 18 JIANGUOMENNEI AVENUE  
DONGCHENG DISTRICT, BEIJING, CHINA 100005  
TEL: +86-10-6518-8830 / FAX: +86-10-6518-8030  
**China (Beijing) Service Dealer**

**China (Tianjin) Service Center**  
B-2-801-802, YOUYI BUILDING, 50 YOUYI ROAD, HEXI DISTRICT  
TIANJIN, CHINA 300061  
TEL: +86-22-2813-1015 / FAX: +86-22-2813-1017  
**China (Shenyang) Service Satellite**

**China (Chengdu) Service Center**  
BLOCK B-1, 23F, CHUAN XIN MANSION, 18 SECTION 2  
RENMIN ROAD (SOUTH), CHENGDU, SICHUAN, CHINA 610016  
TEL: +86-28-8619-9730 / FAX: +86-28-8619-9805

**China (Changchun) Service Satellite**  
BING 3RD ROAD., INDUSTRIAL&ECONOMICAL DEVELOPMENT ZONE, CHAOYANG DISTRICT  
TEL : +86-0431-5021-546 / FAX : +86-0431-5021-690

**China (Shenzhen) Service Center**  
ROOM 2512-2516, GREAT CHINA INTERNATIOANL EXCHANGE SQUARE, JINTIAN RD.S.,  
FUTIAN DISTRICT, SHENZHEN, CHINA 518034  
TEL: +86-755-2399-8272 / FAX: +86-755-8218-4776

**KOREA****MITSUBISHI ELECTRIC AUTOMATION KOREA CO., LTD. (KOREA FA CENTER)**

**Korea Service Center**  
1480-6, GAYANG-DONG, GANGSEO-GU SEOUL 157-200, KOREA  
TEL: +82-2-3660-9602 / FAX: +82-2-3664-8668

**Korea Taegu Service Satellite**  
603 CRYSTAL BUILDING 1666, SANBYEOK-DONG, BUK-KU, DAEGU, 702-010, KOREA  
TEL: +82-53-604-6047 / FAX: +82-53-604-6049

**TAIWAN****MITSUBISHI ELECTRIC TAIWAN CO., LTD(TAIWAN FA CENTER)**

**TAIWAN (Taichung) Service Center**  
No.8-1, GONG YEH 16TH RD., TAICHUNG INDUSTRIAL PARK TAICHUNG CITY, TAIWAN R.O.C  
TEL: +886-4-2359-0688 / FAX: +886-4-2359-0689

**TAIWAN (Taipei) Service Center**  
3TH. FLOOR, No.122 WUKUNG 2ND RD., WU-KU HSIANG, TAIPEI HSIEN, TAIWAN R.O.C  
TEL: +886-2-2299-2205 / FAX: +886-2-2298-1909

**TAIWAN (Tainan) Service Center**  
2F(C),1-1, CHUNGHWA-RD, YONGKANG CITY, TAINAN HSIEN, TAIWAN R.O.C  
TEL: +886-6-313-9600 / FAX: +886-6-313-7713

## **Notice**

Every effort has been made to keep up with software and hardware revisions in the contents described in this manual. However, please understand that in some unavoidable cases simultaneous revision is not possible.

Please contact your Mitsubishi Electric dealer with any questions or comments regarding the use of this product.

## **Duplication Prohibited**

This instruction manual may not be reproduced in any form, in part or in whole, without written permission from Mitsubishi Electric Corporation.

© 1997-2010 MITSUBISHI ELECTRIC CORPORATION  
ALL RIGHTS RESERVED.

 **MITSUBISHI ELECTRIC CORPORATION**  
HEAD OFFICE : TOKYO BUILDING,2-7-3 MARUNOUCHI,CHIYODA-KU,TOKYO 100-8310,JAPAN

MODEL	M60/60S Series/MAGIC64 (M)
MODEL CODE	005-236
Manual No.	BNP-B2 182(ENG)