

INVERTER

Intercompatibility attachment

<FR-F8AT01>

Thank you for choosing this Mitsubishi inverter option unit.

This Instruction Manual provides handling information and precautions for use of the equipment. Incorrect handling might cause an unexpected fault. Before using this product, always read this Instruction Manual carefully to use this product correctly.

Please forward this Instruction Manual to the end user.

SAFETY INSTRUCTIONS



While power is ON or for some time after power-OFF, do not touch the inverter and the attachment as they will be extremely hot. Touching these devices may cause a burn.



The product must be transported in correct method that corresponds to the weight. Failure to do so may lead to injuries. Special attention must be paid to the edges of the product.


This product is the attachment for replacing the FR-F520L-75K and the FR-F720(P)-75K with the FR-F820-75K.

The product enables the use of the existing mounting holes as it is.

1 Unpacking and checking the product

Take the product out of the package, and confirm that the product is as you ordered and intact.

The product is an option for the FR-F820-75K.

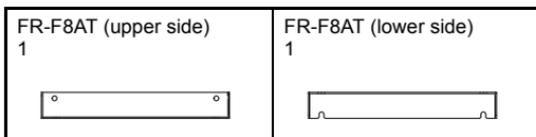



2 Installing the intercompatibility attachment to the inverter

- (1) Remove the wiring of the existing inverter.
- (2) Remove the existing inverter.
- (3) Installing the attachment

Replace the upper and lower installation frames of the inverter being replaced with the upper and lower parts of FR-F8AT respectively.

Use the screws of the upper and lower installation frames to install the FR-F8AT.

(Tightening torque: 22.5 to 30.5 N•m)

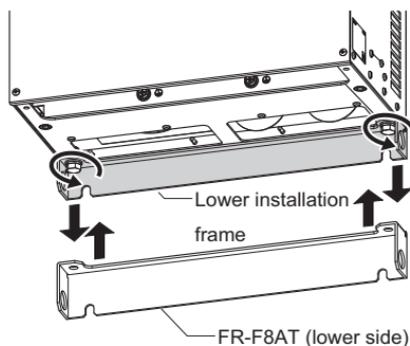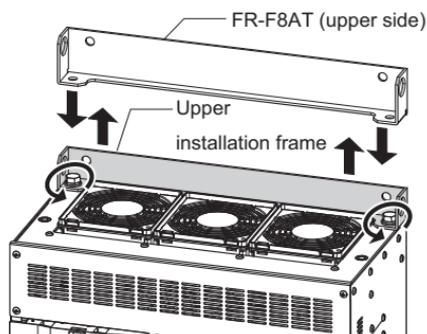


- (4) Install the inverter equipped with the attachment to the existing mounting holes.
- (5) Perform wiring to the installed inverter.

NOTE

- To remove or install the inverter, refer to the inverter Instruction Manual.

3 Outline dimensions

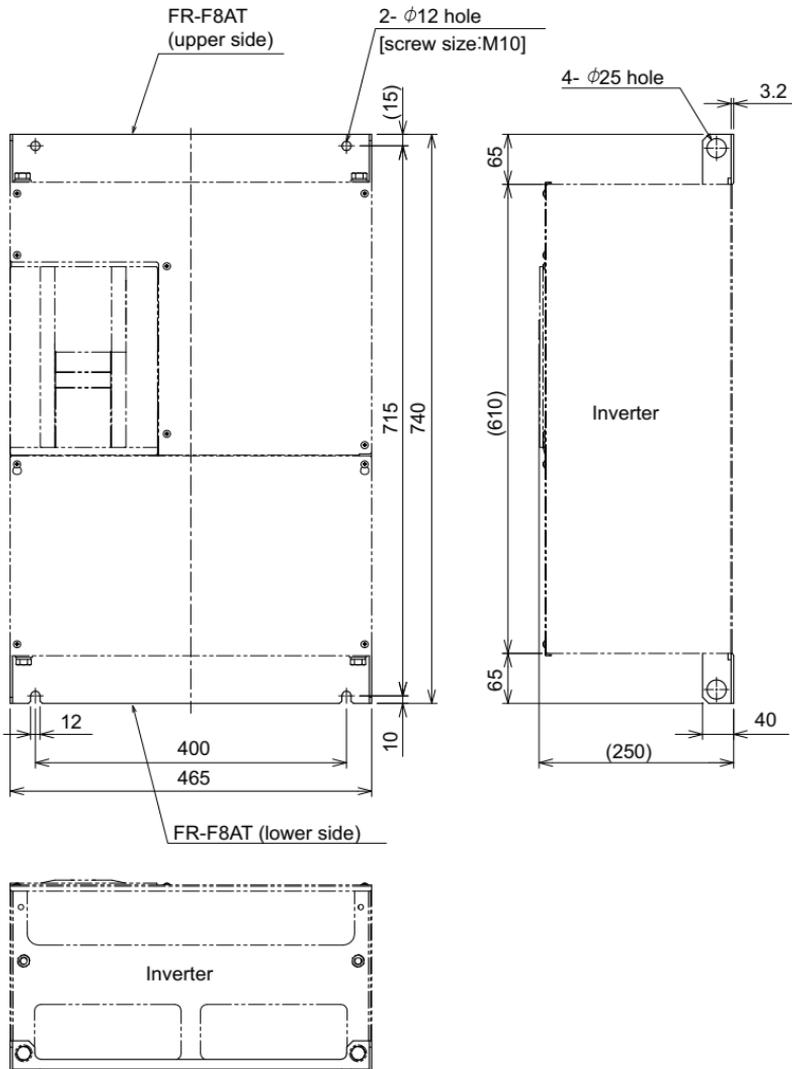

REVISIONS

Print date	* Manual number	Revision
Oct. 2014	IB(NA)-0600557ENG-A	First edition