

MELSOFT FieldDeviceConfigurator

Installation Instructions

Before Using the Product

Please read this document before use. Keep the document in a safe place for future reference. Make sure that the end users read the document.

For the precautions on using, refer to the following:

[MELSOFT FieldDeviceConfigurator Operating Manual \[SH-081945ENG\]](#)

Notice

- Reprinting or reproducing the part or all of the contents of this document in any form for any purpose without the permission of Mitsubishi Electric Corporation is strictly forbidden.
- Although we have made the utmost effort to follow the revisions of the software and hardware, in some cases, unsynchronized matter may occur.
- The information in this document may be subject to change without notice.

Operating Environment

Item	Contents	
Personal computer	A personal computer on which Microsoft® Windows® operates	
CPU	Windows 11	2 or more cores on a compatible 64-bit processor or System on a Chip (SoC)
	Windows 10	Intel® Core™2 Duo Processor 2 GHz or more recommended
Required memory	Windows 11	Recommended 4 GB or more
	Windows 10	64-bit OS: Recommended 2 GB or more 32-bit OS: Recommended 1 GB or more
Available hard disk capacity	For installation: 31.1 MB or more For operation: 512 MB or more	
Monitor	Resolution 1024 × 768 pixels or higher	
.NET Framework ^{*1}	Microsoft .NET Framework 4.8 or later	
OS (English version)	<ul style="list-style-type: none"> • Windows 11 (Home, Pro, Enterprise, Education) • Windows 10 version 1607 or later (Home, Pro, Enterprise, Education, IoT Enterprise 2016 LTSB^{*2}) 	

*1 If .NET Framework 4.8 is not installed, approximately 500 MB of memory is required in the system drive to install it.

*2 64-bit version only

- Use this product as a standard user or an administrator.
- When the following functions are used, this product may not run properly.
 - Application start-up in Windows compatibility mode
 - Fast user switching
 - Remote desktop
 - Touch function
 - Virtual environment such as Client Hyper-V
 - Tablet mode
 - Virtual Desktops
 - Unified Write Filter
 - Text cursor indicator
- In the following cases, the screen of this product may not work properly.
 - The size of the text and other items in the screen is other than 100% (96 DPI, 9 pt etc.).
For details, refer to the following:
[MELSOFT FieldDeviceConfigurator Operating Manual \[SH-081945ENG\]](#)
 - The resolution of the screen is changed in operation.
 - The Windows theme is changed in operation.
 - The multi-display is set.
- Surrogate pair characters and environment dependent characters are not available in this product.

Installation

■ Confirm before installation

- Log on to the personal computer as an administrator.
- Close all running applications before installation. If the product is installed while other applications are running, it may not operate normally.
- Install this product to a folder to which the administrator authority is given. The default installation folder is recommended to enhance the security.

■ Procedure

1. Decompress the compressed file^{*1} of MELSOFT FieldDeviceConfigurator.
2. Double-click "setup.exe" in the decompressed folder.
3. Select or enter the necessary information by following the on-screen instructions.

*1 For information on obtaining the compressed file of MELSOFT FieldDeviceConfigurator, please contact your local Mitsubishi Electric sales office or representative.

■ Notice

- Do not shift to the power save mode (standby, hibernate, sleep) while installing software.
- We do not guarantee those commercially available Microsoft Windows Operating System products that are introduced in this manual.
- This software's copyright is owned by Mitsubishi Electric Corporation.
- We do not take any responsibilities for the consequences of operating this product (including manual).

Uninstallation

Uninstall the application from the control panel of Windows.

Intel is either a registered trademark or a trademark of Intel Corporation in the United States and/or other countries.

Microsoft and Windows are trademarks of the Microsoft group of companies.

The company names, system names and product names mentioned in this manual are either registered trademarks or trademarks of their respective companies.

In some cases, trademark symbols such as [™] or [®] are not specified in this manual.