

BCN-P5817-G(2301)KWIX

Q80BD-J61BT11N Q81BD-J61BT11

## Before Using the Product

Before using the product, please read this manual. Make sure that the end users read this manual and then keep the manual in a safe place for future reference.

### ■ Relevant manuals

Before using the product, please read the following manual.

- Type Q80BD-J61BT11N/Q81BD-J61BT11 CC-Link System Master/Local Interface Board User's Manual (For SW1DNC-CCBD2-B) SH-080527ENG (13JR77)

Confirm the following descriptions:

- SAFETY PRECAUTIONS
- CONDITIONS OF USE FOR THE PRODUCT
- EMC AND LOW VOLTAGE DIRECTIVES
- WARRANTY

Please develop familiarity with the functions and performance of the product to handle the product correctly.

For the information on how to obtain this manual, please contact your local Mitsubishi Electric sales office or representative.

### ■ *Manuels correspondants*

*Avant d'utiliser le produit, prière de consulter le manuel suivant.*

- Type Q80BD-J61BT11N/Q81BD-J61BT11 CC-Link System Master/Local Interface Board User's Manual (For SW1DNC-CCBD2-B) SH-080527ENG (13JR77)

*Respecter les points suivants:*

- PRÉCAUTIONS DE SÉCURITÉ
- CONDITIONS D'UTILISATION DE PRODUIT
- DIRECTIVES CEM ET BASSE TENSION
- GARANTIE

### ■ Packing list

Check that the following items are included in the package of the product.

Item	Quantity
Board	1
Terminating resistor 110Ω, 1/2W (brown, brown, brown) <sup>*1</sup>	2
Terminating resistor 130Ω, 1/2W (brown, orange, brown) <sup>*1</sup>	2
Before Using the Product (this manual)	1

<sup>\*1</sup> Terminal resistors are required for stations at both ends of network in the CC-Link system. For details on a terminal resistor, refer to the related manual described above.

### ■ Considerations for a personal computer

Q81BD-J61BT11 supports the L0 state, which does not perform power saving, of ASPM (Active State Power Management).

In the power plan settings of Windows, set "Link State Power Management" in PCI Express to OFF.

### ■ Surrounding air rating

Use the product within the range of 0 to 55°C.

### ■ *Température ambiante de fonctionnement*

*Ce produit doit être utilisé entre 0 et 55°C.*

### ■ Information and services

For further information and services, please contact your local Mitsubishi Electric sales office or representative.

**MITSUBISHI ELECTRIC CORPORATION**

HEAD OFFICE: TOKYO BLDG., 2-7-3, MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN  
NAGOYA WORKS: 1-14, YADA-MINAMI 5-CHOME, HIGASHI-KU, NAGOYA 461-8670, JAPAN