

Before Using the Product

Before using the product, please read this manual. Make sure that the end users read this manual and then keep the manual in a safe place for future reference.

■ Precautions regarding warranty and specifications

The RJ71BAC96 has been jointly developed and manufactured by Mitsubishi Electric Corporation and Unitec Corporation.

Note that there are differences in warranty.

◆ Warranty

Item	RJ71BAC96	Other programmable controller products (e.g. MELSEC iQ-R series)
Gratis warranty term	One (1) year after the date of delivery or for eighteen (18) months after manufacturing	Thirty six (36) months after the date of delivery or for forty two (42) months after manufacturing
Repair term after discontinuation of production	3 year	7 years

■ Relevant manuals

Before using the product, please read the "Safety Guidelines" (IB-0800525), especially the following sections.

- SAFETY PRECAUTIONS
- CONDITIONS OF USE FOR THE PRODUCT
- EMC AND LOW VOLTAGE DIRECTIVES
- WARRANTY

For the product information, refer to the following.

Description	Manual name [manual number]
Common information on MELSEC iQ-R series programmable controllers*1	MELSEC iQ-R Module Configuration Manual [SH-081262ENG]
Detailed information on the product	MELSEC iQ-R BACnet Module User's Manual (Startup) [SH-081699ENG] MELSEC iQ-R BACnet Module User's Manual (Application) [SH-081700ENG]

*1 The information includes the system configuration, specifications, installation, wiring, maintenance, and inspection.

Please develop familiarity with the functions and performance of the product to handle the product correctly.

■ Manuels correspondants

Avant d'utiliser ce produit, prière de lire les "Safety Guidelines" (directive de sécurité) [IB-0800525], en particulier dans les sections suivantes.

- PRÉCAUTIONS DE SÉCURITÉ
- CONDITIONS D'UTILISATION DE PRODUIT
- DIRECTIVES CEM ET BASSE TENSION
- GARANTIE

■ Packing list

Check that the following items are included in the package of the product.

Item	Quantity
Module	1
Before Using the Product (this manual)	1

■ Mounting modules

When installing the programmable controller in a control panel, fully consider its operability, maintainability, and environmental resistance.

Securely mount all the MELSEC iQ-R series modules used on the base unit.

For details on the mounting method, refer to the MELSEC iQ-R Module Configuration Manual.

■ Montage des modules

Pour installer l'automate programmable dans un tableau de commande, prendre en compte tous les aspects d'opérabilité, de maintenabilité et de résistance à l'environnement.

Monter fermement sur l'unité de base tous les modules de la série MELSEC iQ-R à utiliser.

Pour le détail des modèles soumis à une réglementation, voir le MELSEC iQ-R Module Configuration Manual (Manuel de configuration du module MELSEC iQ-R).

■ Operating ambient temperature

Use the product within the following range.

- 0 to 55°C (when an extended temperature range base unit is not used)
- 0 to 60°C (when an extended temperature range base unit is used)

■ Température ambiante de fonctionnement

Ce produit doit être utilisé dans les conditions suivantes.

- 0 et 55°C (quand une unité de base à gamme de température élargie n'est pas utilisée)
- 0 et 60°C (quand une unité de base à gamme de température élargie est utilisée)

■ Information and services

For further information and services, please consult your local Mitsubishi representative.

■ Contact of the co-branded product

unitec CORPORATION Unitec Corporation

www.uni-tec.co.jp