



**TRANSISTORIZED INVERTER
INSTRUCTION MANUAL**

**SPEED SELECTOR
FR-AT**

Thank you for choosing this Mitsubishi transistorized Inverter option.

This instruction manual gives handling information and precautions for use of this equipment.

Incorrect handling might cause an unexpected fault. Before using the equipment, please read this manual carefully to use the equipment to its optimum.

Please forward this manual to the end user.

This section is specifically about safety matters

Do not attempt to install, operate, maintain or inspect this product until you have read through this instruction manual and appended documents carefully and can use the equipment correctly.

Do not use this product until you have a full knowledge of the equipment, safety information and instructions.

In this instruction manual, the safety instruction levels are classified into "WARNING" and "CAUTION".



Assumes that incorrect handling may cause hazardous conditions, resulting in death or severe injury.



Assumes that incorrect handling may cause hazardous conditions, resulting in medium or slight injury, or may cause physical damage only.

Note that the CAUTION level may lead to a serious consequence according to conditions. Please follow the instructions of both levels because they are important to personnel safety.

SAFETY INSTRUCTIONS

1. Electric Shock Prevention

WARNING

- While power is on or when the inverter is running, do not open the front cover. You may get an electric shock.
- Do not run the inverter with the front cover removed. Otherwise, you may access the exposed high-voltage terminals or the charging part of the circuitry and get an electric shock.
- If power is off, do not remove the front cover except for wiring or periodic inspection. You may access the charged inverter circuits and get an electric shock.
- Before starting wiring or inspection, switch power off, wait for more at least 10 minutes and check for the presence of any residual voltage with a meter etc.
- Earth the option unit.
- Any person who is involved in the wiring or inspection of this equipment should be fully competent to do the work.
- Always install the inverter before wiring. Otherwise, you may get an electric shock or be injured.
- Operate the switches with dry hands to prevent an electric shock.
- Do not subject the cables to scratches, excessive stress, heavy loads or pinching. Otherwise, you may get an electric shock.

2. Fire Prevention

CAUTION

- Mount the option unit on an incombustible surface. Installing the inverter or option unit directly on or near a combustible surface could lead to a fire.
- If the inverter has become faulty, switch off the inverter power. A continuous flow of large current could cause a fire.

3. Injury Prevention

CAUTION

- Apply only the voltage specified in the instruction manual to each terminal to prevent damage etc.
- Ensure that the cables are connected to the correct terminals. Otherwise, damage etc. may occur.
- Always make sure that polarity is correct to prevent damage etc.
- While power is on and for some time after power-off, do not touch the option unit as they are hot and you may get burnt.

4. Additional instructions

Also note the following points to prevent an accidental failure, injury, electric shock, etc.:

(1) Transportation and installation

CAUTION

- When carrying products, use correct lifting gear to prevent injury.
- Do not stack the inverter boxes higher than the number recommended.
- Ensure that installation position and material can withstand the weight of the option unit. Install according to the information in the Instruction Manual.
- Do not operate if the option unit is damaged or has parts missing.
- Do not stand or rest heavy objects on the option unit.
- Check the option unit mounting orientation is correct.
- Prevent screws, wire fragments, conductive bodies, oil or other flammable substances from entering the option unit.
- Do not drop the option unit, or subject it to impact.
- Use the inverter under the following environmental conditions:

Environment	Ambient temperature	-10°C to +50°C (non-freezing)
	Ambient humidity	90%RH or less (non-condensing)
	Storage temperature	-20°C to +65°C*
	Ambience	Indoors (free from corrosive gas, flammable gas, oil mist, dust and dirt)
	Altitude, vibration	Maximum 1000m above sea level for standard operation. 5.9 m/s ² or less (conforming to JIS C0911)

*Temperatures applicable for a short time, e.g. in transit.

(2) Trial run

CAUTION

- Check all parameters, and ensure that the machine will not be damaged by a sudden start-up.

(3) Operation

CAUTION

- Do not modify the equipment.

(4) Emergency stop

 **CAUTION**

- Provide a safety backup such as an emergency brake which will prevent the machine and equipment from hazardous conditions if the inverter or option fails.

(5) Maintenance, inspection and parts replacement

 **CAUTION**

- Do not carry out a megger (insulation resistance) test on the control circuit of the option unit.

(6) Disposing of the inverter

 **CAUTION**

- Treat as industrial waste.

(7) General instructions

Many of the diagrams and drawings in this instruction manual show the inverter without a cover, or partially open. Never run the inverter like this. Always replace the cover and follow this instruction manual when operating the inverter.

CONTENTS

1. STRUCTURE.....	1
2. INSTALLATION.....	2
3. WIRING	3
4. ADJUSTMENT	5
5. SPECIFICATIONS.....	6
6. OUTLINE DRAWING.....	6

FR-AT SPEED SELECTOR

The "FR-AT" speed selector can be used with the FR series inverters to start/stop a motor and also allows you to perform operation at three different preset frequencies using the setting select switch, frequency selecting limit switch etc.

1. STRUCTURE

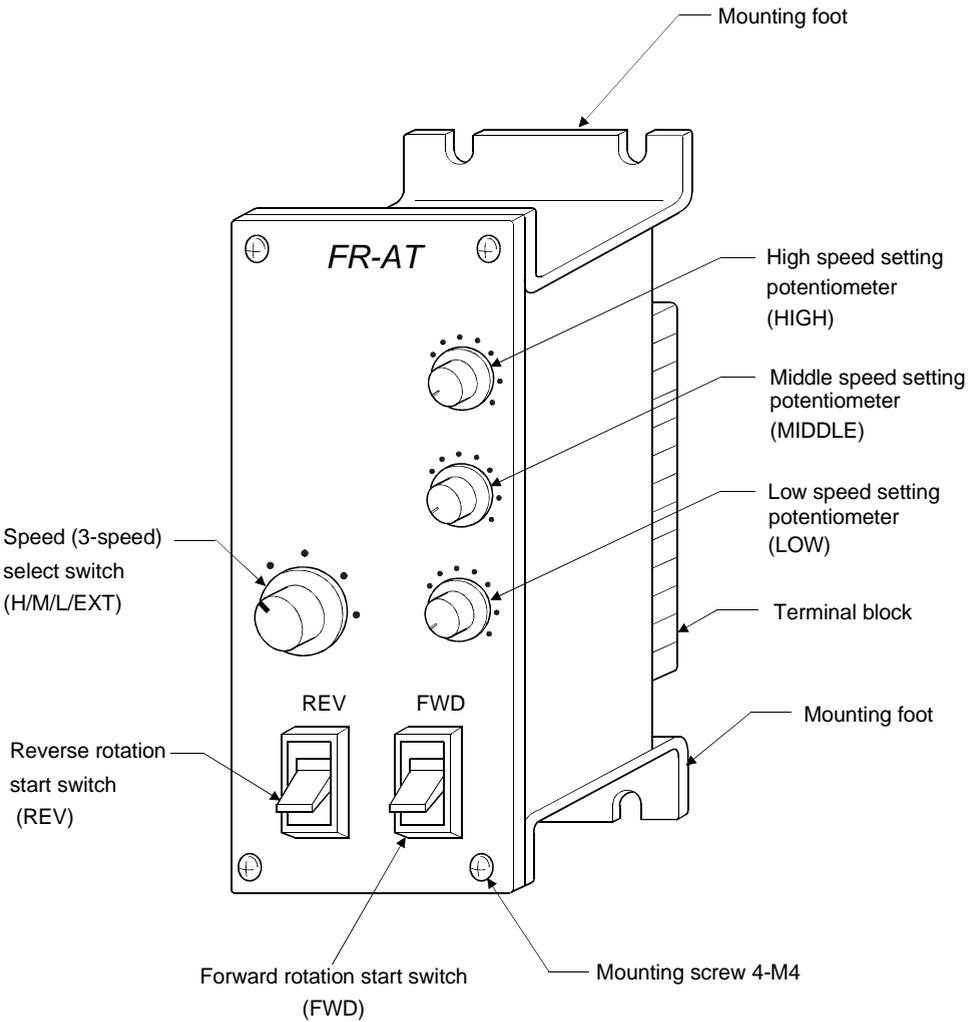


Fig.1 Structure

2. INSTALLATION

The selector can be installed by fastening the mounting feet with screws (4 screws). The mounting dimensions are shown in Fig. 2.

(Note) Install the unit after wiring the terminal block.

When changing the wiring after installation, removal of the mounting screws (4, M4 screws) in the front panel allows you to remove only the unit, leaving the mounting feet behind.

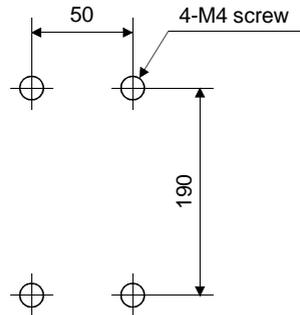


Fig. 2 Mounting Dimensions

Embedding the controller in a panel etc.

- (1) Cut the mounting panel to the mounting hole dimensions in Fig. 3.
- (2) Take off the mounting screws (4 screws) in the controller front panel, and remove the mounting feet.

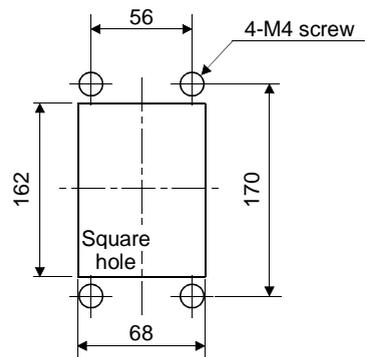


Fig. 3 Embedding Dimensions

3. WIRING

3.1 Circuit Structure and Connection Method

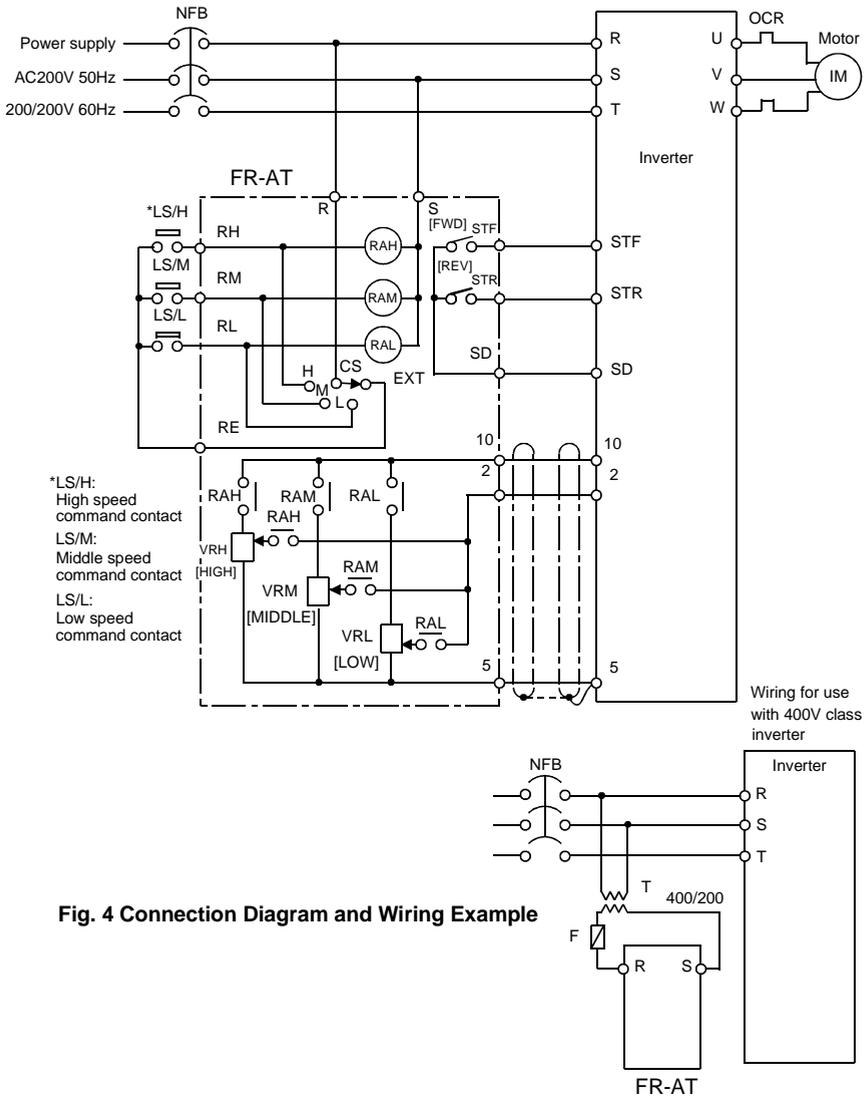


Fig. 4 Connection Diagram and Wiring Example

3.2 Circuit Explanation

The circuit consists of the three-speed selective (selector) operation circuit, start (forward/reverse rotation) circuit and frequency setting circuit.

When the speed select switch CS is moved to choose any of high speed (H), middle speed (M) and low speed (L), the relay of the selected speed is energized to output the frequency setting signal set with the corresponding frequency setting potentiometer.

When you move the switch CS to "EXT" after setting each speed with the frequency setting potentiometer, the relay is energized by the external speed select signal to choose the corresponding speed to output the required frequency setting signal.

(Note) When no power is input to terminals R-S, the relays are not activated and three-speed setting operation cannot be performed.

3.3 Terminal Layout and Wiring Instructions

The terminal layout is shown in Fig. 5.

- (1) Terminals SD1 and SD2 are connected by a link.
- (2) Terminals marked * cannot be used as they are provided for terminal mounting.

- Wiring instructions -

- (1) The wiring distance between controller and inverter should be 50m maximum and should be made as short as possible.
- (2) Use twisted or shielded cables for wiring the frequency setting potentiometer (terminals 10, 2, 5), and connect the shields to the common (terminal 5), not to the earth. (Refer to Fig. 4.)

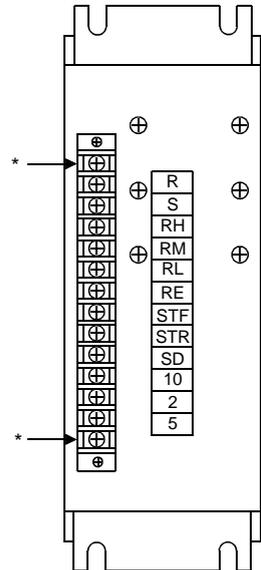


Fig. 5 Terminal Layout Diagram

4. ADJUSTMENT

Before operation, adjust the three set-speeds.

Three speed setting method

Set each speed using the following procedure:

Preset the speed setting potentiometers (3 potentiometers) to fully counterclockwise positions (scale 0).



Turn on the start switch FWD (or REV).



Move the speed select switch to "H" (high speed).



Using the high speed setting potentiometer "HIGH", set the high-speed frequency.



Move the speed select switch to "M" (middle speed).



Using the middle speed setting potentiometer "MIDDLE", set the middle-speed frequency.



Move the speed select switch to "L" (low speed).



Using the low speed setting potentiometer "LOW", set the low-speed frequency.



Three speed setting is complete



Move the speed select switch to "EXT".




Turn on the speed selector, e.g. externally provided switch or limit switch, to check operation at each speed.

5. SPECIFICATIONS

Operation power supply voltage [Terminals R, S]	200VAC 50Hz, 200/220VAC 60Hz
Power consumption	1.5VA
Frequency setting input voltage [Terminal 10]	5V or 10VDC
Frequency setting output signal [Terminal 2]	0 to 5VDC (at input voltage of 5V) 0 to 10VDC (at input voltage of 10V)
Frequency setting potentiometers (VRH, VRM, VRL)	1k Ω 1W B characteristic

6. OUTLINE DRAWING

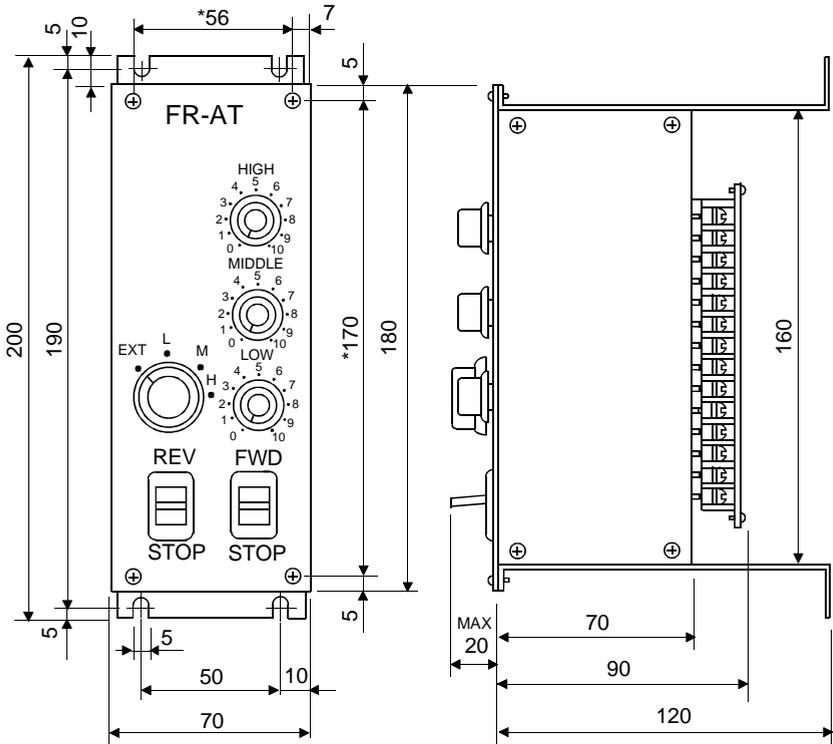

*Mounting dimensions for embedding in a panel etc. (Refer to page 2)

REVISIONS

*The manual number is given on the bottom left of the back cover.

Print Date	*Manual Number	Revision
Jul., 2000	IB(NA)-0600042-A	First edition