

Before Using the Product

Please read this document before use. Keep this for future reference and make sure that end users will read this.

■ Relevant manuals

Before using the product, please read the Safety Guidelines included with the base unit used, especially the following sections.

- SAFETY PRECAUTIONS
- CONDITIONS OF USE FOR THE PRODUCT
- EMC AND LOW VOLTAGE DIRECTIVES
- WARRANTY

Details of the product are also described in the manual shown below (sold separately). Please read the manual and understand the functions and performance of the product to use it correctly.

- QCPU User's Manual (Hardware Design, Maintenance and Inspection)
SH-080483ENG (13JR73)

■ Manuels correspondants

Avant d'utiliser ce produit, prière de lire les "Safety Guidelines" (directive de sécurité) fournies avec l'unité de base, en particulier dans les sections suivantes.

- PRÉCAUTIONS DE SÉCURITÉ
- CONDITIONS D'UTILISATION DE PRODUIT
- DIRECTIVES CEM ET BASSE TENSION
- GARANTIE


■ Packing list

Check that the following items are included in the package.

Item	Quantity
Extended SRAM cassette	1
"Before Using the Product" (this document)	1

■ Insertion procedure

- Turn off the programmable controller.
- Open the cassette cover on the side of the CPU module.
- Hold the top and bottom of the tab of the extended SRAM cassette. Keep the cassette straight, then carefully insert it into the cassette connector.

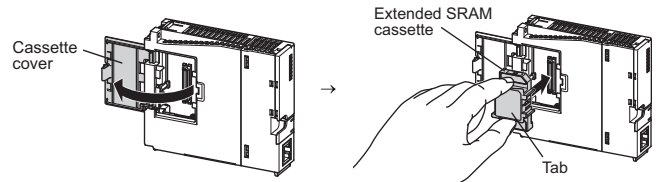

Insert the cassette with the cutoff corner of the cassette in the upper-right side of the CPU module.

■ Handling precautions

- Do not directly touch any conductive parts and electronic components of the extended SRAM cassette. Doing so may cause failure or malfunction.
- Securely insert an extended SRAM cassette into the cassette connector of a CPU module. After insertion, close the cassette cover to prevent the cassette from coming off. Failure to do so may cause malfunction.

■ Précautions de manipulation

- Éviter tout contact direct avec les organes conducteurs et les composants électroniques de la cassette rallonge SRAM. Il pourrait en résulter une panne ou un dysfonctionnement.
- Introduire fermement la cassette rallonge SRAM dans le connecteur de cassette du module CPU. Après insertion, fermer le couvercle de la cassette pour éviter que la cassette ne se détache. Le non-respect de cette précaution expose à des dysfonctionnements.

■ Operating ambient temperature

Use the product within the range from 0°C to 55°C.

■ Température ambiante de fonctionnement

Ce produit doit être utilisé entre 0 et 55°C.

■ Installation of the unit

Consider ease of operation, maintainability, and resistance to adverse environmental conditions when installing the product in a control panel, etc. Securely install all units in the MELSEC-Q series on the base unit. Also refer to the QCPU User's Manual (Hardware Design, Maintenance and Inspection) for details of installation.

■ Installation de l'unité

Prendre en considération la commodité d'exploitation et de maintenance, ainsi que la bonne résistance aux facteurs environnementaux adverses lors de l'installation en tableau de commande, etc.

Installer fermement toutes les unités de la série MELSEC-Q sur l'unité de base. Pour le détail de l'installation, voir aussi le "QCPU User's Manual (Hardware Design, Maintenance and Inspection)" (le Manuel de l'utilisateur QCPU (conception du matériel, maintenance et inspection)).

■ Information and services

For further information and services, please consult your local Mitsubishi representative.