



Numerical Protection Relay

MELPRO™-D Series

BIASED DIFFERENTIAL RELAY
FOR GENERATOR PROTECTION

MODEL

CGP2-A02D2

INSTRUCTION MANUAL

Request

Ensure that this Instruction Manual is delivered to
the end users and the maintenance manager.

- Introduction -

Thank for your purchasing MITSUBISHI ELECTRIC **MELPRO**™ – D Series Digital Protection Relay.

Please read this manual carefully to be familiar with the functions and performances enough to use the product properly.

Please provide this instruction manual to end users.

For operation of the product, this manual should be used in conjunction with the following materials:

Title of document	Document No.
MELPRO – D Series Protection Relay General Operation Manual	JEP0-IL9416

When the protection relay is used together with a communication card, use the following documents too:

(For CC-Link)

Title of document	Document No.
MELPRO – D Series Protection Relay CC-COM Communication Card (CC-Link) Operation Manual (General information)	JEP0-IL9417
MELPRO – D Series Protection Relay CC-COM Communication Card (CC-Link) Operation Manual (Model-specific information)	JEP0-IL9418

– CONTENTS –

1	Features	4
1.1	General description	4
1.2	Features	4
2	Rating and specifications	6
2.1	General information	6
2.2	Protective elements	8
2.3	Measurement elements	9
3	Characteristics	10
3.1	Protective elements	10
3.2	Measurement elements	11
3.3	Common technical data	12
4	Functions	13
4.1	Protection	13
4.2	Measurement	19
4.3	Self-diagnosis	21
4.4	Communication	23
5	Configuration	25
5.1	Internal configuration	25
5.2	External connection	28
6	Handling	33
6.1	Unpacking	33
6.2	Transportation and storage	33
6.3	Appearance and how to pull sub unit out	33
6.4	How to use front control panel	38
7	Mounting	47
7.1	Mounting dimension	47
7.2	Standard operating environment	47
8	Test	48
8.1	Appearance inspection	48
8.2	Characteristic test	49
9	Maintenance	52
9.1	Daily inspection	52
9.2	Periodical inspection	52
10	Ordering	53
11	Guarantee	53
11.1	Period of guarantee	53
11.2	Range of guarantee	53

1 Features

1.1 General description

Mitsubishi Electric MELPRO-D Series is a digital protection relay with a microprocessor for protecting high/extra-high-voltage electric power system.

With its improved functions, including operation support using the advanced communication networks, data saving at the power system faults and power system current measurement, this series of protection relay will allow stable and effective control and monitoring of electric power systems as well as provide high-reliable protection.

1.2 Features

(1) High-reliable protection

CGP2-A02D2 relay is applied for the generator protection and includes the following protection element;

- Biased differential element (87G)

(2) Lock function by external control input

The relay is provided with 2 DI (Digital Input) input circuits. It is available to lock any operating element by DI inputs.

(3) Communication Network

- With an open field bus system, the relays can be used to build a high-speed, high-performance network system. In addition, the relay's multi-drop serial wiring reduces the amount of labor required for communication wiring.
- Control of measurement values, operation status, as well as setting changes, etc., can be performed from a remote location.
- In consideration of future network system variations and compatibility with communication networks, communication features are mounted in the relay using a replaceable card.

(4) Measurement & Recording Functions

- Real time monitor of relay input data

The relay can measure steady state relay input values, supporting energy management.

- Fault Data Monitor

When a fault occurs, the relay saves the past 5 effective input values and waveform data to assist with fault analysis.

(5) Programmable Output Configuration

The operating output contacts (DO) can be set by combining the outputs of the protection relay element using 'OR' logic, thereby simplifying sequence design.

(6) High Accurate Digital Computation

The digital computation using high-speed sampling minimizes the effect of high harmonics, etc., and results in highly accurate protection.

(7) Self-diagnosis

The relay continuously monitors electronic circuits from input to output so that it can detect internal failure before that failure causes damage on the power system, thereby improving reliability.

(8) Easy Replacement

The dimensions of the panel cutout are the same as the prior MULTICAP series. Changing from an existing relay type to this new type is easy.

(9) Easy Maintenance

The relays are adopted as draw-out unit mechanisms with automatic CT shorting at drawing, thereby making maintenance easy.

(10) Easy wiring check

It is possible to carry out forced operation of the output contacts individually. This will allow an easy wiring check.

2 Rating and specifications


2.1 General information

Type name		CGP2-A02D2		
Style		312PQB	313PQB	
Element	Protection	Biased differential element (87G) × 3		
	Measurement	Phase current, Differential current		
Rating	Frequency	50 Hz	60 Hz	
	Phase current	5 A		
	Photo-coupler input voltage	DC110V (Operative range: DC77~143V)		
	Auxiliary power supply *21	Voltage	Common use for 100 ~ 220VDC / 100 ~ 220VAC	
		Operative range	DC : 85 ~ 242 V (Range of 80 ~ 286VDC is allowable temporarily.) AC : 85 ~ 242 V (Range of 80 ~ 253VAC is allowable temporarily.)	
Display	RUN	Indicate the result of self-diagnosis. The lamp is lit for normal conditions and off for abnormal.		
	Unit	Indicate the unit symbol for measurements.		
	Item No., Item data	Display measurement, status, setting and option data selected with an item number.		
	Communication	With a communication card installed: the lamp is lit for normal conditions, blinking during communication and off for abnormal. With a communication card not installed: the lamp is off.		
Self-diagnosis		Monitor the electronic circuit and internal power supply to output signal to the RUN LED and self-diagnosis output (ALARM).		
Output contacts	Configurations	For trip	2 make contacts: X ₅ and X ₆ (programmable output)	
		For signaling	4 make contacts: X ₀ to X ₃ (programmable output)	
		For self-diagnosis output	1 break contact: Y (open for normal result of self-diagnosis with power on) 1 make contact: X ₄ (open for normal result of differential current check)	
	Capacity	For trip	Make	110VDC, 15A, 0.5 s (L/R = 0 s) 220VDC, 10A, 0.5 s (L/R = 0 s)
			Break	110VDC, 0.3A (L/R ≤ 40 ms) 220VDC, 0.15A (L/R ≤ 40 ms)
			Carry	1.5 A, continuously
		For signaling and self-diagnosis output	Make and Break	500 VA (cosφ = 0.4), 60W (L/R = 0.007 s)
			Max. current	5 A
Max. voltage	380VAC, 125VDC			
Burden	Phase circuit	0.5 VA or less (with rated current)		
	Voltage circuit	1.0 VA or less (with rated voltage)		
	Auxiliary power supply circuit	For 100VDC: approx. 6 W (approx. 8W including communication card) For 100VAC: approx. 12VA (approx. 14VA including communication card) For 220VDC: approx. 6 W (approx. 8W including communication card) For 220VAC: approx. 14VA (approx. 16VA including communication card)		
Mass		Net weight of relay unit : approx. 3.8 kg Including case : approx. 5.2 kg		
Case/cover		Size : D2 type Color : N1.5		

- *21 When an uninterruptible AC power source is not included in your system for the auxiliary supply voltage, use the type CPS1 AC/DC converter or commercially available uninterruptible power supply (UPS).
24VDC auxiliary power supply rating of relay is also available if ordered (non-standard product).
In addition, the power supply duration of the type CPS1 AC/DC converter is confirmed about 2 seconds in combination with one MELPRO-D series relay. Therefore, in the case that the required power supply duration after power source loss exceeds 2 seconds, please use a suitable commercial uninterruptible power supply.
When the power supply back up for the control power supply of a circuit breaker is required, it is necessary to prepare the backup power supply different from the type CPS1 AC/DC converter.

2.2 Protective elements

Style		312PQB	313PQB
Setting *24	Biased differential	Operation current	LOCK – 0.4 ~ 1.0A (0.2A step)
		Bias (τ =Differential current/Restraining current)	10 – 15 – 20%
		Operation time	INST (<60ms) – 0.1 ~ 0.5s (0.1s step)
	DI	DI Lock time	0.1 ~ 5.0s (0.1s step)
Forced operation		Trip and control contacts can be forcefully tripped independently.	
Operation indication		Operation indicator LED (red) comes on when the relay operates.	

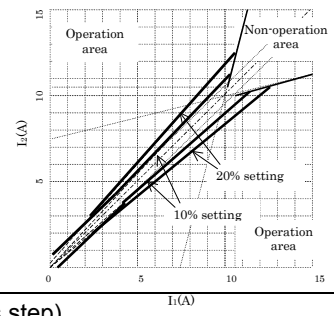

2.3 Measurement elements

Style		312PQB		313PQB		
Option *24	CT primary			5-10-12-12.5-15-20-25-30-40-50-60-75-80-100-120-125-150-200-250-300-400-500-600-750-800-1000-1200-1250-1500-2000-2500-3000-4000-5000-6000-7500-8000[A]		
	Display	Phase current	Real time	Conversion	Indication value = Relay input value × CT primary setting / 5	
Range *22				0.00 ~ CT primary setting × 2 [A]		
Update				Approx. 200 ms		
Max. records			Conversion	Indication value = Relay input value × CT primary setting / 5		
			Range *22	0.00 ~ CT primary setting × 2 [A]		
			Conversion	Indication value = Relay input value × CT primary setting / 5		
Differential current		Real time	Conversion	Indication value = Relay input value × CT primary setting / 5		
			Range *22	0.00 ~ CT primary setting × 2 [A]		
			Update	Approx. 200 ms		
		Max. records	Conversion	Indication value = Relay input value × CT primary setting / 5		
			Range *22	0.00 ~ CT primary setting × 2 [A]		
			Conversion	Indication value = Relay input value × CT primary setting / 5		
Fault records *23	Conversion	Indication value = Relay input value × CT primary setting / 5				
	Range *22	0.00 ~ CT primary setting × 15 [A]				

*22 The form of display depends on value range as shown in the tables below:

(1) Phase current / Differential current display

CT primary setting value determines the minimum number of digits to be displayed on each measurement display.

When a value to be displayed exceeds the max. value of the display range, the max. value will blink.

Phase current primary settings		5 ~ 40[A]	50 ~ 400[A]	500 ~ 4000[A]	5000 ~ 8000[A]
Form of display	0.00 ~ 9.99[A]	□.□[A]	□[A]	-	-
	10.0 ~ 99.9[A]	□□.□[A]	□□[A]	□.□□[kA]	-
	100 ~ 999[A]	□□□[A]	□□□[A]	□.□□[kA]	□.□[kA]
	1.00 ~ 9.99[kA]	□.□□[kA]	□.□□[kA]	□.□□[kA]	□.□[kA]
	10.0 ~ 99.9[kA]	□□.□[kA]	□□.□[kA]	□□.□[kA]	□□.□[kA]
	100 ~ 999[kA]	□□□[kA]	□□□[kA]	□□□[kA]	□□□[kA]

*23 When a communication card is connected, waveform data at power system fault can be read.

*24 When the product is shipped from the factory, each setting value is “Lock” (With lock setting element) or “minimum setting value” (Without lock setting element).

3 Characteristics

Common conditions	(1) Rated frequency: $\pm 1\%$ (2) Ambient temperature: $20^{\circ}\text{C} \pm 10^{\circ}\text{C}$ (3) Aux. supply voltage : Rated voltage $\pm 2\%$	The conditions shown on the left should be applied unless otherwise specified.
-------------------	---	--

3.1 Protective elements

(1) Biased differential element

Items	Conditions	Guaranteed performance										
Operation current	Setting: All operation current All bias Minimum operation time Input: One terminal feeding condition	Setting value $\pm 5\%$										
Reset value	Same as above	Operating value $\times 95\%$ or more										
Biased differential characteristics	Setting: All operation current All bias Minimum operation time Input: Fixed I_1 according to right chart, and vary I_2 .	<table border="1"> <thead> <tr> <th>Bias setting</th> <th>I_1</th> <th>I_2</th> </tr> </thead> <tbody> <tr> <td>10%</td> <td>11A</td> <td rowspan="3">$I_2=10(\text{A})$ $\pm 5\%$</td> </tr> <tr> <td>15%</td> <td>11.5A</td> </tr> <tr> <td>20%</td> <td>12A</td> </tr> </tbody> </table>	Bias setting	I_1	I_2	10%	11A	$I_2=10(\text{A})$ $\pm 5\%$	15%	11.5A	20%	12A
	Bias setting	I_1	I_2									
10%	11A	$I_2=10(\text{A})$ $\pm 5\%$										
15%	11.5A											
20%	12A											
	Input: Fixed I_1 to 30A, and vary I_2 .	$I_2 : 15(\text{A}) \pm 10\%$										
Phase characteristics	Setting: Minimum operation current All bias Minimum operation time Input: Fixed I_1 and I_2 to 10A, and vary the phase between I_1 and I_2 . Measure operating angle.	Bias setting = 10%: $174.3 \pm 5^{\circ}$ Bias setting = 15%: $171.4 \pm 5^{\circ}$ Bias setting = 20%: $168.5 \pm 5^{\circ}$										
Operation time	Setting: Minimum operation current Minimum bias All operation time Input: One terminal feeding condition. $0 \rightarrow$ operation current setting $\times 300\%$	Setting value $\pm 20\text{ms}$ INST = 60 ms or less.										
Reset time	Setting: Minimum operation current Minimum bias All operation time Input: One terminal feeding condition. operation current setting $\times 300\% \rightarrow 0$	200ms $\pm 20\text{ms}$										

(2) DI Lock element

Items	Conditions	Guaranteed performance
DI Lock time	Setting: All Lock time Input: Operate all elements set to lock, and input rated voltage to DI circuit. Voltage: rated voltage $\rightarrow 0(\text{V})$ Measure time before locked elements operating.	<ul style="list-style-type: none"> · 0.1 ~ 0.4s setting Setting value $\pm 20\text{ms}$ · 0.5 ~ 5s setting Within $\pm 5\%$ of setting value

3.2 Measurement elements

Items		Condition	Guaranteed performance
Real time	Phase current (Output side CT)	CT primary setting ×2	±1%
	Differential current	CT primary setting ×2	±2%
Max. records	Phase current (Output side CT)	CT primary setting ×2	±1%
	Differential current	CT primary setting ×2	±2%

3.3 Common technical data

ITEM		DESCRIPTION	CONDITION	STANDARD
Environment	Ambient operating temperature	-10°C to +55°C		IEC60255-6
	Ambient storage and transport temperature	-25°C to +70°C		IEC60255-6
	Damp heat	+40°C, 95%RH, 4 days		IEC60068-2-3
Thermal withstand	VT	1.15Vn, 3h		
	CT	40In, 1s		
Dielectric test	Circuit of 60V or below	500VAC, 1min.	1) Between each circuit and the exposed conductive parts, the terminals of each independent circuit being connected together 2) Between independent circuits, the terminals of each independent circuit being connected together	IEC60255-5
	Circuit of more than 60V and 500v or below	2000VAC 1min.		
	Open contact	1000VAC, 1min.	Between open contact poles	
Impulse voltage test		5kV, 1.2µs/50µs	1) Between each circuit and the exposed conductive parts, the terminals of each independent circuit being connected together 2) Between independent circuits, the terminals of each independent circuit being connected together	IEC60255-5
High-frequency disturbance test	Common mode	2.5kV peak, 1MHz with 200Ω source impedance for 2s	Between independent circuits, and between independent circuit and earth	IEC60255-22-1 class 3
	Differential mode	1.0kV peak, 1MHz with 200Ω source impedance for 2s	Across terminals of the same circuit	
Electrostatic discharge test		8kV	Contact discharge	IEC60255-22-2 Class 4
		15kV	Air discharge	
Radiated electromagnetic field disturbance test		68 to 87Mhz 146 to 174MHz 420 to 470MHz		IEC60255-22-3 class 3
Fast transient disturbance test		2.0kV, 5ns/50ns, 1min		IEC60255-22-4
Vibration test		Refer to class 1		IEC60255-21-1 Class 1
Shock response		Refer to class 2		IEC60255-21-2 Class 2
Shock withstand		Refer to class 1		IEC60255-21-2 Class 1
Bump		Refer to class 1		IEC60255-21-2 Class 1
Enclosure protection		IP51		IEC60529

Vn: Rated voltage, In: Rated current

4 Functions

4.1 Protection

4.1.1. Biased differential element (87G)

The biased differential element is designed for protection against phase faults arising in the windings of generators and rotary condensers. This element calculates differential current from the generator neutral-side current I_1 and the output side current I_2 , and detects fault of generator.

(1) Principle of operation

Provided that the current for neutral side of generator is I_1 , and current for output side of generator is I_2 .

Differential current:

$$I_{DIF} = | \dot{I}_1 - \dot{I}_2 |$$

The bias is expressed as the bias of differential current I_{DIF} to the minimum of I_1 and I_2 . When the bias exceeds the bias setting, and I_{DIF} exceeds the operation current setting, the relay operates.

$$\text{Operation judgment: } \frac{I_{DIF}}{\text{Minimum } (I_1, I_2)} = \frac{| \dot{I}_1 - \dot{I}_2 |}{\text{Minimum } (I_1, I_2)} \geq \text{bias setting}$$

$$I_{DIF} = | \dot{I}_1 - \dot{I}_2 | \geq \text{operation current setting}$$

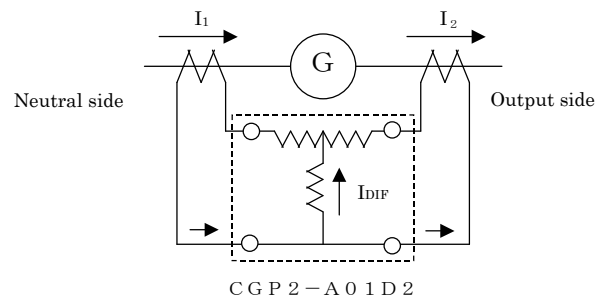


Figure 4-1 Operating principle

When large current by external fault flows through the protected zone, the differential current may rush by an unbalance of CT characteristics, CT burden and lead-wire length. In the large-current range (I_1 or I_2 are 10.5A or more), it makes the bias ratio larger to prevent mal-operation by the differential current.

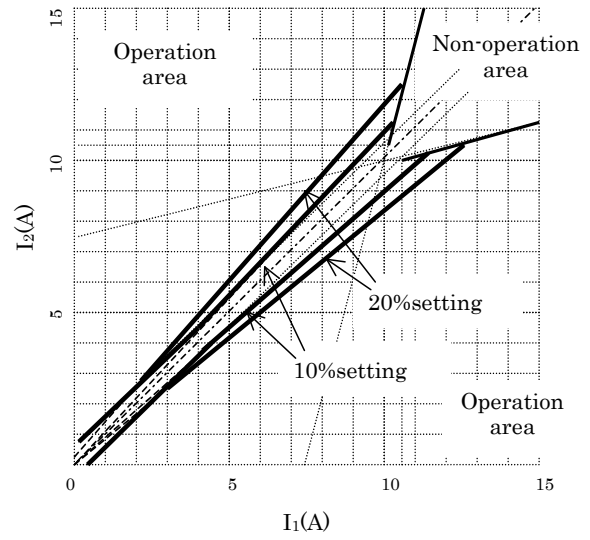
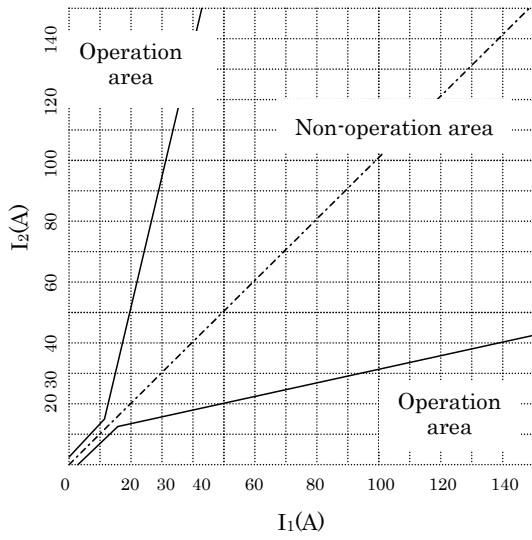


Figure 4-2 Biased differential characteristics between I_1 and I_2

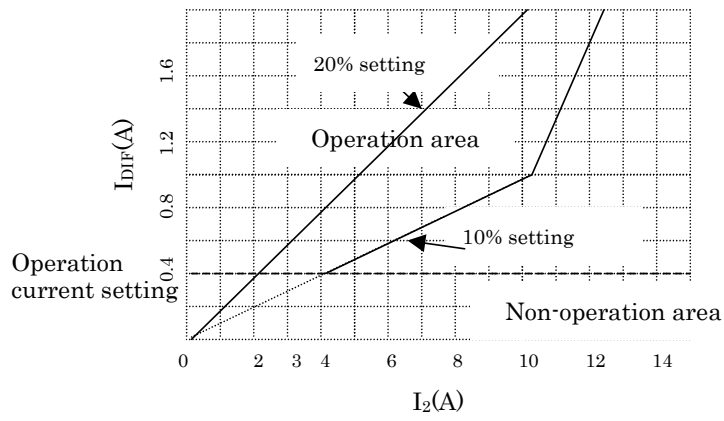


Figure 4-3 Biased differential characteristics between I_2 and I_{DIF}

(2) Biased differential element function diagram

The differential current I_{DIF} is calculated from I_1 (neutral side current of generator) and I_2 (output side current of generator) for the bias differential element. And I_1 is compared with I_2 , and biased ratio is calculated from the minimum (of I_1 and I_2) and differential current. The calculated biased ratio is compared with biased setting. At the same time, the differential current is compared with operation current setting. If the ratio and differential current are larger than setting value, the operation indicator LED blinks. When the timer expires, the operation indicator LED lights, and the element outputs an operation signal.

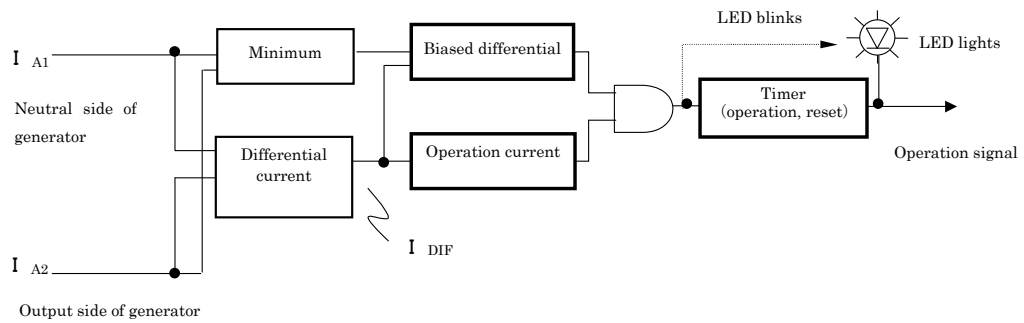


Figure 4-4 Bias differential element function diagram (A-phase)

4.1.3 General functions

(1) Setting of operation value

The operation current setting for the bias differential element is indicated with current value [A], and the operation bias setting is indicated with ratio [%].

When the “Lock” was set, the elements selected are locked for operation.

(2) Setting of operation time

The operation time settings are indicated with time value [s].

(3) Operation display

For the bias differential element, when the bias ratio becomes larger than the bias setting and the differential current becomes larger than the operation current setting, the operation indicator LED of the bias differential element will blink. The LED lamp will come on as soon as an operation output is made when a period of operation time has elapsed.

The operation indicator LED has been set to “self-hold” in the factory. This setting can be freely changed to “auto reset”.

With the “self-hold” setting, data of the latest operation indication will be stored in the internal memory even if the auxiliary power supply runs down.

The data stored will be cleared when the “indicator reset” switch is pressed.

Up to latest five phenomena can be stored and displayed as a history record. (Older data than the latest five phenomena will automatically be cleared).

Item No.	History	Sequence of recording
311	1 st phenomena	Latest fault record data ↓ ↓ ↓ Oldest fault record data
312	2 nd phenomena	
313	3 rd phenomena	
314	4 th phenomena	
315	5 th phenomena	

(4) Output contacts

The signaling outputs X₀ to X₃ and trip outputs X₅ and X₆ are all programmable type.

The factory default setting of the arrangement of these outputs is as shown in the internal function block diagram of Figure 5-2 This setting can be freely changed by specifying outputs of the internal elements based on the OR logic.

All the outputs have been set to “auto reset” in the factory. Any of them can be changed to “self hold”.

And the output X₄ for differential current check closes at differential current error. This contact is “auto-reset”. If the differential current error is discovered, the contact will open. This contact is not programmable.

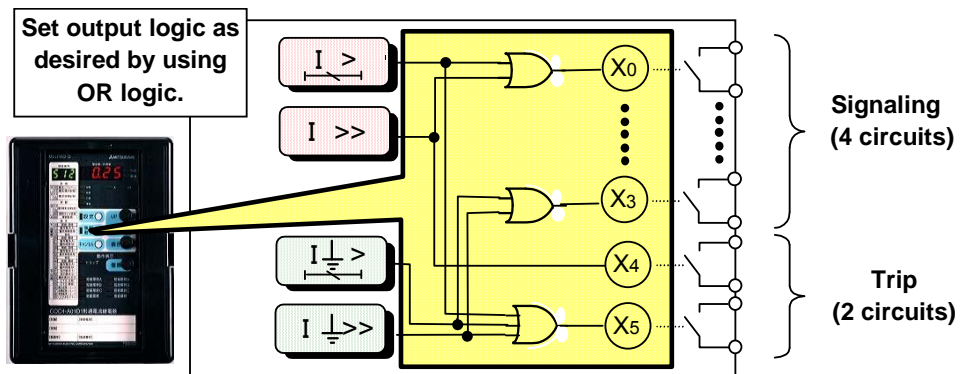


Figure 4-5 Schematic image of Programmable Outputs (example: COC4-A01)

(5) Forced operation

It is possible to carry out forced operation of any of the signaling outputs X_0 to X_3 , differential current check output X_4 , and trip outputs X_5 and X_6 independently. Forced operation is useful for checking the wiring.

When forced operation is carried out, the corresponding LED lamps will come on to show the current status of the programmable outputs. Checking the lamp status will be useful not only for wiring check but also to check the programmable outputs arrangement.

(6) Lock function by external control input

Two DI circuits are installed for the interlock by external control signals, and a relay element can be locked by DI input. As an interlock example, unwanted operation by inrush current can be locked. Moreover, the relay element locked at the time of a DI input arising can be set up to each DI circuit. The operating element indication is made to turn on according to the interlock conditions. A timer of DI lock can be set every DI circuit. The timer means that time before turning of DI input after releasing lock.

In the state of DI lock, if a protection element is operated, the operation indicator LED will be blinking. In the state of DI lock released, the contacts operate after timer of DI lock, and the operation indicator LED will be lit.

When setup for a certain element differs in DI input (1) and DI input (2) and both of DI (1) and DI (2) input arise, LOCK is carried out with priority.

Example: When a setup for 87G element is LOCK at the time of DI (1) input and Not Lock at the time of DI (2) input and both of DI (1) and DI (2) input arise, 87G will be locked.

Reset timer of protection element is set behind the sequence of DI lock to prevent resetting in short time, when a protection element is locked right after making contact. When DI lock is carried out during a contact making, the contact will be broken after reset time for the protection element.

Moreover, please carry out setting change of an output lock element by the item numbers 880 and 890. (refer to 6.4.2 operation procedure).

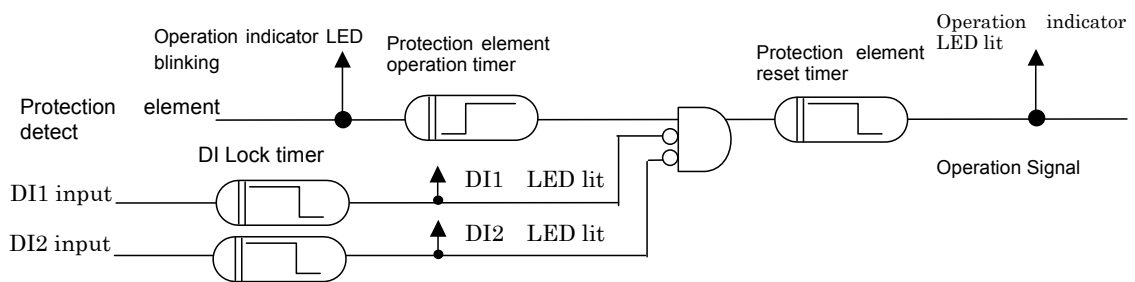


Figure 4-6 Example of Lock function by external control input

4.2 Measurement

Currents input into the relay are measured and converted into freely set CT primary currents, then indicated in the display.

(1) Real time measurement

The effective current input to the relay under steady state can be displayed for each phase.

The displayed currents are phase current for output side of generator, and differential current.

(2) Max. records

The maximum effective current can be recorded and stored for each phase. The max. record will be all cleared when “aux. power supply OFF” or “max. record reset” operation is made.

(3) Fault record

In the event of system fault, the effective current and waveform data that have been measured at the time when one of the protection elements operates to issue an output signal are stored. Data of up to five phenomena can be stored and displayed for each phase.

In addition, the phase can also be stored and displayed for five phenomena.

With “aux. power supply OFF”, only the waveform data will be cleared and the effective current data will remain. With “fault record reset” operation, however, both of the data items will be all cleared.

(Records older than the 5th phenomenon will automatically be cleared.)

Item No.	History	Sequence of recording
211	1 st phenomena	Latest fault record data
212	2 nd phenomena	↓
213	3 rd phenomena	↓
214	4 th phenomena	↓
215	5 th phenomena	Oldest fault record data

The following fault waveform data can be collected if a communication card is installed:

Item	Specification
Data sampling cycle	Fixed to the electric angle of 30° of rated frequency
Data storing capacity (for a phenomenon)	224 cycles of rated frequency (Data point: $224 \times 360^\circ / 30^\circ = 2688$ points)
Permissible setting range	224 cycles before trip ~ 224 cycles after trip
Collected data	The range for data collection can be set by cycle within the “data storing capacity” in the “permissible set range”.

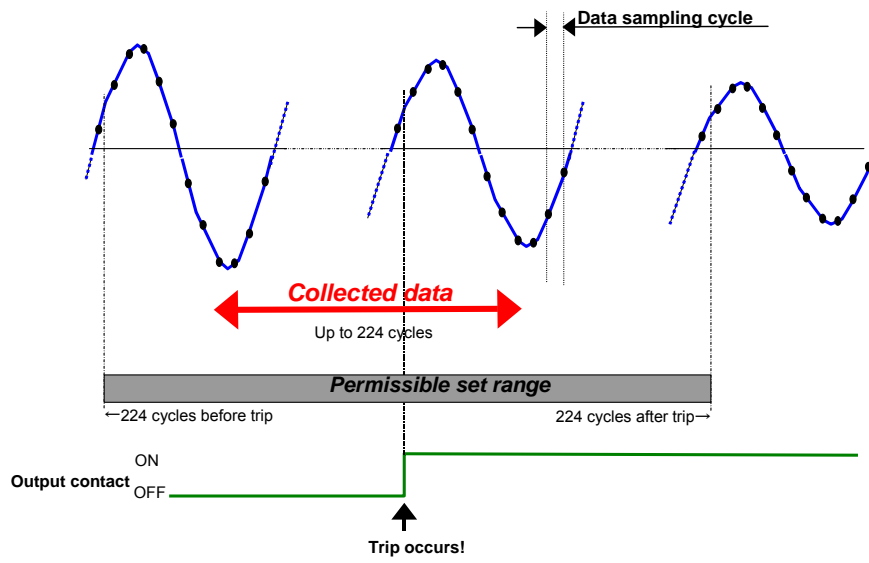


Figure 4-7 Concept of recording fault waveform

4.3 Self-diagnosis

The self-diagnosis function monitors the electronic circuit and built-in power source continuously. If an abnormal condition occurs, the protection elements will be locked for operation. Also, the RUN LED lamp will go off and the self-diagnosis output contact (break contact) will be closed.

(1) Checking defect code at failure detection

When a failure is detected, the defect code will be recorded. This defect code can be checked through the self-diagnosis (ALARM) status indication.

(2) Resetting self-diagnosis output

If a failure is detected, **the failure status may be reset by turning off/on the power.**

In this case, **be sure to lock the trip circuit on the external wiring of the relay** before resetting. (If the failure persists, an erroneous output may be caused).

(3) Clearing the defect code

The defect code data stored at failure detection can not be cleared only by carrying out the power on/off procedure in the item (2) above. All the defect code numbers that have been detected since the previous “self-diagnosis reset” (RESET ALARM) operation was made are accumulated in the memory.

To clear the record data, carry out “self-diagnosis reset” (RESET ALARM) operation.

(4) Differential current check

When a difference of the burden of CT's at neutral side and at output side is large, or when analogue circuit be fault, differential current may be generated. The relay always checks an analogue circuit by AD accuracy check, Analogue filter check, and Duplicated A/I check. However, those check function cannot detect the slight fault of analogue circuit, so the relay checks also by Differential current check.

For differential current check, the differential current is calculated from the neutral side current and output side current, and the current is compared with operation current setting. If the differential current is larger than 80% of operation current setting, and the state keeps over 20 seconds, the differential current error is detected.

If the differential current error is detected, differential current check indicator LED is lit, and the contact (X₄) for the differential current check will be closed. In this time, the operation of each element is not locked. If the differential current is smaller than 80% of operation current setting, indicator LED and contact will be reset.

Table 4.1 Output for protection relay failures

Status	Detected items	Output							
		Display		ALARM (break contact)	Operation output lock				
		RUN	Defect code						
Normal	-	On		Open	Not locked				
Power circuit failure	-		No display		Locked				
CPU failure	-				*45				
Monitor error	ROM check				Off	0001	Closed	Locked	
	RAM check	0002							
	A/D accuracy check	0003							
	A/I check	0004							
	A/D check	0005							
	SRAM check	0006							
	D/O status check	0008							
	D/O operation check	0009							
	Analog filter check	0010							
	A/I double check	0011							
	D/I check *41	0012							
	E ² PROM check	0013							
	Computing function check	0014							
	WDT check	0015							
	Data transfer check *42	0016							
	Differential current check	-	On			Open			Not locked
	Communication card check *44	0028							
Communication card channel No. switch setting error *44	0029								
Communication card baud rate switch setting error *44	0030								
Communication card channel No. switch change error *44	0031								
Communication card baud rate switch change error *44	0032								

*41 Monitored only in the models with built-in D/I function.

*42 Monitored only in the models with D2 unit.

*44 Monitored only when the relay is installed with communication card.

*45 No necessary to lock the operation output as any signals can't be output in case of CPU stop.

4.4 Communication

Figure 4-8 shows an example of network system configuration.

For more information on the communication facilities, see the materials shown in the introduction (page 2).

Central Control System

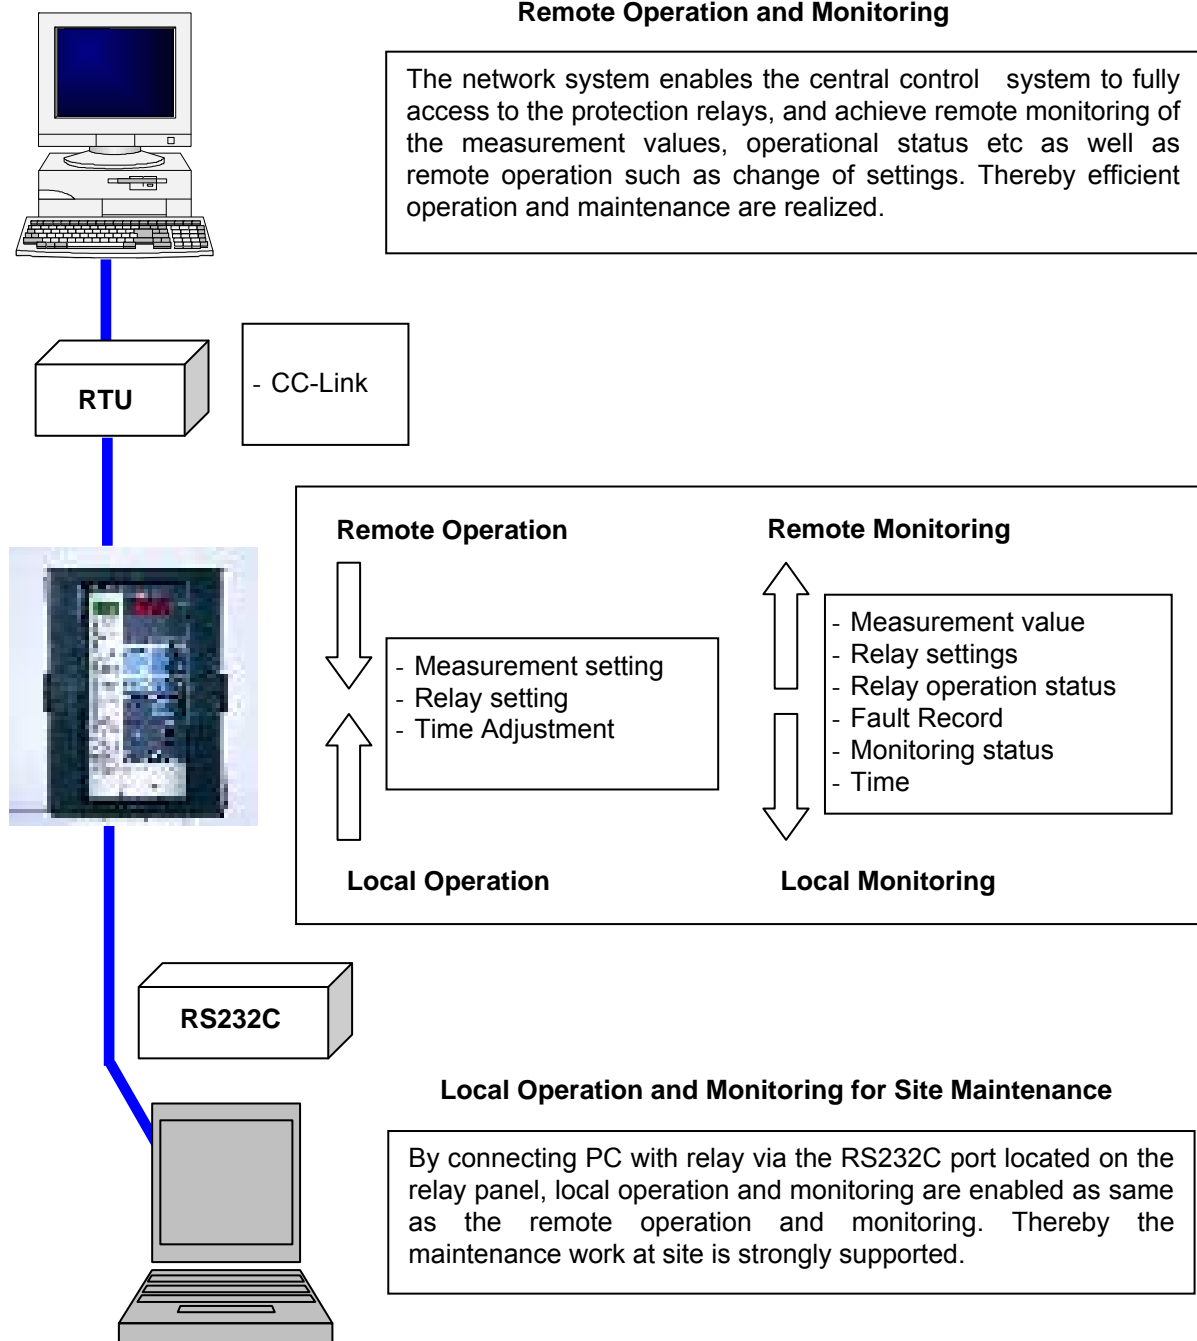


Figure 4-8 Example of communication network system configuration

Using the communication facilities, it is possible to perform Remote Monitoring and Remote Operation with the various useful functions shown in Table 4.2.

Table 4.2 Outline of functions enabled by communication network

Direction of communication	Item	Description
Remote Monitoring RTU ← Protection relay	Setting	Read the settings stored in the protection relay.
	Measurement	Read the measurements stored in the protection relay.
	Max. value	Read the max. values stored in the protection relay.
	Fault record	Read the measurements at the time of trip.
	Self-diagnosis (ALARM)	Read the result of self-diagnosis.
	Operation element	Read the elements that operated at the time of trip.
	Operation time	Read the time at the time of trip.
	Current time	Read the internal time of the communication card.
	Waveform record	Read the wave form at the time of trip.
Remote Operation RTU → Protection relay	Setting	Change the setting of the protection relay.
	Indicator reset	Reset the LED lamp that came on at the time of trip.
	Self-diagnosis (ALARM) reset	Clear the result of self-diagnosis.
	Fault record reset	Clear the fault record, operation elements and operation time data.
	Max. record reset	Clear the max. record.
	Forced operation	Carry out forced operation of output contact.
	Time	Set time of communicate card.

5 Configuration

5.1 Internal configuration

(1) I/O and CPU circuits

Figure 5-1 shows the internal block diagram of the model CGP2-A02D2.

Current and voltage inputs are converted into AC signals at the electronic circuit level via the auxiliary transformer and filter circuits. These signals are retained as a form of DC signal in the sample hold circuit on each channel sharing a same time. The multiplexer selects a channel to take the signal and sends it to an A/D converter. The signals are converted to digital signals sequentially in the converter to be sent to the CPU.

The setting circuit is used to input setting data into the CPU.

These inputs will be used to carry out the functions shown in Figure 5-2 “Internal function block diagram” , then issue output signals to the display and output relay.

(2) Self-diagnosis circuit

When the self-diagnosis function detects that the electronic and power circuits are normal, the output relay will be energized to open the self-diagnosis output contact (break contact).

The self-diagnosis output contact (break contact) will be closed when a failure occurs in the circuits above or when the built-in power fuse burns.

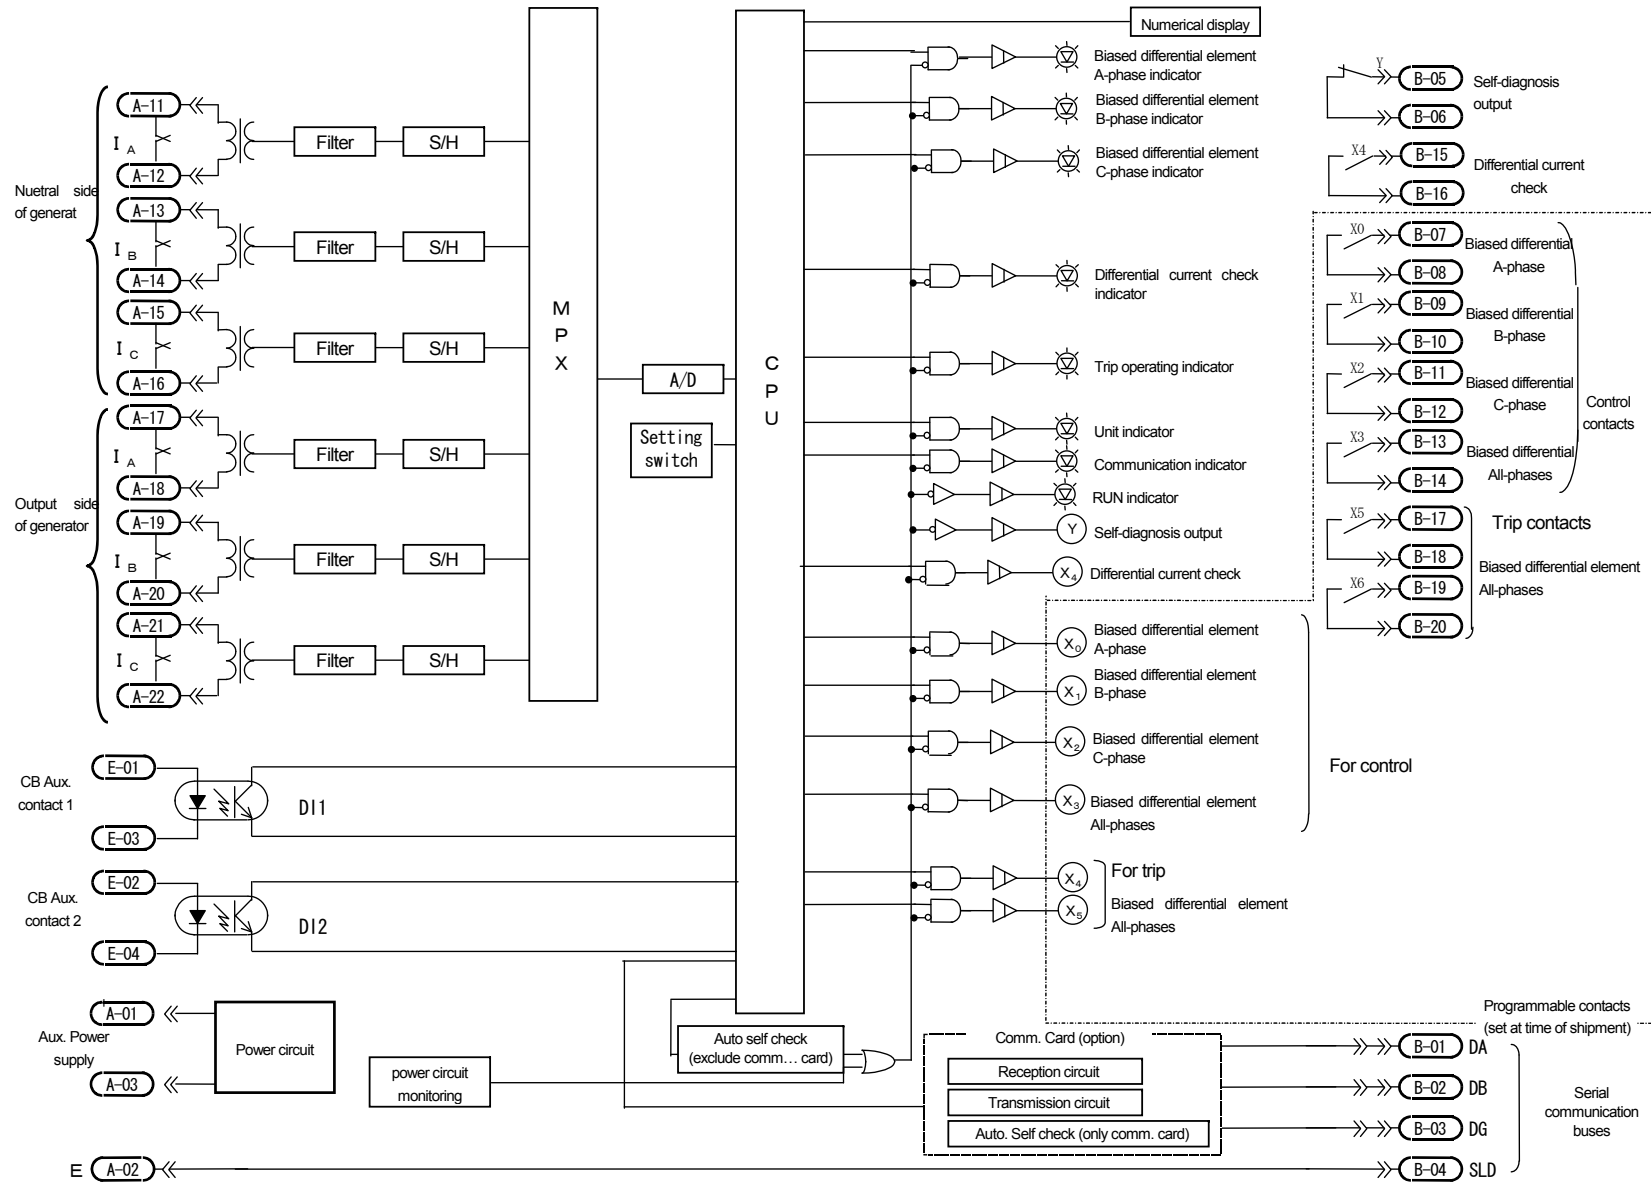


Figure 5-1 Internal block diagram of Type CGP2-A02D2 relay

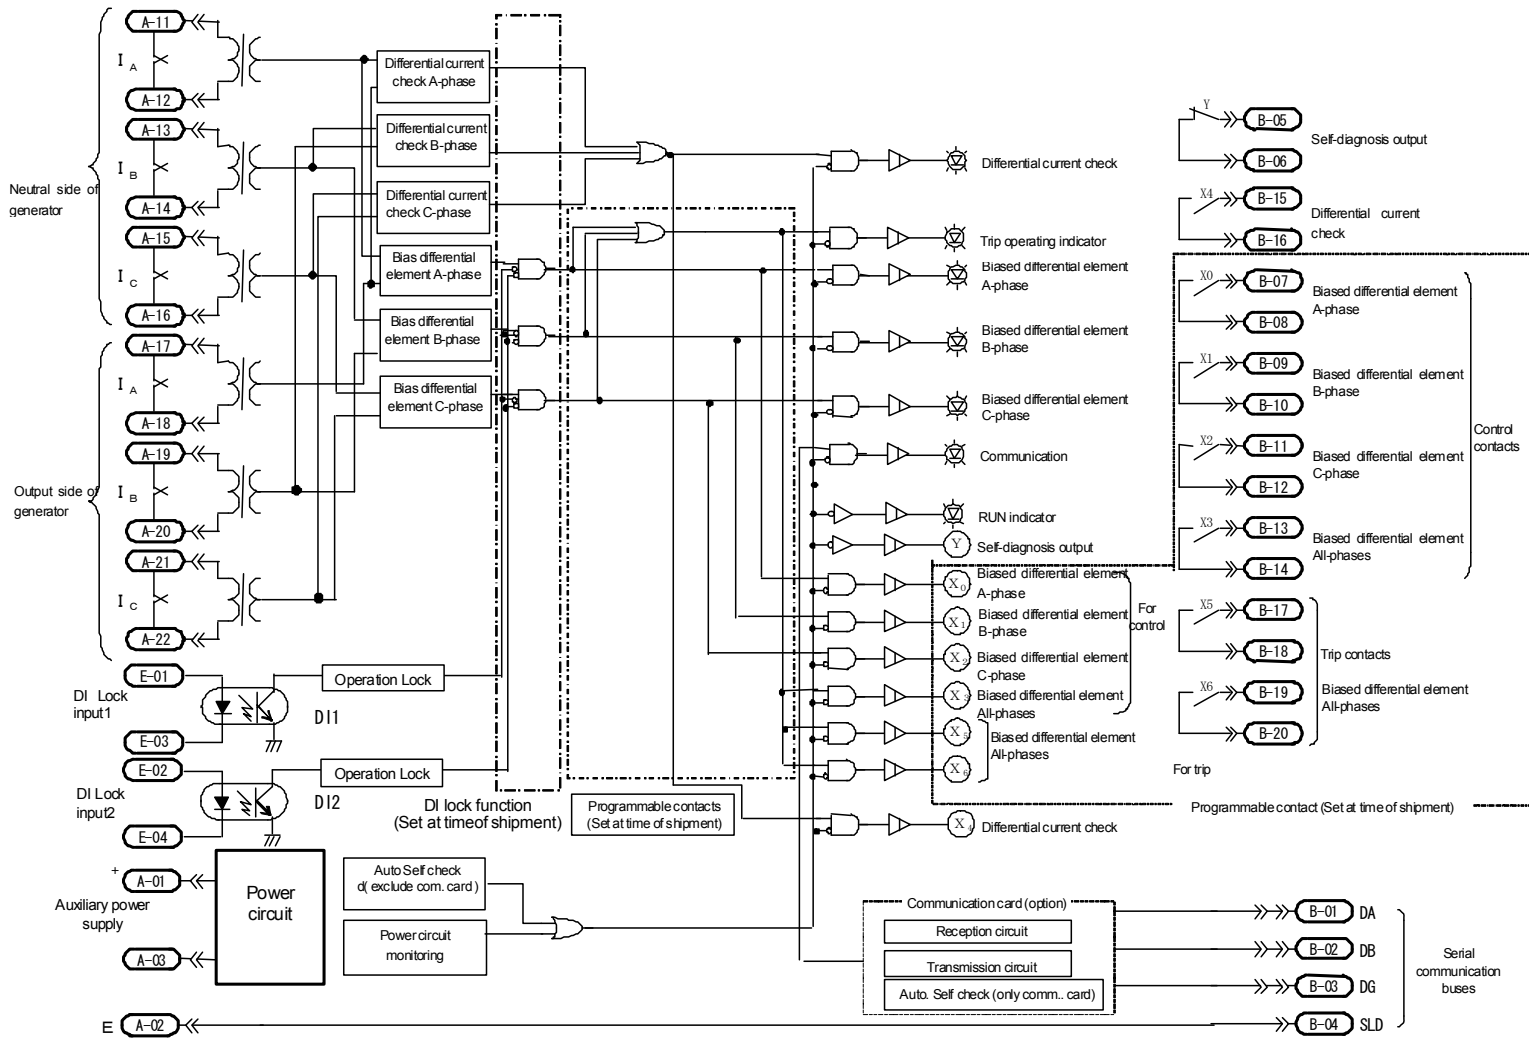


Figure 5-2 Internal function block diagram of Type CGP2-A02D2 relay

5.2 External connection

(1) Connection diagram

Figure 5-4 shows examples of input circuit (AC circuit) connection, Figure 5-5 an example of control circuit (DC circuit) connection and Figure 5-6 a terminal arrangement. Note that the terminal arrangement is different from that of CAC3-10-M2 for MULTICAP Series. In the case of that the loss of excitation element is set at neutral side of generator, current value in the measurement function reads current at neutral side of generator, not output side.

In the terminals, M3.5 screws should be used and wires with 2 mm² or less.

(2) Precautions for wiring work

a. Important facilities should be provided with fail safe measures such as dual system to improve reliability of the facilities.

b. Effects of external surge


Some type of surge with a certain condition may inversely affect the relay. If so, take it into account to install **MF type surge absorbers made by Mitsubishi Electric**.

c. Guarantee of AC auxiliary power supply against power interruption

The AC auxiliary power supply of the relay is not **guaranteed against power interruption**. When you do not have an uninterruptible AC power source, use an **AC/DC converter of CPS1 type manufactured by Mitsubishi Electric** or uninterruptible power source (UPS) that is commercially available.

d. Inrush current of auxiliary supply

Since **inrush current may flow** in the relay when the auxiliary power supply is turned on as shown in the figure below, make consideration of this point when selecting the breaker for the auxiliary supply power circuit.

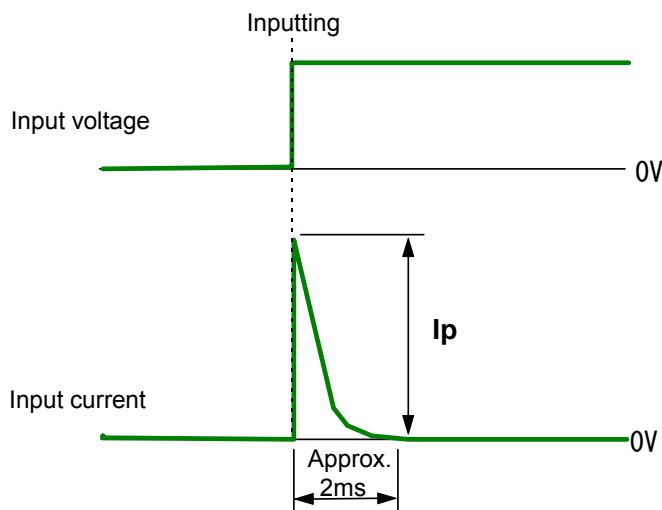

	Input voltage	Inrush current I_p
DC	110V	Approx. 20A
	220V	Approx. 55A
AC	100V	Approx. 25A
	220V	Approx. 65A

Figure 5-3 Inrush current of auxiliary power supply

e. Trip circuit

Only the contacts X_5 and X_6 can be used for the trip circuit. Please keep in mind that the contacts X_0 to X_3 , and X_4 can not be used for the trip circuit. (If used, the contact may burn).

Connect the pallet contact (52a) of the circuit breaker to the trip circuit.

f. Self-diagnosis output circuit

The self-diagnosis output contact is so configured that the auxiliary relay can be energized (break contact) with normal result of monitoring, in order to be able to continue monitoring even if the built-in power fuse burns. Therefore, connect the timer to the external wiring. (See Figure 5-5 "DC circuit connection diagram").

g. Earth circuit

Be sure to earth the earth terminal located on the back of the relay according to the Class D earth wiring method.

h. Characteristics of current transformer

If the characteristics such as saturation of current transformer are different in the neutral side and the output side of generator, when large current caused by external fault or inrush current, the differential current flows and may cause unwanted operation.

In order to prevent the unwanted operation, please use the current transformer with the over-current constant of 20 or more and Class 1.0 or more within the rated burden.

For CT's of neutral side and output side of generator, use CT's of the same lot and same characteristics, and try to match the load on both neutral side and output sides as far as possible.


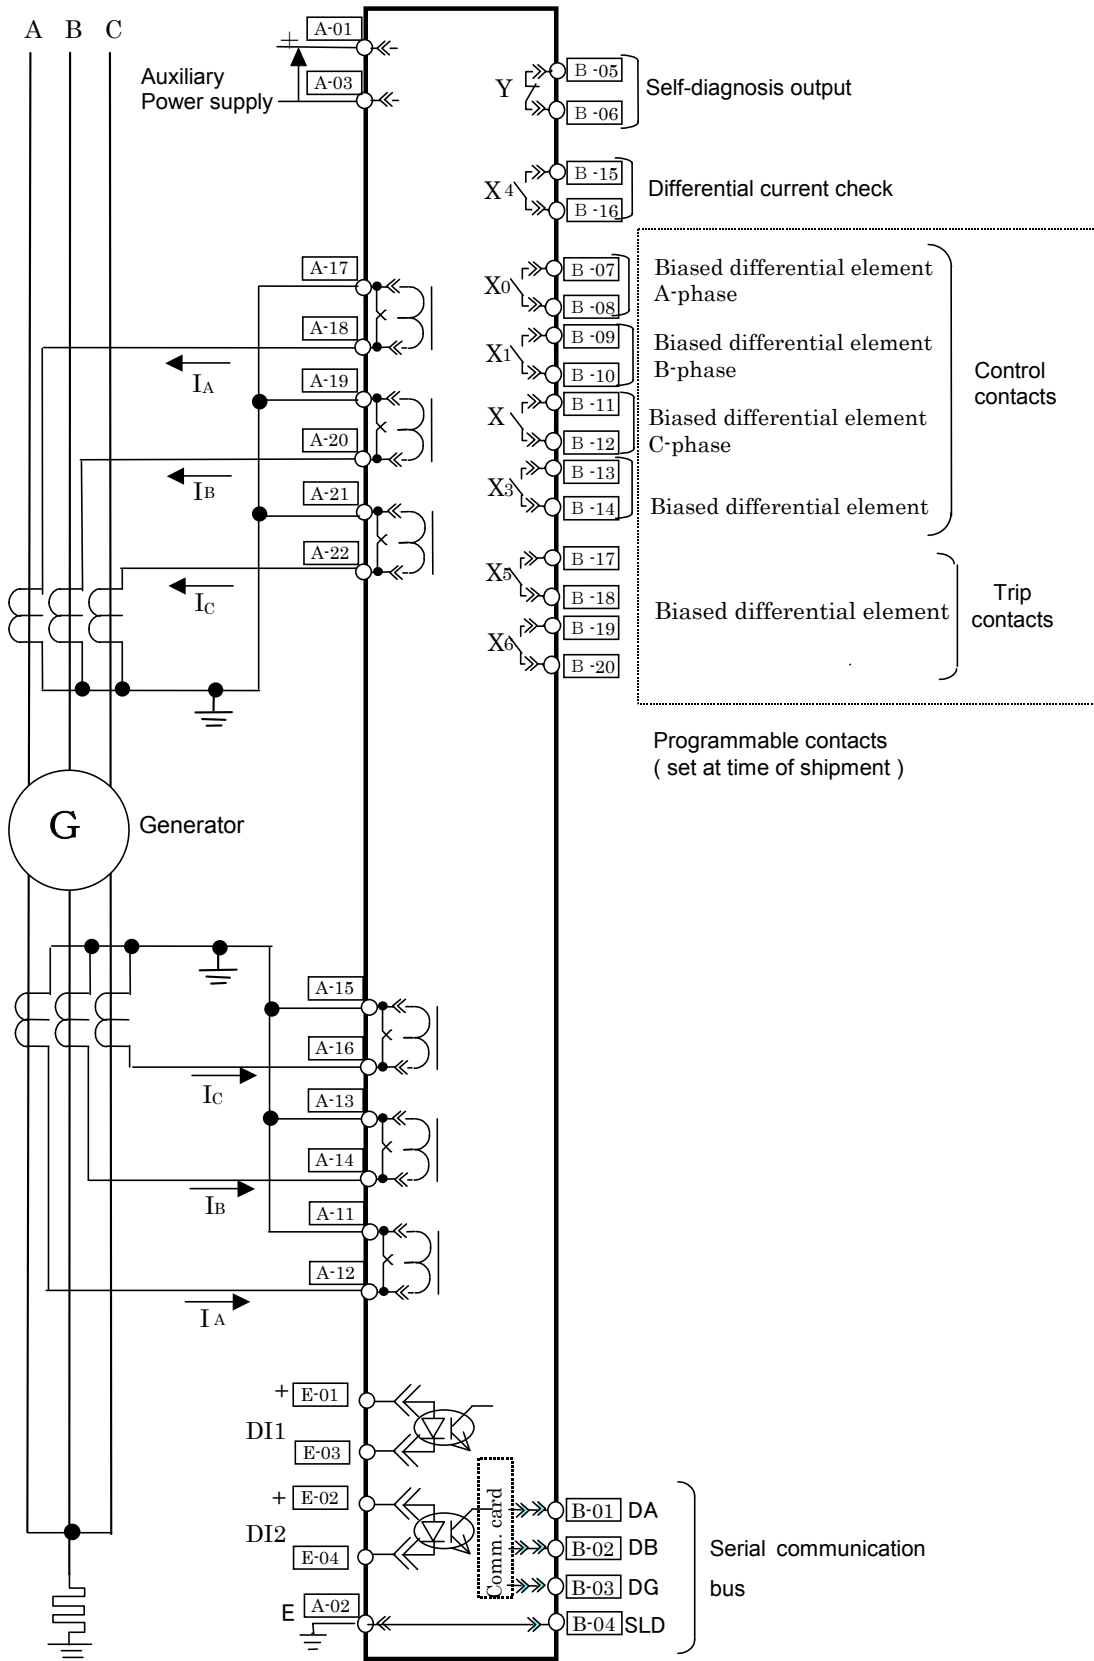


Figure 5-4 External connection diagram for CGP2-A02D2 relay

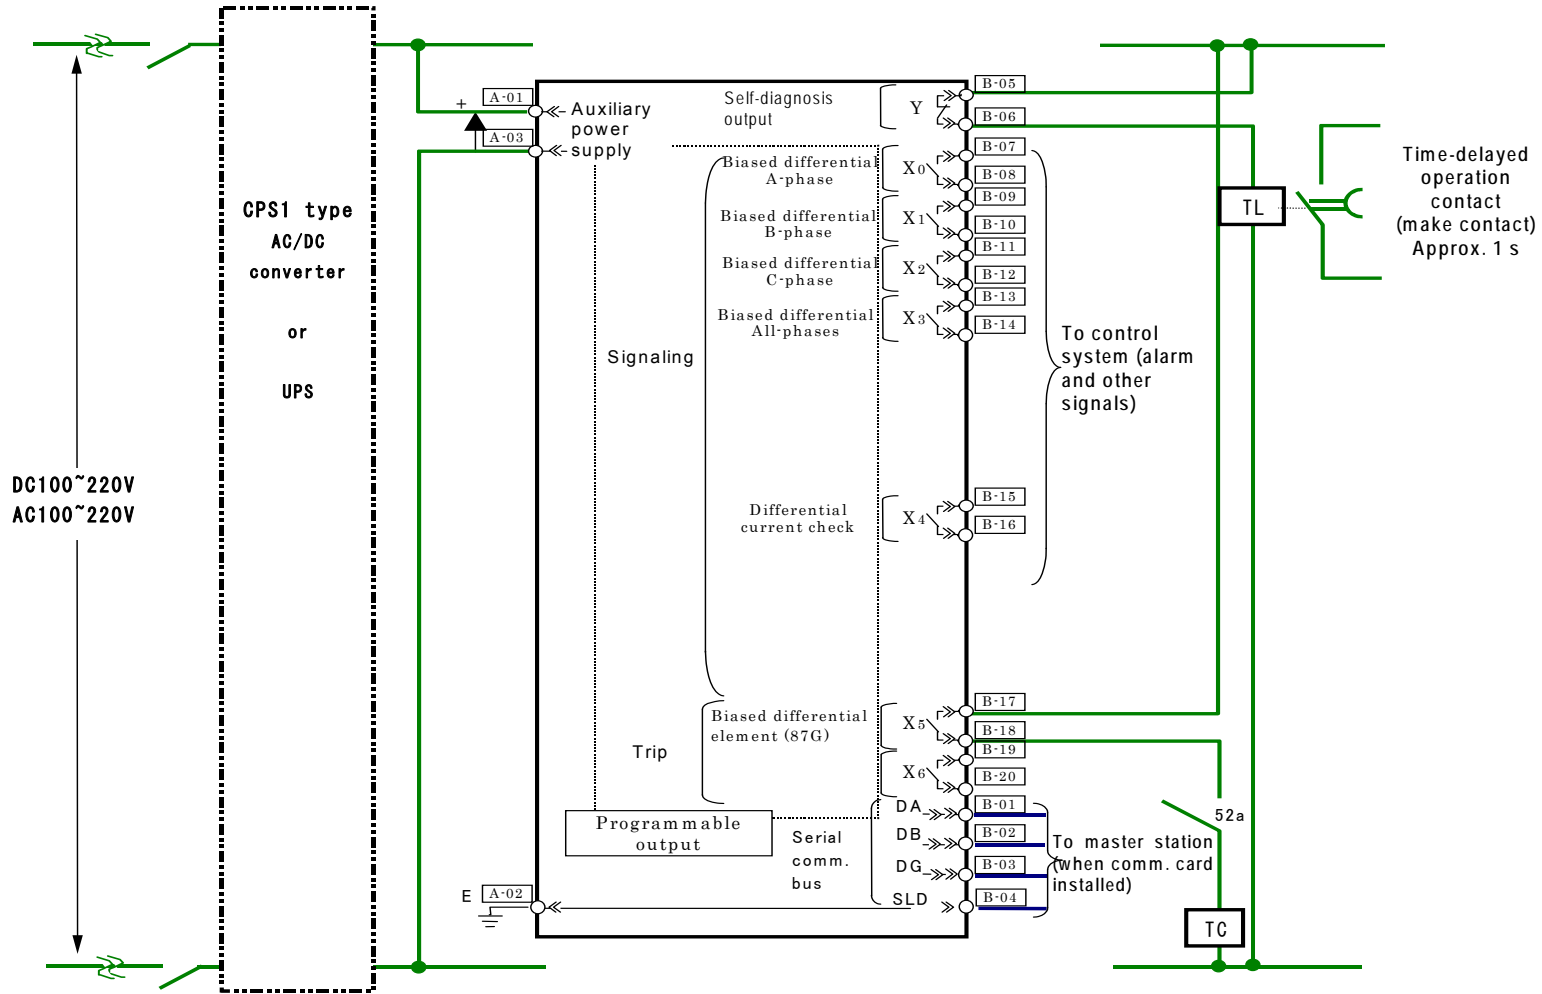

Note 1) The self-diagnosis output contact is so configured that the auxiliary relay can be energized ("break contact" opened) when normal result of self-diagnosis is received. This type of contact will allow the relay to continue automatic self-check even after the built-in power fuse burns. Therefore, the "break contact" is closed when the power is applied and will be opened after about 50ms. If the auxiliary power supply of the relay and the self-diagnosis output contact shares a same power source, the "break contact" will be closed temporarily after the auxiliary power supply is turned on. In the case where the phenomenon stated in the above would conflict with your system requirement, it is recommended that the self-diagnosis output contact should be connected via the time-delayed timer as shown in the left of the figure.

Note 2) Regarding to the type CPS1 AC/DC converter or commercially available uninterruptible power supply (UPS), refer to the note *21 in the section 2.1 General information.

Figure 5-5 Auxiliary supply circuit connection example of type CGP2-A02D2 relay

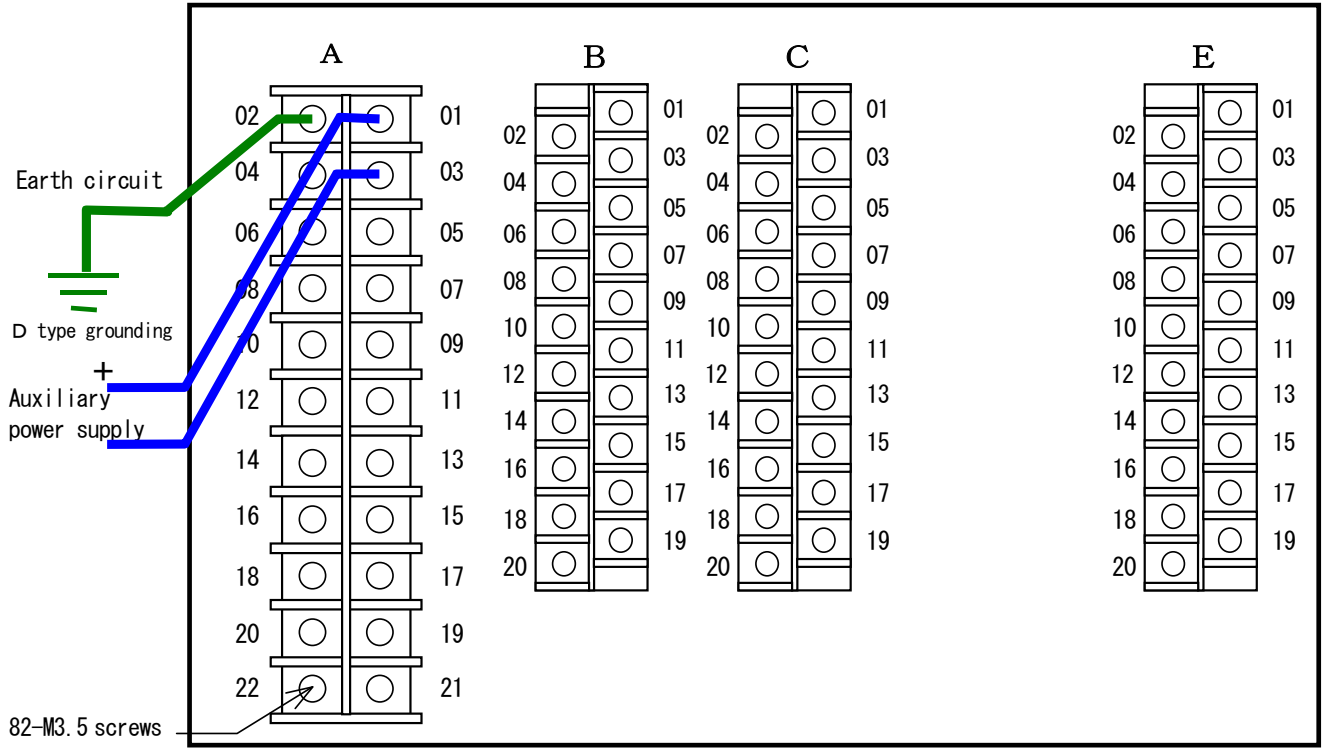


Figure 5-6 Rear view of type CGP2-A02D2 relay

6 Handling

6.1 Unpacking

Usually this relay is packed in a D2 case for transportation. However, it may occur that only the sub unit is transported independently for the convenience at repair. In such a case, fully brush off the dust, dirt, etc. adhered to the sub unit after completion of unpacking, and further visually check that the parts mounted on the front panel or built in the sub unit are not damaged.

6.2 Transportation and storage

To carry the equipment within the place of use, handle it carefully so that the parts installed on the front panel of the sub unit or built-in parts can not be deformed or broken.

6.3 Appearance and how to pull sub unit out

The relay is so constructed that the sub unit can be drawn out, in order to facilitate inspection or test. It is possible to pull the sub unit out without disconnecting the external wiring.

Note that the sub unit should not be drawn out with the line hot. Before drawing out, be sure to take the following actions.

- Lock the tripping circuit including breakers.
- Stop the main circuit.
- Shorten and isolate the CT circuit
- Open the auxiliary power supply circuit.

Bear in mind that careless opening of circuits may result in opening the other control circuits too to impair the protective function. Be sure to only shut off the concerned circuit.

The CT circuit is provided with an automatic short circuit mechanism. In case that you have pulled the sub unit out without isolating the CT circuit by mistake, the automatic short circuit mechanism will work to prevent the CT secondary circuit from opening.


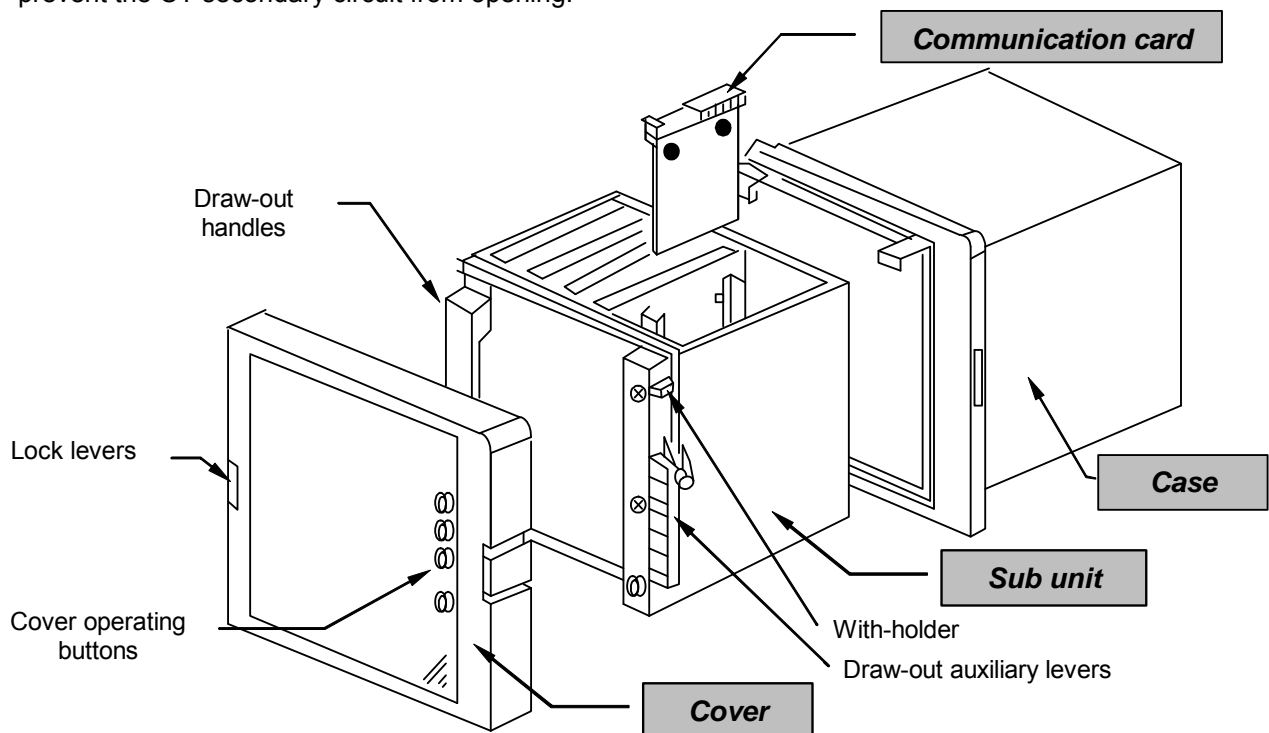


Figure 6-1 Outside view of type CGP2-A02D2 relay


6.3.1 How to draw sub unit out

(1) Removing the cover

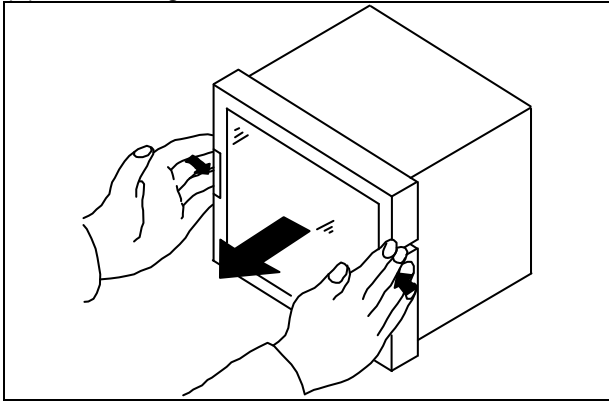


Hold the **lock levers**, which are located at both sides of the cover, on their front sections. Take off the cover **straight toward you** while pushing the levers **inwards**.

(2) Drawing the sub unit

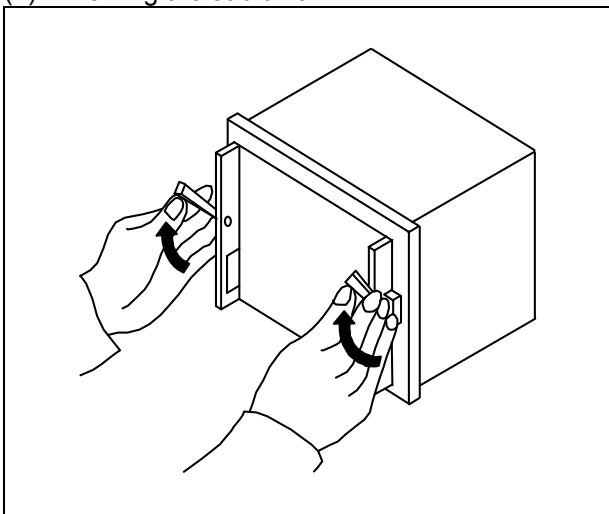

Please from under to upper direction turn round the draw-out auxiliary levers located on both sides of the front of the sub unit until the levers touch the metallic parts located on both sides of draw-out handles completely. **(Rotated angle is approx. 120°)**

Note) Be careful not to put your fingers into the space between drawing-out auxiliary levers and the case.

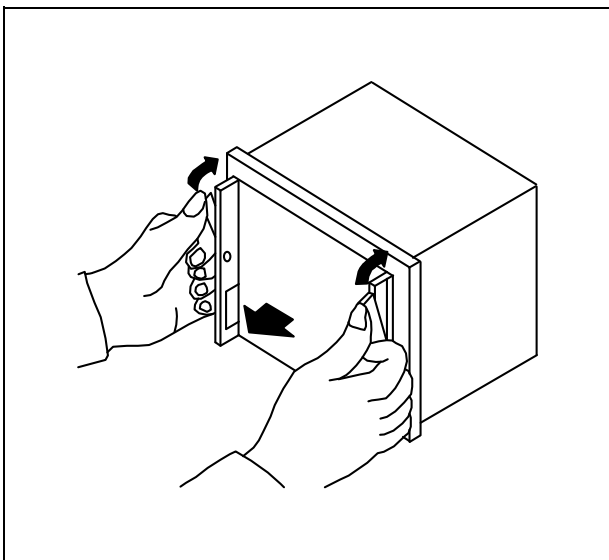


With the draw-out auxiliary levers touching the metallic parts, **exert your strength to turn round the levers** continuously, the sub unit will be drawn out a little from the case.

Then be careful not to let the draw-out auxiliary levers fall down and to **make the draw-out auxiliary levers into a locked status by the with-holders** located on the both sides upper the auxiliary levers please.


(Rotated angle is from approx. 120° to 180°)

Note) Be careful not to put your fingers into the space between drawing-out auxiliary levers and the case.

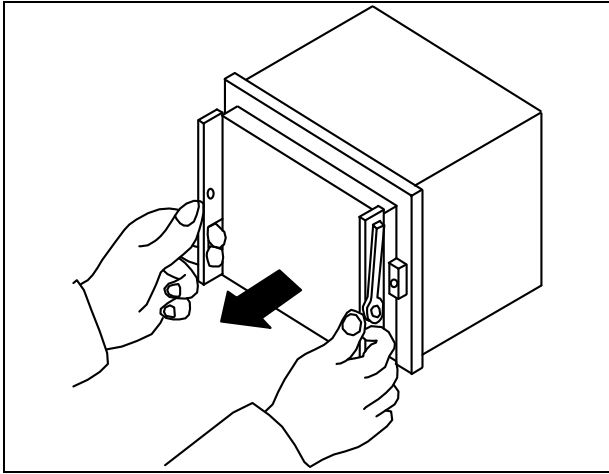

Grip the draw-out handles (located at both sides of the front of the sub unit), and **pull the sub unit towards you** until about a half portion of the sub unit is pulled out of the case.

Note) Be careful not to pull out the sub unit too much in order to prevent the sub unit falling.

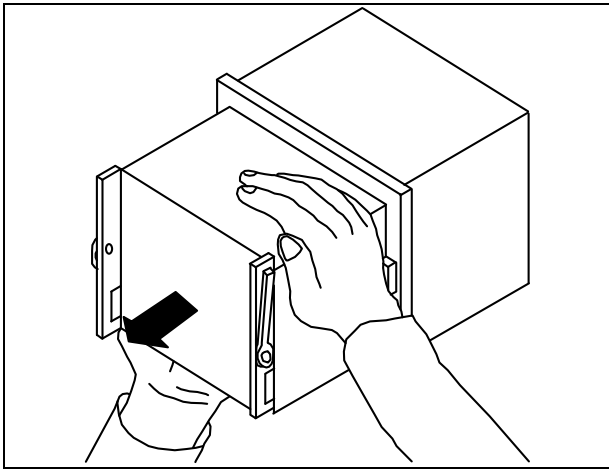


When about a half portion of the sub unit is pulled out of the case, just stop the drawing motion. Then, **hold the top and bottom of the sub unit to pull it out completely**, in order to prevent the unit from falling.

Note) Be careful not to touch the printed circuit board and parts inside the sub unit.

6.3.2 Housing the sub unit


(1) Housing the sub unit

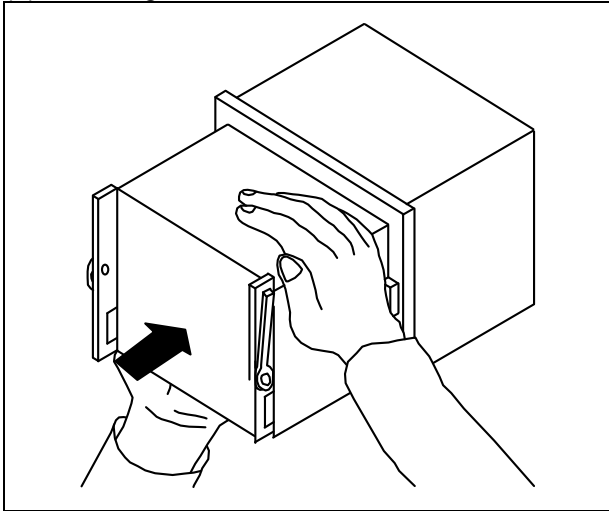


Hold the sub unit on the top and bottom to push the unit into the case approx. a half of the unit.

Note)

- Be careful not to touch the PCB and parts inside the sub unit.
- The sub unit is so constructed that it can not be housed in the case upside down.

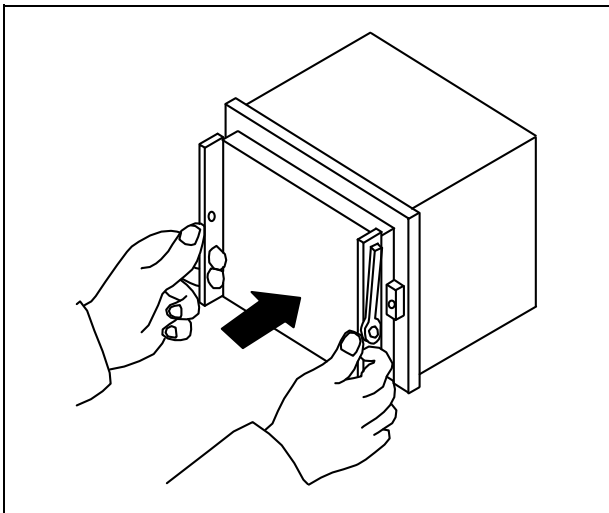


Under holding the auxiliary levers locked status by the with-holder (not to let the draw-out auxiliary levers fall down), **Insert the sub unit into the case until the auxiliary levers touch the metallic parts** while pressing the handles located on both sides of the front of the sub unit.

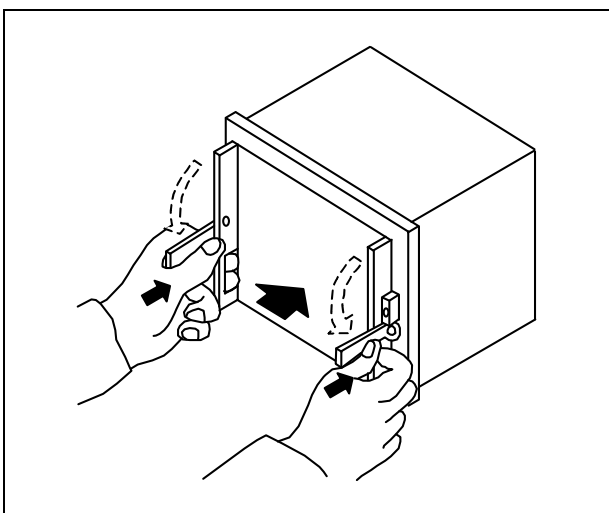

More fully insert the sub unit into the case until the auxiliary levers fall down automatically and catch the metal holes inside with its hooks. (**Rotating angle is from 180° to approx. 45°**)

Note) If the auxiliary levers are not available to complement the wanted operation automatically, operate the auxiliary levers and make it achieve the above status please. At this time be also careful that do not injure your fingers.

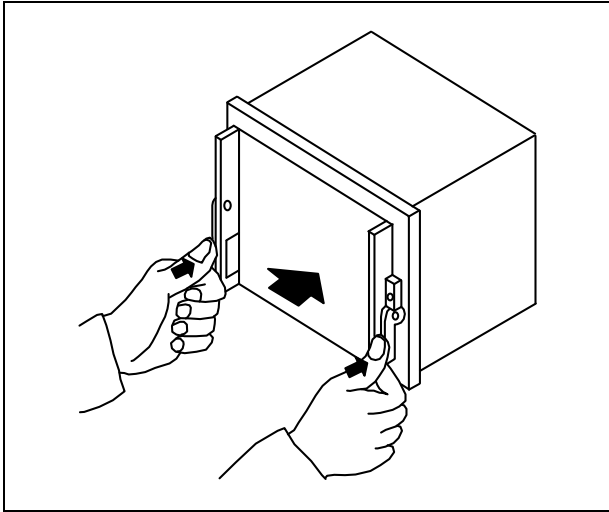


Exert your strength to press the lower parts of the auxiliary levers to fully insert the sub unit into the case until you hear a click.

(Rotated angle is from 45° to approx. 0°)

Note) Please note that inserting the sub-unit incompletely may only establish a poor contact of the terminals located on the back of the unit, which may cause operational failure or heating.

(2) Attaching the cover

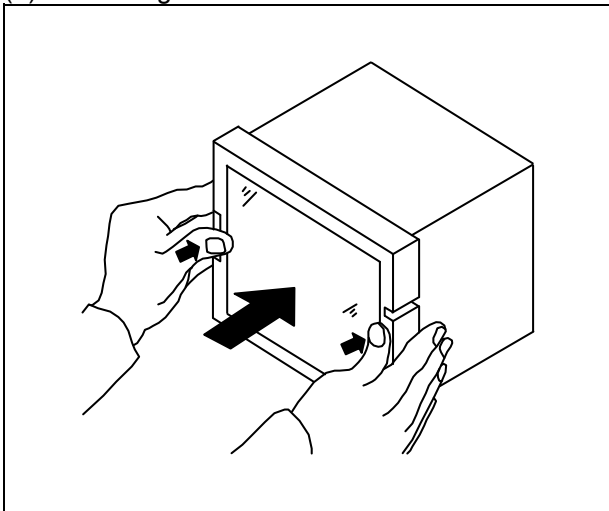

Fit the cover straight to the case. Hold the cover frame to **fully push the cover until it is clicked and locked.**

Note) After setting the cover, check if the buttons can be smoothly pressed from over the cover.

6.4 How to use front control panel

6.4.1 Front control panel layout

8. Item No. indicator LED

1. Setting/Cancel switch

14. Setting/Cancel indicator LED

3. Setting End/Trip switch

15. Setting End/Trip LED

9. Item Data LED

10. RUN LED

11. Communication LED

12. Unit LED

13. Phase LED

2. Select/Set switch

4. Up switch

5. Down switch

6. Indication/indication End switch

7. Operation Indicator Reset switch

16. Operation indicator LEDs

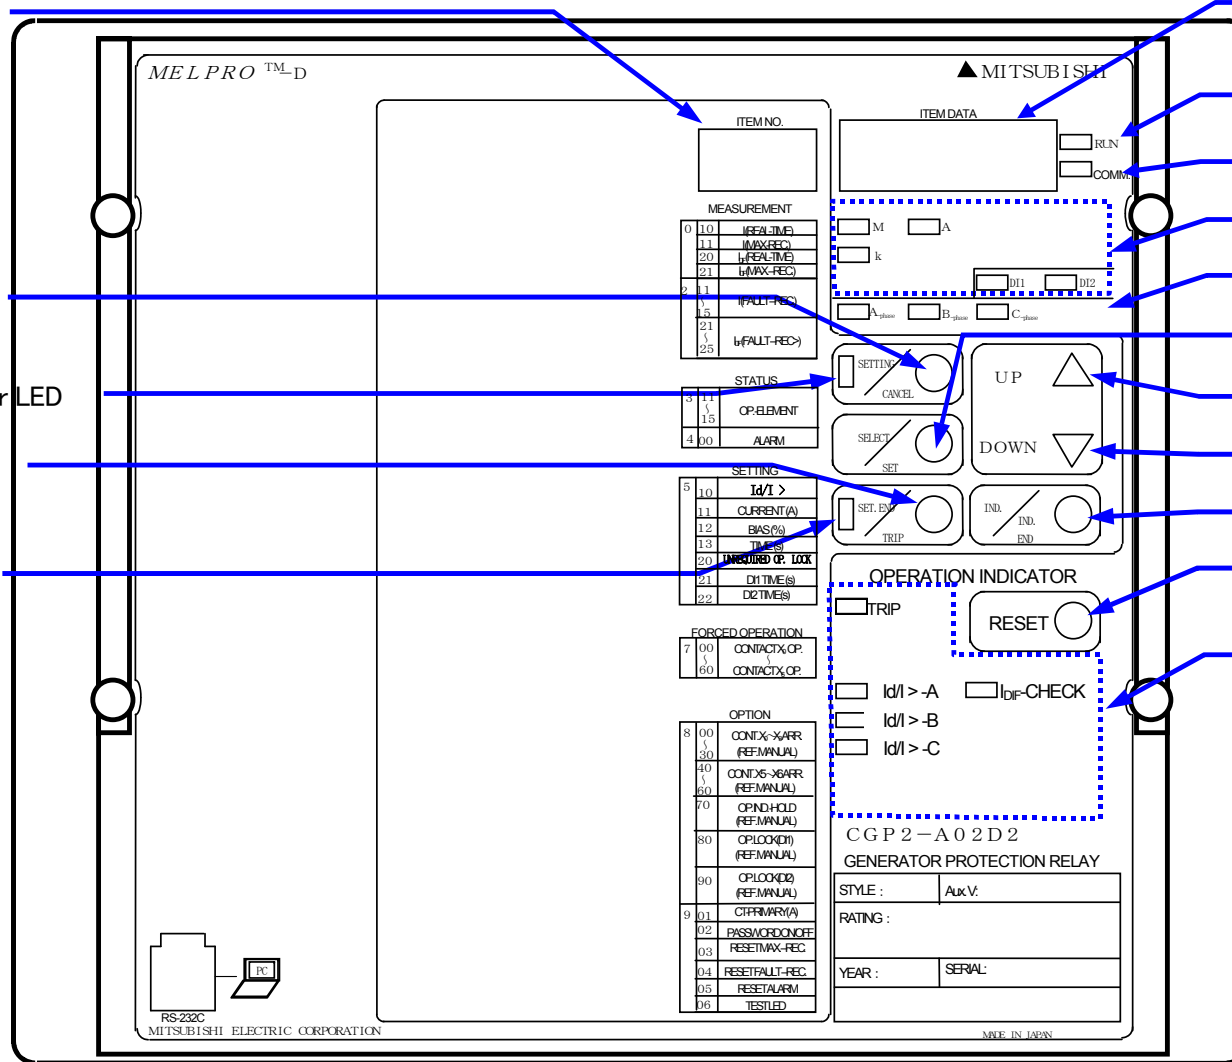


Figure 6.1 Front view of type CGP2-A02D2 relay

Table 6.1 Front control panel guide









No.	Designation		Symbol	Description
1	Setting / Cancel			Pressing this switch will start the procedure for setting, forced operation or option. When this switch is pressed again instead of the  switch, data that has been programmed will be all cleared to terminate the selected procedure. The SETTING/CANCEL indicator LED is lit during the procedure.
2	Select / Set			This switch is used to select an item number and to program item data during setting, forced operation or option procedure. When data is programmed to be ready for replacing the currently used setting, the SET.END/TRIP LED will blink.
3	Setting End / Trip			When the SET.END/TRIP switch is pressed with its LED blinking during setting, forced operation or option procedure, the currently enabled setting will be replaced by data given by programming. The new setting will be thus enabled.
4	UP select			These switches are used for selecting data elements. Pressing these switches for a while will allow fast forwarding. With the cover operating buttons, you can use the switches without removing the cover.
5	DOWN select			
6	Indication / Indication End			Pressing this switch will start or end the display of settings and measurements. With the cover operating button, you can use the switch without removing the cover.
7	Reset			Pressing this switch will reset output contacts after the relay operated and extinguish the operation indicator LEDs. With the cover operating button, you can use the switch without removing the cover.
8	Item No.	Green	-	A number allocated to the selected setting, forced operation or option item is indicated here.
9	Item Data	Red	-	Data that corresponds to the item number selected is displayed here. For the indication of individual letters, see Table 6.2.
10	RUN	Green	-	Indicate the result of the automatic self-check. The lamp will be lit for normal results while off for abnormal.
11	Communication	Green	-	Indicate the operational status of the communication card. - With a communication card installed: the lamp will be lit for normal conditions, blinking during communication and off for abnormal conditions. - With a communication card not installed: the lamp will be off.
12	Unit	Yellow	-	Indicate the unit used for the item data.
13	Phase	Yellow	-	Indicate the phase that corresponds to the item data.
14	Setting / Cancel	Yellow	-	This lamp will be lit during setting, forced operation or option procedure.
15	Setting End / Trip	Yellow	-	This lamp will blink when new data is programmed to be ready for replacing the currently enabled setting.
16	Operation	Red	-	Indicate the corresponding operation elements and phases of the relay.

Table 6.2 Letter representation of item data indicator LEDs

Item		Display in item data box
Designation	Letters	
On	ON	
Off	OFF	
Yes	YES	
No	NO	
Operation lock	LOCK	
Instantaneous	INST	

6.4.2 Operational procedure

For more information about the operational procedure shown below, see the MELPRO-D Series General Operation Manual (JEP0-IL9416).

Table 6.3 Operational procedure


Item			Corresponding section of general operation manual	
No.	Designation	Description	Indication mode	Setting / forced operation / option mode
010 ~ 020	Real time	Measure and display effective current at real time.	A-1	
011 ~ 021	Max. record	Display the maximum of effective current.	A-2	
211 ~ 221	Fault record	1 st phenomena	A-3	
212 ~ 222		2 nd phenomena		
213 ~ 223		3 rd phenomena		
214 ~ 224		4 th phenomena		
215 ~ 225		5 th phenomena		
311 312 313 314 315	Operation elements	1 st phenomena	A-4	
		2 nd phenomena		
		3 rd phenomena		
		4 th phenomena		
		5 th phenomena		
400	Self-diagnosis (ALARM)	Keep in record and display defect codes in the case where an abnormal condition is detected by the self-diagnosis.	A-6	

Item				Corresponding section of general operation manual	
No.	Designation		Description	Indication mode	Setting / forced operation / option mode
511	Setting	Biased differential	Operation current [A]	A-7	B-1
512			Bias [%]		
513			Operation time [s]		
521		DI	DI1 Lock time [s]		
522			DI2 Lock time [s]		
700	Forced operation	Contact X ₀ operation		Carry out forced operation of output contacts individually. The setting of the programmable outputs can be checked through the operation indicator LEDs.	C-1
710		Contact X ₁ operation			
720		Contact X ₂ operation			
730		Contact X ₃ operation			
740		Contact X ₄ operation			
750		Contact X ₅ operation			
760		Contact X ₆ operation			
800	Option	Contact arrangement	Contact X ₀	D-1	D-1
810			Contact X ₁		
820			Contact X ₂		
830			Contact X ₃		
850			Contact X ₅		
860			Contact X ₆		
870	Operation indicator LED hold		Set and display self-hold/auto reset setting of the operation indicator LEDs. For the guide for setting, see the section 6.4.3 (2) below.	A-7	D-2
880	DI operation lock	DI 1	Set and display the lock information of elements. For setting, refer to following item 6.4.3 (3).	A-7	D-3
890		DI 2			
901	CT primary side [A]		Set the CT primary current of the phase current circuit connected to the relay.	A-7	D-3
902	Relay password ON/OFF		Set relay password enable or disable for setting.	A-7	D-9
903	Max. record reset		Clear data of the max. record.	A-7	D-4
904	Fault record reset		Clear data of the fault record.		
905	Self-diagnosis (ALARM) reset		Clear data of the self-diagnosis record.		
906	LED lamp test		Carry out forced illumination of all the LED lamps on the front of the relay unit.		

6.4.3 Guide for option function

(1) Specifying contact arrangement data of output contacts

The table below shows the setting guide table. See the section D-1 of the general operation manual for the detailed procedure.

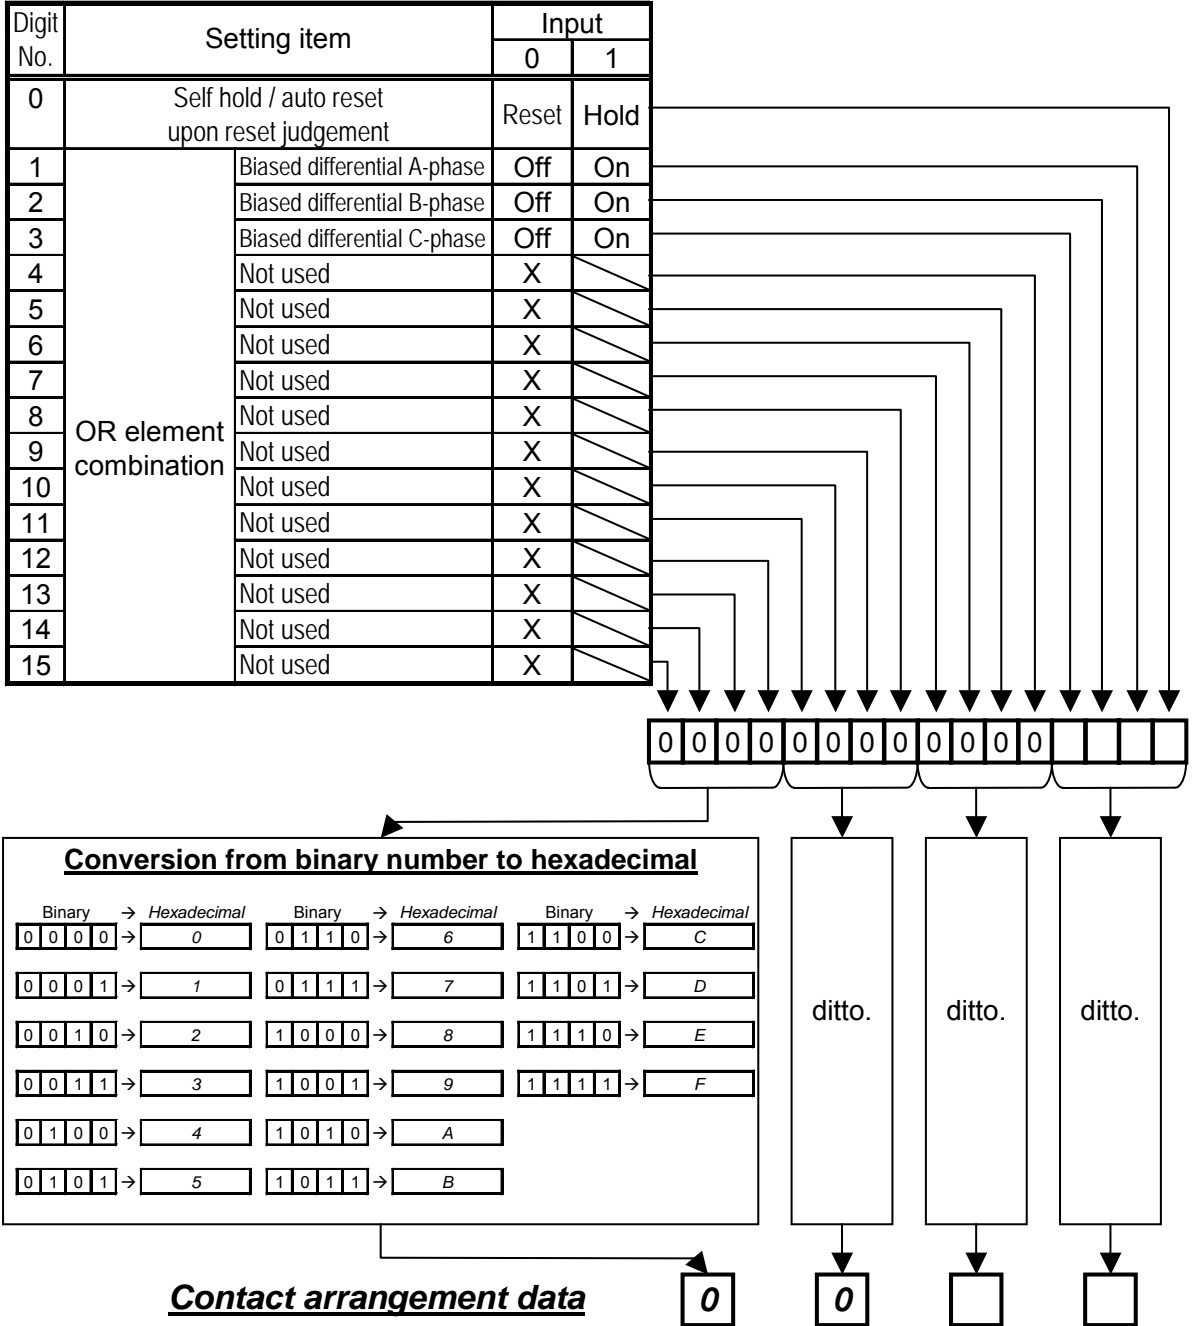


When the product is shipped from the factory, contact arrangement data are set as follows.

Contact	Item number	Contact arrangement data	Setting of the element
X0	800	0002	Biased differential element A-phase
X1	810	0004	Biased differential element B-phase
X2	820	0008	Biased differential element C-phase
X3	830	000E	Biased differential element All-phases
X5	850	000E	OR of all elements
X6	860	000E	

*The "Self hold/auto reset" setting are "Reset" (auto reset) for all contacts.

(2) Specifying operation indicator LED hold data

The table below shows the setting guide table. See the section D-2 in the general operation manual for the detailed procedure.

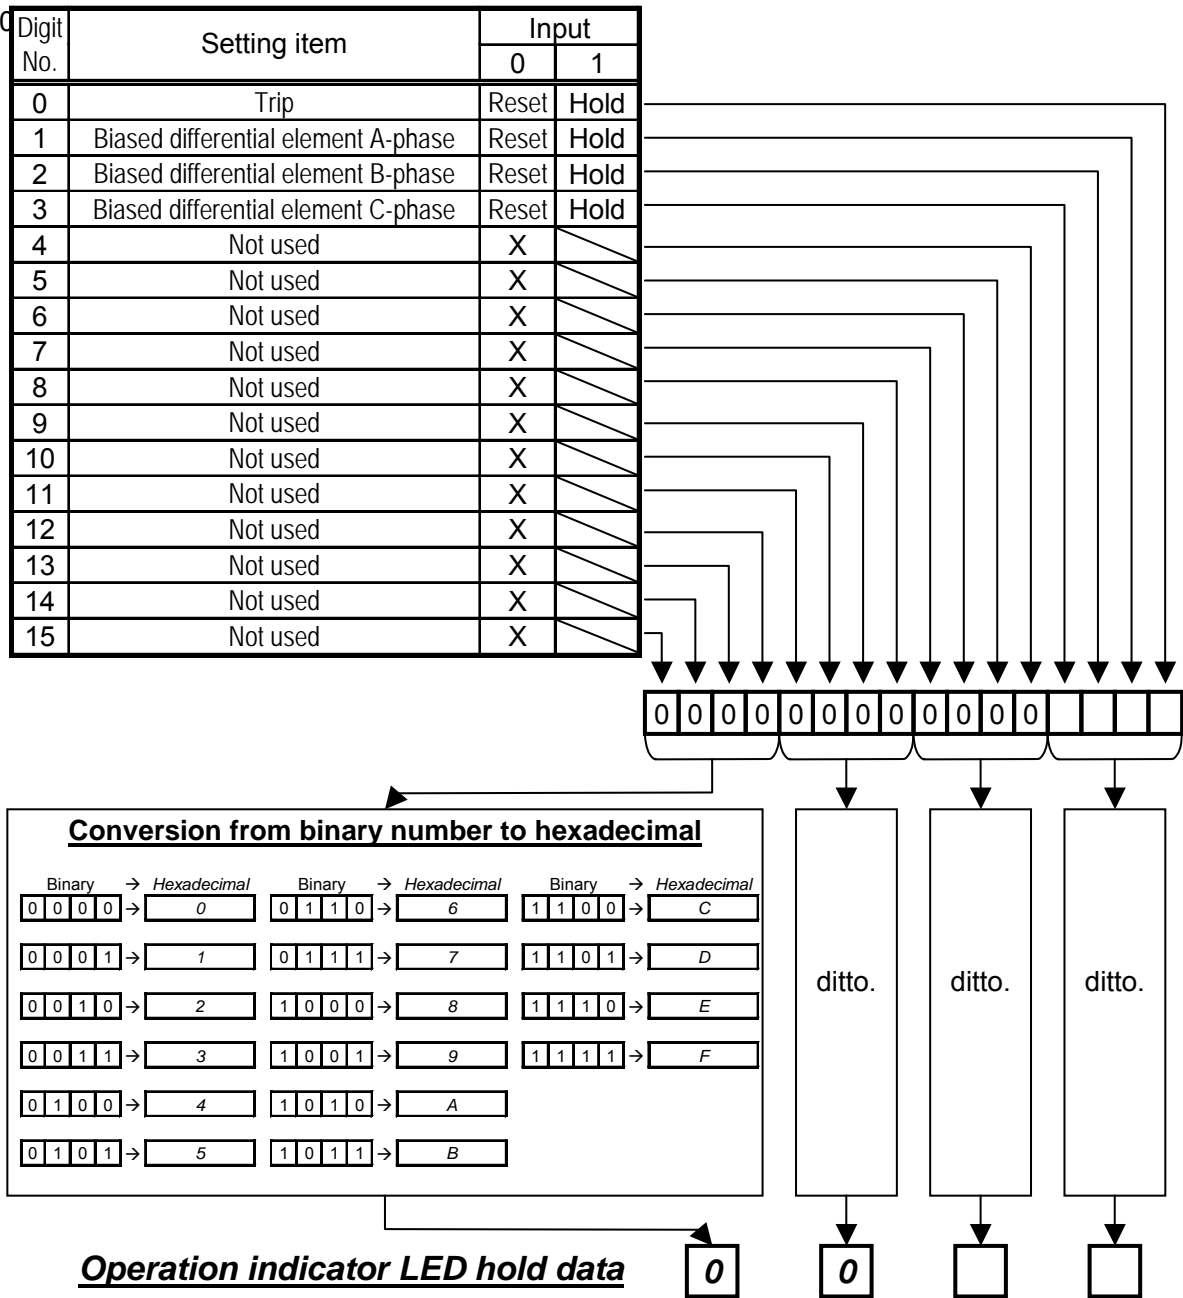


When the product is shipped from the factory, all LEDs are set to self-hold.

Item number	Operation indicator LED hold data
870	000F

(3) Specifying data of Lock function by external control input

The table below shows the setting guide table.

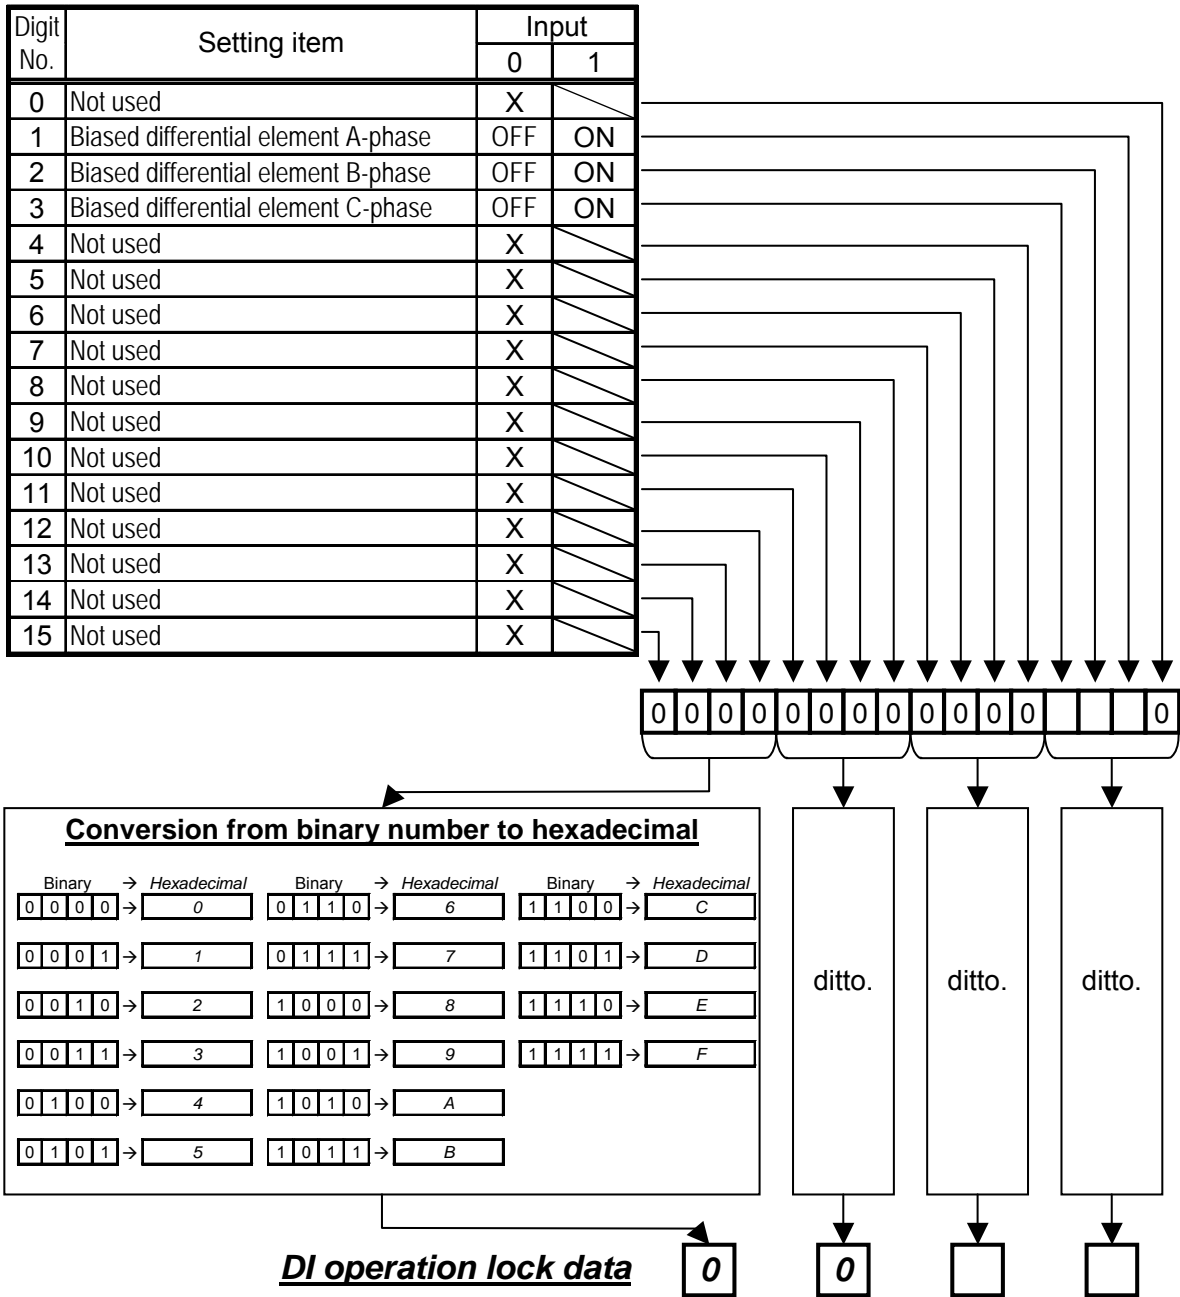

When the product is shipped from the factory, DI1 is set to lock of bias differential element lock, and DI2 is set to lock of loss of excitation like the following table.

DI	Item number	DI operation lock data	Setting of the element
DI 1	880	000E	Biased differential element
DI 2	890	000E	Biased differential element

Note) At the case of that more than one element output drive one output contact in OR logic, the output contact may operate if any element output driving this contact is not locked by DI. Pay attention please.

7 Mounting

7.1 Mounting dimension

Mount the case to the panel according to Fig. 7.1 "Mounting dimension".

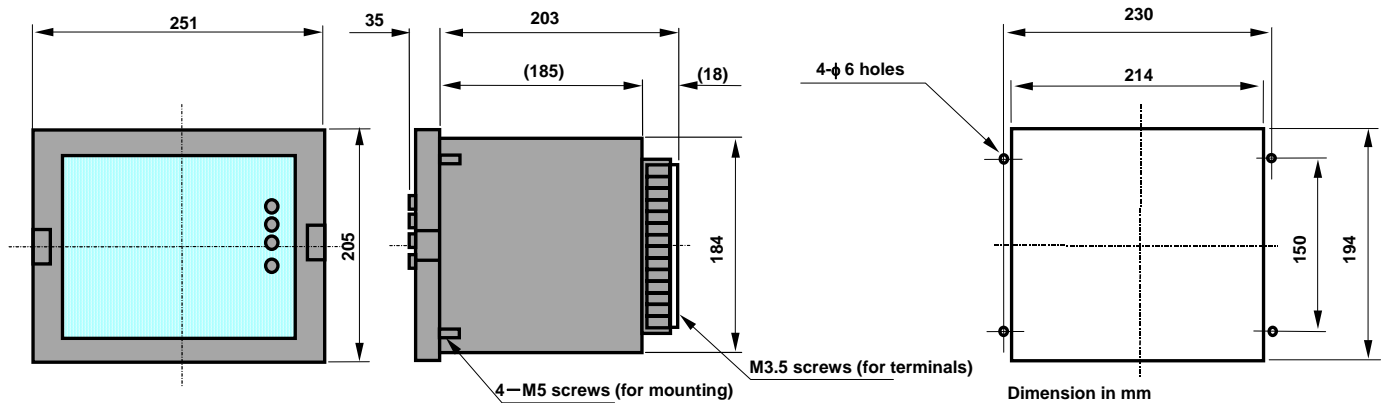


Figure 7-1 Outside dimension /drilling drawing

7.2 Standard operating environment

Install the relay in the environment described in section 3.3 Common technical data. In addition, the following conditions should be kept:

- Abnormal vibration, shock, inclination or magnetic field should be avoided.
- Harmful smoke or gas, salt gas, excessive humidity, water drop or vapor, excessive dust or fine powder, rain and wind should be avoided.

8 Test

The relay has been fully tested prior to shipment. However, it is recommended to carry out a test again by referring to the following test guide before use.

8.1 Appearance inspection

Check the relay for appearance according to the following procedure:

Objects		Check points
Unit	Coil/conductor	(1) Discoloring and burning due to overheat. (2) Abnormal conditions including loosened screws.
	Printed card	(1) Discoloring of the printed card due to overheated parts. (2) Contact between the printed card and connector
	Mechanism	(1) Deformation (2) Operation of the operating key switches. (3) Damage of the draw-out lever of the sub unit. (4) Discoloring and deformation of the name plate on the front panel. (5) Damage of the terminal section.
Case/cover		(1) Damage of the cover. (2) Stain of the cover. (3) Clouding of the cover. (4) Damage of the lock lever of the cover. (5) Damage of the operating buttons of the cover. (6) Operation of the operating buttons of the cover. (7) Damage of the terminal section.
Others		Invasion of foreign matters including dust and iron chips.

8.2 Characteristic test

8.2.1 Precautions in testing

(1) Standard test conditions

Ensure the following test conditions whenever possible:

Note that carrying out a test under an environment that significantly differs from the following conditions may produce an incorrect result.

- Ambient temperature : $20^{\circ}\text{C}\pm 10^{\circ}\text{C}$
- Rated frequency : $\pm 5\%$
- Waveform (AC) : 2% (distortion ratio)
- Auxiliary power supply voltage : rated voltage $\pm 2\%$

(2) Characteristic control point

See the section 3 “Characteristics”.

The characteristic control point refers to the characteristic of a relay unit only. Note that, when a characteristic test is carried out on a relay system connected with external equipment such as CT and VT, the result obtained would be a combined characteristic added with the fluctuation of the external equipment.

For special control in terms of a specific control point (for instance, using the operation setting), first carry out a test at “Characteristic control point” at the time when the relay is received or put in service to determine the acceptance/rejection. Thereafter, perform another test at each control point, so that the data obtained can be used for future reference.

(3) Changing setting

Change the setting according to the section 6 “Handling”.

(4) Operation judgment

Determine the operation currents and time and other values of the relay unit basically by turning on and off the corresponding output relay contact of each element.

(5) Communication card

Whatever the communication card is inside or not, for the test of withstand voltage and lightning impulse withstand voltage, please avoid inputting test voltage to the serial communication network circuit (DA, DB, DG, SLD contacts).


Note: it is not necessary to take the communication card out when test if the communication card was inside unit.

8.2.2 Characteristic test


8.2.2.1 Test circuit

Connect the external wiring referring to the AC input circuit diagram shown below:


(1) Biased differential element (operation current test)

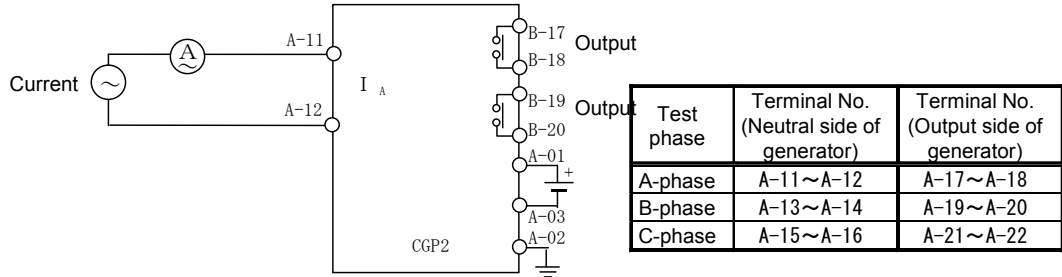

(2) Biased differential element (bias ratio characteristics test)

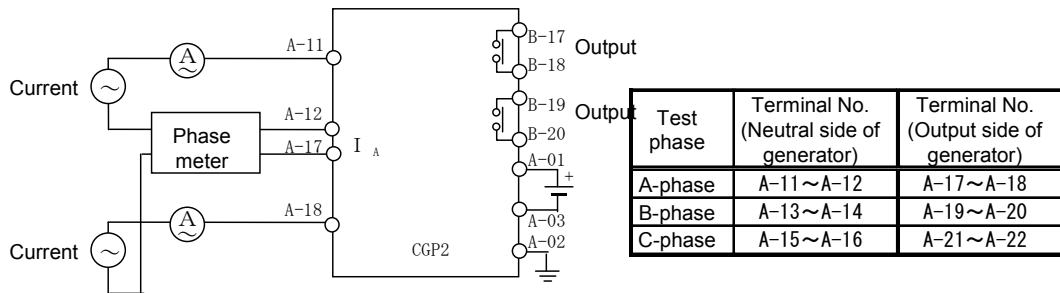

(3) Biased differential element (phase characteristics test)

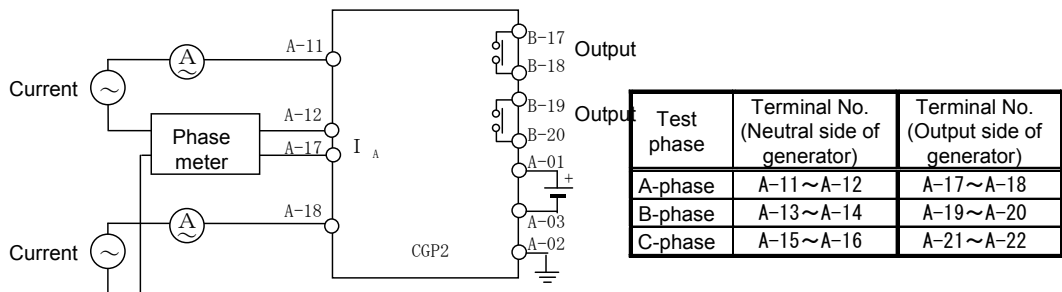

8.2.2.2 Test items and characteristic control point

(1) Forced operation test

See “Front control panel operational procedure” in the section 6 “Handling”.

(2) Operation value test

See “Operation and reset values” in the section 3 “Characteristic”.

(3) Operation time test

See “Operation time” in the section 3 “Characteristic”.

(4) Reset time test

See “Reset time” in the section 3 “Characteristic”.

(5) Phase characteristic test

See “Phase characteristic” in the section 3 “Characteristic”.

9 Maintenance

9.1 Daily inspection

Take every opportunity to carry out the following inspection:

- Check that the cover is not damaged and is attached properly.
- Check that no dust or iron chips have invaded into the unit.
- Check that the cover is not clouded notably.
- Check that abnormal noise is not generated.
- Check that the RUN LED lamp is lit.

9.2 Periodical inspection

It is recommended to carry out periodic inspections to check the relay for proper function.

For periodical inspections, perform the appearance inspection and characteristic test in accordance with the section 8 "Test".

10 Ordering

The product and specification shown in this manual may subject to changes (including specification change and production suspend) without notice. It is advisory to inquire the nearest Mitsubishi Electric's branch or sales office, if required, to confirm that the latest information is given in the manual, prior to placing an order.

Notify the following items when placing an order.

Item	Example of order	Remarks
Model	CGP2-A02D2	For more information, see the section 2 "Rating and specification".
Frequency	50 Hz	Select 50Hz or 60Hz.
Rating	Phase current: 5A	For more information, see the section 2 "Rating and specification".
Setting range		For more information, see the section 2 "Rating and specification".
Communication card	One of the followings can be selected: a. CC-Link communication card (Manual No.: JEP0-IL9417, JEP0-IL9418) b. No communication card	Only purchasing a communication card separately will allow customer to add the communication facilities. If customer does not need the communication facilities at the time of introducing the system, just purchase the relay unit without communication card. Customer can add the communication facilities whenever he/she needs to introduce them. This will help decrease the initial cost and upgrade the system in stages.

11. Guarantee

11.1 Period of guarantee

The guarantee period for this product should be one year after delivery.

11.2 Range of guarantee

When any fault or defect is detected during the period of guarantee shown above, and such fault or defect is proved to be caused apparently at the responsibility of Mitsubishi Electric, the defective unit concerned will be repaired or replaced with a substitute. In such a case, contact the nearest Mitsubishi electric's branch or sales office.

It is to be acknowledged that the following faults and defects will not be covered by the guarantee:

- When the fault or defect results from modification or repair carried out by any other entity than Mitsubishi Electric and those who are authorized to carry out repair by Mitsubishi electric.
- When the fault or defect results from the use of the equipment at the range exceeding the condition/environment requirements stated in the manual.
- When the fault or defect results from user's carelessness.
- When the fault or defect results from an act of God such as natural calamity or disaster.
- When the fault or defect results from a phenomenon which can not be predicted with the technology put into practical use at the time of purchase or contract.

mitsubishi electric corporation

HEAD OFFICE : 7-3 MARUNOUCHI 2-CHOME, CHIYODA-KU TOKYO, 100-8310, JAPAN

Revised in Apr. 2009